

PHILIPS

Micro Music System

8000 Series

TAM8905



User manual

Register your product and get support at
www.philips.com/support

Contents

1 Important	2	8 Use system settings menu	15
Safety	2	Adjust network settings	15
Notice	2	Set time/date	15
FCC information	4	Set system language	16
2 Your Micro Music System	4	Reset all the settings	16
Introduction	4	Check software update information	16
What's in the box	4	Upgrade the firmware (if available)	16
Overview of the main unit	5	Know the software version	16
Overview of the remote control	6	Adjust backlight settings	16
3 Get started	7	9 Use main menu	17
Connect speakers	7	Set alarm	17
Connect the radio antenna	7	Set sleep timer	18
Connect power	7	10 Other features	19
Prepare the remote control	7	Play audio through Bluetooth	19
Perform initial setup	8	Adjust volume	19
Turn on	9	Mute sound	19
Source menu	9	Play from disc	19
4 Listen to Internet radio	10	Play from USB	19
Use menu in Internet radio mode	10	Charge your devices	19
Store Internet radio stations	11	Listen to an external device	19
Select a preset Internet radio station	11	11 Product information	20
Show Internet radio information	11	Specifications	20
5 Listen to Podcasts	12	12 Troubleshooting	21
6 Listen to Spotify	12		
7 Listen to FM radio	13		
Tune to FM radio stations	13		
Store FM radio stations	13		
Store FM radio stations automatically	13		
Select a preset FM radio station	13		
Use menu in FM mode	14		
Show RDS information	14		

1 Important

Safety

Read and understand all instructions before you use this micro music system. If damage is caused by failure to follow the instructions, the warranty does not apply.



This 'bolt of lightning' indicates uninsulated material within the device may cause an electrical shock. For the safety of everyone in your household, please do not remove the covering. The 'exclamation mark' calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems. **WARNING:** To reduce the risk of fire or electric shock, the device should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on the device. **CAUTION:** To prevent electric shock, fully insert the plug. (For regions with polarized plugs: To prevent electric shock, match wide blade to wide slot.)

Warning

- Never remove the casing of this apparatus.
- Never lubricate any part of this apparatus.
- Never look into the laser beam inside this apparatus.
- Never place this apparatus on other electrical equipment.
- Keep this apparatus away from direct sunlight, naked flames or heat.
- Ensure that you always have easy access to the power cord, plug or adaptor to disconnect the apparatus from the power.

- Make sure that there is enough free space around the product for ventilation.
- Only use attachments/accessories specified by the manufacturer.
- Battery usage **CAUTION** – To prevent battery leakage which may result in bodily injury, property damage, or damage to the product:
 - Install the battery correctly, + and - as marked on the product.
 - The battery (packed or installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
 - Remove the battery when the product is not used for a long time.
- The product shall not be exposed to dripping or splashing.
- Do not place any source of danger on the product (e.g. liquid filled objects, lit candles).
- Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

Notice

Any changes or modifications made to this device that are not expressly approved by MMD Hong Kong Holding Limited may void the user's authority to operate the equipment.

Compliance

Hereby, TPVision Europe B.V. declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. You can find the Declaration of Conformity on www.philips.com/support.

Care of the environment

Disposal of your old product and battery



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



This symbol on a product means that the product is covered by European Directive 2012/19/EU.



This symbol means that the product contains batteries covered by European Directive 2013/56/EU which cannot be disposed of with normal household waste.

Inform yourself about the local separate collection system for electrical and electronic products and batteries. Follow local rules and never dispose of the product and batteries with normal household waste. Correct disposal of old products and batteries helps prevent negative consequences for the environment and human health.

Removing the disposable batteries

To remove the disposable batteries, see battery installation section.

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.)

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by MMD Hong kong Holding Limited is under license.



**Be responsible
Respect copyrights**

The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.

Care for your product

- Do not insert any objects other than discs into the disc compartment.
- Do not insert warped or cracked discs into the disc compartment.
- Remove the discs from the disc compartment if you are not using the product for an extended period of time.
- Only use microfiber cloth to clean the product.

This apparatus includes this label:



Note

- The type plate is located on the back of the product.

FCC information

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced speaker/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IC-Canada: CAN ICES-003(B) /NMB-003(B)

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

Avis d'IndustrieCanada: CAN ICES-003(B)/NMB-003(B) L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

1. L'appareil ne doit pas produire de brouillage;
2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

2 Your Micro Music System

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/support.

Introduction

With this unit, you can:

- enjoy audio from disc, USB devices, Bluetooth devices, and other external devices;
- listen to Internet radio through network connection;
- listen to FM radio;
- Charge your mobile device with the USB slot;

The unit supports these media formats:




What's in the box


Check and identify the contents of your package:

- Main unit
- 2 x speakers
- 2 x AC power cord
- 1 x radio antenna
- Remote control (with two AAA battery)
- Printed materials

Overview of the main unit

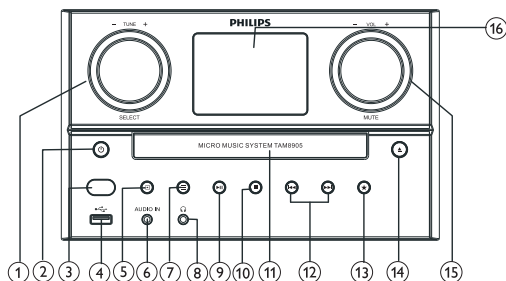


- ① **SELECT knob**
 - Turn clockwise or anticlockwise to tune to radio stations.
 - Turn clockwise or anticlockwise to navigate through the menu list.
 - Press to confirm a selection.
 - Press and hold to auto scanning all station in FM tuner mode.
- ② **Power button**
 - Switch this product on or to standby.
- ③ **IR sensor**
- ④ **USB port**
 - Connect USB storage devices.
- ⑤ **SOURCE**
 - Press to enter the source menu.
- ⑥ **AUDIO IN**
 - Connect external audio devices.
- ⑦ **MENU**
 - In working mode, access the top menu.
 - Press and hold to display information in FM mode.
- ⑧ **EARPHONE**
 - Connect the external earphone device.
- ⑨ **Play/Pause button**
 - Start or pause play.
- ⑩ **Stop button**
 - Stop play.
 - Erase a program.
- ⑪ **Disc compartment**

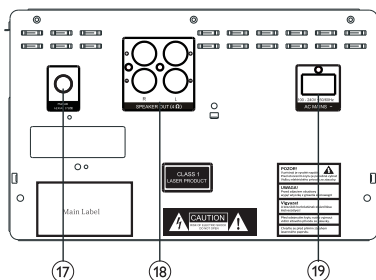

- ⑫ **Fast Forward/Reverse buttons**
 - Skip to previous/next track.
 - Search within a track/disc.
 - Tune to a radio station.
 - Adjust time.
- ⑬ **★ PRESET**
 - Store radio stations.
 - Display the preset station list.
- ⑭ **Disc compartment button**
 - Open or close the disc compartment.
- ⑮ **VOL knob/MUTE**
 - Turn to adjust volume.
 - Press to mute or resume sound.
- ⑯ **Display screen**
 - Show current status.
- ⑰ **FM antenna**
 - Improve FM reception.
- ⑱ **SPEAKER OUT socket**
 - Connect with the speakers.
- ⑲ **AC IN socket**

Overview of the remote control

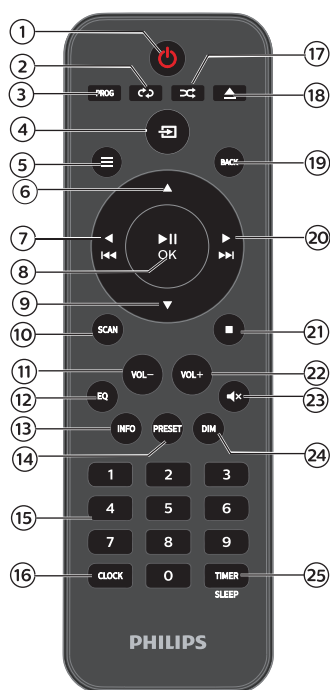

- ① **Power**
 - Switch this product on or to standby.
- ② **REPEAT**
 - Select repeat playback mode.
- ③ **PROG**
 - Program tracks.
- ④ **SOURCE**
 - Press to enter the source menu.
- ⑤ **MENU**
 - In working mode, access the top men
 - Press and hold to diaplay informat in FM mode.
- ⑥ **▲**
 - Skip to next album.
 - Adjust time
- ⑦ **◀◀**
 - Skip to the previous track.
 - Search within a track/disc/USB.
 - Tune to a FM station.

- ⑧ **▶▶/OK**
 - Press to start, pause, resume play or confirm selection.
- ⑨ **▼**
 - Skip to previous album.
 - Adjust time.
- ⑩ **SCAN**
 - Auto store radio stations.
- ⑪ **VOL-**
 - Decrease volume.
- ⑫ **EQ**
 - Select a preset sound effect.
- ⑬ **INFO**
 - Display playback information.
- ⑭ **PRESET**
 - Press to view the station list.
 - Press and hold to save station.
- ⑮ **Numeric keypad (0-9)**
 - Select a digital track or preset radio station.
- ⑯ **CLOCK**
 - Set the clock.
 - View clock information.
- ⑰ **∞ RANDOM**
 - Enter the random playback mode.
- ⑱ **▲ OPEN/CLOSE**
 - Open or close the disc compartment.
- ⑲ **BACK**
 - Return to the previous menu under menu setting .
- ⑳ **▶▶**
 - Skip to the next track.
 - Search within a track/disc/USB.
 - Tune to a FM station.
- ㉑ **■**
 - Stop play or erase a program.
- ㉒ **VOL+**
 - Increase volume.
- ㉓ **MUTE**
 - Mute or restore volume.
- ㉔ **DIM**
 - Adjust display brightness.
- ㉕ **TIMER/SLEEP**
 - Set sleep timer.
 - Set alarm timer.

3 Get started



Caution

- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

Always follow the instructions in this chapter in sequence.

Connect speakers




Note

- Insert the stripped portion of each speaker wire into the socket completely.
- For better sound quality, use the supplied speakers only.

- 1 For the right speaker, find the sockets on the back of the main unit marked "R".
- 2 Insert the red wire into the red (+) socket, and the black wire into the black (-) socket.
- 3 For the left speaker, find the sockets on the main unit marked "L".
- 4 Repeat step 2 to insert the left speaker wire.


To insert each speaker wire:

- 1 Insert the speaker wire fully.
- 2 Fasten the screw.

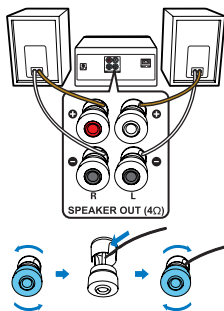

Connect the radio antenna

Connect the supplied radio antenna to this product before listening to radio.

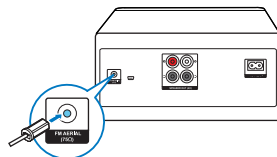


Connect power



Caution

- Risk of product damage! Ensure that the power supply voltage corresponds to the voltage printed on the back or the underside of the unit.
- Risk of electric shock! Before you plug the AC power cord, make sure that the plug is fixed securely. When you unplug the AC power cord, always pull the plug, never pull the cord.
- Before you connect the AC power cord, make sure that you have completed all the other connections.

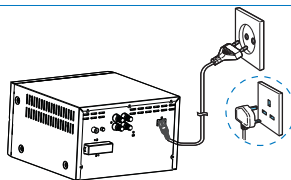

Connect the power cord to the wall socket.

Prepare the remote control




Caution

- Risk of product damage! When the remote control is not used for long periods, remove the batteries.
- Batteries contain chemical substances, so they should be disposed of properly.

To insert the remote control battery:

- 1 Open the battery compartment.
- 2 Insert the supplied AAA batteries with correct polarities (+/-) as indicated.
- 3 Close the battery compartment.

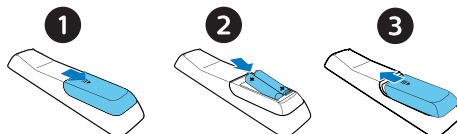

Perform initial setup

 
- When the unit is powered on for the first time, the **[Setup wizard]** appears on the display panel. Follow the instructions below to configure some basic settings.

To listen to Internet radio, you need to set up Wi-Fi connection first. Wi-Fi Protected Setup (WPS) is a standard created by Wi-Fi Alliance for easy establishment of secure wireless home network. If your wireless router supports WPS, you can quickly and securely connect the radio to the router through one of the two setup methods: Push Button Configuration (PBC), or Personal Identification Number (PIN). For those that do not support WPS, you have another option to connect the radio to the wireless router.

Note

- Before you connect to a network, familiarize yourself with the network router.
- Make sure that your home Wi-Fi network is enabled.
- For better Wi-Fi reception, rotate and adjust the position of the Wi-Fi antenna.

- When **[Setup wizard]** is displayed, turn **SELECT knob** to select **[YES]** to start the setup. If you select **[NO]**, you are asked to run the wizard next time.



- Press **SELECT knob** to confirm.
↳ **[12/24 hour format]** is displayed.
- Turn **SELECT knob** to select 12 or 24 hour format.
- Press **SELECT knob** to confirm.
↳ **Auto update list is displayed**

- Repeat steps 3 to 4 to select whether to synchronize time with radio stations.



 
- [Update from FM]**: synchronize time with FM stations.
- [Update from Network]**: synchronize time with Internet radio stations.
↳ If **[Update from Network]** is selected, repeat steps 3 to 4 to set time zone, and then repeat steps 3 to 4 to set daylight saving time.
- [No update]**: deactivate time synchronization.
↳ If **[No update]** is selected, repeat steps 3 to 4 to set date and time.

- Repeat steps 3 to 4 to select **[YES]** to keep network connected.

- Repeat steps 3 to 4 to select the Wlan region.
↳ The radio begins to search for wireless networks automatically.
↳ A list of available Wi-Fi networks appear.

- Repeat steps 3 to 4 to select your Wi-Fi network.

- Press **SELECT knob** to select an option to connect your wireless router.



- [Push Button]**: select this option if your wireless router supports WPS and PBC setup method. You are prompted to press the connect button on your router and then press **OK** to continue.

 
- **[Pin]:** select this option if your wireless router supports WPS and PIN setup method. The radio generates an 8-digit code number that you can enter into the router.
- **[Skip WPS]:** select this option if your wireless router does not support WPS. You are prompted to enter the key for your Wi-Fi network.

- 10** As instructed on the display panel, press WPS button or enter the pin on your wireless router, or enter the key to connect to your network (The options displayed depend on the type of your network and network protection used).
- When entering the key of the network, to select a character, turn **SELECT knob**. then press **SELECT knob** to confirm.



- To cancel, turn **SELECT knob** to select **[CANCEL]**.
- To confirm your entry, turn **SELECT knob** to select **[OK]**.
- To delete the entry, turn **SELECT knob** to select **[BKSP]**.
- To exit the process, press **≡**.
 - ↳ If the network connection is established, **[Connected]** is displayed.

- 11** When **[Setup wizard completed]** appears, press **OK** to exit the setting.



Tip

- For some Wi-Fi routers, you may need to hold the WPS button for Wi-Fi connection. See the user manuals of the specific routers for details.
- To run the setup wizard again, select **[System settings]>[Setup wizard]** menu (see the Chapter "Use system settings menu").

Turn on

- Press **⏻**.
 - ↳ The radio switches to the last selected source.

Switch to standby mode

- Press **⏻** again.
 - ↳ The display panel is dimmed.
 - ↳ The time and date (if set) are displayed.




Note

- If the system is idle for 15 minutes, the unit switches to standby mode automatically.

Source menu

Press **⏻** to enter into source menu.

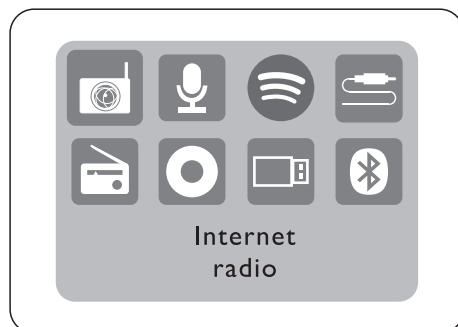

- 1 Turn **SELECT knob** to select source
- 2 Press **SELECT knob** to confirm selection

4 Listen to Internet radio

The radio can play thousands of radio stations and podcasts from around the world through the Internet connection.

Use menu in Internet radio mode

Once the Internet connection is established, you will find a list of stations displayed in the station list. Then select one to start broadcasting.

Note

- Make sure that your home Wi-Fi network is enabled. For better Wi-Fi reception, rotate and adjust the position of the Wi-Fi antenna.

 
1 Press  **Source** and turn **SELECT knob** to select **[Internet radio]** mode.

↳ The radio starts connecting to the previously connected network, and then tunes to your last listened Internet radio station.

↳ If network connection has not been established before, the radio starts searching for wireless networks automatically (Refer to the section "Get started">"Perform initial setup" or "Use system settings menu">"Adjust network settings" to establish network connection).

2 Press  **MENU** to access the menu.

3 Turn **SELECT knob** to scroll through the menu options:



- **[Station list]**: tune to any available Internet radio stations.
- **[System settings]**: adjust system settings (the same menu option for all working modes. See the Chapter "Use system settings menu" for details).
- **[Main menu]**: access main menu (the same menu option for all working modes. See the Chapter "Use main menu" for details).

4 To select an option, press **SELECT knob**.

5 Repeat steps 3 to 4 if any sub-option is available under one option.

To return to the previous menu, press .

[Station list]

- **[China]**: tune to any available Internet radio stations in China, such as pop music, classical music, business news, and so on.
- **[Stations]**:
 - **[History]**: browse Internet radio stations by **history**.
 - **[Search]**: search for Internet radio stations. To search, turn **SELECT knob** to enter a keyword by selecting characters, then press **SELECT knob** to continue.
 - **[Location:]** browse Internet radio stations by location.
 - **[Popular]**: tune to the most popular stations on the internet.
 - **[Discover]** : tune to discover list for internet radio.

Store Internet radio stations

Note

- You can store a maximum of 40 preset stations (shared between Internet radio and Podcasts)

- 1 In Internet radio mode, tune to an Internet radio station.
- 2 Press and hold **★ PRESET** for two seconds.
 - ↳ The preset station list is displayed.
- 3 Turn **SELECT knob** to select a preset number.
- 4 Press **SELECT knob** to confirm.
 - ↳ **[Preset stored]** is displayed.
 - ↳ The station is stored in the selected position.

Select a preset Internet radio station

In Internet radio mode.

- 1 Press **★ PRESET**.
- 2 Turn **SELECT knob** to select a number.
- 3 Press **SELECT knob** to confirm.

Show Internet radio information

While listening to Internet radio, press and hold

≡ MENU repeatedly to scroll through the following information (if available):

- ↳ Artist and track name
- ↳ Station description
- ↳ Station genre and location
- ↳ Codec and sampling rate
- ↳ Playback buffer
- ↳ Date

Note

- If no button is pressed within 15 seconds, the menu exits.
Station lists and submenus may change from time to time and vary by locations.

5 Listen to Podcasts

- 1 Press  **Source** and turn **SELECT knob** to select [**Podcasts**] mode.
- 2 Press  **MENU** to access the menu.
- 3 Turn **SELECT knob** to scroll through the menu options:
- 4 To select an option, press **SELECT knob**.
- 5 Repeat steps 3 to 4 if any sub-option is available under one option.
To return to the previous menu, press .



6 Listen to Spotify

Use your phone, tablet or computer as a remote control for Spotify.
Go to spotify.com/connect to learn how

The Spotify Software is subject to third party licenses found here:
<https://www.spotify.com/connect/third-party-licenses>.

7 Listen to FM radio

Tune to FM radio stations

- 1 Press  **Source** and turn **SELECT knob** to select **[FM radio]** mode.
- 2 Press and hold **◀◀/▶▶** for two seconds.
↳ The radio tunes to an FM radio station with strong reception automatically.
- 3 Repeat step 2 to tune to more radio stations.

To tune to a station manually:

- In FM tuner mode, turn the **SELECT knob** to select a frequency.

Store FM radio stations

Note

- You can store a maximum of 20 FM radio stations.

- 1 In FM mode, tune to an FM radio station.
- 2 Press and hold **★ PRESET** for two seconds.
↳ The preset station list is displayed.
- 3 Turn **SELECT knob** to select a preset number.
- 4 Press **SELECT knob** to confirm.
↳ **[Preset stored]** is displayed.
↳ The station is stored in the selected position.

Store FM radio stations automatically

- In FM mode, press and hold **SELECT knob**
- ↳ The unit stores all the available FM radio stations and broadcasts the first station.



Tip

- To remove a pre-stored station, store another station in its place.

Select a preset FM radio station

In FM mode, you have two ways to select a preset radio station.

Option A:

- 1 Press **★ PRESET**.
- 2 Turn **SELECT knob** to select a number.
- 3 Press **SELECT knob** to confirm.

Option B:

Press **◀◀/▶▶** to skip to the previous/next preset station.

Use menu in FM mode

- 1 In FM mode, press **≡ MENU** to access FM menu.
- 2 Turn **SELECT knob** to scroll through the menu options:



- **[Scan setting]**
 - **[Audio setting]**
 - **[System settings]**: adjust system settings (see the Chapter "Use system settings menu").
 - **[Main menu]**: access main menu (see the Chapter "Use main menu").
- 3 To select an option, press **SELECT knob**.
 - 4 Repeat steps 2 to 3 if any sub-option is available under one option.
 - To return to the previous menu, press **≡**.

[Scan setting]

- **[Strong stations only?]-[YES]**: scan FM radio stations with strong signals only.
- **[Strong stations only?]-[NO]**: scan all the available FM radio stations.

[Audio setting]

- **[Listen in Mono only?]-[YES]**: select mono broadcast.
- **[Listen in Mono only?]-[NO]**: select stereo broadcast.



Note

- If no button is pressed within 15 seconds, the menu exits.

Show RDS information

RDS (Radio Data System) is a service that allows FM stations to show additional information.

 
If you listen to an FM station with RDS signal, an RDS icon and the station name are displayed.

- 1 Tune to an RDS station.
- 2 Press and hold **≡** repeatedly to scroll through the following information (if available):

- ↳ Station name
- ↳ Radio text messages
- ↳ Program type
- ↳ Frequency
- ↳ Date

8 Use system settings menu

- 1 In working mode, press **≡** to access the menu.
- 2 Turn **SELECT knob** repeatedly to select **[System settings]**.
- 3 Press **SELECT knob** to confirm.
- 4 Repeat steps 2 to 3 to select an option.



- **[Equaliser]**: select equaliser mode.
- **[Network]**: enable you to establish network connection.
- **[Time/Date]**: set time and date.
- **[Language]**: select system language.
- **[Factory Reset]**: reset the radio to factory default status.
- **[Software update]**: check the software update information.
- **[Setup wizard]**: instruct you to perform initial setup.
- **[Info]**: know software version.
- **[Privacy policy]**: view privacy notice.
- **[Backlight]**: adjust backlight settings.

Note

- If no button is pressed within 15 seconds, the menu exits.

Adjust network settings

- 1 Select **[System settings]>[Network]**.
- 2 Turn **SELECT knob** to select an option or sub-option, then press **SELECT knob** to confirm. **[Network wizard]**: instruct you to establish network connection.

- **[PBC Wlan setup]**: select this option if your wireless router supports WPS and PBC setup method.
- **[View settings]**: view the current network information.
- **[Manual settings]**:
 - **[DHCP enable]**: allocate IP address automatically.
 - **[DHCP disable]**: allocate IP address manually
- **[Network profile]**: display a list of the networks remembered by the radio.
- **[Clear network settings]**: clear network settings selection.
- **[Keep network connected?]**: select whether to keep the network connected.

Set time/date

- 1 Select **[System settings]>[Time/Date]**.
- 2 Turn **SELECT knob** to select an option or sub-option, then press **SELECT knob** to confirm.



- **[Set Time/Date]**: set time and date.
- **[Auto update]**:
 - **[Update from FM]**: synchronize time with FM stations.
 - **[Update from Network]**: synchronize time with Internet radio stations.
 - **[No update]**: deactivate time synchronization.
- **[Set format]**: set 12/24 hour format.
- **[Set timezone]**: set timezone.
- **[Daylight savings]**: activate or deactivate daylight saving time.



Note

- If you are updating time from FM, the daylight savings option has no effect.
- If you are updating from the network, set your time zone.

Set system language

- 1 Select **[System settings]>[Language]**.
↳ A language list is displayed.
- 2 Turn **SELECT knob** to select a system language then press **SELECT knob** to confirm.

Reset all the settings

- 1 Select **[System settings]>[Factory Reset]**.
- 2 Turn **SELECT knob** to select an option, then press **SELECT knob** to confirm.
 - **[Yes]**: Reset the radio to factory default status.
 - **[No]**: Return to the previous menu.

Check software update information

- 1 Select **[System settings]>[Software update]**.
- 2 Turn **SELECT knob** to select an option or sub-option, then press **SELECT knob** to confirm.
 - **[Auto-check setting]**: select whether to check new software versions periodically.
 - **[Check now]**: check new software versions immediately.



Note

- If the radio detects that new software is available, it asks if you want to go ahead with an update. If you agree, the new software is downloaded and installed.
- Before software upgrade, make sure that the radio is connected to a stable mains power connection. Disconnecting power during a software update may damage the product.

Know the software version

- Select **[System settings]>[Info]**.
↳ The current software version is shown.

Adjust backlight settings

- 1 Select **[System settings]>[Backlight]**.
- 2 Turn **SELECT knob** to select an option or sub- option, then press **SELECT knob** to confirm.
 - **[Timeout]**: select a timeout period for display backlight.
 - **[On level]**: select a brightness level for the backlight.
 - **[Dim level]**: select a display brightness level among Medium,Low and Off.

9 Use main menu

- 1 In working mode, press **≡** to access the top menu.
- 2 Turn **SELECT knob** repeatedly to select **[Main menu]**.
- 3 Press **SELECT knob** to confirm.
- 4 Repeat steps 2 to 3 to select an option.
 - **[Internet radio]**: select Internet radio mode.
 - **[Podcasts]**: select Podcasts radio mode.
 - **[Spotify]**: select Spotify mode.
 - **[FM]**: select FM mode.
 - **[CD]**: select CD mode.
 - **[USB]**: select USB mode.
 - **[Bluetooth]**: select Bluetooth mode.
 - **[AUDIO IN]**: select AUDIO IN mode.
 - **[Sleep]**: set sleep timer.
 - **[Alarms]**: set alarm timer.
 - **[System settings]**: adjust system settings (see the chapter "Use system settings menu").

≡ Note

- If no button is pressed within 15 seconds, the menu exits.
- You can also press **SOURCE** to select a mode: **Internet radio**, **Podcasts**, **Spotify**, **FM radio**, **CD**, **USB**, **Bluetooth** or **AUDIO IN**.

Set alarm

≡ Note

- You can set two alarms to ring at different time. To make the alarm work normally, make sure that the clock is set correctly.

- 1 Select **[Main menu]>[Alarms]**.
 - ↳ If clock is not set, a message prompts you to set clock.
- 2 Press **OK** to continue.
 - ↳ The day digit blinks.

- 3 Turn **SELECT knob** to set the day, then press **SELECT knob** to confirm.
 - ↳ The month digit blinks.
- 4 Repeat step 3 to set the month, year, and time respectively.
 - ↳ The **[Alarm 1: off [00:00]]** and **[Alarm 2: off [00:00]]** options are displayed.




- 5 Repeat step 3 to select **[Alarm 1: off [00:00]]>[Enable:]****[Off]**.
- 6 Repeat step 3 to activate or deactivate the alarm timer:
 - **[Off]**: deactivate the alarm timer.
 - **[Daily]**: the alarm sounds everyday.
 - **[Once]**: the alarm sounds only once.
 - **[Weekends]**: the alarm sounds on Saturdays and Sundays.
 - **[Weekdays]**: the alarm sounds each day from Monday to Friday.
- 7 Repeat step 3 to select **[time]**, and then set the alarm time.
- 8 Repeat step 3 to select **[mode]**, and then set the alarm source.
 - **[Buzzer]**: select buzzer as alarm source.
 - **[Internet radio]**: select your last listened Internet radio station as alarm source.
 - **[FM]**: select your last listened FM radio station as alarm source.
- 9 Repeat step 3 to select **[preset]**, and then select your last listened station or a preset radio station as your alarm source.
- 10 Repeat step 3 to select **[Volume:]**, and then set the alarm volume.
- 11 Repeat step 3 to select **[Save]**.
 - ↳ Alarm 1 is set.
- 12 Repeat steps 5 to 11 to set Alarm 2.



Note

- When the alarm is activated, an alarm icon for Alarm 1 or Alarm 2 is displayed.
- To stop the alarm, press  on the unit.
- You can also go to [System settings]>[Time/Date] to set time and date (see "Use system settings menu">"Set time/date").

Set sleep timer

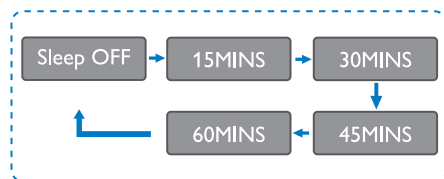


- 1 Select [Main menu]>[Sleep].
- 2 Press Turn **SELECT knob** repeatedly to select the sleep timer period (in minutes).
 - ↳ When [Sleep OFF] is displayed, the sleep timer is deactivated.

10 Other features

Play audio through Bluetooth

- 1 Press  **Source** and turn **SELECT knob** to select **[Bluetooth]** mode.
- 2 Press  **MENU** to access the menu.
- 3 Turn **SELECT knob** to scroll through the menu options:
 - Select pair menu option and press **SELECT knob**.
 - Prompt message “**Please connect with a device to: Philips TAM8905**” appears with Bluetooth icon flashing.
 - On your Bluetooth device, enable Bluetooth and search for Bluetooth devices that can be paired.
 - Select **[Philips TAM8905]** displayed on your device for pairing.
 - After successful connection, the on screen message will change to **[Connected]** and the Bluetooth icon will stop flashing.
- 4 To select an option, press **SELECT knob**.
- 5 Repeat steps 3 to 4 if any sub-option is available under one option.

 To return to the previous menu, press



Adjust volume

- During music playback, turn **–VOL+** knob to adjust volume.

Mute sound

- During music playback, press **MUTE** to mute or resume sound.

Play from disc

- 1 Press  **Source** and turn **SELECT knob** to select **CD** source.
- 2 Press  to open the disc compartment.
- 3 Insert a disc with the label side up.

- 4 Press  to close the disc compartment.
 - ↳ Play starts automatically. If not, press .

Play from USB

Note

- Make sure that the USB device contains playable audio content.

- 1 Insert a USB device into the  socket.
- 2 Press  **Source** and turn **SELECT knob** to select the **USB** source.
 - ↳ Play starts automatically. If not, press .

Charge your devices

With this micro music system, you can charge your external devices, such as your cell phone, MP3 player or other mobile devices.

- 1 Use a USB cable to connect the USB socket of this product with the USB socket of your devices.
- 2 Connect the product to power.
 - ↳ Once the device is recognized, the charging starts.

Note

- Compatibility of this product with all devices is not guaranteed.

Listen to an external device

You can listen to an external device through this unit with an MP3 link cable.

- 1 Connect an MP3 link cable (not supplied) between:
 - **AUDIO IN** jack (3.5 mm) on the product,
 - and the headphone jack on an external device.
- 2 Press  **Source** and turn **SELECT knob** to select **AUDIO IN** source.
- 3 Start to play the device (see the device user manual).

11 Product information

Specifications

Amplifier

Rated Output Power	50Wx2 RMS
Frequency Response	50-20000 Hz, ± 3 dB
Signal to Noise Ratio	> 65 dBA
Speaker Driver	2 x 5.25"woofer range,4 Ω 2 x ϕ 25mm tweeter range,12 Ω Bass enhancement 2 x bass port
Audio Input level	600mV $\pm$ 100mV RMS
Support disc type	CD-DA,CD-R,CDRW, MP3-CD(8/12 cm)
USB playback	Type A,USB direct 2.0,5V/1A,MSC file format,FAT 16/32,Support USB up to 32G
USB charging	2A max(Standby);500mA max(USB source);1A max(Other source) * Actual charging current depends on the mobile devices

Wi-Fi

Wi-Fi protocol	802.11b/g/n
Wi-Fi Frequency Band	2412MHz to 2472MHz
Maximum transit power	15.08 dBm

Tuner

Tuning Range(FM)	87.5-108 MHz
------------------	--------------

Speaker

Speaker Impedance	4 ohm
Sensitivity	86 $\pm$ 3dB/m/W

Bluetooth

Bluetooth Version	V4.2
Bluetooth Frequency Band	2.4 Ghz ~ 2.48 GHz ISM Band
Maximum transit power	-4.1 dBm
Bluetooth Range	10 m(free space)

General information

AC Power(power adapter)	Brand name:PHILIPS
	Input: 100-240V~, 50/60Hz (AC Input)
Operation Power Consumption	≤ 45 W
Standby Power Consumption(without Wi-Fi)	≤ 1 W

Dimensions

- Main Unit (W x H x D)	230x145x262mm
- Speaker Box(W x H x D)	174x260.6x229mm

Weight

- Main Unit	2.17kg
- Speaker Box	2x2.716 kg

12 Troubleshooting



Warning

- Never remove the casing of this device.

To keep the warranty valid, never try to repair the system yourself.

If you encounter problems when using this device, check the following points before requesting service. If the problem remains unsolved, go to the Philips Web page (www.philips.com/support). When you contact Philips, make sure that the device is nearby and the model number and serial number are available.

No power

- Make sure that the AC power plug of the unit is connected properly.
- Make sure that there is power at the AC outlet.

No sound or poor sound.

- Adjust the volume.
- Check whether the unit is muted or the unit station is still buffering.
- Fully extend and adjust the position of the radio antenna.
- Keep the unit away from other electronic devices to avoid radio interference.
- Check the Wi-Fi network connection.
- Rotate and adjust the position of the Wi-Fi antenna.

No response from the unit

- Disconnect and reconnect the AC power plug, then turn on the unit again.
- Check if the unit is in standby mode. If yes, turn on the unit.

Poor radio reception

- Keep the unit away from other electronic devices to avoid radio interference.
- Fully extend and adjust the position of the radio antenna.

- Check the Wi-Fi network connection. Rotate and adjust the position of the Wi-Fi antenna.

Insufficient Wi-Fi signal strength

- Check the distance between your router and the unit.
- Rotate and adjust the position of the Wi-Fi antenna.

Cannot connect to your Wi-Fi network

- Check if your wireless router is switched off.
- Check if your wireless router supports WPS. Use the correct setup method (PBC or PIN) to connect your WPS-supported router to the unit. If necessary, refer to the user manual of your wireless router for how to set up Wi-Fi connection.
- Configure the Wi-Fi settings again (see "Get started">"Perform initial setup" and "Use system settings menu">"Adjust network settings").

Some stations do not work sometimes

- Some stations can only support a limited number of listeners. If you try again after a few minutes, you will be able to listen to the stations.
- The station is not broadcasting. Try again later.

Some stations disappear from the station list

- When a station stops broadcasting on the Internet, it will be removed from the list. The unit will check constantly if the station is on the air; if it restarts broadcasting, it will be brought back to the station list.

Alarm does not work

- Set the clock/alarm correctly.



Specifications are subject to change without notice.

Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of MMD Hong Kong Holding Limited or one of its affiliates, and MMD Hong Kong Holding Limited is the warrantor in relation to this product.



PHILIPS

Safety Information

English

Read and understand all instructions before you use your product. If damage is caused by failure to follow instructions, the warranty does not apply.

Safety

Risk of electric shock or fire!

- Before you make or change any connections, make sure that all devices are disconnected from the power outlet.
- Never expose the product and accessories to rain or water. Never place liquid containers, such as vases, near the product. If liquids are split on or into the product, disconnect it from the power outlet immediately. Contact Consumer Care to have the product checked before use.
- Never place the product and accessories near naked flames or other heat sources, including direct sunlight.
- Never insert objects into the ventilation slots or other openings on the product.
- Where the mains plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Battery (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like. Disconnect the product from the power outlet before lightning storms.
- When you disconnect the power cord, always pull the plug, never the cable.
- Use the product in tropical and/or moderate climates.

Risk of short circuit or fire!

- For identification and supply ratings, see the type plate at the back or bottom of the product.
- Before you connect the product to the power outlet, ensure that the power voltage matches the value printed on the back or bottom of the product. Never connect the product to the power outlet if the voltage is different.

Risk of injury or damage to this product/product!

- For wall mounting, this product must in accordance with the installation instructions. Use only the supplied wall mount bracket (if available). Improper wall mounting may result in accident, injury or damage. If you have any query, contact Consumer Care in your country.
- Never place the product or any objects on power cords or on other electrical equipment.
- If the product is transported in temperatures below 5°C, unpack the product and wait until its temperature matches room temperature before connecting it to the power outlet.
- Parts of this product can be made of glass. Handle with care to avoid injury and damage.

Risk of overheating!

- Never install this product in a confined space. Always leave a space of at least four inches around the product for ventilation. Ensure curtains or other objects never cover the ventilation slots on the product.

Risk of contamination!

- Do not mix batteries (old and new or carbon and alkaline, etc.).
- CAUTION: Danger of explosion if batteries are incorrectly replaced. Replace only with the same or equivalent type.
- Remove batteries if they are exhausted or if the remote control is not to be used for a long time.
- Batteries contain chemical substances, they should be disposed of properly.

Risk of swallowing batteries!

- The product/remote control may contain a coin/button type battery, which can be swallowed. Keep the battery out of reach of children at all times! If swallowed, the battery can cause serious injury or death. Severe internal burns can occur within two hours of ingestion.
- If you suspect that a battery has been swallowed or placed inside any part of the body, seek immediate medical attention.
- When you change the batteries, always keep all new and used batteries out of reach of children. Ensure that the battery compartment is completely secure after you replace the battery.
- If the battery compartment cannot be completely secured, discontinue use of the product. Keep out of reach of children and contact the manufacturer.

 This is CLASS II apparatus with double insulation, and no protective earth provided.

 AC voltage

 Use only the power supplies listed in the user manual.

 WARNING!
Warning: risk of electric shock!

Care for your product

Use only microfiber cloth to clean the product.

Care of the environment

Disposal of your old product and battery

 Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

This product may contain lead and mercury. Disposal of these materials may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities. This product contains batteries:

- Dispose of batteries properly. Do not incinerate. Batteries may explode if overheated.
- Do not warp in metal or aluminum foil.Warp in newspaper before discarding.
- It is suggested that you contact your local town or city to determine proper battery redemption site(s) in your area.
- Please visit www.call2recycle.org for additional information on a recycling center in your area for rechargeable batteries.

Help and support

For extensive online support, visit www.philips.com/support to:

- Download the user manual and the quick start guide.
- Watch video tutorials (available only for selected models).
- Find answers to frequently answered questions(FAQs).
- Email us a question.
- Chat with our support representative.

Follow the instructions on the website to select your language, and then enter your product model n

umber. Alternatively, you can contact Consumer Care in your country. Before you contact, note down the model number and serial number of your product. You can find this information on the back or bottom of your product.

FCC information

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment o and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit dierent from that to which the receiver is connected.

• Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IC-Canada : CAN ICES-003(B)/NMB-003(B)

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

The device for operation in the band 5150–5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.

FCC& IC Radiation Exposure Statement:

This equipmet complies with FCC and Canada radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body. This transmitter.

Warning: Any changes or modifications made to this device that are not expressly approved by MMD Hong Kong Holding Limited may void the user's authority to operate the equipment.

Trade name: PHILIPS

Responsible party: TPV USA Corp.6525 Carnegie Blvd. #200 Charlotte, NC 28211, USA

Français

Lisez et comprenez toutes les instructions avant d'utiliser votre produit. Les dommages causés par le nonrespectdes instructions ne sont pas couverts par la garantie.

Sécurité

Risque d'incendie ou d'électrocution !

- Assurez-vous de débrancher tous les appareils de la prise électrique avant d'effectuer ou de modifier des branchements.
- N'exposez jamais le produit et ses accessoires à la pluie ou à l'eau. Ne posez jamais de contenants d'eau, comme des vases, à proximité du produit. Si du liquide est versé sur ou dans le produit, débranchez-le immédiatement de la prise murale. Contactez le service client pour faire contrôler le produit avant de l'utiliser.
- Ne placez jamais le produit et ses accessoires à proximité de flammes nues ou d'autres sources de chaleur, lumière directe du soleil comprise.
- N'introduisez jamais d'objets dans les fentes de ventilation ou les ouvertures du produit.
- Lorsque la prise secteur ou une rallonge électrique est utilisée comme dispositif de débranchement, celle-ci doit rester facilement accessible.
- La pile (accumulateurs ou pile intégrée) ne doit pas être exposée à une chaleur excessive telle que le soleil, un feu ou similaire).
- Débranchez le produit de la prise électrique avant un orage.
- Lorsque vous débrancherez le cordon secteur, tirez toujours sur la fiche de la prise, et non sur le câble.

Risque de court-circuit ou d'incendie !

- Pour voir les informations d'identification et de type d'alimentation, consultez l'étiquette présente au dos ou au-dessous du produit.
- Avant de connecter le produit à une prise électrique, assurez-vous que la tension du secteur correspond à la valeur donnée au dos ou audessous du produit. Ne branchez jamais le produit à la prise de courant si la tension est différente.

Risque de blessure ou de dommages au produit !

- En cas de montage mural, ce produit doit être solidement fixé au mur conformément aux instructions d'installation. Utilisez uniquement le support de montage mural fourni (si disponible). Un montage mural incorrect peut entraîner un accident, des blessures ou des dommages. Si vous avez des questions, contactez le Service consommateur de votre pays.
- Ne posez jamais le produit ou des objets sur des cordons d'alimentation ou sur d'autres équipements électriques.

- Si le produit est transporté à des températures inférieures à 5°C, sortez-le de la boîte et attendez que sa température s'équilibre sur la température ambiante avant de le brancher sur la prise de courant.
- Certaines parties de ce produit peuvent être en verre. Manipulez-le avec soin pour éviter les blessures et les dommages.

Risque de surchauffe !

- N'installez jamais ce produit dans un espace confiné. Laissez toujours un espace d'au moins quatre pouces autour du produit pour la ventilation. Assurez-vous que des rideaux ou d'autres objets ne recouvrent jamais les fentes d'aération du produit.

Risque de contamination !

- Ne mélangez pas les piles (usagées et neuves ou carbone et alcaline, etc.).
- ATTENTION : Risque d'explosion si les piles ne sont pas remplacées correctement. Remplacez uniquement par le même type ou un type équivalent.
- Retirez les piles si elles sont épuisées ou si la télécommande ne sera pas être utilisée pendant une longue période.
- Les batteries contiennent des substances chimiques, elles doivent être éliminées correctement.

Risque d'ingestion de piles !

- Le produit/la télécommande peut contenir une pile bouton/bouton qui peut être avalée. Gardez toujours la batterie hors de portée des enfants ! En cas d'ingestion, la batterie peut causer des blessures graves ou la mort. De graves brûlures internes peuvent survenir dans les deux heures suivant l'ingestion.
- Si vous pensez qu'une pile a été avalée ou placée à l'intérieur de n'importe quelle partie du corps, consultez immédiatement un médecin.
- Lorsque vous changez les piles, gardez toujours toutes les piles neuves et usagées hors de portée des enfants. Assurez-vous que le compartiment des piles est complètement sécurisé après avoir remplacé la batterie.
- Si le compartiment des piles ne peut pas être complètement sécurisé, cessez d'utiliser le produit. Tenir hors de portée des enfants et contacter le fabricant.

 Ceci est un appareil de CLASSE II à double isolation et sans mise à la terre de protection fournie.

 Tension AC

 Suivez les instructions du mode d'emploi !

 AVERTISSEMENT !
Avertissement : Risque d'électrocution !

Soin de votre produit

Utilisez seulement un tissu de microfibrs pour nettoyer le produit.

Respect de l'environnement

Mise au rebut des produits et batteries usagés

 Votre produit est conçu et fabriqué avec des matériaux et des composants de qualité supérieure qui peuvent être recyclés ou réutilisés.

Ce produit peut contenir du plomb et du mercure. L'élimination de ces matériaux peut être réglementée en raison de considérations environnementales. Pour obtenir des informations sur l'élimination ou le recyclage, veuillez contacter vos autorités locales. Ce produit contient des piles :

- Jetez les piles correctement. Ne pas incinérer. Les piles peuvent exploser en cas de surchauffe.
- Ne pas emballer dans du métal ou de la feuille d'aluminium. Emballer dans du papier journal avant de le jeter.
- Il est suggéré que vous contactiez les autorités municipales pour connaître quels sont le(s) site(s) de recyclage de batterie approprié(s) dans votre région.
- Veuillez visiter www.call2recycle.org pour plus d'informations sur un centre de recyclage de piles rechargeables dans votre région.

Aide et support

Pour un support en ligne complet, visitez www.philips.com/support pour :

- Télécharger le mode d'emploi et le guide de démarrage rapide
- Regarder des didacticiels en vidéo (disponibles pour des modèles spécifiques seulement)
- Trouver des réponses aux questions fréquemment posées (FAQ)
- Nous poser une question par email
- Discuter avec notre représentant de support.

Suivez les instructions du site Internet pour sélectionner votre langage, puis saisissez votre numéro de modèle. Vous pouvez également contacter le service client de votre pays. Avant de prendre contact, veuillez noter le numéro de modèle et le numéro de série de votre produit. Vous trouverez ces informations au dos ou au-dessous de votre produit.

Informations de la FCC

REMARQUE : Cet équipement a été testé et déclaré conforme aux limites d'un appareil numérique de classe B, conformément à la partie 15 des règles de la FCC. Ces limites sont conçues pour fournir une protection raisonnable contre les interférences nuisibles dans une installation résidentielle. Cet équipement génère, utilise et peut émettre de l'énergie radiofréquence et, s'il n'est pas installé et utilisé conformément aux instructions, peut provoquer des interférences nuisibles aux communications radio. Cependant, il n'y a aucune garantie que des interférences ne se produiront pas dans une installation particulière. Si cet équipement provoque des interférences nuisibles à la réception de la radio ou de la télévision, ce qui peut être déterminé en éteignant et en rallumant l'équipement, l'utilisateur est encouragé à essayer de corriger l'interférence par une ou plusieurs des mesures suivantes :

- Réorientez ou déplacez l'antenne de réception.
- Augmentez la séparation entre l'équipement et le récepteur.
- Branchez l'équipement dans une prise sur un circuit différent de celui auquel le récepteur est connecté.
- Consultez le revendeur ou un technicien expérimenté en hautparleurs/ téléviseurs pour obtenir de l'aide.

Cet appareil est conforme à la partie 15 des règles de la FCC. L'utilisation est soumise aux deux conditions suivantes :

(1) cet appareil ne doit pas provoquer d'interférences nuisibles, et (2) cet appareil doit accepter toute interférence reçue, y compris les interférences pouvant provoquer un fonctionnement indésirable.

IC-Canada : CAN ICES-003(B)/NMB-003(B)

Cet appareil contient des émetteurs/récepteurs exempts de licence qui sont conformes aux RSS « Innovation,Sciences et Développement économique » exemptés de licence au Canada. L'utilisation est soumise aux deux conditions suivantes :

1. Cet appareil ne doit pas provoquer d'interférences.
2. Cet appareil doit accepter toute interférence, y compris les interférences susceptibles de provoquer un fonctionnement indésirable de l'appareil.

L'utilisation de l'appareil sur les bandes 5150–5250 Mhz doit être effectuée en intérieur uniquement, pour réduire le risque d'interférences négatives sur les systèmes satellites mobiles en co-canal.

Déclaration sur l'exposition aux rayonnements FCC& IC : Cet équipement respecte les limites d'exposition aux rayonnements établies par la FCC et le Canada établies pour un environnement non contrôlé. L'équipement doit être installé et utilisé à une distance minimale de 20 cm entre la source de rayonnement et votre corps. Le transmettreur.

Avertissement : Toutes les modifications ou altérations apportées à cet appareil et qui ne sont pas expressément approuvées par MMD Hong Kong Holding Limited peuvent annuler le droit de l'utilisateur à employer le matériel.

commerciale : PHILIPS

Partie responsable : TPV USA Corp.6525 Carnegie Blvd. #200 Charlotte, NC 28211, USA

Español

Lea y entienda todas las instrucciones antes de usar el producto. Si se produce algún daño por no seguir las instrucciones, la garantía no aplicará.

Seguridad

Riesgo de que se produzca una descarga eléctrica o un incendio.

- Antes de enchufar o cambiar alguna conexión, asegúrese de que todos los dispositivos están desconectados del tomacorrientes.
- Nunca exponga el producto y los accesorios a la lluvia o el agua. Nunca coloque contenedores con líquidos, como vasos, cerca del producto. Si se derraman líquidos sobre o dentro del producto, desconéctelo del tomacorrientes de inmediato. Comuníquese con atención al cliente para que compruebe el producto antes de usarlo.
- Nunca coloque el producto ni los accesorios cerca de llamas vivas u otras fuentes de calor, incluida la luz solar.
- Nunca inserte objetos en las ranuras de ventilación u otras aberturas del producto.
- Cuando use el enchufe de alimentación o un adaptador como dispositivo de desconexión, asegúrese de que estos estén al alcance de la mano.
- No exponga la batería (paquete de baterías o baterías instaladas) a temperaturas excesivas, como la de la luz solar, el fuego o similares.
- Desconecte el producto del tomacorrientes antes de las tormentas eléctricas.
- Al desconectar el cable de alimentación, siempre jale del enchufe, nunca del cable.
- Use el producto en climas tropicales o moderados.

Riesgo de que se produzca un cortocircuito o un incendio.

- Consulte la placa de características en la parte posterior o inferior del producto para ver la identificación y los niveles de potencia.
- Antes de conectar el producto al tomacorrientes, asegúrese de que el voltaje se corresponde con el valor impreso en la parte posterior o inferior del producto. Nunca conecte el producto al tomacorrientes si el voltaje es distinto.

Riesgo de lesión o daño al producto.

- Para montar en la pared, este producto debe estar asegurado a la pared de manera firme según con las instrucciones de instalación. Solo use el soporte para la pared proporcionado (si está disponible). Un montaje a la pared inapropiado puede resultar en accidente, lesión o daño. Si tiene alguna consulta, comuníquese con atención al cliente de su país.
- Nunca coloque el producto o cualquier objeto sobre cables de alimentación u otro equipamiento eléctrico.
- Si el producto es transportado en temperaturas menores a 5 °C, desempaque el producto y espere a que su temperatura se corresponda con la temperatura ambiente antes de conectarlo al tomacorrientes.
- Algunas partes de este producto pueden ser de vidrio. Manipúlelo con cuidado para evitar lesiones y daño.

Riesgo de recalentamiento.

- Nunca instale este producto en un espacio reducido. Siempre deje un espacio de al menos diez centímetros alrededor del producto para que se ventile. Asegúrese de que las cortinas u otros objetos nunca cubran las ranuras de ventilación del producto.

Riesgo de contaminación.

- No mezcle baterías (viejas y nuevas o de carbono y alcalinas, etc.).
- PRECAUCIÓN: Existe riesgo de explosión si las baterías no se reemplazan de manera adecuada. Reemplácela solamente con una del mismo tipo o equivalente.
- Remueva las baterías si están gastadas o si el control remoto no se va a utilizar por mucho tiempo.
- Las baterías contienen sustancias químicas, deben desecharse de manera adecuada.

Riesgo de tragar las baterías.

- El producto/control remoto puede contener una batería del tipo botón, que puede tragarse. Mantenga la batería fuera del alcance de los niños en todo momento. Si se traga, la batería puede causar lesiones graves o la muerte. Pueden aparecer quemaduras internas graves a las dos horas de la ingesta.
- Si sospecha que alguna batería se tragó o se colocó dentro de alguna parte del cuerpo, busque atención médica inmediata.
- Cuando cambie las baterías, mantenga las baterías nuevas y usadas fuera del alcance de los niños en todo momento. Asegúrese de que el compartimiento de las baterías sea completamente seguro antes de reemplazar la batería.
- Si el compartimiento de la batería no puede asegurarse por completo, descontinúe el uso del producto.Mantenga fuera del alcance de los niños y comuníquese con el fabricante.

 Este es un aparato CLASE II con aislamiento doble que no incluye protección mediante toma de tierra.

 Voltaje CA

 Signa las instrucciones en este manual de usuario.

 ADVERTENCIA
Advertencia: riesgo de que se produzca una descarga eléctrica.

Cuidado del producto

Use únicamente trapos de microfibra para limpiar el producto.

Cuidado del medio ambiente

Desecho del producto antiguo y la batería

 Este producto fue diseñado y elaborado con materiales y componentes de alta calidad que pueden ser reciclados y reutilizados.

Este producto puede contener plomo o mercurio. La eliminación de estos materiales puede estar regulada debido a cuestiones ambientales. Para obtener información sobre deshecho y reciclaje, comuníquese con las autoridades locales. Este producto contiene baterías:

- Deseche las baterías de manera apropiada. No incinere la batería. Las baterías pueden explotar al recalentarse.
- No envuelva en metal o papel de aluminio. Envuelva en diario antes de desechar.
- Se sugiere que contacte a su localidad o ciudad para encontrar centros de desechos de baterías apropiados en su área.
- Visite www.call2recycle.org para obtener información adicional sobre un centro de reciclaje de baterías recargables en su área.

Ayuda y asistencia

Para obtener asistencia extensiva en línea, visite www.philips.com/support para:

- descargar el manual del usuario y la guía de inicio rápido;
 - ver videos instructivos (disponibles solo para modelos selectos);
 - encontrar respuestas para las preguntas frecuentes (FAQs);
 - enviarnos preguntas por correo electrónico;
 - hablar con nuestro representante de asistencia.
- Signa las instrucciones del sitio web para seleccionar su idioma e ingresar el número de modelo de su producto. Alternativamente, puede comunicarse con atención al cliente de su país. Antes de ponerse en contacto, anote el número de modelo y el número de serie del producto. Puede encontrar esta información en la parte posterior o inferior del producto.

Información de la FCC

NOTA: Este equipo fue sometido a pruebas para verificar el cumplimiento con los límites para los dispositivos digitales Clase B, de acuerdo con la Sección 15 de las normas de la FCC. El objetivo de estos límites es proporcionar una protección razonable contra interferencias nocivas en una instalación residencial. Este equipo genera, utiliza y puede emitir energía de radiofrecuencia y, si no se instala y se utiliza conforme al manual de instrucciones, puede ocasionar interferencias nocivas en las comunicaciones de radio. Sin embargo, no se garantiza la ausencia de interferencia en una instalación específica. Si el equipo ocasiona interferencias nocivas en la recepción de radio o televisión, que puede comprobarse al apagar y encender el equipo, se sugieren las siguientes medidas para corregir la interferencia:

- Cambie la orientación o la ubicación de la antena de recepción.
- Aumente la separación entre el equipo y el receptor.
- Conecte el equipo y el receptor a tomacorrientes que pertenezcan a diferentes circuitos.
- Consulte al proveedor o a un técnico de radio y TV experimentado si necesita ayuda.

Este dispositivo cumple con la Sección 15 de las normas de la FCC. El funcionamiento debe cumplir las siguientes dos condiciones: (1) Este dispositivo no puede causar interferencias nocivas, y (2) este dispositivo debe aceptar cualquier interferencia que reciba, incluidas aquellas que puedan causar un funcionamiento no deseado.

IC-Canadá: CAN ICES-003(B)/NMB-003(B)

Este dispositivo contiene transmisores/receptores exentos de licencias que cumplen con RSS exentos de licencia de Innovación, Ciencia y Desarrollo Económico de Canadá. El funcionamiento debe cumplir las siguientes dos condiciones:

1. El dispositivo no puede causar interferencias.
2. Este dispositivo debe aceptar cualquier interferencia, incluidas aquellas que puedan ocasionar un funcionamiento no deseado del aparato.

El dispositivo que funciona en la banda de 5150 a 5250 MHz es únicamente para el uso en interiores para reducir la posibilidad de interferencia dañina a sistemas móviles por satélite de canal común.

Declaración de exposición a radiaciones de la FCC y la IC: Este equipo cumple con los límites de exposición a radiaciones de la FCC y de Canadá especificados para un entorno no controlado. Este equipo debe instalarse y utilizarse con una distancia mínima de 20 cm entre el radiador y el cuerpo. Este transmisor.

Advertencia: Cualquier cambio o modificación que se haga en este dispositivo que MMD Hong Kong Holding Limited no apruebe expresamente puede anular la autoridad del usuario para operar el equipo.

Nombre comercial: PHILIPS

Parte responsable: TPV USA Corp.6525 Carnegie Blvd. #200 Charlotte, NC 28211, USA

黑白印刷

折叠尺寸：105*148mm

正面

背面