

# PHILIPS

## CD Soundmachine TAZ7000



## User manual

Register your product and get support at:  
[www.philips.com/support](http://www.philips.com/support)

## Contents

 
|          |                                     |           |           |                               |           |
|----------|-------------------------------------|-----------|-----------|-------------------------------|-----------|
| <b>1</b> | <b>Important</b>                    | <b>3</b>  | <b>10</b> | <b>Connect with headphone</b> | <b>12</b> |
|          | Safety                              | 3         |           |                               |           |
|          | Notice                              | 3         | <b>11</b> | <b>Product specification</b>  | <b>12</b> |
| <b>2</b> | <b>Your CD soundmachine</b>         | <b>4</b>  | <b>12</b> | <b>Troubleshooting</b>        | <b>13</b> |
|          | What's in the box                   | 4         |           |                               |           |
|          | Overview of the main unit           | 4         | <b>13</b> | <b>Trademarks</b>             | <b>14</b> |
|          | Overview of the remote control      | 5         |           |                               |           |
| <b>3</b> | <b>Get started</b>                  | <b>6</b>  |           |                               |           |
|          | Connect power                       | 6         |           |                               |           |
|          | Turn on/Standby                     | 6         |           |                               |           |
|          | App download                        | 6         |           |                               |           |
| <b>4</b> | <b>Play from CD</b>                 | <b>7</b>  |           |                               |           |
|          | Play a CD                           | 7         |           |                               |           |
|          | Use CD menu                         | 8         |           |                               |           |
|          | Program tracks                      | 8         |           |                               |           |
| <b>5</b> | <b>Listen to the radio</b>          | <b>9</b>  |           |                               |           |
|          | Listen to FM radio                  | 9         |           |                               |           |
|          | Display RDS information             | 9         |           |                               |           |
| <b>6</b> | <b>Play from Bluetooth®</b>         | <b>9</b>  |           |                               |           |
|          | Play from classic Bluetooth         | 9         |           |                               |           |
|          | Use BT menu                         | 9         |           |                               |           |
| <b>7</b> | <b>Play from Auracast</b>           | <b>10</b> |           |                               |           |
|          | Auracast receiver                   | 10        |           |                               |           |
|          | Auracast broadcast                  | 10        |           |                               |           |
|          | Disconnect Auracast broadcast       | 10        |           |                               |           |
| <b>8</b> | <b>Play from USB</b>                | <b>11</b> |           |                               |           |
|          | Use USB menu                        | 11        |           |                               |           |
| <b>9</b> | <b>Listen to an external device</b> | <b>11</b> |           |                               |           |
|          | Use AUDIO IN menu                   | 11        |           |                               |           |

# 1 Important

## Safety

Read and understand all instructions before you use this CD soundmachine system.

If damage is caused by failure to follow the instructions, the warranty does not apply.

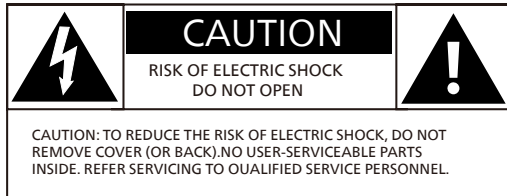

This 'bolt of lightning' indicates uninsulated material within the device may cause an electrical shock. For the safety of everyone in your household, please do not remove the covering.

The 'exclamation mark' calls attention to features for which you should read the enclosed literature closely to problems.

**WARNING:** To reduce the risk of fire or electric shock, the device should not be exposed to rain or moisture and objects filled with liquids, such as vases, should not be placed on the device.

**CAUTION:** To prevent electric shock fully insert the plug. (For regions with polarized plugs: To prevent electric shock, match wide blade to wide slot.)

### Warning

- Never remove the casing of this apparatus.
  - Never lubricate any part of this apparatus.
  - Never look into the laser beam inside this apparatus.
  - Never place this apparatus on other electrical equipment.
  - Keep this apparatus away from direct sunlight, naked flames or heat.
  - Ensure that you always have easy access to the power cord, plug or adaptor to disconnect the apparatus from the power.
- 
- Make sure that there is enough free space around the product for ventilation.
  - Only use attachments/accessories specified by the manufacturer.
  - Battery usage **CAUTION** -to prevent battery leakage which may result in bodily injury, property damage, or damage to the product:
    - Install the battery correctly, + and - as marked on the product.
    - The battery (packed or installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
    - Remove the battery when the product is not used for a long time.
  - The product shall not be exposed to dripping or splashing.
  - Do not place any source of danger on the product (e.g. liquid filled objects, lit candles).
  - Where the MAINS plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
  - Please use the product safely in an environment with temperature between 0°C and 40°C.

## Notice

Any changes or modifications made to this device that are not expressly approved by MMD Hong Kong Holding Limited may void the user's authority to operate the equipment.

## Compliance

Hereby, TP Vision Europe B.V. declares that this product is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU. You can find the Declaration of Conformity on [www.philips.com/support](http://www.philips.com/support).

## Care of the environment

### Disposal of your old product and battery



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



This symbol on a product means that the product is covered by European Directive 2012/19/EU.



This symbol means that the product contains batteries covered by European Regulation (EU) 2023/1542 which cannot be disposed of with normal household waste.

Inform yourself about the local separate collection system for electrical and electronic products and batteries. Follow local rules and never dispose of the product and batteries with normal household waste. Correct disposal of old products and batteries helps prevent negative consequences for the environment and human health.

### Removing the disposable batteries

To remove the disposable batteries, see battery installation section.

### Environmental information

All unnecessary packaging has been omitted. Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

## Care for your product

- Do not insert any objects other than discs into the disc compartment.
- Do not insert warped or cracked discs into the disc compartment.
- Remove the discs from the disc compartment if you are not using the product for an extended period of time.
- Only use microfiber cloth to clean the product.

This apparatus includes this label:



### Note

- The type plate is located on the back of the product.

FCC and IC statement

FCC information

The device complies with the FCC rules, Part 15. Operation is subject to the following two conditions:

- ① This device may not cause harmful interference, and,
- ② This device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with minimum distance 20cm between the radiator& your body.

**Warning:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and canradiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: (1) Reorient or relocate the receivingantenna. (2) Increase the separationbetween the equipment and receiver. (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. (4) Consult the dealer or an experienced radio/TV technician for help.

IC-Canada: CAN ICES-(B)/NMB-(B)

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- 1. This device may not cause interference.
- 2. This device must accept anyinterference, including interference that may cause undesired operation of the device.

Avis d'Industrie Canada: CAN ICES-(B)/NMB-(B)

L'émetteur/récepteur exempt de licence contenu dans le present appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- 1. L'appareil ne doit pas produire de brouillage;
- 2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Après examen de ce matériel aux conformité ou aux limites d'intensité de champ RF, les utilisateurs peuvent sur l'exposition aux radiofréquences et la conformité and compliance d'ac-quérir les informations correspondantes. La distance minimale du corps à utiliser le dispositif est de 20cm.

2 Your CD soundmachine

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.philips.com/support](http://www.philips.com/support).

Introduction

 
With this CD soundmachine, you can:

- Listen to FM radio;
- Enjoy audio from discs, Bluetooth, and other external audio devices;

What's in the box

Check and identify the contents of your package:


- |                     |    |
|---------------------|----|
| • Main unit         | x1 |
| • Power cords       | x2 |
| • Quick Start Guide | x1 |
| • Safety sheet      | x1 |
| • Warranty card     | x1 |


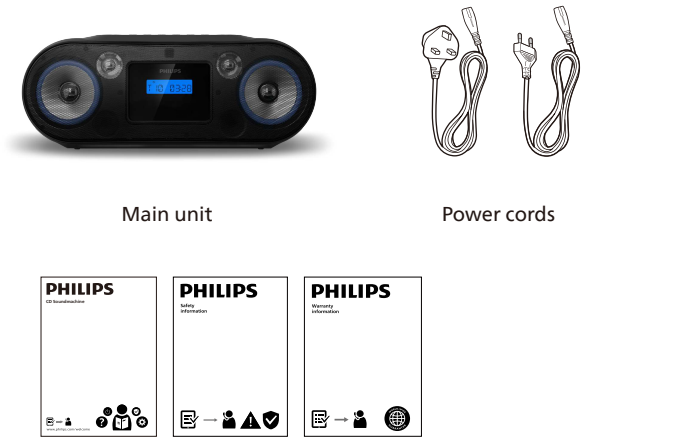


Quick Start Guide / Safety sheet / Warranty card

- Power cord quantity and plug type vary by regions.
- Images, illustrations and drawings shown on this user manual are for reference only, actual product may vary in appearance.

   Overview of the main unit

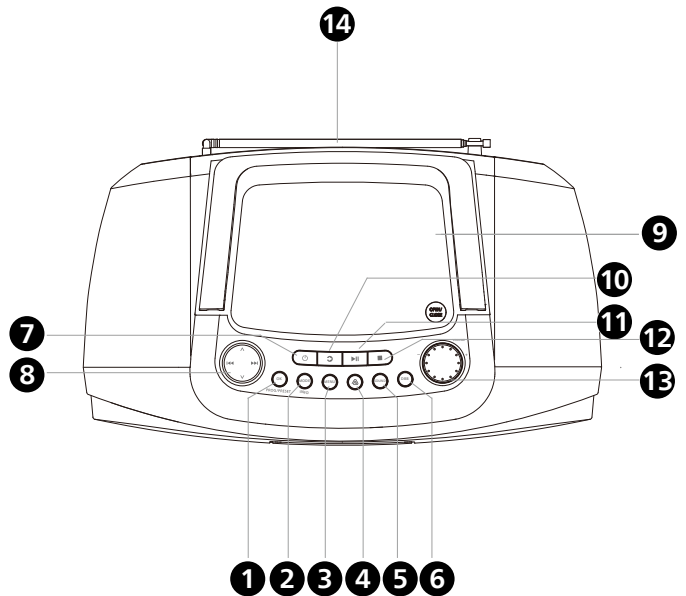

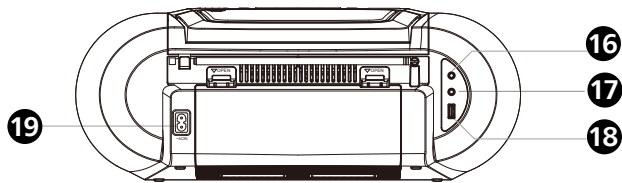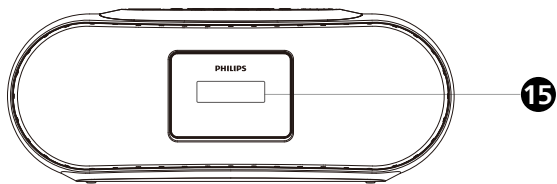

#### ① OK/PROG/PRESET

- Select in the menu
- Program tracks or preset radio station

#### ② MODE

- Short press/Switch playback mode in CD/USB mode
- Long press/Display information

#### ③ MENU

- Access source menu setting.

#### ④

- In Auracast receiver mode, press to rescan Auracast broadcast channel.
- Press to switch to Auracast receiver mode.
- Press and hold for more than 3 seconds to activate / deactivate Auracast broadcast mode.

#### ⑤ SOUND

- Select a preset sound effect.

#### ⑥ DBB

- Turn Dynamic Bass Boost 1/2/OFF.

#### ⑦

- Turn on or to standby.

#### ⑧

- Tune to an FM radio station in radio source, fine tune (increase/decrease) frequency.
- In CD/USB/BT mode, play the previous or next track.
- In CD/USB mode, long press to fast forward or fast backward.

#### ▲ / ▼

- In the menu, scroll menu options up or down.
- In USB mode, switch to the previous or next album.
- In the FM mode, switch to the previous/next preset radio station.

#### ⑨ Disc tray

- Disc compartment.

#### ⑩

- Press to select source.

#### ⑪

- Start and pause play.

#### ⑫

- Stop the play.

#### ⑬ - / +

- Decrease / Increase the volume.

#### ⑭ Antenna

- FM antenna.

#### ⑮ Display panel

- Display current status.

#### ⑯

- Connect with the external headphone device.

#### ⑰

- Audio-in socket.

 
#### ⑱

- USB port.

#### ⑲ AC IN

- Insert power cable plug to AC IN socket.

## Overview of the remote control

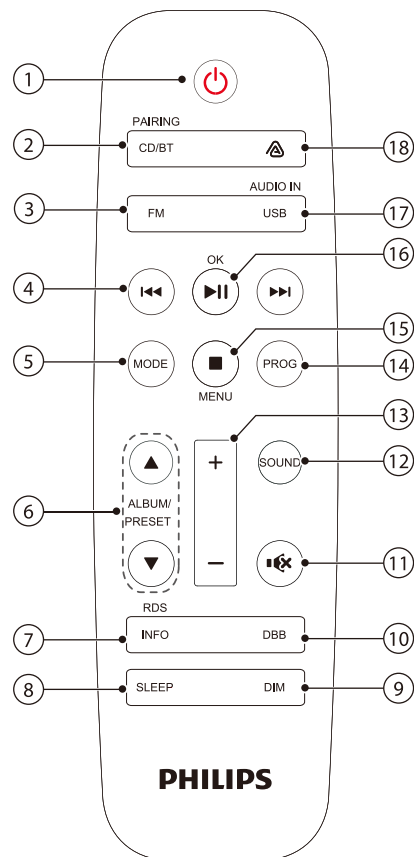

#### ①

- Switch this product on or to standby.

#### ② CD/BT PAIRING

- Select CD source.
- Select Bluetooth source.
- In Bluetooth mode, press and hold for more than 2 seconds to or disconnect the current connected device.

#### ③ FM

- Select FM source.

#### ④

- Skip to the previous/next track.
- Search within a track/disc.
- Tune to a radio station.
- Adjust time.
- In Auracast mode, switch to the previous/next unencrypted broadcast.
- Press and hold to fast forward or backward.

### ⑤ MODE

- Select shuffle mode to play tracks randomly.
- Select repeat mode to play a track or all tracks repeatedly.
- Select Stereo and Mono sound.

### ⑥ ALBUM/PRESET ▲ / ▼

- Select a preset radio station.
- Skip to previous/next album.

### ⑦ INFO/RDS

- During playback, display the play information.
- For selected FM radio stations, display RDS information (if available).

### ⑧ SLEEP

- Set sleep timer.

### ⑨ DIM

- Adjust the display brightness.

### ⑩ DBB

- Turn dynamic bass enhancement on/off.

### ⑪

- Mute or restore volume.

### ⑫ SOUND

- Select a preset sound effect.

### ⑬ +/- (volume)

- Adjust volume.

### ⑭ PROG

- Program tracks.
- Program FM radio stations.

### ⑮ /MENU

- Stop play or erase a program.
- Enter menu.

### ⑯ /OK

- Press to start, pause, or resume play.
- Confirm item.

### ⑰ USB/AUDIO IN

- Select USB source.
- Select AUDIO IN source.

### ⑱

- In Auracast receiver mode, press to rescan Auracast broadcast channel.
- Press to switch to Auracast receiver mode.
- Press and hold for more than 3 seconds to activate / deactivate Auracast broadcast mode.

## 3 Get started



### Caution

- Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

Always follow the instructions in this chapter in sequence.

## Connect power

The unit can be powered by either AC power or batteries.

### Option 1: AC power



### Warning

 
- Risk of product damage! Make sure that the power supply voltage corresponds to the voltage printed on the back or the underside of the unit.
- Risk of electric shock! When you disconnect the AC power, always pull the plug from the socket. Never pull the cord.

Connect the AC power cord to the wall socket.



### Note

- To save energy, turn the unit off after use.

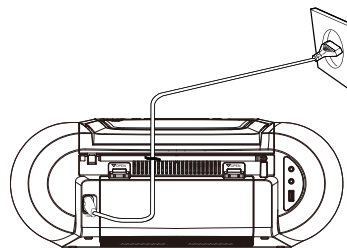


### Option 2: Battery power



### Caution

- Batteries contain chemical substances, so they should be disposed of properly.

 - 1 Open the battery compartment at the bottom of the unit.
- 2 Insert 6 batteries (type: 1.5V R14/UM2/C CELL) with correct polarity (+/-) as indicated.
- 3 Close the battery compartment.

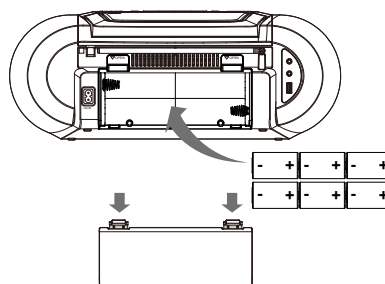

### Note

- The batteries are not supplied. Please purchase separately.

## Turn on/Standby

Press the  button on the unit to turn on and switch to last source, press it again to turn off.

### Switch to standby mode

- The product switches to standby mode automatically when there is no audio detected for over 15 minutes.
- Press  button to wake up the product from standby mode.

## App download

Scan the QR code and press 'Download' button, or search 'Philips Entertainment' in the Apple App Store or Google Play to download the app.



The Philips Entertainment App puts you in charge of the music you are listening to. You can use your smart device to easily operate the product you want, switch between sources, and more.

## 4 Play from CD

### Play a CD

#### Note

 
- You cannot play CDs encoded with copyright protection technologies.

You can play commercially available audio CDs:

- CD-Recordables (CD-R)
- CD-Rewritables (CD-RW)
- CD-MP3 discs

- 1 Switch the source selector to CD.  
↳ CD displays on the screen.
- 2 Open the CD compartment.
- 3 Insert a CD with the printed side facing up and close the CD lid gently.  
↳ Your CD sound machine starts to play automatically.

- To select a track, press **◀◀** / **▶▶**.
- To pause CD play, press **▶||**.
- To resume CD play, press **▶||** again.
- To stop CD play, press **■**.

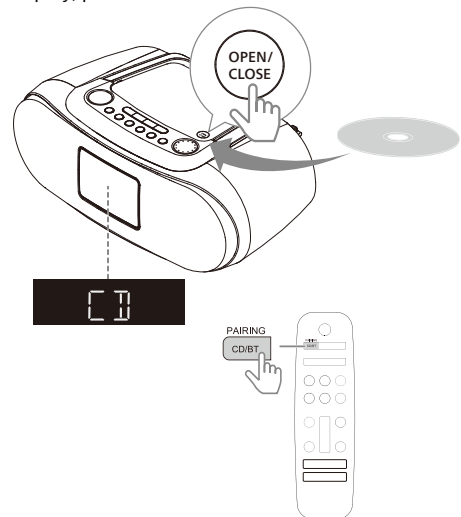

### Program tracks

In CD mode, you can program a maximum of 20 tracks in CD disc.

- 1 Press **■** to stop playback.
- 2 Press **PROG** to activate the program mode.  
↳ **[P01 01]** displays on the screen.
- 3 Press **◀◀** / **▶▶** to select a track number, then press **PROG** to confirm.
- 4 Repeat Step 3 to program more tracks.
- 5 Press **▶||** to play the programmed tracks.  
↳ During play, **PROG** (program) is displayed.
  - To erase the program, press **■** twice.

#### Note

- Press the **■** button to exit the program mode in program status. When the number of program tracks reaches 20, a **FULL** message will be displayed.

## Use CD menu

- 1 In CD mode, press  to enter the menu setting.
- 2 Press , ,  to select and enter corresponding menu options.
  - **[SLEEP]**: Adjust sleep time (OFF/15/30/60/90/120).
  - **[DIM]**: Adjust the different display brightness (HIGH/MED/LOW/OFF).
  - **[SYSTEM]**: Access system settings.

## Program tracks

In CD mode, you can program a maximum of 20 tracks in CD or 99 tracks in mp3 disc.

- 1 Press  to stop playback.
- 2 Press **PROG** to activate the program mode.
- 3 Press  /  to select a track number, then press  to confirm.
- 4 Repeat step 3 to program more tracks.
- 5 Press  to play the programmed tracks.
  - ↳ During play, **PROG** (program) is displayed.
    - To erase the program, press  twice.

## 5 Listen to the radio

With this product, you can listen to FM radio.



### Note

- Position the antenna as far as possible from TV, or other radiation source.
- For optimal reception, fully extend and adjust the position of the antenna.

## Listen to FM radio

### Tune to an FM radio station

- 1 Press  to select FM source.
- 2 Press and hold  /  for three seconds.
  - ↳ The radio tunes to a station with strong reception automatically.
- 3 Repeat Step 2 to tune to more stations.

### To tune to a radio station with weak signal:

Press  /  repeatedly until you find optimal reception.

### Store FM radio stations automatically



### Note

- You can store a maximum of 20 FM radio stations.

- 1 Press  to select FM source.
- 2 Press and hold **PROG/PRESET** for three seconds.
  - ↳ All available radio stations are stored automatically, then the first stored radio station is broadcast when 20 preset radio radio stations are stored.

### Store FM radio stations manually

- 1 Press  to select FM source.
- 2 Press **PROG/PRESET** to activate program mode.
  - ↳ **[P01]** is displayed.
- 3 Press  /  to allocate a number from 1-30 to this radio station, and then press  to confirm.
- 4 Repeat steps 1-3 to program more stations.



### Note

- To overwrite a programmed station, store another station in its place.

### Select a preset FM radio station

In FM mode, press ,  to select a preset number.

- While listening to FM radio, you may toggle stereo and mono sound in the menu.

## Use FM menu

- 1 In FM mode, press  to enter the menu setting.
- 2 Press , ,  to select and enter corresponding menu options.
  - **[SCAN SET]**: Access the scan setting.
  - **[SLEEP]**: Adjust sleep time (OFF/15/30/60/90/120).
  - **[DIM]**: Adjust the different display brightness (HIGH/MED/LOW/OFF).
  - **[SYSTEM]**: Access system settings.

## Display RDS information

RDS (Radio Data System) is a service that allows FM stations to show additional information.

- 1 Tune to a FM radio station.
- 2 Pressing the **INFO** buttons directly can display the RDS information.

 
## 6 Play from Bluetooth

### Play from classic Bluetooth



#### Note

- Compatibility with all Bluetooth devices is not guaranteed.
- Any obstacle between the unit and the device can reduce the operational range.
- The effective operation range between this unit and your Bluetooth enabled device is approximately 10 meters (30 feet).
- The unit can memorize up to 8 previously connected Bluetooth devices.

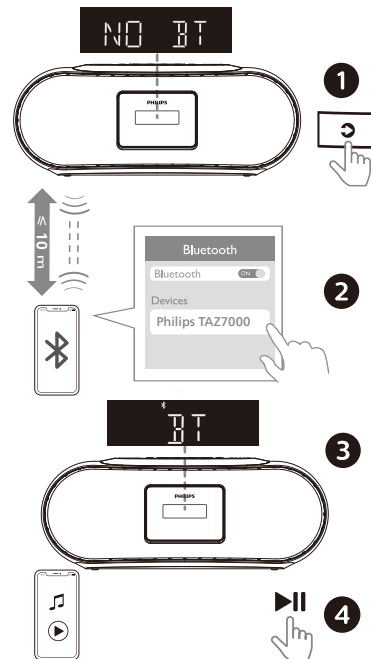

- 1 Press on main unit to select the Bluetooth source.  
↳ **[NO BT]** (Bluetooth) is displayed.
- 2 On your device that supports Advanced Audio Distribution Profile (A2DP), enable Bluetooth and search for Bluetooth devices that can be paired (refer to the user manual of the device). Select '**Philips TAZ7000**' on your Bluetooth enabled device.
- 3 After successful pairing and connection, **[BT]** is displayed and you will hear the prompt sound from the unit.
- 4 Play audio on the connected device.  
↳ Audio streams from your Bluetooth enabled device to this product.

#### To disconnect the Bluetooth-enabled device:

- Deactivate Bluetooth on your device.
- Press and hold on the product for 3 seconds to enter pairing mode.

## Use BT menu

 
- 1 In BT mode, press to enter the menu setting.  
Press , , to select and enter corresponding menu options.
  - **[BT PAIR]**: Access the pair state.
  - **[DBB]**: Select DBB2/DBB1/OFF.
  - **[DIM]**: Adjust the different display brightness (HIGH/MED/LOW/OFF).
  - **[SYSTEM]**: Access system settings.

## 7 Play from Auracast

You can broadcast your music to this product or any other Auracast-compatible products.

### Auracast receiver

- 1 Press **A** to select the Auracast source, or press **SOURCE** button on main unit to switch to Auracast source.
  - **[AURACAST RECEIVER]** is displayed.
- 2 If you enter Auracast source for the first time or if the station list is empty, the product performs a full scan automatically.
  - **[Scanning]** is displayed.
  - The micro system will automatically search for nearby Auracast broadcasts and connect to the unencrypted broadcast with the strongest signal.
  - If Auracast broadcast is not found within 20 seconds, it will enter idle mode.

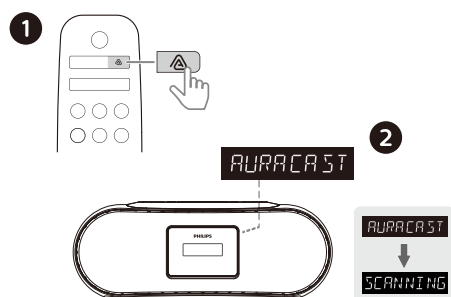

- 3 On your mobile device or dongle that supports Auracast, follow the instruction to enable Auracast broadcast.
- 4 After successful connection, the cyan indicator turns solid.
- 5 Auracast source name is displayed.
- 6 Select and play audio from your Auracast enabled mobile compatible products you want to include.

### To disconnect Auracast, you can:

- Switch the product to another source.
- Deactivate Auracast broadcast on your mobile device or dongle.

### Manually scan Auracast broadcast

In Auracast receiver mode, press **A** to rescan Auracast broadcast channel.

### Select Auracast broadcast

Press **◀▶** to select an Auracast broadcast.

#### Note

- Only unencrypted broadcast is selected and encrypted broadcast is skipped.

## Auracast broadcast

#### Note

- Auracast receiver and Auracast broadcast cannot be turned on simultaneously. If you try to turn on Auracast broadcast in Auracast receiver mode, you will not be able to switch successfully. Vice versa.

- 1 In DISC/Bluetooth/FM/USB/Audio in source, press and hold the **A** button for 3 seconds or select **Source Control** on Philips Entertainment ( **A** App/Auracast broadcast) to enter into Auracast broadcast.
- 2 On Philips Entertainment App, enter General Settings, select **Public** (unencrypted broadcast) or **Personal** (encrypted broadcast) from Auracast broadcaster.
  - When unencrypted broadcast is selected, The Auracast icon lights up when an unencrypted broadcast is selected.
  - When encrypted broadcast is selected, When encrypted broadcasting is selected, the Auracast icon and the lock icon will light up.
- 3 You can broadcast to any number of Auracast enabled products, follow the instruction to enable Auracast connection.
- 4 If Auracast broadcast channel is encrypted, Auracast receiver products are required to enter the password in order to listen to it.
  - The LED indicator of product will turn cyan when Auracast receive enabled.
- 5 Press the **SOURCE** button to switch between DISC/Bluetooth/FM/USB/Audio in to play different audio sources.

## Disconnect Auracast broadcast

 
- Press and hold the **A** button for 3 seconds. Exit Auracast broadcast from your micro system.

## 8 Play from USB

### Note

- Make sure that the USB device contains playable audio content.
- Support FAT16/FAT32/exFAT file format. Support ≤128G.

- 1 Press  to select the USB source.
- 2 Insert a USB device into the  socket.
- 3 Play starts automatically. If not, press .
  - To select a track, press  / .
  - To pause USB play, press .
  - To resume USB play, press  again.
  - To stop USB play, press .

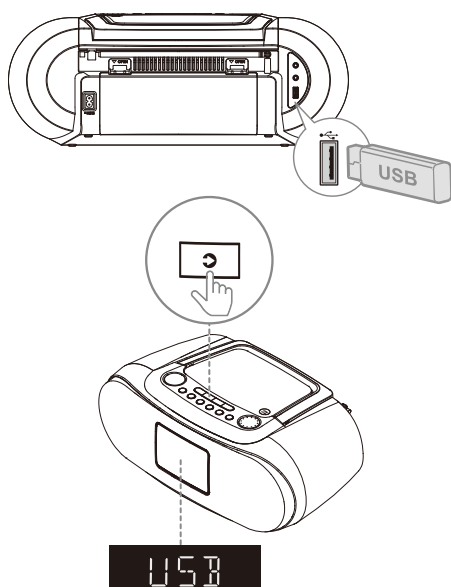

### Use USB menu

- 1 In USB mode, press  to enter the menu setting.
- 2 Press , ,  to select and enter corresponding menu options.
  - **[SLEEP]**: Adjust sleep time (OFF/15/30/60/90/120).
  - **[DIM]**: Adjust the different display brightness (HIGH/MED/LOW/OFF).
  - **[SYSTEM]**: Access system settings.

 
## 9 Listen to an external device

You can listen to an external device through this unit with an audio cable.

- 1 Press  to select AUDIO IN source.
- 2 Connect the audio cable (3.5mm, not supplied) to:
  - the  socket on the unit ;
  - the headphone socket on an external device.
- 3 Play the external device (see the device's user manual).

### Note

- The AUDIO-IN socket is not for headphones.

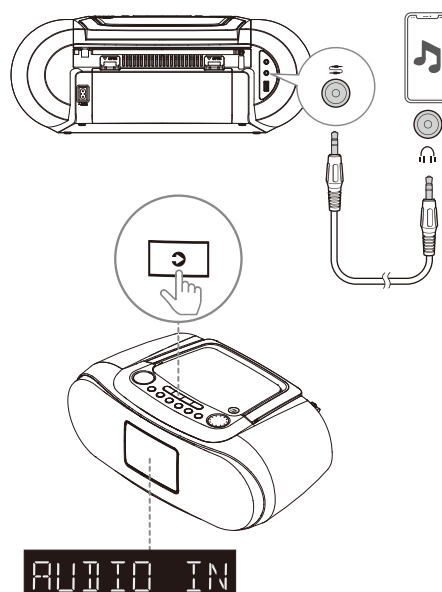


### Use AUDIO IN menu

- 1 In USB mode, press  to enter the menu setting.
- 2 Press , ,  to select and enter corresponding menu options.
  - **[SLEEP]**: Adjust sleep time (OFF/15/30/60/90/120).
  - **[DIM]**: Adjust the different display brightness (HIGH/MED/LOW/OFF).
  - **[SYSTEM]**: Access system settings.

10 Connect with headphone

 To listen through headphones  Connect headphones to the (headphones) jack.

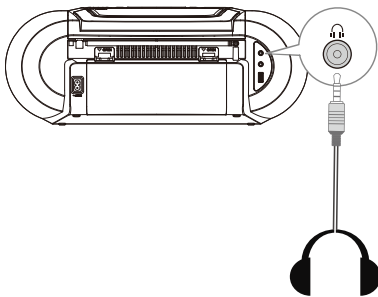

11 Product specification



Note

- Product information is subject to change without prior notice.

Bluetooth

|                                                    |                        |
|----------------------------------------------------|------------------------|
| Bluetooth profiles                                 | A2DP, AVRCP            |
| Bluetooth version                                  | V 6.0                  |
| Bluetooth frequency range/Transmitter power (EIRP) | 2402 ~ 2480MHz, < 9dBm |

CD soundmachine

|                              |                                          |
|------------------------------|------------------------------------------|
| Power :                      | 100-240V~, 50/60 Hz (AC Input)           |
| Rated output power:          | Total 12W (RMS)                          |
| Acoustic frequency response: | 125Hz-20KHz                              |
| Speaker driver :             | 2 x 4" full range, 4Ω                    |
| Operation power consumption: | 6 W                                      |
| Standby power consumption:   | < 0.5W (The display off)                 |
| AUDIO IN input level:        | 500mV                                    |
| Tuner frequency range :      | FM 87.5-108MHz<br>(FM 88-108 MHz for NA) |
| Dimensions (W x H x D):      | 435 x163 x 250 mm (Main unit)            |
| Weight:                      | 1.6 kg (Main unit)                       |

Supported audio formats

|               |                                                         |
|---------------|---------------------------------------------------------|
| USB playback: | Type A, USB Direct 2.0, MSC file format, FAT16/32/exFAT |
|---------------|---------------------------------------------------------|

Disc

|                            |                            |
|----------------------------|----------------------------|
| Laser Type:                | semiconductor              |
| Disc Diameter:             | 12cm/8cm                   |
| Support Disc:              | CD-DA, CD-R, CD-RW, CD-MP3 |
| Audio DAC:                 | 24Bits/44.1kHz             |
| Total Harmonic Distortion: | < 1%                       |
| Frequency Response:        | 125-16000Hz(-3dB)          |
| S/N Ratio                  | > 55 dBA                   |

Battery life

- Playback of CD Approx. 13 hours
- Playback of FM reception Approx. 35hours
- Playback of USB device Approx. 24 hours
- Playback of BT Approx. 35 hours
- Playback of AUX Approx. 30 hours

Measured by Philips standards, Philipsbattery C LR14 1.5V, the actual battery lifemay vary depending on the circumstancesof the unit or operating conditions.

## USB play ability in formation

| Extension | Codec          | Sample Rate | Bitrate         |
|-----------|----------------|-------------|-----------------|
| .mp3      | MPEG 1 Layer 1 | 32~48 kHz   | 48~320 kbps     |
|           | MPEG 1 Layer 2 | 32~48 kHz   | 48~320 kbps     |
|           | MPEG 1 Layer 3 | 32~48 kHz   | 48~320 kbps     |
| .wav      | WAV            | 8~48 kHz    | Up to 1536 kbps |

### Compatible USB devices:

- USB flash memory (USB2.0 or USB1.1)
- USB flash players (USB2.0 or USB1.1)
- Memory cards (requires an additional card reader to work with this unit)

### Supported USB formats:

- USB or memory file format: FAT16, FAT32, exFAT (sector size: 512 bytes)
- MP3 bit rate (data rate): 32-320 kbps
- WMA bit rate (data rate): 48-192 kbps/64-161 kbps VBR
- WAV bit rate (data rate): Up to 1536 kbps
- Directory nesting up to a maximum of 8 levels
- Number of albums/folders: maximum 99  
Number of tracks/titles: maximum 999  
File name in Unicode UTF8 (maximum length: 32 bytes)

### Unsupported USB formats:

- Empty albums: an empty album is an album that does not contain MP3 files, and will not be shown in the display.
- Unsupported file formats will be skipped. For example, Word files (.doc) or MP3 files with the extension .dif will be ignored and will not be played.
- WMA, AAC, WAV, PCM audio files: DRM protected WMA files. (Note: only support some wav audio files).
- WMA files in lossless format.

## Supported MP3 discformats

- ISO9660, Joliet
- Maximum title number: 128 (depending on file name length)
- Maximum album number: 99
- Supported sampling frequencies: 44.1 kHz, 48 kHz
- Supported Bit-rates: 48~256(kbps), variable bit rates

## 12 Troubleshooting



### Warning

- Never remove the casing of this device.

To keep the warranty valid, never try to repair the system yourself. If you encounter problems when using this device, check the following points before requesting service. If the problem remains unsolved, go to the Philips Web page ([www.philips.com/support](http://www.philips.com/support)). When you contact Philips, make sure that the device is nearby and the model number and serial number are available.

### No power

- Make sure that the AC power cord of the device is connected properly.
- Make sure that there is power at the AC outlet.
- As a power-saving feature, the system switches off automatically 15 minutes after track play reaches the end and no control is operated.

### No sound or poor sound

- Adjust the volume.
- Check that the speakers are connected correctly.
- Check if the stripped speaker wires are clamped.

### No response from the unit

- Disconnect and reconnect the AC power plug, then turn on the unit again.
- As a power-saving feature, the system switches off automatically 15 minutes after track play reaches the end and no control is operated.

### No disc detected

- Insert a disc.
- Check if the disc is inserted upside down.
- Wait until the moisture condensation at the lens has cleared.
- Replace or clean the disc.
- Use a finalized CD or correct format disc.

### Cannot display some files in USB device

- The number of folders or files in the USB device has exceeded a certain limit. This phenomenon is not a malfunction.
- The formats of these files are not supported.

### USB device not supported

- The USB device is incompatible with the unit. Try another one.

### Poor radio reception

- Increase the distance between the unit and your TV or other radiation sources.
- Fully extend the radio antenna.
- Connect an outdoor radio antenna. You may purchase a replacement antenna cable with a L-shape plug on one end.
- Connect the L-shape plug to this product, and fit the plug on the other end into your wall socket.

### Music playback is unavailable on this unit even after successful Bluetooth connection.

- The device cannot be used to play music through this unit wirelessly.

### The audio quality is poor after connection with a Bluetooth-enabled device.

- The Bluetooth reception is poor. Move the device closer to this unit or remove any obstacle between them.

### Bluetooth cannot be connected with this unit.

- The device does not support the profiles required for this unit.
- The Bluetooth function of the device is not enabled. Refer to the user manual of the device to find out how to enable the function.
- This unit is not in pairing mode.
- This unit is already connected with another Bluetooth-enabled device. Disconnect that device and then try again.

### The paired mobile device connects and disconnects constantly.

- The Bluetooth reception is poor. Move the device closer to this unit or remove any obstacle between them.
- Some mobile phones may connect and disconnect constantly when you make or end calls. This does not indicate any malfunction of this unit.

## 13 Trademarks

---



The Auracast™ word mark and logos are trademarks owned by Bluetooth SIG, Inc. and any use of such marks by MMD Hong Kong Holding Limited is under license. Other trade marks and trade names are those of their respective owners.



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by MMD Hong Kong Holding Limited is under license.



The making of unauthorized copies of copy-protected material, including computer programs, files, broadcasts and sound recordings, may be an infringement of copyrights and constitute a criminal offence. This equipment should not be used for such purposes.



Specifications are subject to change without notice.

2026© Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. and are used under license. This product has been manufactured by and is sold under the responsibility of MMD Hong Kong Holding Limited or one of its affiliates, and MMD Hong Kong Holding Limited is the warrantor in relation to this product.

**TAZ7000\_37\_UM\_V1.0**

