

naxa®
THE NEW DIMENSION IN TECHNOLOGY

Portable Bluetooth® Speaker
with LED Flashing Lights
NAS-3097

Instruction Manual

Please read carefully before use and keep for future reference.

Important Safety Information

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

WARNING: This product contains lead, a chemical known to the State of California to cause cancer and birth defects or other reproductive harm. **Wash hands after handling.**

Page 2 Naxa Electronics

- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

FCC NOTICE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION ON MODIFICATIONS

Any changes or modifications not expressly approved by the grantee of this device may void the authority granted by the FCC to operate the equipment.

www.naxa.com Page 3

At a Glance

Page 4 Naxa Electronics

Connecting to Power

Your speaker has an integrated rechargeable battery. Upon initial use, the battery should be fully charged to ensure optimal performance and battery life.

Use the included USB charging cable to connect the speaker to a USB power source to charge the battery.

- Plug the included Micro USB cable into the Micro USB port on the back of the speaker (under the detachable casing). Connect the other end of the cable with any compatible charger or wall outlet.
- When charging, the LED indicator on the front of the speaker will illuminate and turn red. When the speaker is fully charged, the LED indicator light will turn off.

i In order to extend the life of the battery, please do not charge more than 7 hours. Over charging the speaker can adversely impact the battery life.

www.naxa.com Page 5

- You will hear a tone once you have paired successfully.
- If pairing was unsuccessful, please repeat the steps above.

Listening to Music Wirelessly

Once you've successfully paired your external device with the speaker, you can stream all of your favorite music through the speaker in high-quality audio. Simply open your desired music app and press play.

You can control the music, track, and volume of what you listen to from either your external device or via the controls on the speaker itself.

All audio, including music, games, videos, notifications, and calls will be routed through the speaker.

NOTE: Volume levels on your device and on the speaker are controlled separately.

Page 6 Naxa Electronics

- Take the other end of the included auxiliary cable and insert it into the aux-in port on the desired external device.
- Select the song you wish to play on your external device and press play.

Using USB & Card Mode

Insert a USB drive or Micro SD card and music will automatically begin playback.

- Turn the unit on.
- Insert a USB flash drive or a Micro SD card into the respective port or slot on the speaker and the audio files will automatically play.
- Press **+** or **-** to skip forward or skip back through the tracks.
- Briefly press the Play/Pause button to pause or resume playback.

i If you insert a USB drive or MicroSD card while in Bluetooth® Mode, the unit will disconnect from Bluetooth® and begin playback in USB or MicroSD mode. Press the Mode button to return back to BT.

www.naxa.com Page 7

NOTES

i Press and hold the MODE button to switch between different inputs on the unit. The inputs are as follows: **Bluetooth® / USB - MicroSD / FM / AUX**. When the unit is not in use, please turn off the unit to save battery life. Do not overcharge the unit. Every charge should not exceed 7 hours.

Troubleshooting Guide

This guide lists common problems and their solutions. Please refer to this guide before requesting service. If you need further assistance, please contact Naxa Technical Support @ www.naxa.com/naxa_support/

Symptom	Possible Cause	Solution
Low sound level	Source (Tablet, Mobile Phone, Laptop, etc.) volume too low. Battery drain	Adjust source volume. Charge battery.
Audio distorted	Battery nearly drained/ dead	Charge battery.
No sound at all	Source (Tablet, Mobile Phone, Laptop, etc.) turned off. Speaker turned off. Media played on repeat.	Turn the source on. Turn on Speaker. Adjust volume source. Stop media from repeat.

Page 8 Naxa Electronics

Function	Operation	Button
Increase Volume	Playing Music	Press and hold the + button to increase the volume.
Decrease Volume	Playing Music	Press and hold the - button to decrease the volume.
Pause	Playing Music	Press the ⏸ button to pause playback.
Play	Pause	Press the ▶ button to play or resume playback.
Previous Track	Playing Music	Press the ⏮ button to go back to the previous track.
Next Track	Playing Music	Press the ⏭ button to skip to the next track.

i A tone indication will alert you once volume has reached maximum level.

AUX-IN Mode

Connect devices without Bluetooth® by using the AUX connection. The included 3.5mm auxiliary cable is required to make this connection.

- Turn the unit on.
- Press the MODE button to select the AUX input.
- Take one end of the 3.5mm aux cable and insert it into the speaker.

Naxa Electronics

Listening to FM Radio

- Turn the unit on.
- Press the MODE button until you hear the FM Radio input.
- Press the **⏮** button for searching and storing preset radio stations within the frequency range of 87.5-108MHz.
- Press the **+** or **-** buttons to listen to the next and previous preset radio stations.
- Hold the **+** or **-** buttons to adjust the volume up or down.

i While playing the FM Radio, plug in the FM cable (included) into the Micro USB port or the 3.5mm auxiliary cable (included) into the Aux-in port in order to establish a better reception. Both cables can serve as an antenna, while the auxiliary cable can search for more stations than the Micro USB.

Page 9

Specifications

Bluetooth Version	4.1
Speaker Output	5W x 2
FM Frequency	100MHz-200MHz
Playtime	Fluorescent 1-2 Hours
Charge Voltage	DC 5V (USB)
Built-in Rechargeable battery	1500 mAh Li-Polymer
Bluetooth Range	26-33 Feet

Accessories

- 1x Bluetooth Portable Speaker
- 1x Owner's Manual
- 1x USB Charging Cable
- 1x 3.5 mm AUX cable
- 1x FM Cable

Specifications are subject to change without prior notice.

Naxa Electronics

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.