

品名:	El Toro说明书		85g哑粉纸 四色 双面印刷
版本:	2020-08-11 V1	规格:	24P 骑马钉
制作:	王润婷		成品尺寸: 75x120mm
料号:	SM-SH-El Toro-V1		

El Toro

Smart Watch

User Manual



Thank you for purchasing our products. This manual addresses the safety guidelines, warranty, and operating instructions. Please review this manual thoroughly before operating your device.

Table of Contents	
English Version	1
Getting Started	1
What's in the box	1
What's in this document	1
Setting up Your Watch	1
Charging your watch	1
Disassembling / Assembling Your Watch	2
Wearing Your Watch	4
Using Your Watch	5
Smart Phone System Requirements	5
App Interfaces	6
Pairing the Watch with Your Phone	7
Waking a Dimmed Screen	8
Watch Interfaces	9
Function Introduction	9
1. Customize Your Home Screen	9
2. Tracking Daily Activity Data	10
3. Monitoring Heart Rate	10
4. Tracking Sports: Outdoor Walking	11
5. Tracking Sports: Outdoor Running	12
6. Tracking Sports: Outdoor Cycling	13
7. Setting Alarms	13
8. Tracking Sleep	14
9. More Functions	14
9.1 Relax	14
9.2 Stopwatch	14
9.3 Call Notification	15
9.4 Message Notification	15
9.5 Secondary Reminder	15
Basic Specifications	15
FAQs	16
Warranty	16
Important Safety Instructions	16

Getting Started

What's in the box

Smart watch
(El Toro with bands)

Charging cable

User manual

What's in this document

This manual gets you started quickly with setting up your watch. Setup ensures that your watch can synchronize its data with the VeriFiPro app, where you can get detailed information on your stats, view historical trends, log sleep, and more. As soon as setup is complete, you're ready to start moving. The remainder of the manual walks you through every function on your El Toro.

Disassembling / Assembling Your Watch

1. To remove the wristbands, turn over the watch and find the quick-release lever.

2. While pressing the quick-release lever inward, gently pull the wristband away from the watch to release it.

Setting up Your Watch

Charging your watch

Please fully charge your watch before initial use.

1. Insert the USB plug of the charging cable into the USB port on your computer or a UL-certified USB wall charger.

2. Hold the other end of the charging cable near the port on the back of the watch until it attaches magnetically.

3. Make sure the pins on the charging cable lock securely with the port. The connection is secure when the watch vibrates and the battery icon with percent charged appears on the screen.

Wearing Your Watch

All-day wear and exercise

For all-day wear when you're not exercising, wear the device on your wrist horizontally, a finger's width below your wrist bone and lying flat, the same way you would put on a watch.

Assembly

1. To reattach the wristbands, slide the pin (the side opposite the quick-release lever) into the notch on the watch. Attach the wristband with the clasp to the top of the watch.

Disassembly

1. To remove the wristbands, turn over the watch and find the quick-release lever.

2. While pressing the quick-release lever inward, gently pull the wristband away from the watch to release it.

Using Your Watch

App Installation

Use the watch with our customized VeriFiPro app. You can download VeriFiPro from Apple Store / Google Play or scan the QR codes below to download.

IOS

Android

VeriFiPro

Smart Phone System Requirements

• iOS 8.0 & above

• Android 4.4 & above

• Bluetooth 4.0 & above

App Interfaces

Homepage

Details

Device

User

Pairing the Watch with Your Phone

Please pair the watch with your phone in the VeriFiPro app, NOT in the Bluetooth settings of your phone.

Pair the watch with your smartphone in the VeriFiPro app.

Do NOT pair the watch with your smartphone in your phone's Bluetooth settings.

Getting to Know Your Watch

Touch Key

After the watch is bound to the app, the main screen will display the time as shown in Fig. 1. You can customize the main screen.

See Function Introduction.

Waking a Dimmed Screen

To conserve power, the watch has a standby mode in which the screen turns off. To wake the screen, please follow the following steps:

• Turn your wrist towards you, and the screen will display time.

• Tap the touch key, and the watch will display the main screen.

Watch Interfaces

Tap the touch key to lock through different interfaces / go to different functions.

1. "Outdoor Walk," "Outdoor Run" and "Outdoor Cycling" are displayed on the device screen by default. You can set up to 3 different sports modes from "1" sports mode to display on the device screen (Go to "VeriFiPro" APP --> "Device" --> "More" --> "Activity mode" to set).

2. "Alarm Mode" is displayed on the watch screen only when alarm alert(s) is / are added and enabled in the app ("Device" page --> "Alarm Alert").

Function Introduction

1. Customize Your Home Screen

You can also view the home screen by following the steps below:

1) Tap and hold the touch key.

Pairing the Watch with Your Phone

Please pair the watch with your phone in the VeriFiPro app, NOT in the Bluetooth settings of your phone.

Pair the watch with your smartphone in the VeriFiPro app.

Do NOT pair the watch with your smartphone in your phone's Bluetooth settings.

Getting to Know Your Watch

Touch Key

After the watch is bound to the app, the main screen will display the time as shown in Fig. 1. You can customize the main screen.

See Function Introduction.

Waking a Dimmed Screen

To conserve power, the watch has a standby mode in which the screen turns off. To wake the screen, please follow the following steps:

• Turn your wrist towards you, and the screen will display time.

• Tap the touch key, and the watch will display the main screen.

Watch Interfaces

Tap the touch key to lock through different interfaces / go to different functions.

1. "Outdoor Walk," "Outdoor Run" and "Outdoor Cycling" are displayed on the device screen by default. You can set up to 3 different sports modes from "1" sports mode to display on the device screen (Go to "VeriFiPro" APP --> "Device" --> "More" --> "Activity mode" to set).

2. "Alarm Mode" is displayed on the watch screen only when alarm alert(s) is / are added and enabled in the app ("Device" page --> "Alarm Alert").

Function Introduction

1. Customize Your Home Screen

You can also view the home screen by following the steps below:

1) Tap and hold the touch key.

Pairing the Watch with Your Phone

Please pair the watch with your phone in the VeriFiPro app, NOT in the Bluetooth settings of your phone.

Pair the watch with your smartphone in the VeriFiPro app.

Do NOT pair the watch with your smartphone in your phone's Bluetooth settings.

Getting to Know Your Watch

Touch Key

After the watch is bound to the app, the main screen will display the time as shown in Fig. 1. You can customize the main screen.

See Function Introduction.

Waking a Dimmed Screen

To conserve power, the watch has a standby mode in which the screen turns off. To wake the screen, please follow the following steps:

• Turn your wrist towards you, and the screen will display time.

• Tap the touch key, and the watch will display the main screen.

Watch Interfaces

Tap the touch key to lock through different interfaces / go to different functions.

1. "Outdoor Walk," "Outdoor Run" and "Outdoor Cycling" are displayed on the device screen by default. You can set up to 3 different sports modes from "1" sports mode to display on the device screen (Go to "VeriFiPro" APP --> "Device" --> "More" --> "Activity mode" to set).

2. "Alarm Mode" is displayed on the watch screen only when alarm alert(s) is / are added and enabled in the app ("Device" page --> "Alarm Alert").

Function Introduction

1. Customize Your Home Screen

You can also view the home screen by following the steps below:

1) Tap and hold the touch key.

Pairing the Watch with Your Phone

Please pair the watch with your phone in the VeriFiPro app, NOT in the Bluetooth settings of your phone.

Pair the watch with your smartphone in the VeriFiPro app.

Do NOT pair the watch with your smartphone in your phone's Bluetooth settings.

Getting to Know Your Watch

Touch Key

After the watch is bound to the app, the main screen will display the time as shown in Fig. 1. You can customize the main screen.

See Function Introduction.

Waking a Dimmed Screen

To conserve power, the watch has a standby mode in which the screen turns off. To wake the screen, please follow the following steps:

• Turn your wrist towards you, and the screen will display time.

• Tap the touch key, and the watch will display the main screen.

Watch Interfaces

Tap the touch key to lock through different interfaces / go to different functions.

1. "Outdoor Walk," "Outdoor Run" and "Outdoor Cycling" are displayed on the device screen by default. You can set up to 3 different sports modes from "1" sports mode to display on the device screen (Go to "VeriFiPro" APP --> "Device" --> "More" --> "Activity mode" to set).

2. "Alarm Mode" is displayed on the watch screen only when alarm alert(s) is / are added and enabled in the app ("Device" page --> "Alarm Alert").

Function Introduction

1. Customize Your Home Screen

You can also view the home screen by following the steps below:

1) Tap and hold the touch key.

Pairing the Watch with Your Phone

Please pair the watch with your phone in the VeriFiPro app, NOT in the Bluetooth settings of your phone.

Pair the watch with your smartphone in the VeriFiPro app.

Do NOT pair the watch with your smartphone in your phone's Bluetooth settings.

Getting to Know Your Watch

Touch Key

After the watch is bound to the app, the main screen will display the time as shown in Fig. 1. You can customize the main screen.

See Function Introduction.

Waking a Dimmed Screen

To conserve power, the watch has a standby mode in which the screen turns off. To wake the screen, please follow the following steps:

• Turn your wrist towards you, and the screen will display time.

• Tap the touch key, and the watch will display the main screen.

Watch Interfaces

Tap the touch key to lock through different interfaces / go to different functions.

1. "Outdoor Walk," "Outdoor Run" and "Outdoor Cycling" are displayed on the device screen by default. You can set up to 3 different sports modes from "1" sports mode to display on the device screen (Go to "VeriFiPro" APP --> "Device" --> "More" --> "Activity mode" to set).

2. "Alarm Mode" is displayed on the watch screen only when alarm alert(s) is / are added and enabled in the app ("Device" page --> "Alarm Alert").

Function Introduction

1. Customize Your Home Screen

You can also view the home screen by following the steps below:

1) Tap and hold the touch key.

Pairing the Watch with Your Phone

Please pair the watch with your phone in the VeriFiPro app, NOT in the Bluetooth settings of your phone.

Pair the watch with your smartphone in the VeriFiPro app.

Do NOT pair the watch with your smartphone in your phone's Bluetooth settings.

Getting to Know Your Watch

Touch Key

After the watch is bound to the app, the main screen will display the time as shown in Fig. 1. You can customize the main screen.

See Function Introduction.

Waking a Dimmed Screen

To conserve power, the watch has a standby mode in which the screen turns off. To wake the screen, please follow the following steps:

• Turn your wrist towards you, and the screen will display time.

• Tap the touch key, and the watch will display the main screen.

Watch Interfaces

Tap the touch key to lock through different interfaces / go to different functions.

1. "Outdoor Walk," "Outdoor Run" and "Outdoor Cycling" are displayed on the device screen by default. You can set up to 3 different sports modes from "1" sports mode to display on the device screen (Go to "VeriFiPro" APP --> "Device" --> "More" --> "Activity mode" to set).

2. "Alarm Mode" is displayed on the watch screen only when alarm alert(s) is / are added and enabled in the app ("Device" page --> "Alarm Alert").

Function Introduction

1. Customize Your Home Screen

You can also view the home screen by following the steps below:

1) Tap and hold the touch key.

Pairing the Watch with Your Phone

Please pair the watch with your phone in the VeriFiPro app, NOT in the Bluetooth settings of your phone.

Pair the watch with your smartphone in the VeriFiPro app.

Do NOT pair the watch with your smartphone in your phone's Bluetooth settings.

Getting to Know Your Watch

Touch Key

After the watch is bound to the app, the main screen will display the time as shown in Fig. 1. You can customize the main screen.

See Function Introduction.

Waking a Dimmed Screen

To conserve power, the watch has a standby mode in which the screen turns off. To wake the screen, please follow the following steps:

• Turn your wrist towards you, and the screen will display time.

• Tap the touch key, and the watch will display the main screen.

Watch Interfaces

Tap the touch key to lock through different interfaces / go to different functions.

1. "Outdoor Walk," "Outdoor Run" and "Outdoor Cycling" are displayed on the device screen by default. You can set up to 3 different sports modes from "1" sports mode to display on the device screen (Go to "VeriFiPro" APP --> "Device" --> "More" --> "Activity mode" to set).

2. "Alarm Mode" is displayed on the watch screen only when alarm alert(s) is / are added and enabled in the app ("Device" page --> "Alarm Alert").

Function Introduction

1. Customize Your Home Screen

You can also view the home screen by following the steps below:

1) Tap and hold the touch key.

Pairing the Watch with Your Phone

Please pair the watch with your phone in the VeriFiPro app, NOT in the Bluetooth settings of your phone.

Pair the watch with your smartphone in the VeriFiPro app.

Do NOT pair the watch with your smartphone in your phone's Bluetooth settings.

Getting to Know Your Watch

Touch Key

After the watch is bound to the app, the main screen will display the time as shown in Fig. 1. You can customize the main screen.

See Function Introduction.

Waking a Dimmed Screen

To conserve power, the watch has a standby mode in which the screen turns off. To wake the screen, please follow the following steps:

• Turn your wrist towards you, and the screen will display time.

• Tap the touch key, and the watch will display the main screen.

Watch Interfaces

Tap the touch key to lock through different interfaces / go to different functions.

1. "Outdoor Walk," "Outdoor Run" and "Outdoor Cycling" are displayed on the device screen by default. You can set up to 3 different sports modes from "1" sports mode to display on the device screen (Go to "VeriFiPro" APP --> "Device" --> "More" --> "Activity mode" to set).

2. "Alarm Mode" is displayed on the watch screen only when alarm alert(s) is / are added and enabled in the app ("Device" page --> "Alarm Alert").

Function Introduction

1. Customize Your Home Screen

You can also view the home screen by following the steps below:

1) Tap and hold the touch key.

3) Hold the touch key for 2 seconds to exit.

The following data is displayed after the exercise is ended, tap the touch key to flip through exercise data:



Notes:

• You can also use your phone's GPS to track your pace and distance during walks, hikes, runs or rides while mapping out your run or walk on your phone.

• In the app, tap  and  to enter running mode directly or tap  to choose another sports mode. After entering running mode, the app will track and map your run distance (using your phone's GPS). After the exercise, you can effortlessly check your exercise data both on the app and the watch.

8. Tracking Sleep

The watch automatically tracks your sleep duration (Deep Sleep, Light Sleep, and Awake Hours) and consistency with a comprehensive analysis of sleep quality data so you can see your sleep trends and improve your routine. You can check your detailed sleep data in the app.

9. More Functions

1) Tap the touch key on the watch to choose "More" interface and hold the touch key to enter.

2) Hold the touch key to enter "Relax" mode.

3) Follow the instructions on the screen to relax yourself.

9.1 Relax

1) Tap the touch key on the watch to choose "More" interface and hold the touch key to enter.

2) Hold the touch key to enter "Relax" mode.

3) Follow the instructions on the screen to relax yourself.

9.2 Stopwatch

1) Tap the touch key on the watch to choose "More" interface and hold the touch key to enter.

2) Tap the touch key to choose "Stopwatch" interface and hold the touch key to enter.

3) Tap the touch key to start / pause timing.

4) Hold the touch key to exit.

9.3 Call Notification

When there is an incoming call, the watch vibrates to alert you, and the screen displays the caller ID.

Hold the touch key to reject the call.

4) Tap "V" to save your settings.

7. Setting Alarms

1) Go to the "Device" page in the app and tap "Alarm Alert".

2) Tap "+" to add an alarm.

3) Tap the alarm, then set the alarm type, repeat type and time.

4) Tap "V" to save your settings.

Notes:

• The alarm you have set will vibrate to remind you and you can hold the touch key to turn it off.

9.4 Message Notification

When messages (like Facebook, Twitter, and Instagram messages) come in, the watch vibrates to remind you and the screen displays the message content.

Notes:

• Only when "SNS Alert" is enabled in the app ("Device" page --> "SNS Alert" --> "Allow notification"), will messages be notified. (After enabling/disabling the SNS Alert function, tap "V" to save your settings.)

• When the "Non disturb mode" function is enabled in the app ("Device" page --> "More" --> "Non disturb mode"), messages will not be notified on the watch during the Non-disturb-mode period.

9.5 Secondary Reminder

The watch vibrates to remind you to get up and move around when you have been sitting too long ("Device" page --> "Secondary Alert"), enable the Secondary Alert function and set the remind interval.)

Notes:

• Only when "Call alert" is enabled in the app ("Device" page --> "Call Alert") will calls be notified. (After enabling / disabling the Call Alert function, tap "V" to save your settings.)

• When "Non disturb mode" is enabled in the app ("Device" page --> "More" --> "Non disturb mode"), calls will not be notified on the watch during the Non-disturb-mode period.

Basic Specifications

Model No: El Toro

Sync: Bluetooth 4.2

Screen: 1.3" TFT LCD

Battery Capacity: 210mAh

Working Voltage: 3.8V

Working Temperature: -10°C to 40°C

Weight: 1.99oz (31g)

Waterproof Rating: IP68

Working Time: about 10 days

FAQs

Q Failure to find the watch when pairing

1. Make sure your smartphone's Bluetooth is enabled and your smartphone's system meets the VeriFiPro app requirements (Android 4.4 or higher, iOS 8.0 or higher, and Bluetooth 4.0 or higher).

2. Make sure the distance between your smartphone and the watch does not exceed 0.5 meters and that Bluetooth communication is also within range (10 meters max).

3. Make sure your watch has enough battery life. If there is still a problem after being fully charged, please contact us.

Q Occasional failure to connect with Bluetooth

Reboot your smartphone or restart your smartphone's Bluetooth.

Q Failure to receive SMS / calls notifications

Call / SMS notification function works when the watch connects to your smartphone via the app. Please kindly refer to the following tips:

1. Go to your smartphone Settings, find VeriFiPro app and enable the Location and All Notifications.

2. Enable your phone's Bluetooth and go to the VeriFiPro app to bind the watch.

3. Enable the Call / SMS Alert function, and tap "V" to save your settings.

4. Check if the "Non disturb mode" function is enabled in the app; you will not receive message on the watch during the Non-disturb-mode period.

Warranty

We strive to build our products with the highest attention to detail and craftsmanship. However, sometimes there are occurrences of a defect, so we are happy to offer a ONE-year hassle-free warranty on all our devices as we continue to make amazing products. Please contact us if you have any questions about our device.

Important Safety Instructions

The device contains electrical equipment that may cause injury if not used properly. For example, prolonged contact may contribute to skin allergies for some users. To reduce injury, please read the safety guidelines on the following pages to ensure proper use and care.

• Do not expose your device to liquid, moisture, humidity or rain while charging; do not charge your device when it is as this may result in electrical shock and injury.

• Keep your device clean and dry. Do not use abrasive cleaners to clean your device.

• Do NOT expose the device or batteries to fire, explosion, or other hazards.

• Do not use your device before use if you have any preexisting conditions that might be affected by using this device.

• Do not wear it too tight. If your device feels hot or warm, or if it causes any skin irritation or other discomfort, please discontinue using your device and consult your doctor.

• Do not expose your watch to extremely high or low temperatures.

• Do not leave your watch near open flames such as cooking stoves, candles, or fireplaces.

• This product is NOT a toy -- never allow children or pets to play with this product. Always store the product out of the reach of children. The device themselves or the many small parts they contain may cause choking if ingested.

• Never try to abuse, crush, open, repair or disassemble this device. Doing so will void the warranty and can result in a safety hazard.

• If any parts of your product require replacement for any reason, including normal wear and tear or breakage, please contact us.

Warranty

We strive to build our products with the highest attention to detail and craftsmanship. However, sometimes there are occurrences of a defect, so we are happy to offer a ONE-year hassle-free warranty on all our devices as we continue to make amazing products. Please contact us if you have any questions about our device.

Important Safety Instructions

The device contains electrical equipment that may cause injury if not used properly. For example, prolonged contact may contribute to skin allergies for some users. To reduce injury, please read the safety guidelines on the following pages to ensure proper use and care.

• Do not expose your device to liquid, moisture, humidity or rain while charging; do not charge your device when it is as this may result in electrical shock and injury.

• Keep your device clean and dry. Do not use abrasive cleaners to clean your device.

• Do NOT expose the device or batteries to fire, explosion, or other hazards.

• Do not use your device before use if you have any preexisting conditions that might be affected by using this device.

• Do not wear it too tight. If your device feels hot or warm, or if it causes any skin irritation or other discomfort, please discontinue using your device and consult your doctor.

• Do not expose your watch to extremely high or low temperatures.

• Do not leave your watch near open flames such as cooking stoves, candles, or fireplaces.

• This product is NOT a toy -- never allow children or pets to play with this product. Always store the product out of the reach of children. The device themselves or the many small parts they contain may cause choking if ingested.

• Never try to abuse, crush, open, repair or disassemble this device. Doing so will void the warranty and can result in a safety hazard.

• If any parts of your product require replacement for any reason, including normal wear and tear or breakage, please contact us.

Warranty

We strive to build our products with the highest attention to detail and craftsmanship. However, sometimes there are occurrences of a defect, so we are happy to offer a ONE-year hassle-free warranty on all our devices as we continue to make amazing products. Please contact us if you have any questions about our device.

Important Safety Instructions

The device contains electrical equipment that may cause injury if not used properly. For example, prolonged contact may contribute to skin allergies for some users. To reduce injury, please read the safety guidelines on the following pages to ensure proper use and care.

• Do not expose your device to liquid, moisture, humidity or rain while charging; do not charge your device when it is as this may result in electrical shock and injury.

• Keep your device clean and dry. Do not use abrasive cleaners to clean your device.

• Do NOT expose the device or batteries to fire, explosion, or other hazards.

• Do not use your device before use if you have any preexisting conditions that might be affected by using this device.

• Do not wear it too tight. If your device feels hot or warm, or if it causes any skin irritation or other discomfort, please discontinue using your device and consult your doctor.

• Do not expose your watch to extremely high or low temperatures.

• Do not leave your watch near open flames such as cooking stoves, candles, or fireplaces.

• This product is NOT a toy -- never allow children or pets to play with this product. Always store the product out of the reach of children. The device themselves or the many small parts they contain may cause choking if ingested.

• Never try to abuse, crush, open, repair or disassemble this device. Doing so will void the warranty and can result in a safety hazard.

• If any parts of your product require replacement for any reason, including normal wear and tear or breakage, please contact us.

Warranty

We strive to build our products with the highest attention to detail and craftsmanship. However, sometimes there are occurrences of a defect, so we are happy to offer a ONE-year hassle-free warranty on all our devices as we continue to make amazing products. Please contact us if you have any questions about our device.

Important Safety Instructions

The device contains electrical equipment that may cause injury if not used properly. For example, prolonged contact may contribute to skin allergies for some users. To reduce injury, please read the safety guidelines on the following pages to ensure proper use and care.

• Do not expose your device to liquid, moisture, humidity or rain while charging; do not charge your device when it is as this may result in electrical shock and injury.

• Keep your device clean and dry. Do not use abrasive cleaners to clean your device.

• Do NOT expose the device or batteries to fire, explosion, or other hazards.

• Do not use your device before use if you have any preexisting conditions that might be affected by using this device.

• Do not wear it too tight. If your device feels hot or warm, or if it causes any skin irritation or other discomfort, please discontinue using your device and consult your doctor.

• Do not expose your watch to extremely high or low temperatures.

• Do not leave your watch near open flames such as cooking stoves, candles, or fireplaces.

• This product is NOT a toy -- never allow children or pets to play with this product. Always store the product out of the reach of children. The device themselves or the many small parts they contain may cause choking if ingested.

• Never try to abuse, crush, open, repair or disassemble this device. Doing so will void the warranty and can result in a safety hazard.

• If any parts of your product require replacement for any reason, including normal wear and tear or breakage, please contact us.

Warranty

We strive to build our products with the highest attention to detail and craftsmanship. However, sometimes there are occurrences of a defect, so we are happy to offer a ONE-year hassle-free warranty on all our devices as we continue to make amazing products. Please contact us if you have any questions about our device.

Important Safety Instructions

The device contains electrical equipment that may cause injury if not used properly. For example, prolonged contact may contribute to skin allergies for some users. To reduce injury, please read the safety guidelines on the following pages to ensure proper use and care.

• Do not expose your device to liquid, moisture, humidity or rain while charging; do not charge your device when it is as this may result in electrical shock and injury.

• Keep your device clean and dry. Do not use abrasive cleaners to clean your device.

• Do NOT expose the device or batteries to fire, explosion, or other hazards.

• Do not use your device before use if you have any preexisting conditions that might be affected by using this device.

• Do not wear it too tight. If your device feels hot or warm, or if it causes any skin irritation or other discomfort, please discontinue using your device and consult your doctor.

• Do not expose your watch to extremely high or low temperatures.

• Do not leave your watch near open flames such as cooking stoves, candles, or fireplaces.

• This product is NOT a toy -- never allow children or pets to play with this product. Always store the product out of the reach of children. The device themselves or the many small parts they contain may cause choking if ingested.

• Never try to abuse, crush, open, repair or disassemble this device. Doing so will void the warranty and can result in a safety hazard.

• If any parts of your product require replacement for any reason, including normal wear and tear or breakage, please contact us.

Warranty

We strive to build our products with the highest attention to detail and craftsmanship. However, sometimes there are occurrences of a defect, so we are happy to offer a ONE-year hassle-free warranty on all our devices as we continue to make amazing products. Please contact us if you have any questions about our device.

Important Safety Instructions

The device contains electrical equipment that may cause injury if not used properly. For example, prolonged contact may contribute to skin allergies for some users. To reduce injury, please read the safety guidelines on the following pages to ensure proper use and care.

• Do not expose your device to liquid, moisture, humidity or rain while charging; do not charge your device when it is as this may result in electrical shock and injury.

• Keep your device clean and dry. Do not use abrasive cleaners to clean your device.

• Do NOT expose the device or batteries to fire, explosion, or other hazards.

• Do not use your device before use if you have any preexisting conditions that might be affected by using this device.

• Do not wear it too tight. If your device feels hot or warm, or if it causes any skin irritation or other discomfort, please discontinue using your device and consult your doctor.

• Do not expose your watch to extremely high or low temperatures.

• Do not leave your watch near open flames such as cooking stoves, candles, or fireplaces.

• This product is NOT a toy -- never allow children or pets to play with this product. Always store the product out of the reach of children. The device themselves or the many small parts they contain may cause choking if ingested.

• Never try to abuse, crush, open, repair or disassemble this device. Doing so will void the warranty and can result in a safety hazard.

• If any parts of your product require replacement for any reason, including normal wear and tear or breakage, please contact us.

Warranty

We strive to build our products with the highest attention to detail and craftsmanship. However, sometimes there are occurrences of a defect, so we are happy to offer a ONE-year hassle-free warranty on all our devices as we continue to make amazing products. Please contact us if you have any questions about our device.

Important Safety Instructions

The device contains electrical equipment that may cause injury if not used properly. For example, prolonged contact may contribute to skin allergies for some users. To reduce injury, please read the safety guidelines on the following pages to ensure proper use and care.

• Do not expose your device to liquid, moisture, humidity or rain while charging; do not charge your device when it is as this may result in electrical shock and injury.

• Keep your device clean and dry. Do not use abrasive cleaners to clean your device.

• Do NOT expose the device or batteries to fire, explosion, or other hazards.

• Do not use your device before use if you have any preexisting conditions that might be affected by using this device.

• Do not wear it too tight. If your device feels hot or warm, or if it causes any skin irritation or other discomfort, please discontinue using your device and consult your doctor.

• Do not expose your watch to extremely high or low temperatures.

• Do not leave your watch near open flames such as cooking stoves, candles, or fireplaces.

• This product is NOT a toy -- never allow children or pets to play with this product. Always store the product out of the reach of children. The device themselves or the many small parts they contain may cause choking if ingested.

• Never try to abuse, crush, open, repair or disassemble this device. Doing so will void the warranty and can result in a safety hazard.

• If any parts of your product require replacement for any reason, including normal wear and tear or breakage, please contact us.

Warranty

We strive to build our products with the highest attention to detail and craftsmanship. However, sometimes there are occurrences of a defect, so we are happy to offer a ONE-year hassle-free warranty on all our devices as we continue to make amazing products. Please contact us if you have any questions about our device.

Important Safety Instructions

The device contains electrical equipment that may cause injury if not used properly. For example, prolonged contact may contribute to skin allergies for some users. To reduce injury, please read the safety guidelines on the following pages to ensure proper use and care.

• Do not expose your device to liquid, moisture, humidity or rain while charging; do not charge your device when it is as this may result in electrical shock and injury.

• Keep your device clean and dry. Do not use abrasive cleaners to clean your device.

• Do NOT expose the device or batteries to fire, explosion, or other hazards.

• Do not use your device before use if you have any preexisting conditions that might be affected by using this device.

• Do not wear it too tight. If your device feels hot or warm, or if it causes any skin irritation or other discomfort, please discontinue using your device and consult your doctor.

• Do not expose your watch to extremely high or low temperatures.

• Do not leave your watch near open flames such as cooking stoves, candles, or fireplaces.

• This product is NOT a toy -- never allow children or pets to play with this product. Always store the product out of the reach of children. The device themselves or the many small parts they contain may cause choking if ingested.

• Never try to abuse, crush, open, repair or disassemble this device. Doing so will void the warranty and can result in a safety hazard.

• If any parts of your product require replacement for any reason, including normal wear and tear or breakage, please contact us.

Warranty

We strive to build our products with the highest attention to detail and craftsmanship. However, sometimes there are occurrences of a defect, so we are happy to offer a ONE-year hassle-free warranty on all our devices as we continue to make amazing products. Please contact us if you have any questions about our device.

Important Safety Instructions

The device contains electrical equipment that may cause injury if not used properly. For example, prolonged contact may contribute to skin allergies for some users. To reduce injury, please read the safety guidelines on the following pages to ensure proper use and care.

• Do not expose your device to liquid, moisture, humidity or rain while charging; do not charge your device when it is as this may result in electrical shock and injury.

• Keep your device clean and dry. Do not use abrasive cleaners to clean your device.

• Do NOT expose the device or batteries to fire, explosion, or other hazards.

• Do not use your device before use if you have any preexisting conditions that might be affected by using this device.

• Do not wear it too tight. If your device feels hot or warm, or if it causes any skin irritation or other discomfort, please discontinue using your device and consult your doctor.

• Do not expose your watch to extremely high or low temperatures.

• Do not leave your watch near open flames such as cooking stoves, candles, or fireplaces.

• This product is NOT a toy -- never allow children or pets to play with this product. Always store the product out of the reach of children. The device themselves or the many small parts they contain may cause choking if ingested.

• Never try to abuse, crush, open, repair or disassemble this device. Doing so will void the warranty and can result in a safety hazard.

• If any parts of your product require replacement for any reason, including normal wear and tear or breakage, please contact us.

Warranty

We strive to build our products with the highest attention to detail and craftsmanship. However, sometimes there are occurrences of a defect, so we are happy to offer a ONE-year hassle-free warranty on all our devices as we continue to make amazing products. Please contact us if you have any questions about our device.

Important Safety Instructions

The device contains electrical equipment that may cause injury if not used properly. For example, prolonged contact may contribute to skin allergies for some users. To reduce injury, please read the safety guidelines on the following pages to ensure proper use and care.

• Do not expose your device to liquid, moisture, humidity or rain while charging; do not charge your device when it is as this may result in electrical shock and injury.

• Keep your device clean and dry. Do not use abrasive cleaners to clean your device.

• Do NOT expose the device or batteries to fire, explosion, or other hazards.

• Do not use your device before use if you have any preexisting conditions that might be affected by using this device.

• Do not wear it too tight. If your device feels hot or warm, or if it causes any skin irritation or other discomfort, please discontinue using your device and consult your doctor.

• Do not expose your watch to extremely high or low temperatures.

• Do not leave your watch near open flames such as cooking stoves, candles, or fireplaces.

• This product is NOT a toy -- never allow children or pets to play with this product. Always store the product out of the reach of children. The device themselves or the many small parts they contain may cause choking if ingested.

• Never try to abuse, crush, open, repair or disassemble this device. Doing so will void the warranty and can result in a safety hazard.

• If any parts of your product require replacement for any reason, including normal wear and tear or breakage, please contact us.

Warranty

We strive to build our products with the highest attention to detail and craftsmanship. However, sometimes there are occurrences of a defect, so we are happy to offer a ONE-year hassle-free warranty on all our devices as we continue to make amazing products. Please contact us if you have any questions about our device.

Important Safety Instructions

The device contains electrical equipment that may cause injury if not used properly. For example, prolonged contact may contribute to skin allergies for some users. To reduce injury, please read the safety guidelines on the following pages to ensure proper use and care.

• Do not expose your device to liquid, moisture, humidity or rain while charging; do not charge your device when it is as this may result in electrical shock and injury.

• Keep your device clean and dry. Do not use abrasive cleaners to clean your device.

• Do NOT expose the device or batteries to fire, explosion, or other hazards.

• Do not use your device before use if you have any preexisting conditions that might be affected by using this device.

• Do not wear it too tight. If your device feels hot or warm, or if it causes any skin irritation or other discomfort, please discontinue using your device and consult your doctor.

• Do not expose your watch to extremely high or low temperatures.

• Do not leave your watch near open flames such as cooking stoves, candles, or fireplaces.

• This product is NOT a toy -- never allow children or pets to play with this product. Always store the product out of the reach of children. The device themselves or the many small parts they contain may cause choking if ingested.

• Never try to abuse, crush, open, repair or disassemble this device. Doing so will void the warranty and can result in a safety hazard.

• If any parts of your product require replacement for any reason, including normal