

36"2.1 Soundbar

User Manual



02


- **LED Screen activity**
 - LED Screen activity
 - Bluetooth modes the screen display "BT"
 - Bluetooth is pairing the screen display "PAIRING"
 - Bluetooth is paired the screen display "PAIRED"
 - Bluetooth disconnected the screen display "UNPAIRED"
- **AUX-IN: the screen display "AUX"**
 - Optical: the screen display "OPTICAL"
 - HDMI IN: the screen display "HDMI IN"
 - HDMI ARC: the screen display "HDMI ARC"

Adjusting The Volume

- Press VOL + on the unit or the remote control to adjust the volume (volume range: Min. 1 to 25 Max.) the screen shows like VOL. 1, VOL. 2, VOL. MAX
- if you wish to turn the sound off, press on the remote control, or the screen shows MUTE/PS. you again to resume normal listening

ranty

Introduction

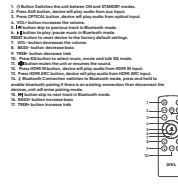

User Manual_Ver.02 Rev 08/18/19
 Unfold dimension : 287.5X290mm
 fold dimension: 143.5X72.5mm
 Material : 80g writing paper
 Printing : 2C , double sides
 FW1816 说明书 80g书写纸 287.5*290*T=0.2mm 白底黑字 双面印刷

— 3 —

 Ensure all audio connections of the unit are connected before connecting to the mains power outlet.

can result in severe personal injury and property damage. If you intend to install this product yourself, you must check for installation conditions such as electrical wiring and plumbing that may be inside the wall. It is the installer's responsibility to verify that the wall will adequately support the tank head of the Soundbar.

- Additional tools (not included) are required for the installation.

31 feet | scope TR-440mm
Net included into each anchor.

Store unused batteries in fireproof packaging and away from metal.

Remove disqualification from equipment and all batteries from

Never dispose of batteries in fire. This can cause them to explode.

Never place any type of cable in locked frame on the top of or near the work. Welding • To reduce the risk of fire, electric shock or	igniting gases. Main Adapter Cable • Make sure the work is well secured and resting on top of the main adapter cable, so the weight of
---	--

- Do not use any type of abrasive pads or abrasive cleaning solutions as these may damage the unit's surface.
- Do not use liquids to clean the unit.

shorten the life of the equipment).
