

cosori®

HEIRLOOM™

6.0-QUART SMART AIR FRYER



User Manual



Thank you for your purchase!



Customize Your Experience

Download and connect your smart air fryer to the VeSync app to enjoy smart features, recipe inspiration, and more.



Elevate your menu with our recipe gallery at **cosori.com**



Enjoy weekly, featured recipes hand-crafted by our chefs in the Cosori kitchen



Contact Our Chefs

For recipes that need a touch of magic, reach out to our chefs at:

Email: recipes@cosori.com

Toll-free: 1-888-402-1684

Mon–Fri, 9:00 am–5:00 pm PST/PDT

On behalf of all of us at Cosori,
until our next soirée!

Table of Contents

Package Contents	3
Specifications	3
Important Safeguards & Warnings	4
VeSync App Setup	7
Getting To Know Your Smart Air Fryer	8
Before First Use	11
Using Your Smart Air Fryer	13
Troubleshooting	19
Limited Warranty Information	21
Customer Support	23

Package Contents

- 1 × Heirloom™ 6.0-Quart Smart Air Fryer
- 1 × Crisper Plate
- 1 × User Manual
- 1 × Quick Start Guide
- 1 × Recipe Book

Specifications

Model	CAF-SE601S-CUS
Power Supply	120V, 60Hz
Rated Power	1,725W
Capacity	6 qt / 5.7 L (serves 3–5 people)
Temperature Range	90°–450°F / 30°–230°C
Time Range	1 min–24 hr
Dimensions (including handle, L x W x H)	15.0 x 11.8 x 11.6 in / 38.2 x 30.0 x 29.5 cm
Dimensions (not including handle, L x W x H)	11.8 x 11.8 x 11.6 in / 30.0 x 30.0 x 29.5 cm
Weight	14.1 lb / 6.4 kg

READ AND SAVE THESE INSTRUCTIONS

Important Safeguards & Warnings

Follow basic safety precautions when using your air fryer. Read all instructions.

KEY SAFETY POINTS

- **Do not** touch hot surfaces. Use handle.
- Use caution when turning the basket over after cooking, as the hot crisper plate may fall out and create a safety hazard.
- Firmly insert the crisper plate into the basket to reduce the chance of it falling out.
- **Do not** block any ventilation openings. Hot steam is released through openings. Keep your hands and face clear of openings.
- **Always** use tongs to carefully remove hot food.

GENERAL SAFETY

- To protect against electric shock, **do not immerse the air fryer** housing, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children. Unplug when not in use, and before cleaning. Allow to cool before putting on or taking off parts.
- **Do not** operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment. Contact **Customer**

Support (see page 23).

- **Do not** use your air fryer if it is damaged, not working, or if the cord or plug is damaged. Contact **Customer Support** (see page 23).
- The use of accessory attachments is not recommended by Cosori and may cause injuries.
- **Do not** use outdoors.
- **Do not** place the air fryer or any of its parts on a stove, near gas or electric burners, or in a heated oven.
- Use extreme caution when removing the basket and crisper plate or disposing of hot grease.
- **Always** place the crisper plate and basket on a heat-resistant surface after removing from the air fryer.
- **Do not** clean with metal scouring pads. Metal fragments can break off the scouring pad and touch electrical parts, creating a risk of electric shock.
- **Do not** place anything on top of your air fryer. **Do not** store anything inside your air fryer.
- This air fryer is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the air fryer by a person responsible for their safety.
- Cleaning and user maintenance

Safety Information (cont.)

shall not be done by children without supervision.

- Children should be supervised to ensure that they **do not** play with the air fryer.
- This air fryer is not intended to be operated by means of an external timer or separate remote-control system.
- To disconnect, turn any control to "off", then remove plug from wall outlet.
- **Do not** use the air fryer for anything other than intended use.
- Any servicing should be performed by an authorized service representative, contact **Customer Support** (see page 23).
- For instructions on cleaning the accessories, see **Care & Maintenance** (page 17).
- Not for commercial use. Household use **only**.

WHILE AIR FRYING

- An air fryer works with hot air **only**. **Never** fill the basket with oil or fat.
- **Never** use your air fryer without the basket in place.
- **Do not** place oversized foods or metal utensils into your air fryer as they may create a fire or risk of electric shock.
- **Do not** overfill the basket. Heaping amounts of food may touch the heating coils and cause a fire hazard.
- **Do not** touch accessories (including the crisper plate) during or immediately after air frying.
- **Do not** place paper, cardboard, non-heat-resistant plastic, or similar materials into your air fryer.
- **Never** put baking or parchment paper into the air fryer without food on top. Air circulation can cause

paper to lift and touch heating coils.

- If lining the basket with foil, make sure it does not contact the heating elements, which can cause overheating and risk of fire.
- **Always** use heat-safe containers. Be extremely cautious if using containers that aren't metal or glass.
- To reduce the risk of fire, keep your air fryer away from flammable materials (curtains, tablecloths, etc.). Use on a flat, stable, heat-resistant surface away from heat sources or liquids.
- Immediately turn off and unplug your air fryer if you see dark smoke coming out. White smoke is normal, caused by heating fat or food splashing, but dark smoke means that food is burning or there is a circuit problem. Wait for smoke to clear before pulling the basket out. If the cause was not burnt food, contact **Customer Support** (see page 23).
- To turn the air fryer off, tap  once. The air fryer will beep, and all buttons will shut off except the  button, which will turn orange.
- **Do not** leave your air fryer unattended while in use.
- **Do not** use Air Fry or Roast cooking functions for thin, lightweight food. Air circulation may cause food to lift and touch the heating coils.

POWER & CORD

- Turn off the air fryer before removing the plug from the outlet.
- To unplug, grab the plug and pull from the outlet. **Never** pull from the power cord.
- **Do not** let the power cord (or any extension cord) hang over the edge of a table or counter or touch hot surfaces.

Safety Information (cont.)

- Remove and discard the protective cover fitted over the power plug of the air fryer to prevent a choking hazard.
- **Never** use an outlet below the counter when plugging in your air fryer.
- Your air fryer has a 3-prong grounding plug, and should **only** be used with **120V, 60Hz** electrical systems in North America. **Always** plug in to a grounded electrical outlet. **Do not** modify the plug in any way.
- Your air fryer should **only** be used with **120V, 60Hz** electrical systems. **Do not** plug into another type of outlet.
- Keep the air fryer and its cord out of reach of children.
- A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- If the power-supply cord is damaged, it must be replaced by Arovast or similarly qualified persons in order to avoid an electric or fire hazard. Please contact **Customer Support** (see page 23).

EXTENSION CORDS

- Longer extension cords are available and may be used if care is exercised in their use. If a longer extension cord is used:
 - The marked electrical rating of the extension cord should be at least as great as the electrical rating of the air fryer.
 - The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.

- If the appliance is of the grounded type, the cord set or extension cord should be a grounding-type 3-wire cord.

WARNING: Any other servicing should be performed by an authorized service representative.


ELECTROMAGNETIC FIELDS (EMF)

The Cosori Air Fryer complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.

WARNING: Items marked with the following symbol may reach high temperatures and should be handled carefully.



CAUTION:
Hot surface.

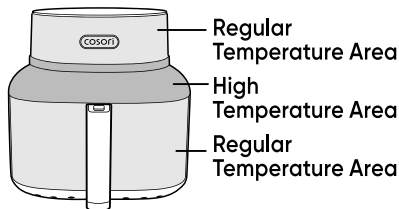

Avoid touching the air fryer's metal surface during operation, especially hot areas, to prevent burns.

SAVE THESE INSTRUCTIONS

VeSync App Setup

Note:

- The VeSync app is continually being improved and may change over time. If there are any differences, follow the in-app instructions.
- Requires device to run app, Wi-Fi or mobile data, and iOS version 15 or Android version 8 (or above). Standard data and messaging rates may apply. Registration is required.

1. To download the VeSync app, scan the QR code or search "VeSync" in the Apple App Store® or Google Play Store.



Note: For Android™ users, choose "Allow" to use VeSync.

2. Open the VeSync app. If you already have an account, tap **Log In**. To create a new account, tap **Sign Up**.

Note: You must create your own VeSync account to use third-party services and products. These will not work with a guest account. With a VeSync account, you can also allow your family and friends to control your smart air fryer.

3. Plug in your smart air fryer to enter pairing mode.
4. Tap **+** and select your smart air fryer.
5. Follow the in-app instructions to set up your smart air fryer.

Note:

- You can change the name and icon at any time by going to the smart air fryer screen and tapping .
- You can use the VeSync app to connect your smart air fryer to Amazon Alexa or Google Assistant™.

DISCONNECTING FROM WI-FI®

- To disconnect Wi-Fi®, press and hold the  for 15 seconds until the Wi-Fi indicator turns off. This will restore the smart air fryer's default settings and disconnect it from the VeSync app.
- To reconnect, please follow the instructions in the VeSync app for adding a device.

VeSync App Features

The VeSync app allows you to access additional smart air fryer functions, including those listed below.

REMOTE CONTROL

- All smart air fryer functions can be controlled remotely, except for starting the cooking process (to comply with UL safety regulations).
- Cooking progress can be monitored from a distance.

IN-APP RECIPES

- Recipes made by Cosori's in-house chefs are available on the app. These recipes automatically set the recommended time and temperature on your air fryer.
- Create and save custom recipes.

THIRD-PARTY VOICE CONTROL

- Compatible with Amazon Alexa and Google Assistant™ for voice commands.

Note: The VeSync app is continually updated and app features will expand.


Getting to Know Your Smart Air Fryer

Your Cosori Smart Air Fryer uses a DC motor which heats up the air fryer quicker and allows for precise temperature and fan control, so your food cooks exactly the way you want it. With user-friendly one-touch controls, smart features, a nonstick coated basket, and an intuitive design, the Cosori Heirloom Smart Air Fryer is the star of your kitchen.

Note:

- **Do not** try to open the top of the air fryer. This is not a lid.
- The basket is made of stainless steel with nonstick, ceramic coating.
- The crisper plate is made of aluminum metal with nonstick, ceramic coating.

AIR FRYER DIAGRAM

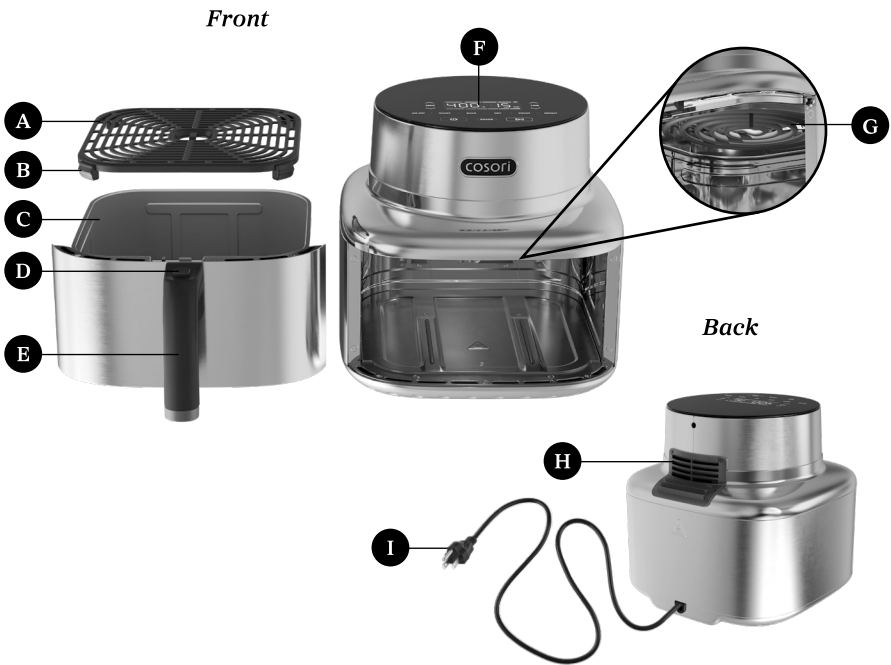

- | | |
|--------------------------|---------------------|
| A. Crisper Plate | F. Control Screen |
| B. Silicone Stoppers | G. Heating Elements |
| C. Basket | H. Air Outlet |
| D. Basket Release Button | I. Power Cord |
| E. Basket Handle | |

Display Diagram


Note: When you tap a button to use a function, it will turn orange to show that it is selected.

CONTROL PANEL



- a. Increase/Decrease Temperature
- b. Cooking Functions
- c. On/Off
- d. Shake Reminder
- e. Start/Pause
- f. Increase/Decrease Time


DISPLAY

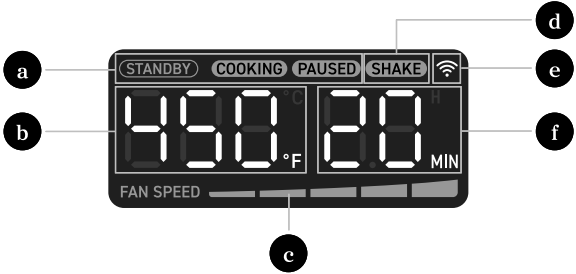

- a. Cooking Status
- b. Temperature
- c. Fan Speed (1–5)
- d. Shake Indicator
- e. Wi-Fi® Indicator
- f. Time


DISPLAY MESSAGES

Cooking

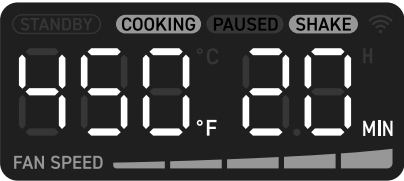


The Shake Indicator blinks when you need to check the basket. The indicator will turn off when the basket is removed.

Basket Removed

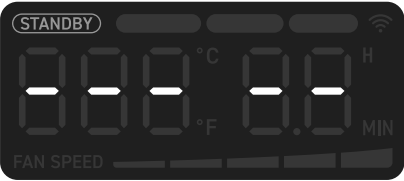

Paused

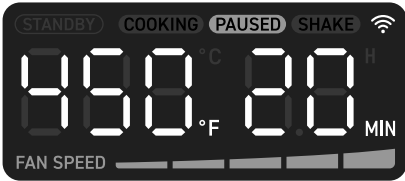

Ready



Before First Use

Setting Up

1. Remove and discard all packaging from the air fryer, including any temporary stickers and the protective cover fitted over the power plug.
2. Place the air fryer on a stable, level, heat-resistant surface. Keep away from areas that can be damaged by steam (such as walls or cupboards).

Note: Leave at least 5 inches / 13 cm of space behind and above the air fryer. **[Figure 1.1]** Leave enough room in front of the air fryer to remove the basket.

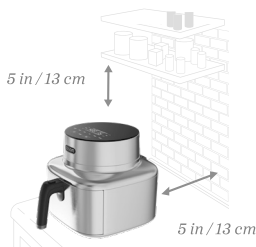


Figure 1.1

3. Wash both the basket and crisper plate thoroughly using either a dishwasher or a non-abrasive sponge.

CAUTION: The basket and crisper plate are ceramic coated.

- Gentle hand-washing is recommended to prolong the life of the coating.
- Avoid using abrasive cleaning materials on the basket and crisper plate. These will scratch or damage their surfaces.
- If you notice any cracking or peeling in the coating of the crisper plate or basket, contact **Customer Support** (page 23).

4. Wipe the inside and outside of the air fryer with a slightly moist cloth. Dry with a towel.
5. Place the crisper plate back into the basket. Tilt the crisper plate to insert one side first, then press down on the other side.
6. Place the basket inside the air fryer.

Test Run

A test run will help you become familiar with your air fryer, make sure it's working correctly, and clean it of possible residues in the process.

1. Make sure the air fryer basket is empty and plug in the air fryer.
2. Tap **AIR FRY**. The display will show "**385°F**" and "**10 MIN**".
3. Tap **▶||** to begin.
4. When finished, the air fryer will beep and the display will show "**End**".
5. Press the basket release button and remove the basket. Let the basket cool completely for 10–30 minutes.

Note:

Use caution when turning the basket over after cooking, as the hot crisper plate may fall out and create a safety hazard.

Do not unscrew the basket handle from the basket.

SILICONE STOPPERS

- The crisper plate contains four silicone stoppers made of food-safe material. These stoppers keep the plate fitted to the bottom of the basket.
- When placing the crisper plate into the basket, tilt the crisper plate to insert one side first, then press down on the other side. *[Figure 2.1]*



Figure 2.1

Note: Forcing the crisper plate into the basket incorrectly may cause damage.

- Make sure children **do not** play with the silicone stoppers or swallow them.

Using Your Smart Air Fryer

Note:

- **Do not** place anything on top of your air fryer to avoid damaging the glass control panel. [Figure 3.1].

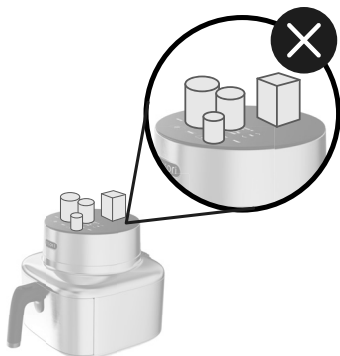


Figure 3.1

- An air fryer is not a deep fryer. **Do not** fill the basket with oil, frying fat, or any liquid.
- When taking the basket out of the air fryer, be careful of hot steam.

COOKING FUNCTIONS

Using a cooking function is the easiest way to cook. Functions are programmed with an ideal time, temperature, and fan speed for cooking certain foods. See **Cooking Chart** (page 14).

All cooking functions' time and temperature can be adjusted.

To customize a cooking function:

1. Select the function's button you want to customize.
2. Tap $\wedge$ or $\vee$ to change the function's time and temperature.
3. To save, press and hold the function's button for 3 seconds until you hear a beep.

Note:

- Press and hold $\wedge$ or $\vee$ to rapidly increase or decrease the time or temperature.
- Fan speed cannot be customized.

To reset all cooking functions:

- Press and hold $\odot$ for 15 seconds.

COOKING CHART

Function	Default Temperature	Default Time	Temperature Range	Time Range	Fan Speed
AIR FRY	385°F / 195°C	10 min	195°–450°F / 90°–230°C	1–60 min	5
ROAST	400°F / 205°C	12 min	350°–450°F / 175°–230°C	1–60 min	5
BAKE	330°F / 165°C	20 min	260°–400°F / 125°–205°C	1–60 min	3
Dehydrate (DRY)	135°F / 55°C	6 hr	100°–200°F / 35°–95°C	15 min–24 hr	2
PROOF	90°F / 30°C	60 min	90°–110°F / 30°–45°C	15 min–12 hr	1
REHEAT	390°F / 200°C	5 min	300°–425°F / 150°–220°C	1–60 min	4

Note: Results may vary. All cooking functions' time and temperature can be adjusted. To go back to default settings, press and hold the cooking function's button on the display.

AIR FRYING

1. Place the crisper plate into the basket.
The crisper plate allows excess oil to drip down to the bottom of the basket.

Note: The crisper plate may not be used for certain recipes, such as muffins and breads.

2. To preheat, tap **AIR FRY**, adjust temperature to 450°F and time to 4 minutes, then tap ►||.
3. When the air fryer beeps and the display shows "End", add food to the basket.
4. Select a cooking function (page 14).

Note: Cooking functions are programmed with an ideal time, temperature, and fan speed for cooking certain foods. The air fryer will default to the Air Fry function if no other function is selected.

5. Change the temperature and time by tapping ▲ or ▼. You can do this anytime during cooking.
6. Tap ►|| to begin cooking.
7. The air fryer will beep when finished. The display will show **END**.
8. Take the basket out of the air fryer, being careful of hot steam. Use tongs or heat-safe utensils to remove the food from the basket.
9. Allow to cool before cleaning.

SHAKE REMINDER

The Shake Reminder offers a convenient progress check mid-cook, giving you the chance to flip, shake, or adjust your dish for the desired texture and flavor.

1. Tap **AIR FRY**.

Note: The Shake Reminder **only** works with **AIR FRY**.

2. If necessary, adjust the time and temperature.
3. Tap **SHAKE** to turn Shake Reminder on.
4. Tap ► to begin cooking. At the halfway point, the air fryer will beep 5 times and **SHAKE** will blink on the display.
5. Remove the basket to shake, flip, or check on your food. The Shake Indicator will stop blinking once you remove the basket.

Note:

- You can turn the Shake Reminder off anytime during the cooking process by tapping **SHAKE**.
- Shake Reminder can also be turned on/off in the VeSync app.
- **Do not** shake if there is a risk of hot liquids splashing.
- If you do not remove the basket, the air fryer will beep again after 1 minute.
- When you remove the basket, the air fryer will pause cooking automatically, and the display will show **[- - -]** until the basket is replaced.
- When you replace the basket, cooking will automatically resume.
- Avoid having the basket open for longer than 30 seconds, as the air fryer may start to cool down.

FOODS TO CHECK

- Small foods that are stacked will usually need shaking, such as roasted potatoes, fries, or chicken tenders.
- Larger pieces of meat like steaks and ribs benefit from flipping to ensure even browning.
- Checking baked goods like cakes and muffins at the halfway point can help avoid over and underbaking.

Cooking Tips

OVERFILLING

- If the basket is overfilled, food will cook unevenly.

USING OIL

- Adding a small amount of oil to your food will make it crispier. Use no more than 2 US tbsp / 30 mL of oil.
- Oil sprays are excellent for applying small amounts of oil evenly to all food items.

FOOD TIPS

- You can air fry any frozen foods or goods that can be baked in an oven.
- To make cakes, hand pies, or any food with filling or batter, place food in a heat-safe container before placing in the basket.
- Air frying high-fat foods will cause fat to collect underneath the crisper plate. To avoid excess smoke while cooking, pour out fat drippings after cooking.
- Liquid-marinated foods create splatter and excess smoke. Pat these foods dry before air frying.
- Refer to the **Cooking Chart** to select the ideal cooking function for your recipe (page 14).

FRENCH FRIES

- Add ½–1 US tbsp / 8–15 mL oil for crispiness.
- When making fries from raw potatoes, soak uncooked fries in water for 15 minutes to remove starch prior to frying. Pat dry with a towel before adding oil.
- Cut uncooked fries smaller for crispier results. Try cutting fries into ¼ by 3-inch / 0.6 by 7.6-cm strips.

Note: For more tips and recipes, check out the VeSync app and Cosori website.

More Functions

SWITCHING TEMPERATURE UNITS

- Press and hold **TEMP**  and  for 3 seconds.
- The temperature unit will change from Fahrenheit to Celsius.
- Repeat to switch back to Fahrenheit.

PAUSING

- Tap  to pause cooking. The air fryer will stop heating, and  will blink until you tap  again to resume cooking.
- After 20 minutes of inactivity, the air fryer will go into standby.
- This function allows you to pause cooking without removing the basket from the air fryer.

AUTOMATICALLY RESUME COOKING

- If you pull out the basket, the air fryer will pause cooking automatically. The display will turn off temporarily as a safety feature.
- When you return the basket, the air fryer will automatically resume cooking based on your previous settings.

AUTOMATIC STANDBY

- If the air fryer has no active cooking functions, it will clear all settings and turn to standby after 10 minutes of inactivity.
- If the basket is removed, the air fryer will clear all settings and turn to standby after 10 minutes of inactivity.

Care & Maintenance

Note:

- **Always** clean the air fryer basket and crisper plate after every use.
- Lining the basket with foil (except the crisper plate) may make cleanup easier.

1. Turn off and unplug the air fryer. Allow it to cool completely before cleaning. Pull out the basket for faster cooling.
2. The basket and crisper plate are dishwasher-safe. You can also wash the basket and crisper plate using a non-abrasive sponge with hot water and a mild detergent. Soak if necessary.
3. For the stainless steel housing:
 - a. Wipe the outside of the air fryer with a microfiber cloth or stainless steel polishing cloth to remove any fingerprints or marks.
 - b. For blemishes or tarnishing, use a stainless steel cleaner with a soft, damp cloth, gently rubbing along the metal grain for best results.

Note: Do not use appliance wax, polish, bleach, steel wool, abrasive sponges and chemicals, or commercial oven cleaners on the air fryer.

CAUTION: The basket and crisper plate have a ceramic nonstick coating.

- Gentle hand-washing is recommended to prolong the life of the coating.
- Avoid using metal utensils and abrasive cleaning materials on the basket and crisper plate. These will scratch or damage their surfaces.

Accessories

- Avoid dropping the basket and crisper plate, as well as hitting or bumping them with other hard objects. This may cause damage to the coating.
- If you notice any cracking or peeling in the nonstick coating of the crisper plate or basket, contact **Customer Support** (page 23).

Additional and replacement accessories are available for your air fryer. For more information, contact **Customer Support** (page 23).

4. For stubborn grease:
 - a. In a small bowl, mix 2 US tbsp / 30 g of baking soda and 1 US tbsp / 15 mL of water to form a spreadable paste.
 - b. Use a sponge to spread the paste on the basket and crisper plate and scrub. Let the basket and crisper plate sit for 15 minutes before rinsing.
 - c. Wash the basket and crisper plate with soap and water before using.
5. Clean the cavity of the air fryer with a slightly moist, non-abrasive sponge or cloth. **Do not** immerse in water. If needed, clean the heating coil to remove food debris. *[Figure 4.1]*

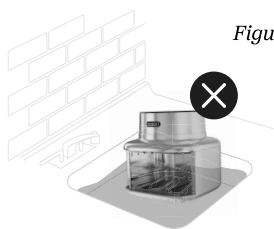


Figure 4.1

6. Dry before using.

Note: Make sure the heating coil is completely dry before turning on the air fryer.

Troubleshooting

Problem	Possible Solution
The air fryer will not turn on.	Make sure the air fryer is plugged in.
	Push the basket securely into the air fryer.
Food is not completely cooked.	Place smaller batches of food items into the basket. If the basket is overstuffed, then food will be undercooked.
	Increase cooking temperature or time.
Food is not crispy after air frying.	Spraying or brushing a small amount of oil on food can increase crispiness. See Cooking Tips (page 16).
French fries are not cooked correctly.	See French Fries (page 16).
Basket will not slide into the air fryer securely.	Make sure the basket is not overfilled with food.
White smoke or steam is coming out of the air fryer.	The air fryer may produce some white smoke or steam when you use it for the first time or during cooking. This is normal.
	Make sure the basket and the inside of the air fryer are cleaned properly and not greasy.
	Cooking greasy foods will cause oil to collect beneath the crisper plate. This oil will produce white smoke, and the basket may be hotter than usual. This is normal and should not affect cooking. Handle the basket with care.
Dark smoke is coming out of the air fryer.	Immediately unplug your air fryer. Dark smoke means that food is burning or there is a circuit problem. Wait for smoke to clear before pulling the basket out. If the cause was not burnt food, contact Customer Support (page 23).
Display shows Error Code "E01/E21"	There is an open circuit in the temperature monitor. Contact Customer Support (page 23).
Display shows Error Code "E02/E22"	There is a short circuit in the temperature monitor. Contact Customer Support (page 23).
Display shows Error Code "E04"	The air fryer has been plugged into a 220–240V outlet. Turn off and unplug the air fryer. Only use the air fryer with 120V, 60Hz outlets.
Display shows Error Code "E12"	The DC motor has failed. Contact Customer Support (page 23).

If your problem is not listed, please contact **Customer Support** (page 23).

If you want to know more,
please scan



Federal Communication Commission Interference Statement – Part 15

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance. To maintain compliance with FCC RF exposure compliance requirements, please follow operation instructions as documented in this manual. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with a minimum distance of 20 cm between the radiator and your body. The availability of some specific channels and/or operational frequency bands are country dependent and are firmware programmed at the factory to match the intended destination. The firmware setting is not accessible by the end user.

FCC Supplier's Declaration of Conformity (SDOC)

Arovast Corporation hereby declares that this equipment is in compliance with FCC requirements.

The declaration of conformity may be consulted in the support section of our website, accessible from www.cosori.com

Limited Warranty Information

Product Name	Heirloom™ 6.0-Quart Smart Air Fryer
Model	CAF-SE601S-CUS
<i>For your own reference, we strongly recommend that you record your order ID and date of purchase.</i>	
Order ID	
Date of Purchase	

Cosori Limited Product Warranty

Register your products at <https://warranty.cosori.com/warranty> to stay up to date with important product information such as product updates, limited warranties, usage and maintenance recommendations, and notifications concerning safety warnings or product recalls. Registration is not required to claim your limited warranty.

Three (3) Year Limited Consumer Product Warranty

Arovast Corporation ("Arovast") warrants that the product shall be free from defects in material and workmanship for a period of **3 years from the date of original purchase** ("Limited Warranty Period"), provided the product was used in accordance with its use and care instructions (e.g. in the intended environment and under normal circumstances).

Your Limited Warranty Benefits

During the Limited Warranty Period and subject to this limited Warranty Policy, Arovast will, in its sole and exclusive discretion, either (i) refund the purchase price if the purchase was made directly from the online Cosori store, (ii) repair any defects in material or workmanship, (iii) replace the product with another product of equal or greater value, or (iv) provide store credit in the amount of the purchase price.

Who Is Covered?

This limited warranty extends only to the original consumer purchaser of the product and is not transferable to any subsequent owner of the product, regardless of whether the product transferred ownership during the specified term of the limited warranty. The original consumer purchaser must provide verification of the defect or malfunction and proof of the date of purchase to claim the Limited Warranty Benefits.

Be Aware of Unauthorized Dealers or Sellers

This limited warranty does not extend to products purchased from unauthorized dealers or sellers. Arovast's limited warranty only extends to products purchased from authorized dealers or sellers that are subject to Arovast's quality controls and have agreed to follow its quality controls. Please be aware, products purchased from an unauthorized website or dealer may be counterfeit, used, defective, or may not be designed for use in your country. You can protect yourself and your products by making sure you only purchase from Arovast or its authorized dealers.

If you have any questions about a specific seller, or if you think you may have purchased your product from an unauthorized seller, please contact our Customer Support via support@cosori.com.

What's Not Covered?

- Normal wear and tear, including parts that might wear out over time (e.g. batteries, filters, cleaning brush, essential oil pads, etc.).
- If the proof-of-purchase has been altered in any way or is made illegible.
- If the model number, serial number or production date code on the product has been altered, removed or made illegible.
- If the product has been modified from its original condition.
- If the product has not been used in accordance with directions and instructions in the user manual.
- Damages caused by connecting peripherals, additional equipment or accessories other than those recommended in the user manual.
- Damages or defects caused by accident, abuse, misuse, or improper or inadequate maintenance.
- Damages or defects caused by service or repair of the product performed by an unauthorized service provider or by anyone other than Arovast.
- Damages or defects occurring during commercial use, rental use, or any use for which the product is not intended.
- If the unit has been damaged, including but not limited to damage by animals, lightning, abnormal voltage, fire, natural disaster, transportation, dishwasher, or water (unless the user manual expressly states that the product is dishwasher-safe).
- Incidental and consequential damages.
- Damages or defects exceeding the cost of the product.

Claiming Your Limited Warranty Service in 5 Simple Steps:

1. Make sure your product is within the specified limited warranty period.
2. Make sure you have a copy of the invoice and order ID or proof-of-purchase.
3. Make sure you have your product. **DO NOT** dispose of your product before contacting us.
4. Contact our Customer Support team via support@cosori.com.
5. Once our Customer Support team has approved your request, please return the product with a copy of the invoice and order ID.

Sole and Exclusive Remedy

THE FOREGOING LIMITED WARRANTY CONSTITUTES AROVAST CORPORATION'S EXCLUSIVE LIABILITY, AND YOUR SOLE AND EXCLUSIVE REMEDY, FOR ANY BREACH OF ANY WARRANTY OR OTHER NONCONFORMITY OF THE PRODUCT COVERED BY THIS LIMITED PRODUCT WARRANTY STATEMENT. THIS LIMITED WARRANTY IS EXCLUSIVE, AND IN LIEU OF ALL OTHER WARRANTIES. NO EMPLOYEE OF AROVAST CORPORATION OR ANY OTHER PARTY IS AUTHORIZED TO MAKE ANY WARRANTY IN ADDITION TO THE LIMITED WARRANTY IN THIS LIMITED PRODUCT WARRANTY STATEMENT.

Disclaimer of Limited Warranties

TO THE FULLEST EXTENT PROVIDED BY APPLICABLE LAW, EXCEPT AS WARRANTED IN THIS LIMITED PRODUCT WARRANTY POLICY, AROVAST CORPORATION PROVIDES THE PRODUCTS YOU PURCHASE FROM AROVAST CORPORATION "AS IS" AND AROVAST CORPORATION HEREBY DISCLAIMS ALL WARRANTIES OF ANY KIND, WHETHER EXPRESS OR IMPLIED, STATUTORY, OR OTHERWISE, INCLUDING BUT NOT LIMITED TO ANY WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT, AND FITNESS FOR PARTICULAR PURPOSE.

Limitations of Liability

TO THE FULLEST EXTENT PROVIDED BY APPLICABLE LAW, IN NO EVENT WILL AROVAST CORPORATION, ITS AFFILIATES, OR THEIR LICENSORS, SERVICE PROVIDERS, EMPLOYEES, AGENTS, OFFICERS, OR DIRECTORS BE LIABLE FOR:

(A) DAMAGES OF ANY KIND ARISING OUT OF OR IN CONNECTION WITH PRODUCTS PURCHASED FROM AROVAST CORPORATION IN EXCESS OF THE PURCHASE PRICE PAID BY THE PURCHASER FOR SUCH PRODUCTS, OR

(B) INDIRECT, SPECIAL, INCIDENTAL, CONSEQUENTIAL, OR PUNITIVE DAMAGES EVEN IF AROVAST CORPORATION OR ONE OF ITS SUPPLIERS HAS BEEN ADVISED OF THE POSSIBILITY OR LIKELIHOOD OF SUCH DAMAGES.

AND REGARDLESS OF WHETHER CAUSED BY TORT (INCLUDING NEGLIGENCE), BREACH OF CONTRACT, OR OTHERWISE. OUR LIABILITY SHALL UNDER NO CIRCUMSTANCES EXCEED THE ACTUAL AMOUNT PAID BY YOU FOR THE DEFECTIVE PRODUCT, NOR SHALL WE UNDER ANY CIRCUMSTANCES BE LIABLE FOR ANY CONSEQUENTIAL, INCIDENTAL, SPECIAL OR PUNITIVE DAMAGES OR LOSSES, WHETHER DIRECT OR INDIRECT.

EXCEPT AS COVERED BY THIS LIMITED PRODUCT WARRANTY STATEMENT, AROVAST CORPORATION SHALL NOT BE LIABLE FOR COSTS ASSOCIATED WITH THE REPLACEMENT OR REPAIR OF PRODUCTS PURCHASED FROM IT, INCLUDING, BUT NOT LIMITED TO, LABOR, INSTALLATION, OR OTHER COSTS INCURRED BY THE USER AND, IN PARTICULAR, ANY COSTS RELATING TO THE REMOVAL OR REPLACEMENT OF ANY PRODUCT.

Other Rights You May Have

SOME JURISDICTIONS DO NOT ALLOW FOR: (1) EXCLUSION OF IMPLIED WARRANTIES; (2) LIMITATION ON THE DURATION OF IMPLIED WARRANTIES; AND/OR (3) EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES; SO THE DISCLAIMERS

IN THIS POLICY MAY NOT APPLY TO YOU. IN THESE JURISDICTIONS YOU HAVE ONLY THE IMPLIED WARRANTIES THAT ARE EXPRESSLY REQUIRED TO BE PROVIDED IN ACCORDANCE WITH APPLICABLE LAW. THE LIMITATIONS OF WARRANTIES, LIABILITY, AND REMEDIES APPLY TO THE MAXIMUM EXTENT PERMITTED BY LAW.

ALTHOUGH THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, YOU MAY HAVE OTHER RIGHTS IN YOUR JURISDICTION. THIS STATEMENT OF LIMITED WARRANTY IS SUBJECT TO APPLICABLE LAWS THAT APPLY TO YOU AND THE PRODUCT. PLEASE REVIEW THE LAWS IN YOUR JURISDICTION TO UNDERSTAND YOUR RIGHTS FULLY.

Changes To This Policy

We may change the availability of this limited warranty at our discretion, but any changes will not be retroactive.

This warranty is made by:

AROAVAST CORPORATION
1775 Flight Way, Suite 150
Tustin, CA 92782
USA

Customer Support

If you have any questions or concerns about your new product, please contact our helpful Customer Support Team.

Arovast Corporation

1775 Flight Way, Suite 150
Tustin, CA 92782
USA

Support Hours

Mon–Fri, 9:00 am–5:00 pm PST/PDT

Email: support@cosori.com

Toll-Free: 1-888-402-1684

**Please have your order invoice PDF or screenshot(s) ready before contacting Customer Support.*

Attributions

Amazon, Alexa, and all related logos are trademarks of Amazon.com, Inc. or its affiliates.

Google, Android, and Google Play are trademarks of Google LLC.

App Store® is a trademark of Apple Inc.

Wi-Fi® is a registered trademark of Wi-Fi Alliance®.

iOS is a registered trademark of Cisco Systems, Inc. and/or its affiliates in the United States and certain other countries.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Arovast Corporation is under license. Other trademarks and trade names are those of their respective owners.



Questions or Concerns?

support@cosori.com