



Quick Start Guide

DINGER-PRO-2




DINGER-PRO-2 Power Options

AC 16V-24V power adapter: You can connect a wired chime (mechanical or electronic) or a **Singer 2 Chime Kit**.

DC 12-24V power adapter: Connect an IC Home **Singer 2 Wireless Chime Kit**.

Single Set Up


With a Mechanical or Electrical Chime

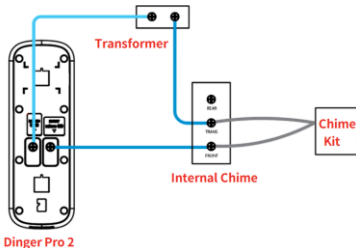

Dinger Pro 2

Dual Set Up


With a Mechanical or Electrical Chime

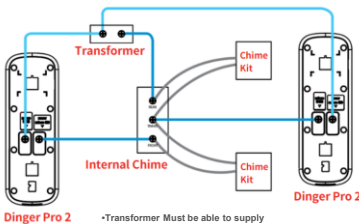

Dinger Pro 2

*Transformer Must be able to supply enough power to both devices.

Step 5 Connect the Wires. Loosen the power port screws of the doorbell, then loop your existing wires underneath the screws. The wiring orientation does not matter.

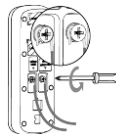


Step 6 Mount the doorbell. Tighten the screws to secure the power wires, then push the wiring back into the wall. Place the doorbell onto the two tabs of the mounting bracket, and then slide it down to secure it. A click sound will indicate that it is locked in.




To remove the doorbell from the mounting bracket:

1. Insert the supplied pin into the hole at the bottom of the bracket until it reaches the inner buckle.
2. Slide the doorbell up and remove it from the bracket

Step 7 Install the Chime kit to the existing Doorbell Chime (Skip this step if using DC power). Remove the cover of your existing chime box, and then find terminals labeled **FRONT** and **TRANS**. The chime kit might look different depending on the chime type.

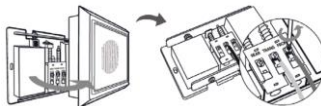


Loosen the **FRONT** and **TRANS** terminal screws. If there are no markings, simply loosen the two terminals where wires are attached. Make sure not to detach any connected wiring.

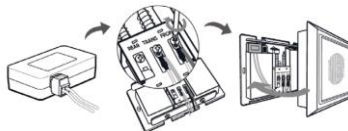

6 Connect your mobile device to the Dinger Pro 2's hotspot. The Wi-Fi name will appear as the *DingerPro2-device serial number*.

7 Follow the app instructions to add the doorbell. Login to the local Wi-Fi network, then create a device name and a password for your Dinger Pro 2, as well as set the time zone.

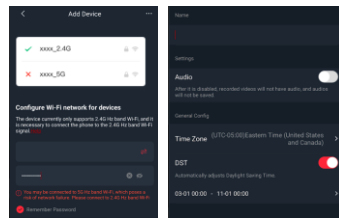

8 Select the Chime type for Dinger Pro 2. In the App, tap on the added Dinger Pro 2, then tap on **Device Details > Chime Linkage**.

Mechanical Chime

For chimes that make a ding-dong sound, it is most likely a mechanical chime.

Electronic chime


For chimes that play a digital tone or melody from a speaker, it is an electronic chime.

If your video doorbell is not connected to a third-party chime, do not select this. If your video doorbell is connected to a third-party chime, select the correct chime type, otherwise the device might not work properly.

Link Wireless Chime

One doorbell can be linked to multiple Wi-Fi chimes.

Singer-2

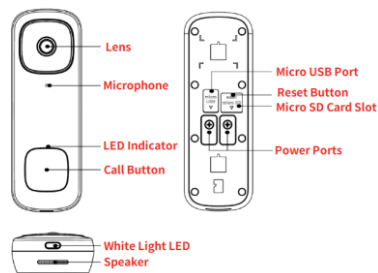

LED Indicator Status:

Flashing Blue: Hotspot Enabled

Flashing Red: Wi-Fi connection failed

Solid Blue: Booting Up/ Online


Solid Red: Undergoing Factory Reset

Package Contents




Step 1 Mark the Mounting Holes.

Place the mounting bracket to fit your existing doorbell wiring and then use it to mark the screw holes, following the "Up" direction.

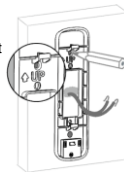


Step 2 (Optional) Attach one of the angled mounting wedges to the mounting bracket if necessary (See below).

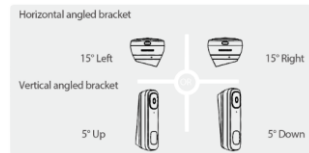

Step 3 (Optional) Install Wall Anchors. If installing on stucco, brick, or concrete, use the a drill bit to drill holes where marked, and then insert the included wall anchors. For wood, drywall or soft surface, skip this step.

Step 4 Secure the Mounting Bracket. Lead the doorbell wires through the hole on the mounting bracket, and then secure the bracket to the mounting surface with a Philips-head screwdriver and supplied mounting screws.

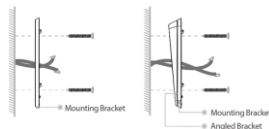

1 Power on the Dinger Pro 2 camera and download the **IC View Pro** App from Google Play or the Apple App Store.




2 Open the App, and register a new account.



3 On the device page of the app press the "+" icon to initiate QR code scanning.

4 Scan the QR code on the back of the Dinger Pro 2. You can also manually enter the serial number on the following page.

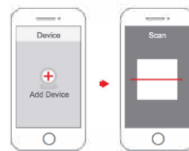

5 Tap "Next" if you see a blue spinning light on the front of the Dinger Pro 2 that indicates the hotspot is active. (If not, press the call button on the device)

Does the Dinger Pro 2 support 5GHz Wi-Fi?

Yes. It works with both 2.4GHz and 5GHz Wi-Fi networks.

Why isn't the video doorbell turning on?

- Make sure the doorbell power breaker is on. Wait about 5 minutes for it to power up.
- Check that the power source is 16-24 VAC or 12-24 VDC. You can find this on the doorbell transformer label or test it using a multimeter.
- If using a USB power cable (not included), make sure it's plugged into a 5V, 2A USB adapter (also not included).

How do I reset the Dinger Pro 2?

Open the Reset button slot on the back of the doorbell. Use the included pin to press the RESET hole. Release it when you hear "Device is undergoing hard reset" prompt. After a minute, a slow flashing blue light will show the doorbell is ready to set up.

Why can't I connect the video doorbell to Wi-Fi?

Wait for the doorbell to flash a slow blue light. Then go to your phone's Settings > Wi-Fi and connect to the "DingerPro2_xxx" hotspot.

Why is the video doorbell offline?

- Check if the Indicator LED is lit solid blue.
- If **yes**, check if your Wi-Fi router is online.
- If **no**, factory reset the doorbell and reconnect. Make sure the Wi-Fi signal is strong.

Why can't I connect to the device hotspot?

Make sure the IC View Pro app has Location and Wi-Fi permissions. If your phone doesn't connect automatically, go to Wi-Fi settings and connect to the hotspot manually. Stay connected to the hotspot during setup.

Why isn't the chime working?

- In the IC View Pro app, select the right chime box under **Device Details > Chime Link**. You can change this anytime.
- The Dinger Pro 2 only works with the Singer 2.**
- Check that the chime is wired properly.
- Let the doorbell power on for 5 minutes before testing the chime.