 


User Manual

CD PLAYER

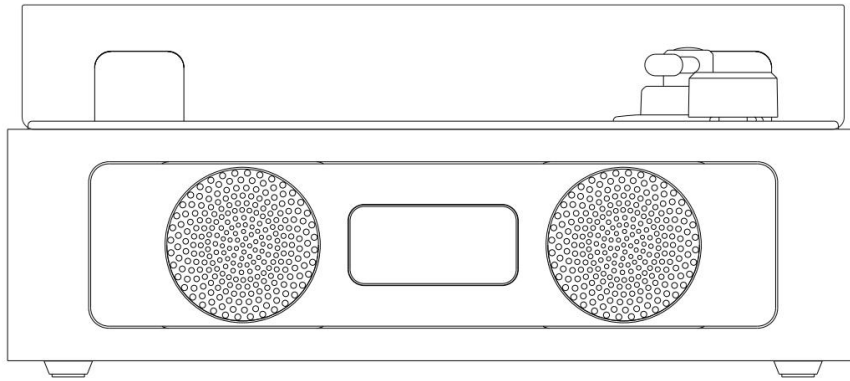

It is recommended to read this user manual carefully and keep it for future reference.

Wipe the CD Player with a soft ,dry, lint-free cloth.

Do not:

Immerse the CD Player in water or any other liquid.

Expose the CD Player to liquid,moisture or humidity to avoid the unit's internal circuit being affected. Use any abrasive cleaning solvents to clean the CD Player, as this can cause damage.

Expose the CD Player to extremely high or low temperatures,as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.

Drop the CD Player as the internal circuit may become damaged.

Attempt to disassemble the CD Player,as this may cause damage to the unit.

Dispose of the CD Player in a fire ,as it will result in an explosion.

Specifications:

Bluetooth Version: 5.3

Frequency response: 20Hz-20KHz

Power Output: 2x3W

Loudspeakers: 40mm (square) - 4 Ohms

USB C Input: DC 5V 1A

Built-in battery capacity: 2000mAh

Working time: CD Playback time 3hrs at full volume, 6hrs at 50% volume ;Bluetooth out playback time 5hrs at full volume , 8hrs playback time at 50% volume

In the Box

 
21865 CD PLAYER

 
 
Instruction Manual

Remote control *1

Charging cable * 1

Product Review:

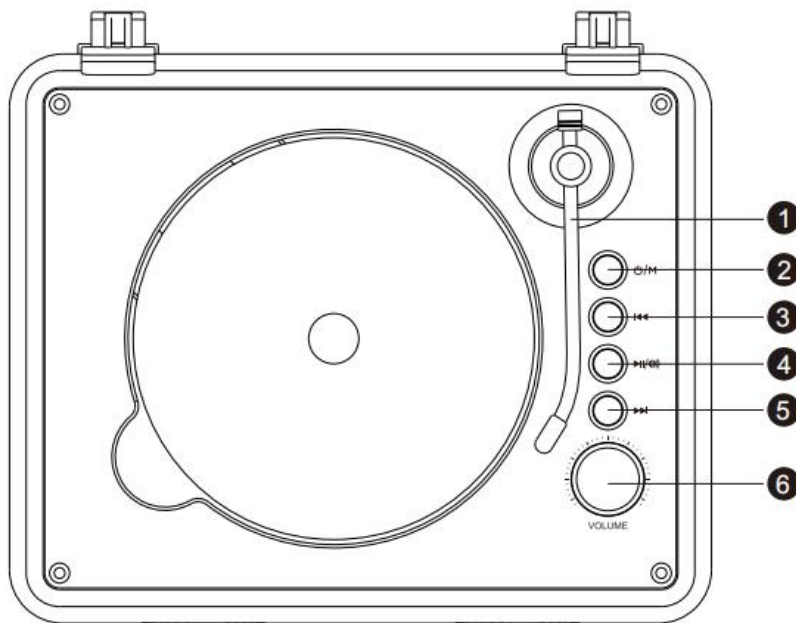

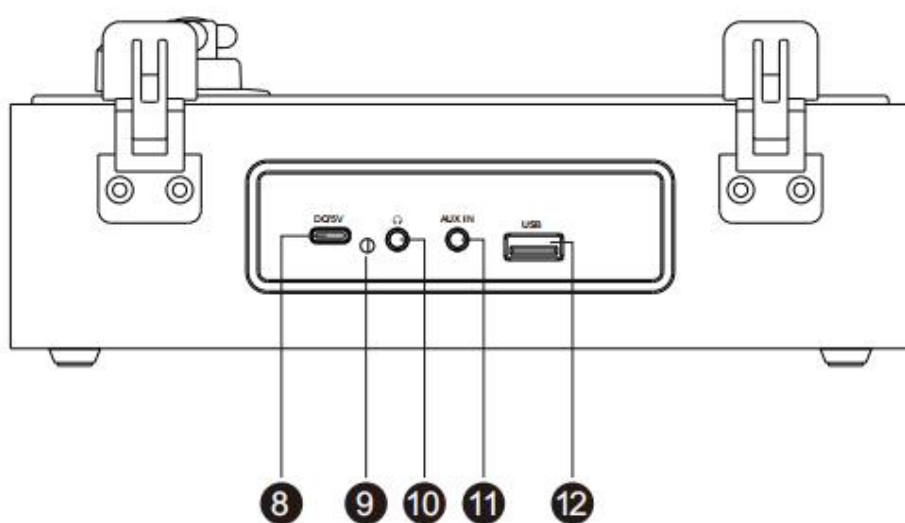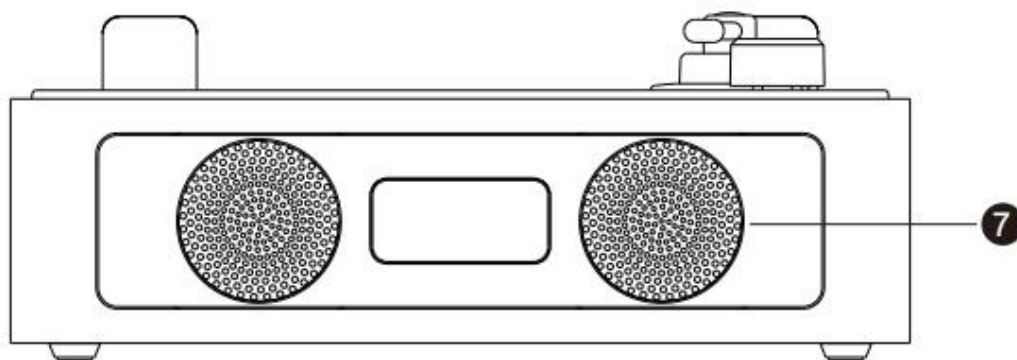

1: CD On / Off control arm

Push CD control arm to left position to start CD play

Push CD control arm to original position to turn off the CD play

2: Power On/Off /Mode control button

Long press to power on / off the unit

Short press to mode change

3: Previous sound skip button

4: Play/Pause/BT out control button

Short press to play/pause

Long press to BT out (Available during CD, Aux in ,USB)

5: Next sound skip button

6: Volume control dial

7: Speaker

8: DC 5V input port

 
9: Charging indicator

10: Headphone jack

11: Aux in port

12: USB input port

Remote control:

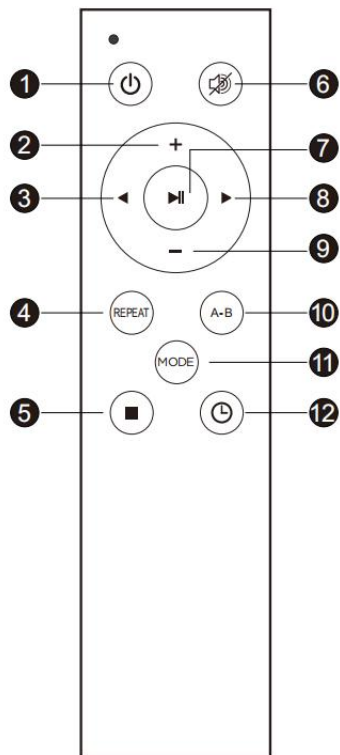

1: Power on / Power Standby

2: Volume Increase button

3: Previous sound skip / fast reverse button

Short press to skip to previous sound

Long press to fast reverse

4: Repeat button

Press 1 time for single track loop

Press 2 times for all CD sounds in loop

Press 3 times to off repeat function

5: Stop button

6: Mute button

7: Play / Pause button

8: Next sound skip / fast forward button

Short press to skip to next sound

Long press to fast forward

9: Volume decrease button

10: A-B fixed point playback button

11: Mode change button

12: Timing play button (10-20-30-45-60mins)

Listen to CD

STEP 1: Long press 'On/Off/ mode ' button to power on the unit, it will automatically enter into Bluetooth function.

STEP 2: Put CD disc on the rotary plate

STEP 3: Push CD control arm to left position to start CD play, since laser recognition needs some time, you need to wait a few seconds till CD disc spins automatically. Then you can listen to the CD freely.

STEP 4: Push the CD control arm to original position to turn off the CD play.

Listen to Bluetooth

STEP 1: Long press 'On/Off/ mode ' button to power on the unit, it will automatically enter into Bluetooth function.

STEP 2: Search for BT pairing name 21865 using a Bluetooth compatible device. Select "21865" to connect and pair.

STEP 3: Once connected, you can enjoy the music.

STEP 4: Push the CD control arm to original position to turn off the CD.

Bluetooth® out

You can play music from this unit on external Bluetooth® speakers, earbuds, or headphones.

STEP 1: Set the unit to CD, Aux in or USB mode

STEP 2: Long press PLAY/PAUSE/BT OUT button to activate Bluetooth® Transmitter function.

STEP 3: Power on your external Bluetooth device and activate its Bluetooth® pairing mode.

STEP 4: After a few seconds, the unit will automatically connect with external BT device.

STEP 5: To turn off BT OUT mode, press and hold PLAY/PAUSE/BT OUT button.

Listening through Aux

STEP 1: To use Aux mode, connect one end of Aux in cable to Aux in jack ,the other end to an external audio source device.

STEP 2: Short press the 'On/Off/ mode ' button to Aux mode.

Note: Once connected ,the sound can be controlled using the relevant controls on the compatible audio device.

Listening through USB

STEP 1: To use USB mode, insert a compatible USB drive (not included) into the USB port on the back of the unit.

STEP 2: It will automatically identify the USB mode and play the music.

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum 20cm distance between the radiator and your body: Use only the supplied antenna.

