 
 


390mm

 
A100 使用说明书

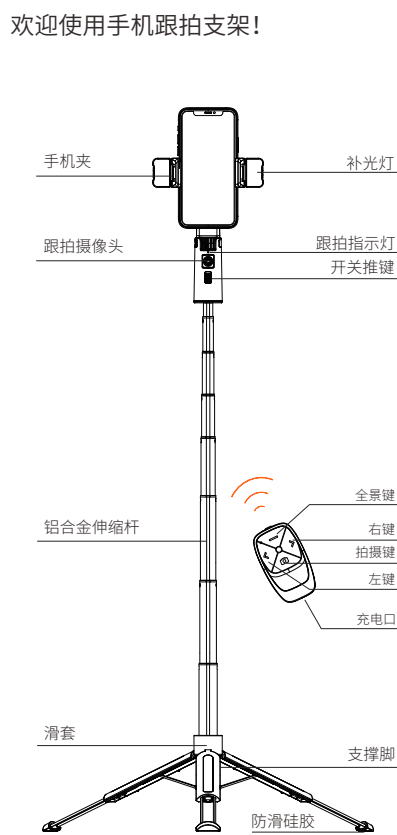

产品操作步骤

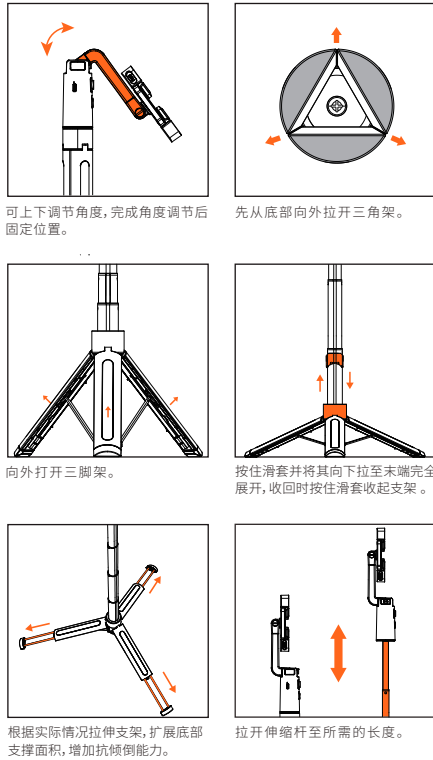

跟拍模式

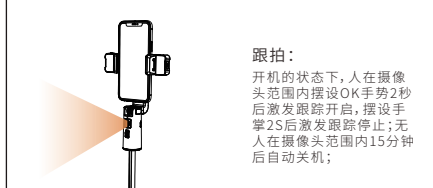

蓝牙遥控器操作说明



特别说明：(苹果iOS系统设置与拍摄键2无效时设置方法如下)

1. 苹果iOS13.4以上设置方法：a. 遥控链接上手机蓝牙 b. 屏幕自动旋转锁定 c. 打开设置-辅助功能-触控-辅助触控-打开 d. iOS15以上系统首次使用需校准，找到辅助触控的跟踪灵敏度将圆点移到左边后再移回默认位置即可。

2. 拍摄键2无效时调整快门位置方法：a. 进入拍摄界面 b. 长按拍摄键 c. 不松手 c. 同时短按方向键移动“指针/圆点”至拍摄软件快门圆圈范围内。

产品参数

产品名称:手机跟拍支架	
最大承重能力:500g	工作电压:3.6-4.2V
主要材料:铝合金&ABS塑料	工作温度:-10~40C°
支持系统:Android,IOS,鸿蒙	充电电压:DC 5V
手机夹最大拉伸距离:100mm	遥控器电池容量:55mAh
折叠尺寸:38*70*265mm(折叠)	遥控器待机时间:30天

⚠ 注意事项

- **请小心收纳, 避免夹手**
- 使用前请确认使用地域和设施限制的场所, 禁止违法公共秩序的行为
- 请勿将产品置于高处及不平坦台面、地面, 以及防跌落损伤
- 请勿使用超出产品负荷电源, 导致产品发热及电路板烧坏
- 请勿自行拆开、改造本产品
- 请勿撞击、投掷本产品, 容易引起内部故障
- 请勿将本产品置入低温、潮湿地方
- 请勿将本产品丢入火中、远离火灾
- 警告: 本产品不适合3岁及以下儿童单独操作使用

保修卡


产品型号:	购买地址:
购买日期:	订单号码:
客户姓名:	保修内容:
联系地址:	

一年有限保修摘要


我可保证所附带的硬件产品,从原先零售购入的日期一年内在材料和工艺方面无瑕疵,均可受理售后问题。我可对正常使用磨损不做担保,对于事故或滥用造成的损坏也不做担保。若要获取服务可访问我司拥有的零售店或我可授权服务商,即可为您的产品酌情进行修理、更换您享有的保修权益是附加在本地消费者法律所提供的权利行之有效。当您根据本保修政策提出索赔时,可能需要提供购买证明的详细信息。



 
A100 INSTRUCTIONS

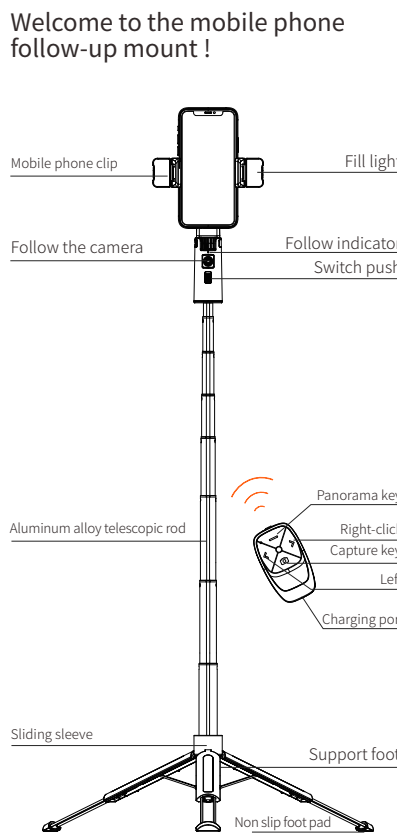


Product operation steps

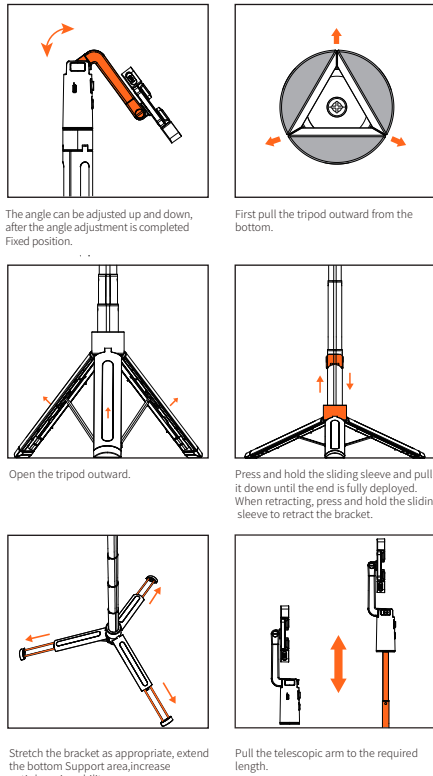 

Overhead shooting mode

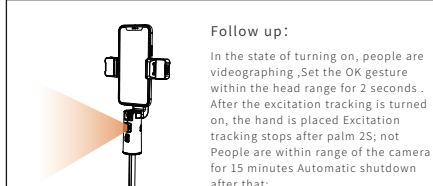 

 Operating instructions of Bluetooth remote controller

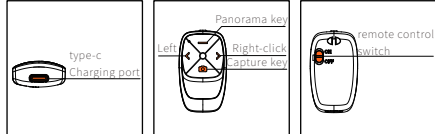

Turn the side switch of the remote controller (ON/OFF) and the indicator light of the remote controller will flash automatically.

1. Press the **Search** button of the mobile phone, turn on Bluetooth, search for "NDMS-456" and click the name pairing, display "connected"; the indicator stops flashing, that is, the pairing is successful.

2. **Paranoma key:** Click the "Paranoma Button" after the phone click button 2 seconds, then click Stop Rotation, and long press "Paranoma Preset key" to return to the initial position.

3. **Left button:** long press the left button to make the mobile phone click turn left, and long press the right button to make the mobile phone click turn right.

4. **Right button:** long press the right button to make the mobile phone click turn clockwise, and stop rotating when released; Short press is not functional.

5. **Shooting button:** Press the shooting button to take pictures when the camera is in the shooting position.

Special note: when Apple IOS system setting and shooting key 2 are invalid, the setting method is as follows

1. Turn on the mobile phone method 4. Mobile phone Bluetooth on the remote control (ON/OFF) and the indicator light of the remote controller will flash automatically.

2. The screen automatically turns on and locks C. Turn on the settings - auxiliary functions - touch auxiliary touch - turn on C. the above system need to be calibrated for the first time. Find the "NDMS-456" in the Bluetooth device list and click to connect.

3. **Default position:** Press the **Search** button of the mobile phone, turn on Bluetooth, search for "NDMS-456" and click the name pairing, display "connected"; the indicator stops flashing, that is, the pairing is successful.

4. **Shooting button:** Press the shooting key position (shooting key 2) in 2.1 and 2.6. After the photographing interface B, press the photographing key 2 for a long time without letting go.

5. **C:** at the same time, press the direction key for a short time to make the "pointer" (red dot) in the center of the screen.

Product parameters

Product model:A100	
Maximum bearing capacity:500g	Working voltage : 3.6-4.2V
Main material : Aluminum alloy & ABS plastic	Operating temperature : -10°-40°
Support system : Android,IOS,Hongmeng	Charging voltage : DC 5V
Maximum stretching distance: 100mm	Remote control battery capacity:550mAh
Folding size : 38*70*265mm	Standby time of remote control :30days

 Matters needing attention

- Please store it carefully to avoid pinching your hands.
- Before use, please confirm the places with geographical and facility restrictions, and prohibit acts against public order.
- Do not place the product on high places, uneven countertops and floors to prevent falling damage.
- Do not use full supply exceeding the load of the product, which will cause the product to not sit up and the circuit board to burn out.
- Do not disassemble or modify this product by yourself.
- Do not hit or throw this product, which may cause internal failure.
- Do not put the product in a low temperature and humid place.
- Do not throw the product into the fire and keep away from the fire source.
- Warning: This product is not suitable for children under 3 years old to operate alone.

WARRANTY CARD

Product model:	Place of purchase:
-----	-----
Date of purchase:	Order number:
-----	-----
Customer name:	Warranty content:
-----	-----
Contact address:	

One year limited warranty summary

Our company guarantees that the attached hardware products are free from defects in materials and workmanship within one year from the date of original retail purchase, and can accept after-sales problems. Our company does not guarantee normal wear and tear, nor does it guarantee damage caused by accident or abuse. To obtain the service, you can visit the retail store owned by Our company or the authorized service provider of Our company to repair and replace your products at your discretion. Your warranty rights are in addition to the rights provided by local consumer law. When you file a claim under this warranty policy, you may need to provide details of the proof of purchase.



	项 目 名 称	A100中英文说明书-中性-R1	制 图 人	XIANG	尺寸:390*125mm 材质:128g双铜 折页 正面中文 背面英文
	物料编码		审 核 人		
	比 例	1:1	日 期	2023-05-26	
			颜 色	白色折页	

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning for Portable device: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.