

 


A2284RW-HK-V02


RW- Rocket Racer V2.0

User Manual 使用說明書


Contents 產品內容

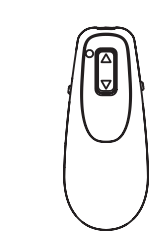

x 1
Remote Controller V2.0
遙控器 V2.0

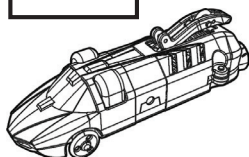 2.4GHz

 x 1
Rocket Wheels™ Racer V2.0
Rocket Wheels™ 賽車 V2.0




x 1
USB Charging Cable
USB 充電線



Requires 2 AA Batteries (Not induded)
2 x 1.5V AA(LR6) 電池 (不包含)



 
x 1
Decoration Sticker
裝飾貼紙

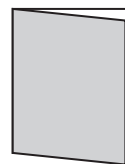

x 1
User Manual
使用說明書

BC

 Getting Started 準備開始

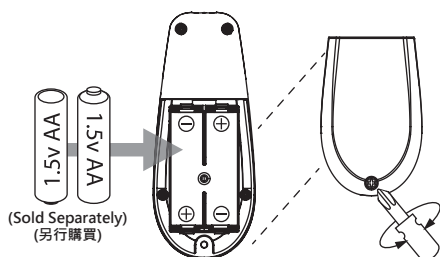

Installing Batteries to Remote Controller

1. Open the battery door by screw driver (not included)
2. Insert 2 x 1.5V AA (LR6) Batteries (not included)
3. Close the battery door by screw driver (not included)

If using rechargeable batteries,

 
- Remove rechargeable batteries from the product before charging.
- If removable and rechargeable batteries are used, they are only to be charged under adult supervision.

遙控器電池安裝

1. 利用螺絲刀(不包含)打開電池門
2. 放入2顆1.5V AA (LR6)電池(不包含)
3. 利用螺絲刀(不包含)關閉電池門。

如果使用可充電電池

1. 請於充電前取出充電電池
2. 如果使用可拆卸和可充電電池，則只能在成人監控下充電。

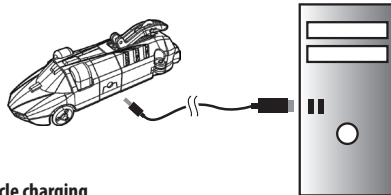

Vehicle charging

Plug both ends of the USB charging cable into the vehicle and any USB power device. The end of the USB cable will has red light during charging. While it turns to green light, charging has been completed. Charging time is about 30 - 50 minutes.

Chargers used with the toy are to be regularly examined for damage to the cord, plug, enclosure and other parts, and that, in the event of such damage, the toy must not be used with this transformer until the damage has been repaired.

The rocket wheels racer is only to be connected to Class II equipment bearing the symbol

車輛充電

將USB充電線的兩端分別插入車輛和任何USB電源設備，USB線的末端會亮起紅燈，表示正在充電。當USB線的末端亮起綠燈時即表示已完成充電。充電時間約30 - 50分鐘。

玩具使用的充電器應定期檢查其USB線，插頭和其他部件是否損壞，發現損壞時應停止使用，直至修復完好。

車輛只能連接到帶有 符號的II級設備

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage: Do not mix old and new batteries or batteries of different types. alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium). Insert batteries as indicated inside the battery compartment. Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak. Never short-circuit the battery terminals. Use only batteries of the same or equivalent type, as recommended. Do not charge non-rechargeable batteries.

電池安全信息

在特殊情況下，電池可能會漏出液體造成化學性的灼傷或損壞您的產品。為了避免電池漏液：不要混合使用新舊電池或不同類型的電池，如鹼性，標準（碳鋅）或可充電（鎳鎘）。以電池倉內表示正確的極性插入電池。在不使用長時間不使用時應取出電池。請從產品中取出耗盡的電池。安全地處理電池。不要用火處理本產品，電池可能會爆炸或洩漏。千萬不要短路電池端子。只能使用相同或同等類型的電池。非充電電池不可充電。

FCC Regulatory Compliance

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Compliance

 
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Decorate Rocket Wheels™ Racer V2.0 with stickers

用貼紙裝飾 Rocket Wheels™ 賽車 V2.0

Decorate Your Vehicle


裝飾您的車輛

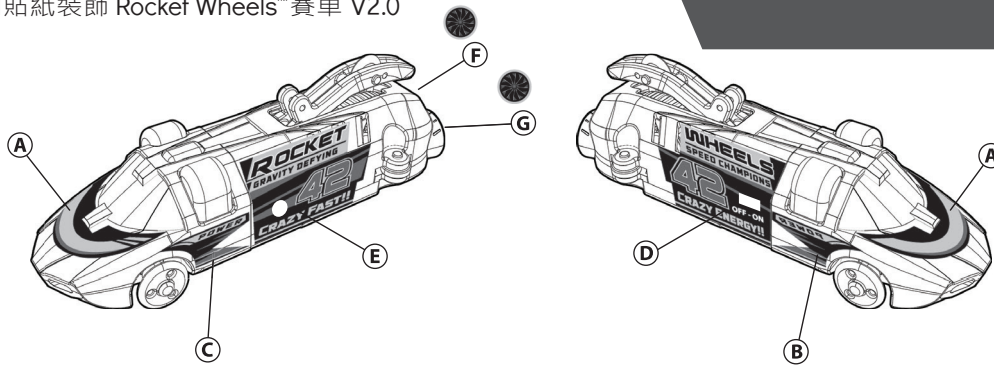

Start to Play 開始遊玩

1.

 Make sure the vehicle is charged
確保車輛已充電

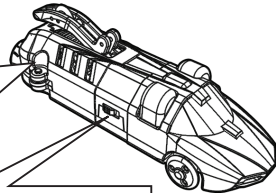

2.

 
OFF ☒ ON

Turn on the vehicle
打開車輛電源


3.

Check the controller
Signal light illuminates when pressing any button.

檢查遙控器
按著方向按鈕時，信號燈便會亮起。

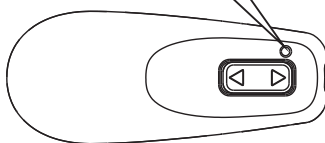

 4.



Direction Button - Press to control the vehicle movement, forward or backward.

按著方向按鈕來控制車輛向前或向後移動

Troubleshooting 故障排除

• If the vehicle is not running, Check that:

1. The ON/OFF is ON.
2. The vehicle should matches your remote controller.
3. The vehicle is charged.
4. The batteries in your remote controller are ok.

• If the vehicle is illuminated but not moving in the pipes, Check that:

1. The pipes are assembled correctly and aligned properly. If the pipes are out of round, there can be gaps between the pipes and the drive wheel of the vehicle. The vehicle will not have traction and will not move at max speed.
2. Drive the vehicle forward and backward, repeatedly.
3. Slightly gripping the nearby tube and drive the car at the same time.
4. Open the pipes at a connector to access and dislodge the vehicle.
5. Gently shake the entire track set to make the car slide inside the pipe.

• Other important information

1. Turn off both the vehicle and controller after playing.
2. For max speed, It is important that wheel of your vehicle is clean so it can get good traction on the pipes. You can remove dust and debris from your wheel by rolling in on a piece of masking tape.

• 如果車輛沒有運行，請檢查：

1. ON / OFF制為ON。
2. 您的遙控器與車輛匹配。
3. 為車輛充電
4. 遙控器中的電池是否正常。

• 如果車輛已照燈，但在管道中不能移動，請檢查：

1. 管道組裝正確並正確對準。如果管道有點鬆脫，會使管道和車輛的驅動輪之間有間隙，車輛便不會發動，也不能以最大速度移動。
2. 反復地向前和向後驅動車輛。
3. 稍微抓住管道並同時駕駛汽車。
4. 鬆開管道的連接處，以便進出車輛。
5. 輕輕搖動整個軌道，使汽車在管道內滑動。

• 其他重要信息

1. 玩後關閉車輛和控制器。
2. 對於最大速度，車輛車輪清潔很重要，這可以在管道上獲得良好的牽引力。您可以把車輪在膠紙上滾動來去除車輪上的灰塵和碎屑。



Everite Transworld Ltd.

Rm. 402, Crown Industrial Building,
106 How Ming Street,
Kwun Tong, Kowloon, Hong Kong
Tel: 852 25582339
Email: marketing@everite.com.hk



WARNING:
CHOKING HAZARD-Small parts.
Not for Children under 3 yrs.

警告:
窒息危險-此玩具含小部件，
不適合三歲以下兒童玩耍。

CE EN71
ASTM F963

FCC ID : 2ARIAA2284RW

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



XXXX-YYYY