

Miaokids Wonder Smart Kit

User Manual



Introduction

MiaoKids is based on international children's product research and development concepts, focusing on children's safe use. Please read the following instructions.

<p>Warning</p> <p>Contains small parts. Not for children under three years of age.</p>		<ul style="list-style-type: none"> -4.2V battery included; Non-detachable and non-replaceable; If damaged, please contact customer service for maintenance. -Charger should be used by adults or by children under close adult supervision. -Check the charger regularly to make sure the cable, plug, shell, and other components are in good condition; If not, please stop using until repaired. -The charger is not a toy; Only use the recommended charger. (Output: DC 5V 500mA).
---	--	---

Suggestion: The user manual has important information. Please keep it for future reference. Follow the official 优学猫 WeChat account for access to a PDF (digital) version of the user manual.

Note: Discarding toys may do harm to the environment. Please recycle them properly.

Tips:

- The Wonder Pad is designed to be unavailable while charging for safety reasons.
- If there is no response during startup, please turn off the device and charge it for more than 20 minutes to try again.
- Charge the device for three hours before the first use or when it has not been used for a long period of time. This is to ensure normal use of the product and prolong the battery life.
- If you still have problems, please follow the official 优学猫 WeChat account for customer service.

Caution:

- For safety, battery charging and Bluetooth connection should be done by adults.
- Use and store the product in moderate climates (Temperature: 5-35°C RH: 5%-60%). To prevent water damage and accelerated aging, do not expose this product to dust and moisture.

-1-

Chapter I. Parts Identification

Before use, please check whether the following items are included.

1 Wonder Pad



23 Wonder Cubes

2 (0-9) Number Cubes
3 Cubes with Mathematical Operators
1 cube with "+"
1 cube with "-"
1 cube with "x"
1 cube with "÷"



8 Wonder Shapes

1 round card;
2 semicircular cards;
1 square card;
2 rectangular cards;
2 triangular cards



1 Storage Box



1 USB Charging Cable



1 User Manual




-2-

Chapter II. Operations Guide

i. Hardware Components Identification

LED Status Indicators

Solid green indicates battery is fully charged.
Blinking blue indicates Bluetooth pairing mode;
Solid blue indicates successful Bluetooth connection.
Solid red indicates charging state;
Blinking red is low-battery alert.

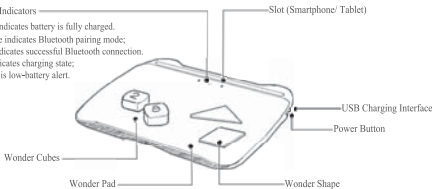

Specification			
Model	MI	Battery Type	430mAh Internal 430mAh lithium polymer battery
Outside Dimensions	290*260*17mm	USB Cable	USB 2.0
Voltage Input	3.7v		


-3-

ii. APP Download

First, connect your smartphone or tablet to the internet, then scan the QR code below or search for MIAOKIDS Math on the APP Store to download. The device must support bluetooth 4.0 or upper version, with at least 1GB memory and 300MB free disk space.

<p>iOS System</p> <ul style="list-style-type: none"> • Supports iOS 8 and above • Supports iPad (iPad 1, iPad 2 and iPad mini 1 are not supported) • Supports iPhone (iPhone 4 and iPhone 4S are not supported) 	<p>Android System</p> <ul style="list-style-type: none"> • Supports Android 6.0 and above • Supports mainstream Android smartphones and tablets
---	--

 iii. Charging and Battery



- Make sure the USB cable is inserted into the USB port on the side of Wonder Pad while charging. You can remove the USB cable to stop charging.
- Keep the power supply steady while charging.
- USB charging applies to any power sources with USB ports such as a computer or a socket and plug.
- Charge the device for three hours before the first use. The battery can supply power for six to eight hours.
- It is recommended to charge the device once per week.
- Please turn off the device to save power after playing games.

-4-

iv. Power (on/off)



- Power On: Hold down the power button for two seconds and the panel indicator light will turn on.
- Power Off: Hold down the power button for two seconds and the panel indicator light will turn off.

v. Bluetooth Connection



1. Turn on Bluetooth on your smartphone or tablet.
2. When the Wonder Pad is switched on, the device will go into Bluetooth pairing mode by default.
3. The successful Bluetooth connection will be shown on the main interface of MIAOKIDS Math APP.
4. If the Wonder Pad does not successfully connect to a Bluetooth-enabled device (smartphone, tablet, etc.), the Wonder Pad will automatically turn off after ten minutes of inactivity.

-5-

Chapter III. Important Safety Instructions

i. Health Precautions

For children's health, please adhere to the following operating and use instructions.

- Do not let your children's eyes be too close to the screen. Please use the device in a bright environment.
- Keep children from using the device for long periods of time. It is recommended to use the product for no more than one hour per day or to rest for 10-15 minutes per hour while using it.
- To prevent possible harm, stop children from using the product when they are tired.

ii. Other Warnings

Assembling & Disassembling

- The product is composed of high precision components. To prevent damage to the product, do not attempt to disassemble, repair, modify, or drop it. If the product does not work normally, please contact the official MIAOKIDS Children WeChat account for servicing.
- The battery is installed inside of the product and cannot be removed without expert care.
- Keep children under three years old away from the small parts of the product. For safety, discard the plastic bags, strapping ropes, and other items from the initial product packaging.
- The charger and charging cable are not toys. Charging must be conducted by adults.

Cleaning

- Disconnect the charger before cleaning. Clean only with a dry cloth. Do not use volatile organic solvents such as gasoline or diluent for cleaning.
- Do not expose this device to rain or moisture. The device shall not be exposed to direct sunlight, fire, or high temperatures. Improper exposure may cause a dangerous explosion.

-6-

Chapter IV. Troubleshooting

Please refer to the information in the chart below before applying for maintenance.

Problem	Solution
The product does not work normally after startup.	Verify that the product is placed on a non-metallic surface. Make sure no metal objects are within 15 cm of the product.
The product cannot turn on.	Check if the Wonder Pad is powered on. Check if the battery has enough power. Make sure no USB cable is plugged into the power supply.
Something is wrong with the Bluetooth connection to the Wonder Pad.	The Wonder Pad will connect to the Bluetooth-enabled device which opens the APP first.
	Be sure to limit the distance between mobile devices and the Wonder Pad to three meters.
	Check if any other devices are already connected to Wonder Pad. If so, please turn off the Wonder Pad and restart it.
If the methods above do not work, hold down the power button for three seconds and turn off the Wonder Pad. Reconnect all power supplies after disconnecting them. Then, follow the methods above to operate again. If the Wonder Pad still does not work normally, ask for after-sales service through the official MIAOKIDS Children WeChat account.	
Wonder Cubes and Wonder Shapes are lost.	Wonder Cubes and Wonder Shapes are consumables and are not within the scope of the product warranty. Please contact customer service on the official 优学猫 WeChat account to purchase replacements.

-7-

Chapter V. After-Sales Service

i. "Three Guarantees" Policy

Implement the "Three Guarantees" service policy

- Within seven days from the date of sale, if the product has performance failures, consumers can choose to return, repair, or replace.
- Within thirty days from the date of sale, if the product has performance failures, consumers can choose to repair or replace.
- Within one year of the sale, if the product has performance failures, consumers can choose to repair for free.

Warranty will not be provided under the following circumstances:

The product accepts warranty service only under normal use. The warranty shall not apply to artificial damage or damage under the following circumstances. Paid repair services will be provided.

- The warranty period has expired.
- The product is damaged due to failure to use, maintain, or keep in accordance with the user manual.
- The product is damaged by a non-approved repairer.
- The product has no valid voucher and invoice (except that the product can be confirmed within the warranty period).
- The voucher is altered without permission.
- The product model or code on the three-guarantee voucher is not in accordance with the physical properties of the product.
- The product is damaged as a result of a natural disaster (earthquakes, floods, fires, lightning, etc.).
- The product is damaged as a result of using used batteries or mixing new batteries with semi-used batteries (for example, the battery leakage results in the corrosion of the circuit board).
- The warranty does not cover loss or natural wear and tear of consumable items (like Wonder Shapes, Wonder Cubes, and the USB charging cable); When retailers' verbal promises are not within the scope of warranty, servicing will not be provided.

ii. For a product repair, you can follow the official 优学猫 WeChat account for after-sales service or ask for help from a local 优学猫 authorized service center.

-8-

iii. WARRANTY CARD

PURCHASE INFORMATION (FOR RETAILER)	
NAME OF USER	
DATE OF PURCHASE	
PLACE OF PURCHASE	
OFFICIAL STAMP	
REPAIR INFORMATION (FOR USER)	
SERIAL NO.	
ERROR DESCRIPTION	
RETURN ADDRESS	
CONSIGNEE	
TELEPHONE NO.	

iv. MAINTENANCE RECORD CARD

DATE OF DELIVERY	
ERROR DESCRIPTION	
RESULT OF MAINTENANCE TREATMENT	
DATE OF REPAIR	
SIGNATURE	

Tip

Please complete the repair information above before sending your product for maintenance so we can receive the product and send it back quickly after maintenance. Please keep the express bill or the repair form for query and retrieving your product.

Please keep the maintenance record card.

-9-

ABOUT US

Producer	: Beijing Xiaohai Learn & Play Co Ltd
Address	: Room 107-11, 1st Floor, No. 127-1 Zhongguancun North Street, Haidian District, Beijing
Manufacturer	: Lizhen Electronics (Shenzhen) Co., Ltd.
Address	: 1-3rd floor, Building 4, Houhai industrial park, Liyuhe Industrial Zone, Loucun Community, Gongming Office, Guangming New District, Shenzhen
Website	: www.miaokids.com
Please scan the QR code to follow 优学猫 WeChat official account.	



check

pass

-10-

FCC Part 15 C Notice

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

MAKE EDUCATION MORE REALISTIC!

MAKE FUN INTERACTIONS GO BEYOND THE SCREEN!