


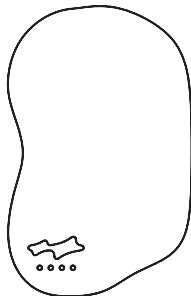

SKYLARK



The following manufacturer is the responsible party
(for FCC matters only).

Company name:
Meizhou Guo Wei Electronics Co. LLC
Address:
468 W Winnie Way, Arcadia, CA 91007

©2026 SKYLARK Holdings, Inc.
All rights reserved.

JUICE 1

Wireless Power Bank

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- 1) Reorient or relocate the receiving antenna.
- 2) Increase the separation between the equipment and receiver.
- 3) Connect the equipment to an outlet on a circuit different from the connected receiver.
- 4) Consult a dealer or an experienced radio /TV technician for help.

FCC RF exposure statement

This equipment complies with FCC Radiation exposure limits set forth for an uncontrolled environment. This equipment can be used in portable exposure condition without restriction.

Limited Warranty

This product is covered by a 12-month limited warranty from the date of purchase.

If the product fails due to defects in materials or workmanship under normal use during the warranty period, we will repair or replace the product at our discretion.

This warranty does not cover normal depletion of batteries, unless the failure is due to a defect in materials or workmanship; nor damage caused by misuse, accidents, unauthorized modifications or repairs, improper use of charging equipment, or other causes that are not defects in materials and workmanship.

Proof of purchase may be required for warranty service.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Customer Support

We're here to help. If you have any questions or need assistance with your product, please contact our customer support team.

Email: support@skylrk.com

Website: www.skylrk.com

When contacting support, please include the product model, a description of the issue, and proof of purchase.

Important Safety Instructions

WARNING- When using this product, basic precautions should always be followed, including the following:

- 1) Read all the instructions before using the product.
- 2) To reduce the risk of injury, close supervision is necessary when the product is used near children.
- 3) Do not put fingers or hands into the product.
- 4) Do not expose power bank to rain or snow.
- 5) Do not expose power bank to heat or fire.
- 6) Do not store in direct sunlight or in a vehicle.
- 7) Use of a power supply or charger not recommended or sold by power bank manufacturer may result in a risk of fire or injury to persons.
- 8) Do not use the power bank in excess of its output rating. Overload outputs above rating may result in a risk of fire or injury to persons.
- 9) Do not use the power bank that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- 10) Do not disassemble the power bank. Take it to a qualified service person when service or repair is required. Incorrect reassembly may result in a risk of fire or injury to persons.
- 11) Do not expose a power bank to fire or excessive temperature. Exposure to fire or temperature above 140°F (60°C) may cause explosion.
- 12) Have servicing performed by a qualified service or repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
- 13) Switch off the power bank when not in use.

Implied Warranties

Any implied warranties, including the implied warranty of merchantability, are limited in duration to the warranty period stated above. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you

WARNING:

This product can expose you to chemicals including cobalt lithium nickel oxide and nickel from lithium-ion batteries, bisphenol A (BPA) from plastic components, DEHP from PVC cables and wire assemblies, and lead and lead compounds from printed circuit boards and cable assemblies, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov



Caution hot surface

Battery Recycling

This product contains a lithium-ion battery. Do not dispose of this product in household waste. Please recycle responsibly. To find a battery drop-off location near you, visit batterynetwork.org or call 1-877-2-RECYCLE (1-877-293-2925)




Li-ion

Welcome...

to your new Power Bank!

This leaflet provides you with all the information you need to get the most from your wireless power bank.

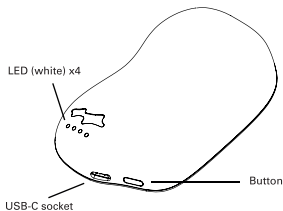

Button

- Double press to turn off the power bank
- Single press to turn on the power bank and the wireless charging
- Press and hold for 3 seconds to enter trickle charging mode, suitable for devices that need to be charged slowly with a small current via USB-C.

LED behaviour definitions

Status	LED behaviour
Battery level indication	4 levels indicating power remaining using the 4 LEDs; around 25%, 50%, 75% and 100%.
Charging the power bank	The LED light(s) will show the current battery level and then flash.
Battery fully charged	All 4 LEDs will light up. When the USB-C charging cable is removed, the LEDs will turn OFF.
Trickle charge	The LED lights scroll once every few seconds.
Improper wireless charging	When wireless charging is interfered with, such as when the power bank is near a metal part, the first and third LED indicators will flash.

Please note:

- When the Power Bank exceeds the temperature limit, the battery level indicator will turn off. Let the bank cool down before using it again.
- This wireless charger is not compatible with non-MagSafe phone cases.
- Do not use an adapter with an output of 5V/1A (5W) or less.
- While more convenient than wired charging, wireless charging is slower than conventional wired charging.
- High temperatures will reduce charging speed and restrict power. It is recommended that you charge your device in an environment with temperatures below 25°C / 77°F.
- Protective phone cases and the position of this device on your phone will affect the charging speed. The further it is placed from the center of the wireless charger, the slower the charging speed.
- To the maximum extent permitted by applicable law, SKYLARK Holdings, Inc. shall not be liable for any incidental, special, or consequential damages.