

70mm


User Manual

TIKI

Wireless Speaker & Lantern Light

User Manual

 ME25702

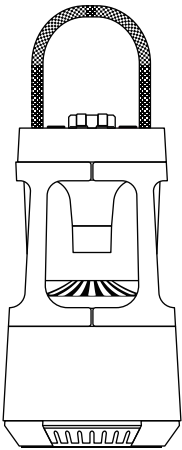

Wireless Speaker & Lantern Light

100mm

User Manual

CAMPING LIGHT OPERATION



 
- Long press the light power button to turn on or off the light.
 - On
 - Off
- Short press the light button to switch between cool light or warm light.
 - Cool White Light
 - Warm White Light
- Double click the light button to activate Sleep Mode (Light will gradually dim from bright to off over 30 minutes before turning off completely).
- Rotate Light Dimmer Switch to adjust the light brightness.
 - Increase Light Brightness
 - Decrease Light Brightness



Wireless Speaker & Lantern Light


User Manual

WIRELESS CONNECTION

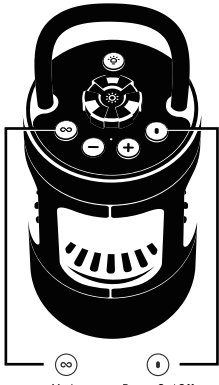

1. Long press the Power On/Off Button (Pairing status appears after power on).
2. Turn on Bluetooth on your device and select the speaker Bluetooth name in the list of nearby Bluetooth devices.
3. Your device is now connected to the speaker.

 Press the Mode Switch once to toggle between Bluetooth connection and SD card.




Wireless Speaker & Lantern Light

User Manual

TANDEM MODE

 1. With both speakers on at the same time, double-click on one of the speakers Mode Switch to enter TWS tandem mode.
2. Connect your device to the tandem mode speaker.

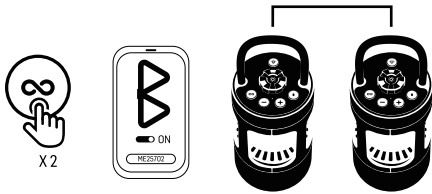

PLAY OPERATION

⏻	Long press: Power On/Off Short Press: Play/Pause
⏮	Long press: Next Song Short Press: Volume Up
⏭	Long press: Previous Song Short Press: Volume Down

Wireless Speaker & Lantern Light

User Manual

TECHNICAL SPECIFICATION

Speaker	Full Frequency Speaker Φ57MM
Radiation Plate	Bass Radiation Plate 50MM
Output Power	10W RMS
Frequency Response	70Hz~20kHz
Signal-To-Noise Ratio	>80dB
Charging Interface	Type-C
Battery Type	Li-Ion (3.7 4000mAh)
Charging Time	≈4H
Input Current	5V = 1A
Length Of Music Playback	≈8H (Volume 70%)
Lighting Duration	≈12H (70% Light Intensity)
Bluetooth	5.3
SD Card Format	MP3,WMA, WAV
Lighting Color Temperature	Warm Light 1800K / Cool Light 6500K
Ilumination	230 Lumen
Product Size	180 x 96x 96MM
Product Weight	556G

This device complies with Part 15 of the FCC Rules.
Operation is subject to the following two conditions:

1. This device may not cause harmful interference
2. This device must accept any interference received, including interference that may cause undesired operation.



Wireless Speaker & Lantern Light

User Manual

CAUTION

1. Do not expose this product to rain or humidity.
2. Do not disassemble, repair or modify this product.
3. Store and use the product at room temperature.
4. Do not drop the product to avoid damage due to falling.
5. Use only the correct charging cable rated for the voltage of the speaker to charge the power supply.
6. Unauthorized disassembly will void the warranty.
7. Prolonged exposure to high volume may cause hearing damage, avoid excessive volume.
8. There is a danger of explosion if the battery is not replaced properly and it should only be replaced with the same type or an equivalent type of battery.
9. Batteries should not be exposed to environments such as sunlight, fire or similar excessive heat.

 
PACKAGE CONTENTS



Wireless Speaker Lantern *1



Charging Cable *1



User Manual *1

Made in PRC

Wireless Speaker & Lantern Light

FCC Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.


Manuel d'utilisation

TIKI

Haut-parleur sans fil et lanterne lumineuse

Manuel d'utilisation

 
ME25702

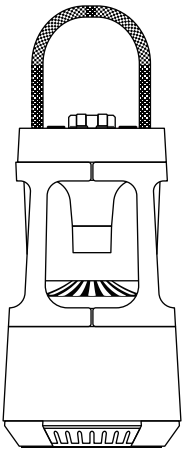


Haut-parleur sans fil et lanterne lumineuse

Manuel d'utilisation

 FONCTIONNEMENT DE LA LAMPE DE CAMPING

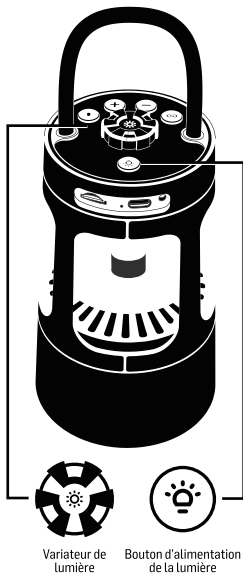


- Appuyez longuement sur le bouton d'alimentation de la lampe pour l'allumer ou l'éteindre.
 - Marche
 - Arrêt
- Appuyez brièvement sur le bouton de la lampe pour passer de la lumière froide à la lumière chaude, ou inversement.
 - Lumière blanche froide
 - Lumière blanche chaude
- Double-cliquez sur le bouton de la lampe pour activer le mode veille (la lumière s'atténue progressivement, passant de lumineuse à éteinte en 30 minutes avant de s'éteindre complètement).
- Tournez le variateur de lumière pour ajuster la luminosité.
 - Augmenter la luminosité de la lumière
 - Diminuer la luminosité de la lumière

 

Haut-parleur sans fil et lanterne lumineuse


Manuel d'utilisation

CONNEXION SANS FIL

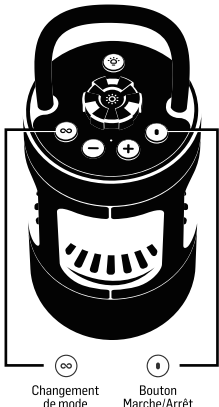

1. Appuyez longuement sur le bouton Marche/Arrêt (le mode d'appariage apparaît après la mise sous tension).
2. Activez le Bluetooth sur votre appareil et sélectionnez le nom du haut-parleur dans la liste des appareils Bluetooth à proximité.
3. Votre appareil est maintenant connecté au haut-parleur.

 Appuyez une fois sur le bouton de changement de mode pour basculer entre la connexion Bluetooth et la carte SD.




Haut-parleur sans fil et lanterne lumineuse

Manuel d'utilisation

MODE TANDEM

 1. Lorsque les deux haut-parleurs sont allumés en même temps, double-cliquez sur le bouton de changement de mode de l'un des haut-parleurs pour activer le mode tandem TWS.
2. Connectez votre appareil au haut-parleur en mode tandem.

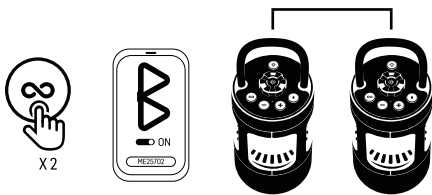

FONCTIONNEMENT DE LA LECTURE

⏻	Appui long : Marche/Arrêt Appui court : Lecture/Pause
⏮	Appui long : Chanson suivante Appui court : Augmenter le volume
⏭	Appui long : Chanson précédente Appui court : Diminuer le volume

Haut-parleur sans fil et lanterne lumineuse

Manuel d'utilisation

SPÉCIFICATIONS TECHNIQUES

Haut-parleur	Haut-parleur à pleine fréquence Φ57MM
Plaque de radiation	Plaque de radiation des basses 50 mm
Puissance de sortie	10W RMS
Réponse en fréquence	70Hz~20kHz
Rapport signal/bruit	>80dB
Interface de charge	Type-C
Type de batterie	Li-Ion (3.7 4000mAh)
Temps de chargement	≈4H
Courant d'entrée	5V = 1A
Durée de lecture musicale	≈8H (volume à 70%)
Durée d'éclairage	≈12H (intensité lumineuse à 70%)
Bluetooth	5.3
Format de la carte SD	MP3,WMA, WAV
Température de couleur de l'éclairage	Lumière chaude 1800K / Lumière froide 6500K
Luminance	230 Lumens
Dimensions du produit	180 x 96x 96MM
Poids du produit	556G

Cet appareil est conforme à la Partie 15 des règles FCC.

Le fonctionnement est soumis aux deux conditions suivantes :

1. Cet appareil ne doit pas provoquer d'interférences nuisibles.
2. Cet appareil doit accepter toute interférence reçue, y compris celles pouvant provoquer un fonctionnement indésirable.



Haut-parleur sans fil et lanterne lumineuse

Manuel d'utilisation

ATTENTION

1. Ne pas exposer ce produit à la pluie ou à l'humidité.
2. Ne démontez pas, ne réparez pas et ne modifiez pas ce produit.
3. Stockez et utilisez le produit à température ambiante.
4. Ne pas faire tomber le produit afin d'éviter tout dommage dû à une chute.
5. Utilisez uniquement le câble de charge approprié, compatible avec la tension du haut-parleur, pour charger l'alimentation.
6. Tout démontage non autorisé annulera la garantie.
7. Une exposition prolongée à un volume élevé peut endommager l'audition — évitez un volume excessif.
8. Il existe un risque d'explosion si la batterie n'est pas remplacée correctement. Elle ne doit être remplacée que par une batterie du même type ou d'un type équivalent.
9. Les batteries ne doivent pas être exposées à des environnements tels que la lumière directe du soleil, le feu ou toute autre source de chaleur excessive.

 
CONTENU DE L'EMBALLAGE



Haut-parleur sans fil / Lanterne *1



Câble de charge *1



Manuel d'utilisation *1

Fabriqu  en RPC

Haut-parleur sans fil et lanterne lumineuse

FCC Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.