

VIVITAR®

Earbuds

USER'S MANUAL: Item FBTWSFLK

Specifications

Bluetooth Version: 5.3
Transmission distance: Up to 10m
Charging Input: USB-C
Charging Time: Approximately 1-2 hours



The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Sakar International is under license. Other trademarks and trade names are those of their respective owners.

 
A Quick Look

LED Indicator



Earbuds

Multifunction Button (Touch Control)




LED Indicator


Charging Port

Charging Case

 Charging



 Insert one end of the included USB charging cable into the charging port on your case.



Insert the other end of the USB cable into a suitable USB charging adapter (not included).

 
Charging Case LED Indicator

Case Charging (Red Flashing): ●●●

Case Charged (Solid Red): ●●●


Earbuds Charging (Solid Green): ●●●

Earbuds Charged (OFF): ○○○




The LED Indicator will flash red while the case is charging and turn solid red when fully charged. If earbuds are charging inside, the indicator will turn green. When fully charged, the indicator will turn off.

 
Bluetooth Pairing



 
1. Remove the earbuds from the case, and they will automatically turn on.

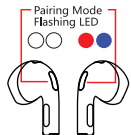

 2. In pairing mode, one earbud will flash red and blue while the other will be off.

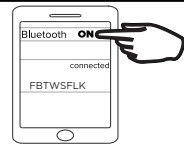

 
3. On your phone, go to the Bluetooth page in the settings app. Make sure Bluetooth is on before connecting to the available device, "FBTWSFLK".

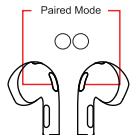

4. Both earbud's LED indicators will stop flashing once paired to your phone.

Controls

 
Note: The earbuds can be used independently. One earbud can be used when the other is off, as long as connected to Bluetooth




1. Press either earbud's Multifunction Touch Button to pause and play music.



 2. Press the left earbud's Multifunction Touch Button twice to return to a previous song on a track. Press three times to decrease the volume.



 3. Press the right earbud's Multifunction Touch Button twice to go to the next song on a track. Press three times to increase the volume.



4. Press and hold either earbud's Multifunction Touch Button for two seconds to activate voice assistant mode on a connected Bluetooth device if compatible.

 
Important Safety Precautions

When using your Earbuds and charging case, basic safety precautions should always be followed, including the following:

1. READ ALL INSTRUCTIONS BEFORE USING YOUR EARBUDS.
2. Never expose your earbuds to high temperatures, extreme cold, high humidity or any moisture or water.
3. In order to avoid the risk of electric shock, never attempt to open your earbuds or repair without the assistance of certified professionals.
4. Your earbuds are not to be used by children or the infirm without suitable adult supervision.
5. Always press all buttons carefully. Do not manhandle your earbuds.
6. Do not use your earbuds at temperatures under 32°F (0°C) or over 104°F (40°C).
7. Do not drop your earbuds, throw, or subject to strong impacts or physical trauma.
8. If you detect any abnormalities when using your earbuds, contact the manufacturer for support. In addition, do not continue to use your earbuds if you detect any smoke or fire.
9. This product is not intended for commercial use.
10. Unplug your earbuds when not in use for extended periods of time.
11. Please recycle or dispose of your earbuds properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of for further information.
12. Clean your earbuds using a soft cloth or paper towel. Do not use harsh chemicals when cleaning your earbuds, and never submerge your earbuds in water.


Using Your Earbuds: Additional Controls

End Call




Press either earbud's Multifunction button to answer and end a call.

 Reject Incoming Call



Press and hold either earbud's Multifunction button for 2 seconds to reject an incoming call.

 Power On/Off



Press and hold either earbud's Multifunction button for approximately five seconds to manually turn ON/OFF the earbuds.

Soft Reset

Place the earbuds into the case. Let the earbuds sit for approximately 5 seconds before removing. If a soft reset does not work, attempt a hard reset. A hard reset will remove all pairing information.

Hard Reset

1. Disconnect the earbuds from Bluetooth and place them into the charging case.
2. Take one earbud out and press the touch area four times.
3. Repeat step 2 for the second earbud.

One Year Warranty

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered by Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information:

Call 1-800-592-9541 in the U.S. or visit our website at www.vivitar.com.

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address to the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepaid.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in the portable exposure condition without restriction.

© 2026 Sakar International
195 Carter Drive
Edison, NJ 08817
Support: 800 592 9541
www.vivitar.com

FCC ID: 2AS31-FBTWSFLK