

106.17 mm



CAUTION

BATTERY WARNING:

- The device is equipped with an integrated lithium ion battery. The battery cannot be replaced. Do not attempt to remove the battery from the device.
- Do not dispose of in fire or expose to excessive heat.
- Do not crush, puncture, incinerate, or short circuit external contacts.
- Please recycle or dispose of the battery properly. Contact your local recycling facilities and/or the manufacturer for further information.

A line drawing of a pair of over-ear headphones. A red line points from the label "SOLAR PANEL" to the top of the headband. Another red line points from the label "CONTROL PANEL" to the side of the right earcup. Below the headphones is a detailed view of the control panel, which is a horizontal bar containing several controls. Red lines connect labels to these controls: "MIC" points to a small slot on the left; "VOICE ASSISTANT BUTTON" points to a large black circular button; "CHARGING PORT" points to a small oval port; "AUX PORT" points to a circular port; "NEXT TRACK/ VOLUME +" points to a small circular button; "PREVIOUS TRACK/ VOLUME -" points to a larger oval button with a "+" sign on the left and a "-" sign on the right; and "MULTIFUNCTION BUTTON" points to a circular port on the far right. At the bottom center, the text "LED INDICATOR" is present without a line pointing to a specific feature.

Insert the USB-C plug of the included USB-C charging cable into the charging port on your headphones.

Insert the other end of the USB cable into a suitable USB charging adapter.

 
When charging, the headphones' indicator light turns red. When charging by solar, the headphones' indicator light turns green. When fully charged, the light turns blue.

- Solar charging.
- Charging.
- Fully charged.

To avoid a complete discharge of the battery, make sure to charge and use your headphones at least once every six months.

After connecting the headphones, the indicator light will slowly flash blue.

Button	Function
Multifunction Button:	-Press and hold for 3-4 seconds to power ON/OFF the headphones. -Press to play/pause music. -Press to answer or end a call. -Press and hold to reject an incoming call.
Volume + Button:	-Press to increase volume. -Press and hold for 2 seconds to go to the next track.
Volume - Button:	-Press to decrease volume. -Press and hold for 2 seconds to go to the previous track.
Voice Assist Button:	-Press twice to activate voice assistant on compatible connected devices.



FCC Radiation Exposure Statement:
The device has been evaluated to meet general RF exposure requirement.
The device can be used in the portable exposure condition without restriction.

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser, must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address of the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepaired.