

TWS-11N

User Manual

TWS ANC Bluetooth Earphones

CONTENTS

Earbuds charging case \* 1PCS

User manual

Earbuds \* 1 Pair

Ear tips \* 3 Pair ( S / M / L )  
\* Earbuds wear L size by default

Type-C charging cable \* 1PCS

PRODUCT INTRODUCTION

Led indicator

Touch panel

Microphone

Charging pins

Charging indicator

Charging port

Multi-function button

| Specification         |                                                    |
|-----------------------|----------------------------------------------------|
| Pairing name          | TWS-11N                                            |
| Bluetooth version     | V5.0                                               |
| Battery               | 50mAh ( ea ch earbud )<br>500mAh ( charging base ) |
| Playtime              | 7.5H (ANC off)<br>7H (ANC on)                      |
| Call time             | 6H (ANCOff)<br>5H (ANCon)                          |
| Earbuds charging time | 1.5H                                               |
| Case charging time    | 2H                                                 |
| Standby time          | 180days                                            |
| Charging port         | Type c                                             |

OPERATING

Left Earphone

Right Earphone

1x

2x

2s

Answer

Hang up

Voice assistant

Reject the Call

Power On/Off

Both earbuds are in the charging case, open the cover, TWS-11N turns on automatically.  
Put earbuds into the charging case, TWS-11N LED indicator blink in red, TWS-11N turns off automatically.

Answer/Hang up/Reject the Call

In incoming call, click L or R earbud to answer the phone call.  
In coming call, double-click L or R earbud to reject the call.  
When in calling, double-click L or R earbud to hang up the phone call.

Voice assistant

Long press 2 seconds L earbud to turn on voice assistant.

OPERATING

Left Earphone

Right Earphone

2x

3x

2s

Play/Pause

Last song

ANC

ANC Mode

Next song

Transparency Mode

Play/Pause music

When playing music, double-click L or R earbud to play/pause music.

Last song/Next song

When playing music, three-click L earbud to return to the previous song.  
When playing music, three-click R earbud to next song.

ANC mode

In normal mode, hold R earbud for 2 seconds to turn on ANC.

GET STARTED

Take out " TWS-11N " from the charging case,both of L&R earbuds turn on and pair with each other automatically. Main device indicator blinks in red and green alternately.  
Activate the Bluetooth in your device and click " TWS-11N " on the Bluetooth list, then you will hear "connected".

Note\*

The earbuds support single use, If your earbuds don't pair with each other normally, put back both earbuds to charging case, open the cover and hold the multi-function button of charging case 2S until both indicators blink in red and blue alternately, then the main device indicator blinks in red and blue alternately, then follow above steps again.  
After first connection successfully, once you open the cover of charging case, the device will reconnect automatically.

Bluetooth

TWS-11N

RESET

Clear pairing records

Put back both earbuds into the charging case, open the cover and hold the multi-function button of charging case 10S until charging case four LED indicator blink 10 times at same time, it means clear pairing records successfully.

After clearing pairing records successfully, open the cover and hold the multi-function button of charging case 2S the left and right indicators blink in green and blue alternately to pair both earbuds, then follow the Get Started to connect with your bluetooth device.

CHARGING

Please use the provided charging cable to recharge the earbuds by the charging case.  
Charging case LED indicators in white when charging.  
After full recharged, 4 LED indicators on charging case turn off.

LED

25%

50%

75%

100%

LED

25%

50%

75%

100%

ACCESSORIES

Wear the right size ear caps for your ears.  
Adjusting earbuds correctly achieves the best noise reduction performance and sound quality.

NOTES

1. Avoid prolonged exposure to excessive volume that may cause noise-induced hearing impairment. Turn the volume down before putting on your earphones, then adjust it to the right volume.

2. Don't use earphones while driving or riding your bike

3. Stay away from sharp edges, uneven surfaces, metal parts, and anything that could damage the earphones.

4. Do not modify, repair or remove earphones without professional guidance.

5. Do not use corrosive or volatile liquid to clean the earphones.

6. Do not use earphones in dangerous environments.

7. This earphones contains small parts, which may cause choking hazard. Please keep away from children and pets to prevent accidents.

8. Battery warning:  
\*Improper use of the battery may cause fire or chemical burns.The battery may explode in case of damage.  
\*The battery can only be charged using an adapter specially provided for this product.  
\*Please dispose of batteries according to local regulations.Recycle if possible.Do not dispose of batteries as household waste or throw them into a fire, lest they explode.  
\*Please refer to the user manual for instructions on the charging status indicator.

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.  
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
-- Reorient or relocate the receiving antenna.  
-- Increase the separation between the equipment and receiver.  
-- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.  
-- Consult the dealer or an experienced radio/TV technician for help  
This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1)this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.