

Truck diagnostic Tool

CONTENTS

1	PRODUCT OVERVIEW	3
2	PRODUCT STRUCTURE	4
3	HOST CONFIGURATION	5
4	POWER ON/OFF	6
	1) <i>Power on</i>	6
	2) <i>Power off</i>	6
5	VEHICLE DIAGNOSTIC PREPARATION	7
6	INTRODUCTION OF EACH FUNCTION MENU	9
7	DIAGNOSTIC FUNCTION	12
8	DPF REGENERATION	17
9	PIN DETECT	18
10	DATA MANAGEMENT.....	19
11	DIAGNOSTIC SOFTWARE UPGRADE.....	19
12	SETTINGS.....	20
	12.1 Wi-Fi Connection.....	20
	12.2 Brightness.....	21
	12.3 Volumes.....	21
	12.4 User Information and Activation.....	21
	1) <i>Activation</i>	21
	2) <i>User Info</i>	23
	12.5 Storage.....	23

12.6	General.....	24
1)	<i>Language</i>	24
2)	<i>Unit</i>	24
3)	<i>Date &Time</i>	25
4)	<i>About</i>	25
5)	<i>Reset</i>	26
13	FAQ (FREQUENTLY ASKED QUESTIONS).....	27

1 Product Overview

 
ANCEL HD series products are commercial vehicle diagnostic tools based on special Android tablet.

This product integrates commercial vehicle OBD standard diagnostic protocols, including SAE J1939, SAE J1708, SAE J1850 PWM, SAE J1850 VPW, ISO 14230-4, ISO 9141-2, ISO 15765-4 and ISO 27145-4. Each model of product has its own functional characteristics, such as DPF, service reset, or specific vehicle models. Please refer to the product model you purchased for details. The operation interface is very clear, which makes it convenient for users to diagnose commercial vehicles.

The product supports online upgrade of diagnostic program and diagnostic data.

Tips: ANCEL HD series products include HD7000 and later models.

2 Product Structure

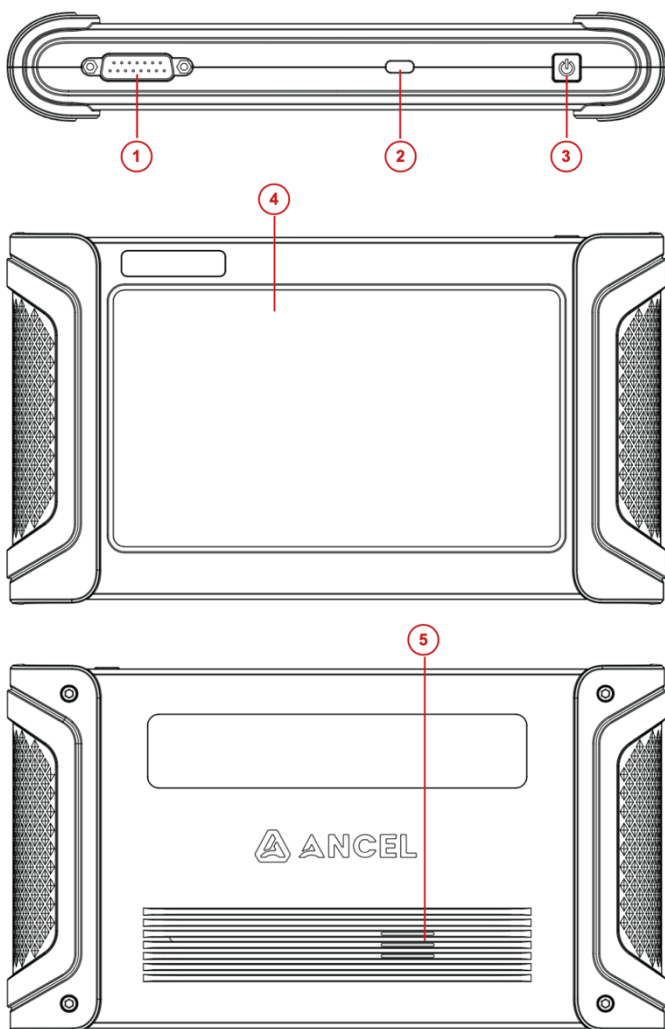

Serial No.	Name	Function Description
①	Main Testing Cable	Connection interface connects vehicle communication cable during vehicle diagnosis
②	USB Port	Used to connect to an external computer, Or power on using a TYPE C cable to upgrade the vehicle's software and OTA upgrade system.
③	Power on/off	After connecting the Main Testing Cable to the vehicle, press and hold the power button for 3 seconds to turn it on or off.
④	Touch screen	Display content and touch operation area
⑤	Speaker	Device sound output

3 Host Configuration

CPU	Quad-Core ARM Cortex-A7
RAM	2GB
Flash	32GB
Display	7 inches LCD, resolution ratio 1024*600
TP touch screen	Capacitive screen
WIFI	802.11b/g/n/a/n/ac/ax 2.4GHz/5GHz
Horn	Support
USB interface	Type C interface

Diagnose interface	DB15 interface
Operating voltage	DC 9V~36V/1A (DB15 interface) DC 5V/2A (Type C interface)
Operating temperature	0°C~50°C
Storage temperature	-10°C~60°C

4 Power On/Off

1) Power on

The device can be powered on in the following ways:

Vehicle power on: plug one end of the main diagnostic test line into the DB-15 interface of the device, and the other end into the diagnostic interface of the vehicle, press and hold the power button for 3 seconds to turn it on. If it doesn't start up, it may be that there is no power supply for the vehicle diagnostic seat, and the device can be powered by the cigarette lighter or battery clamp.

Power on the power adapter: plug one end of the main diagnostic test line into the DB-15 interface of the device, connect the power adapter, press and hold the power button for 3 seconds to turn it on.

Note: the voltage of the power supply should be within the scope of application of the product equipment. If it is beyond the scope, the product may be damaged.

2) Power off

Before shutdown, please stop all diagnostic items and return

back to the main interface.

Long press the power button for 3 seconds and then it will shut down automatically, and then pull out the diagnostic main test line from the diagnostic interface of the vehicle.

5 Vehicle Diagnostic Preparation

The diagnostic program establishes data connection through the vehicle electronic control system connected with the equipment, which can read the vehicle diagnostic information, view the data flow, and perform other functions. For details of the functions, please refer to the model which you purchased.

To establish good communication between the diagnostic program and the vehicle, the following operations need to be performed:

- 1) Turn off the ignition;
- 2) Find the diagnostic interface of the vehicle: it is usually located on the driver side; If the diagnostic interface is not found, please refer to the vehicle maintenance manual.
- 3) Insert one end of the diagnostic main test line into the device DB-15 connector and tighten the retaining screws. The other end is connected to the vehicle's diagnostic interface.

Note: Before the equipment is connected to the vehicle, it is necessary to judge whether the diagnostic seat of the vehicle is a standard OBD-II interface or a non-standard OBD-II interface.

 
- The vehicle compatible with OBD-II management system only needs to use the integrated main test line OBD connector to connect with the vehicle diagnosis seat and provide power;
- For vehicles that are not compatible with the OBD-II management system, the corresponding connector should

be selected; Some vehicles need to be powered by other vehicle power sources.

The following is an operation description of these two connection modes.


1) Connection of standard OBD-II interface

The vehicle connected with standard OBD-II interface only needs to use the integrated main test line OBD connector, and no other connectors are needed, as shown in the figure:

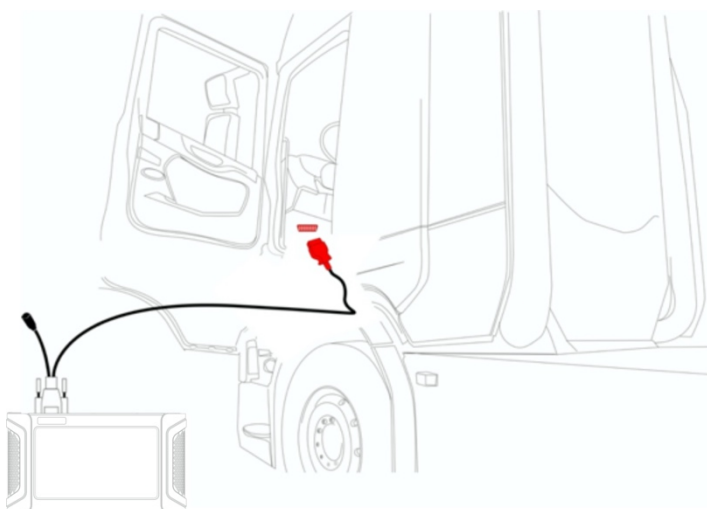

2) Connection of non OBD-II interface

 Vehicles with non OBD-II interface need to connect the main test line with the corresponding special connector, as shown in the figure:

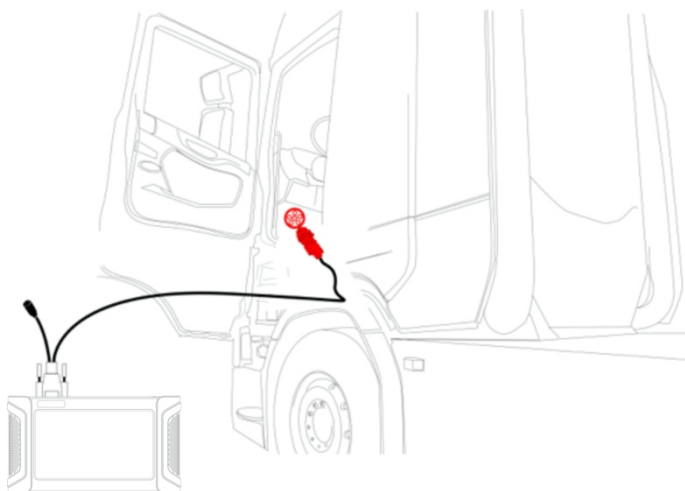

Note: at this time, the equipment is powered by the vehicle diagnosis seat, and the equipment starts automatically. If not, it may be that the vehicle diagnosis seat has no power supply, and the equipment can be powered by the cigarette lighter or battery clip.

6 Introduction of Each Function Menu

After the system is started, the main menu of function will be entered. The main menu of each model of product will be slightly different. Please refer to the display of the model you purchased.

- 1) Toolbar (see Table 1)
- 2) Function main menu (see Table 2)

Table 1: Toolbar

Icon	Function name	Function description
------	---------------	----------------------

	Refresh	Refresh upgrade menu
	Home	Return to the main interface of the system
	Screenshot	Capture current screen picture
	Test report	Used to save test data during diagnosis (can be viewed in data management menu)
	Feedback	Used to report the problem to the company's service system (need to connect to the network) when the system cannot be accessed during the diagnosis process
	Edit	Used to edit files, lock, unlock or delete files
	Added	Used to add feedback information
	WIFI	WIFI connection network
	Brightness	Used to adjust the brightness of the device screen
	Volume	Used to adjust the volume of the device

	User info	Used to view device status and user information
	Data cleaning	Used to remove useless data from the device
	General	Used to set device language, unit and time, view device information and restore factory settings

Table 2: Function main menu

Icon	Function name	Function description
	Diesel OBD	Diagnostic procedure: Diesel OBD, see section 5 for details
	OBD-II	Diagnostic procedure: OBD-II, see section 5 for details
	Model diagnosis	Diagnostic procedure: Classified by vehicle brand
	Engine diagnosis	Diagnostic procedure: Classified by engine brand
	Model diagnosis	The diagnosis procedure of pick-up trucks
	Model diagnosis	The diagnosis procedure of construction machinery vehicles
	DPF	DPF regeneration
	Service Reset	Reset the service lamps on the instrument cluster.


	Tools	(Pin Detect)For the measurement of pin voltage of diagnostic interface, see section 6 for details
	Data management	For browsing and managing saved data files, see section 7 for details
	Update	For online upgrade of system software and vehicle software, see section 8 for details
	Settings	Set and view system information, see section 9 for details

7 Diagnostic Function


Take 【HD OBD】 as an example;

1) Click 【HD OBD】 menu enter the diagnosis interface.

 
Note: The main menu of each model of product will be slightly different. Please refer to the display of the model you purchased.

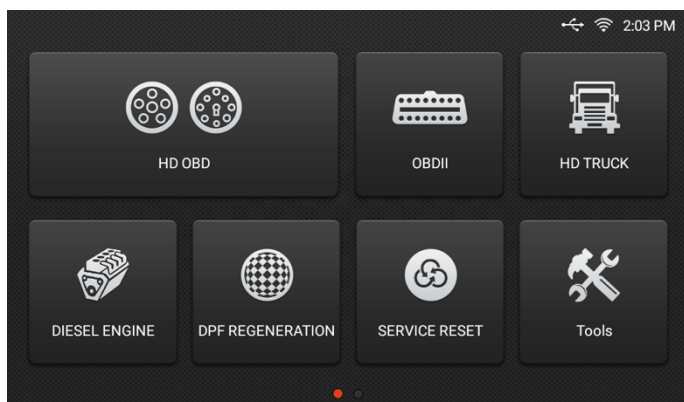

 
2) Select connector according to the specific situation, such as **【Diesel6&9PIN】** ;

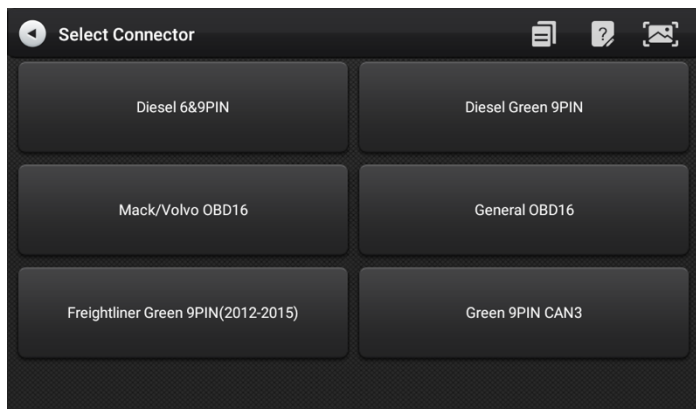

 
3) Select the required diagnostic method, such as **【Standard protocol(Fast Scan)】** ;

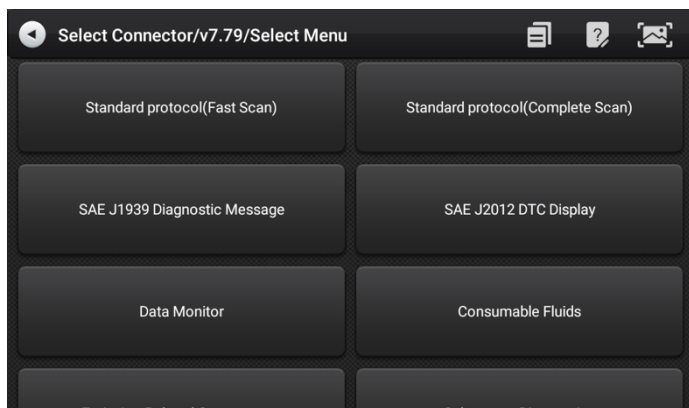

 
4) Click **【Start test】**

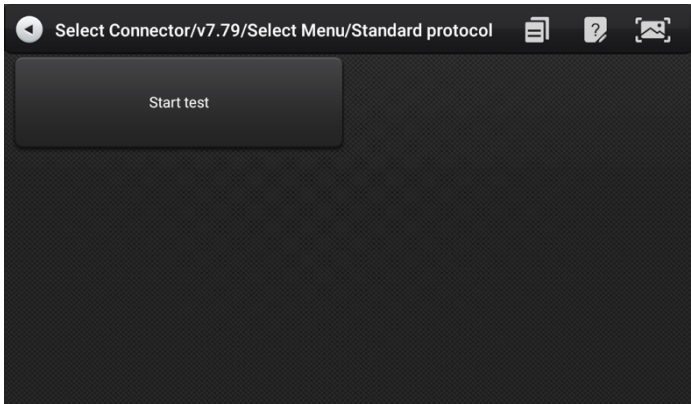

 
5) Select all or select the system that needs to be scanned.

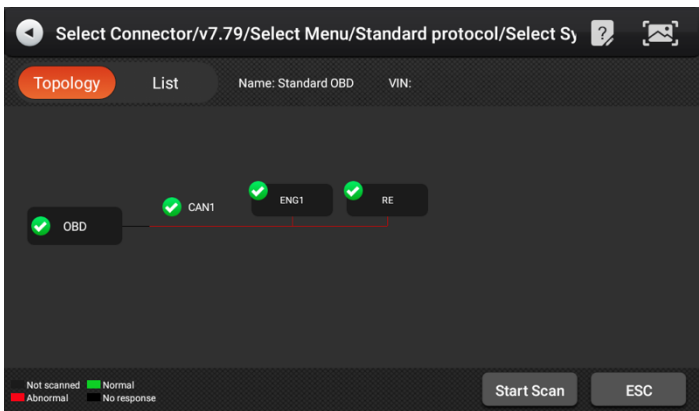

 
6) Click 【Start Scan】

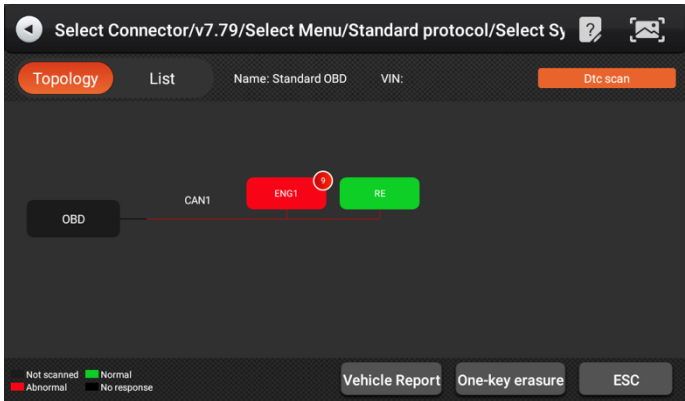

 7) Click **【ENG1】** to view the fault code information.

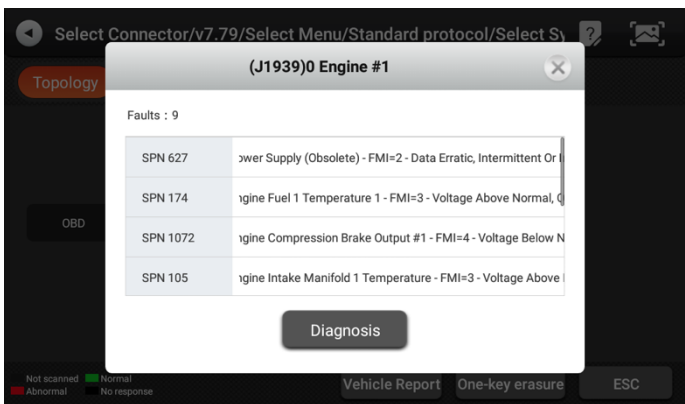


 8) Click **【Diagnosis】** Enter diagnosis home page.

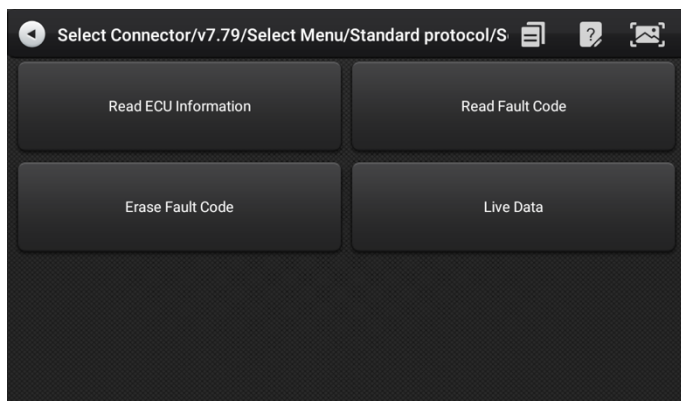


The main diagnostic interface usually includes the following options:

 ECU Information: Read and display the control system module information detected from ECU.

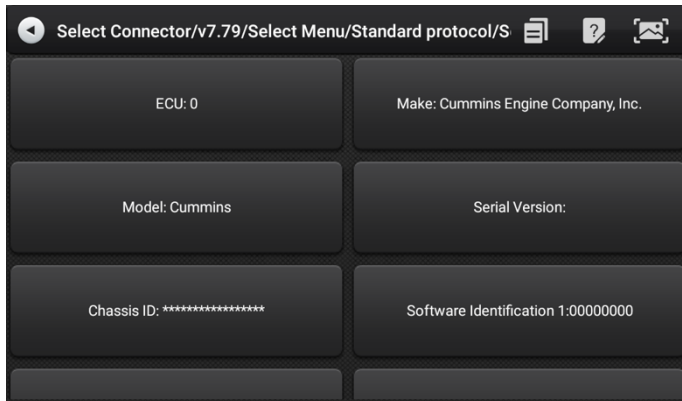


 Read Fault Code: Read the fault code information retrieved from the vehicle system module.

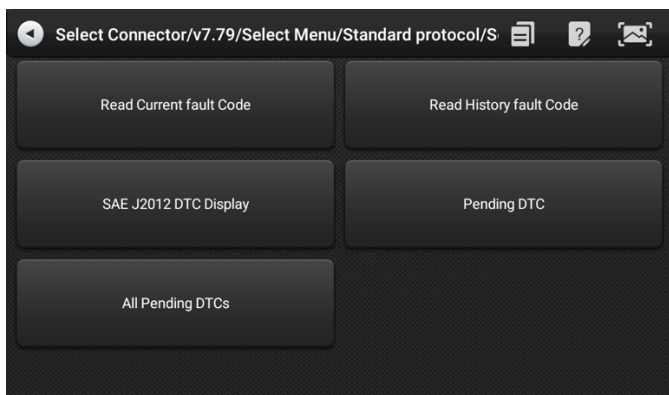

Erase Fault Code: Clear the fault code and freeze frame data retrieved from the vehicle system module

 Live Data: Read and display the real-time operation parameters of the current system module

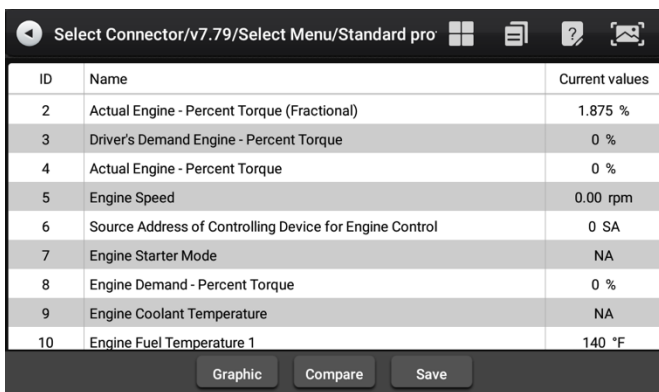


ID	Name	Current values
2	Actual Engine - Percent Torque (Fractional)	1.875 %
3	Driver's Demand Engine - Percent Torque	0 %
4	Actual Engine - Percent Torque	0 %
5	Engine Speed	0.00 rpm
6	Source Address of Controlling Device for Engine Control	0 SA
7	Engine Starter Mode	NA
8	Engine Demand - Percent Torque	0 %
9	Engine Coolant Temperature	NA
10	Engine Fuel Temperature 1	140 °F

Graphic Compare Save

8 DPF Regeneration

 Select **【DPF REGENERATION】** in main menu, the screen will display the vehicle model list and then operate according to the screen prompt.

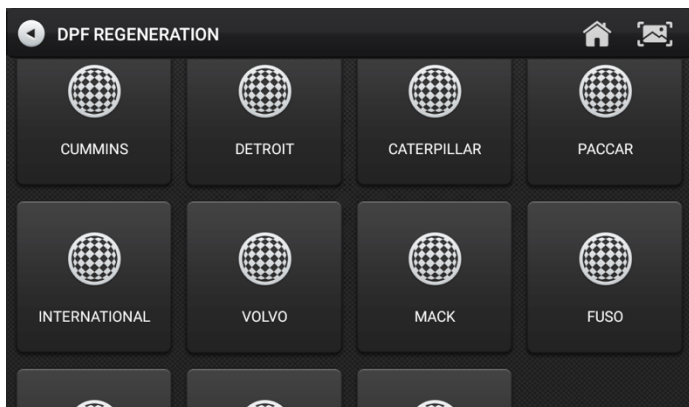

9 Pin Detect

 
This function mainly measures the voltage of 16 PIN of OBD diagnostic interface, and judges the pin position of K- line and CAN line.

After connecting the OBD interface of vehicle, click the main interface **【Tools】** to select pin detection. The program automatically measures the 16pin voltage of OBD diagnosis interface, and judges the pin position of K-line and can line, as shown in the figure below:




10 Data Management

【Data Management】 The function is used to save and view test reports, screenshots and problem feedback files. Most of the files are generated by executing the toolbar operation of the vehicle diagnosis interface.

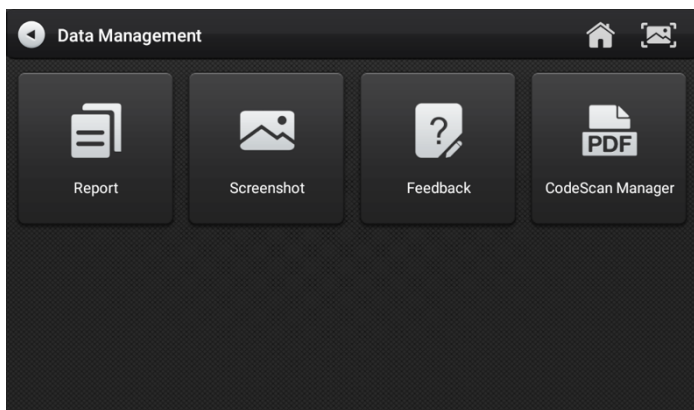

11 Diagnostic Software Upgrade

 By connecting the device to the wireless network, the diagnostic software can be upgraded and the product function can be improved in time. Open 【Update】 in the function main menu, and the system will automatically search for the latest update program, as shown in the figure below. Click 【Update】 to upgrade the model and other applications to the latest version.

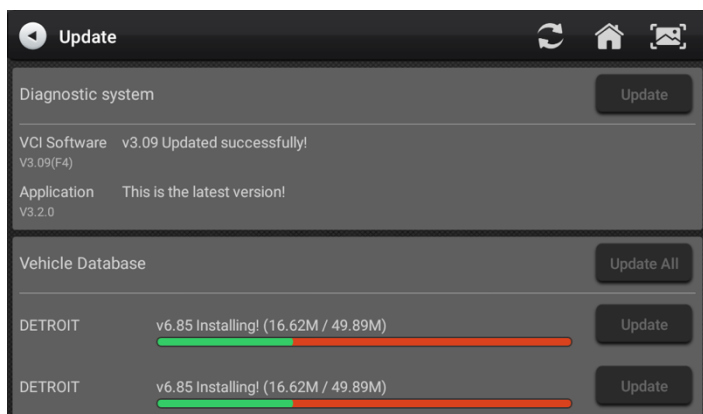


12 Settings

Select **【Settings】** from the main menu to open the setting interface, where you can adjust the following system settings.

12.1 Wi-Fi Connection

 The device supports wireless network connection for activation and diagnosis software upgrade.

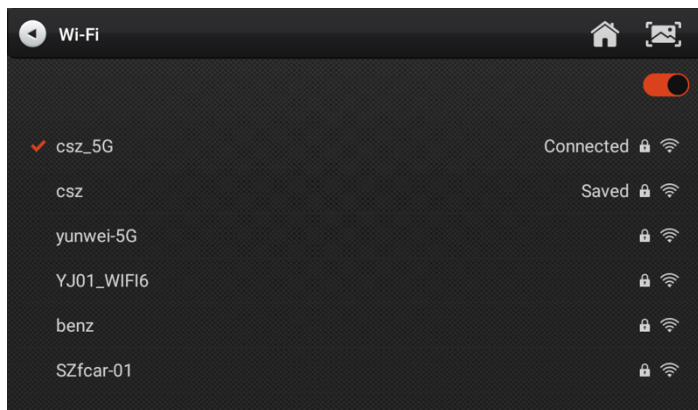


12.2 Brightness

The device supports screen brightness setting, please adjust it according to your adaptive brightness.



12.3 Volumes

 The device supports volume adjustment.


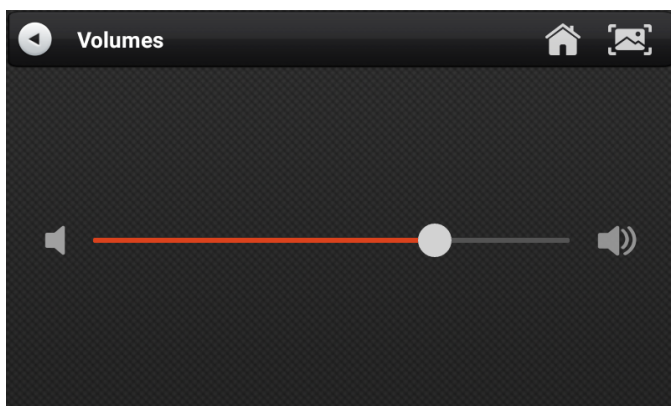



12.4 User Information and Activation

1) Activation

The products are not activated when they leave the factory.
Connect the Wi-Fi network to enter the setting, and click
【Activation】 to activate the machine.

   
Note: Please ensure that the device is connected to an
effective Wi-Fi network before performing the activation
operation.

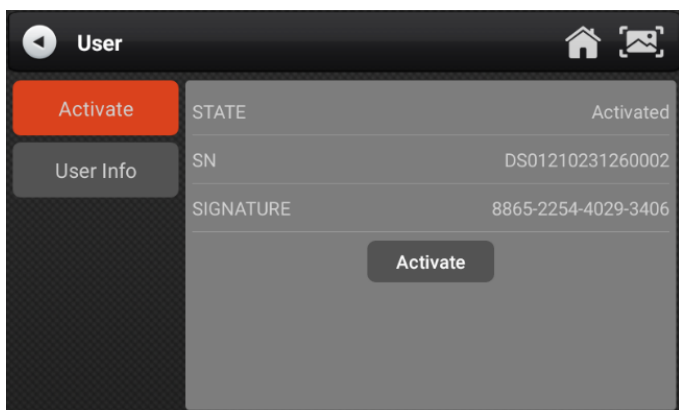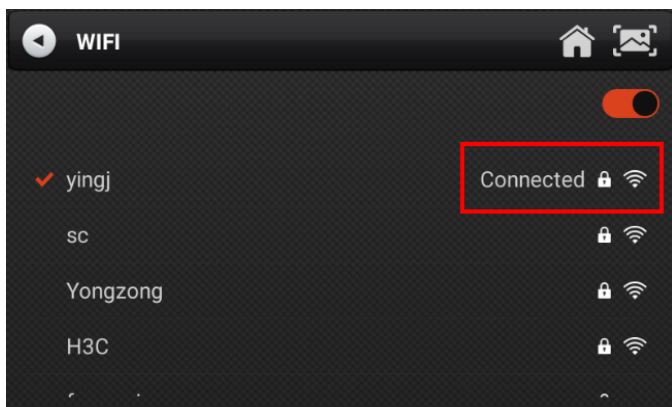

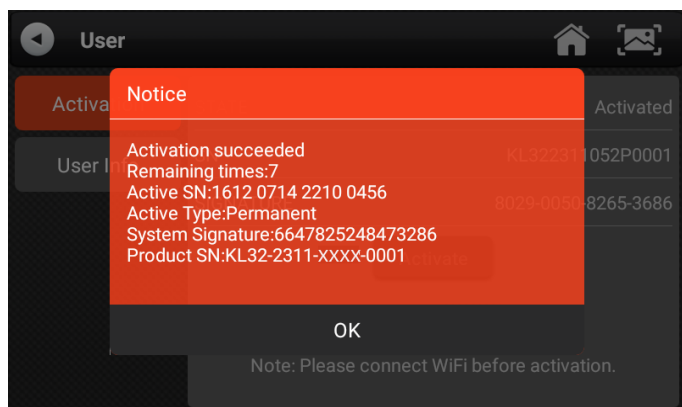


2) User Info

 Set your personal information: name, telephone, email, address, etc.

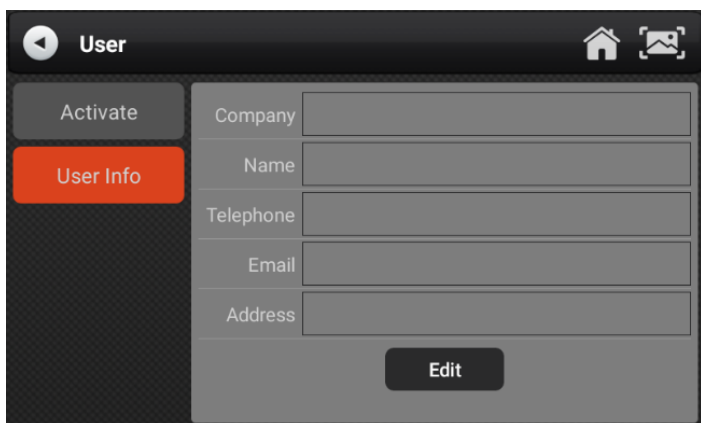

12.5 Storage

 Cleaning up useless data with one click, freeing up more space and cleaning up regularly will help the system run more stably.

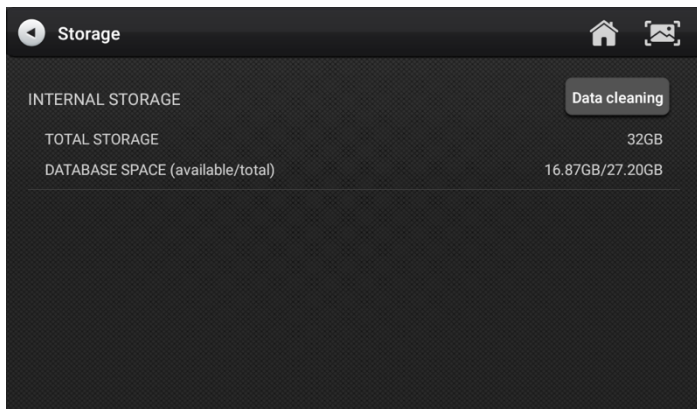

12.6 General

1) Language

 
Please select settings based on the language you support for the model you purchased.



2) Unit


This option can set the data flow unit in the diagnostic equipment software. Please select metric system or English

system as required.

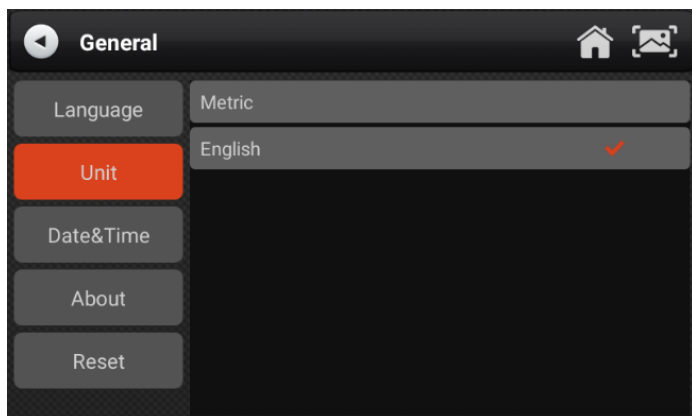

3) Date &Time

 
This option can set the date / time of the device. The default is automatic network synchronization update, or it can be set manually.

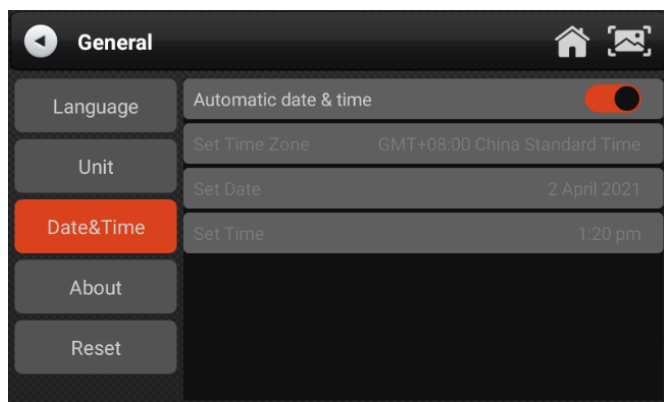

4) About


This option is used to look up the device model, version, serial

 number, etc.

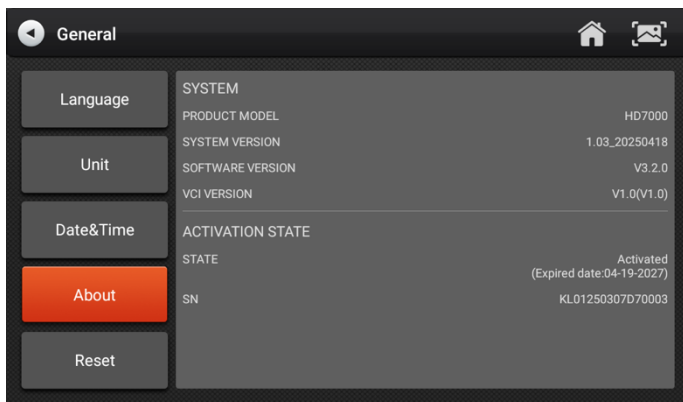

5) Reset

 This option can restore the original settings of the device, which will delete all the data stored in the device, including the activation information and model data. You need to re-connect the network to activate and download the model data package.

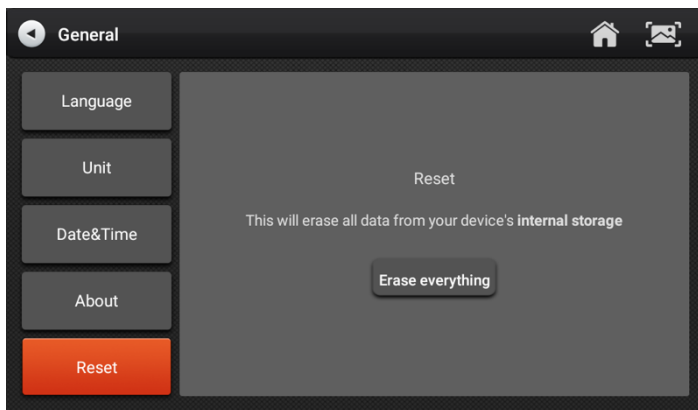

13 FAQ (Frequently Asked Questions)

Here are some frequently asked questions and answers.

Question: I cannot activate and register the tool.

Answer: There is no need to register the machine. If your activation was failed, please kindly check your network.



Question: What does the Simulate and DEMO menus mean?

Answer: Simulate and DEMO are both DEMO menus, not diagnosis function menus. The information in these menus was collected according to the actual vehicle diagnosis in the past, just for better understanding of product functions for users.

Question: Will it work on new (2018) freight liner with the new green connector?

Answer: Yes. The machine has already included new green 9pin connector.

Question: I can't diagnose my vehicle with the tool. It shows "ECU no response".

Answer: Please do a voltage test via [pin detect]. If the voltage is abnormal, please check the hardware first.

Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

ISED Statement

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

Déclaration ise

Cet appareil contient des émetteurs/récepteurs exemptés de licence qui sont conformes aux RSS exemptés de licence d'innovation, sciences et développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes:

1. Cet appareil ne peut pas causer d'interférences.
2. Cet appareil doit accepter toute interférence, y compris les interférences qui peuvent causer un fonctionnement indésirable de l'appareil.

For Receiver:

This device meets the exemption from the routine evaluation limits in section 6.3 of RSS 102 and compliance with RSS 102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

Cet appareil satisfait à l'exemption des limites

d'évaluation de routine de la section 6.3 du RSS 102 et conformité au RSS 102 exposition aux RF. Les utilisateurs peuvent obtenir de l'information canadienne sur l'exposition aux RF et la conformité.

This equipment complies with Canada radiation exposure limits set forth for an uncontrolled environment. The device is installed and operated without restriction.

Cet équipement est conforme Canada limites d'exposition aux radiations dans un environnement non contrôlé. Die Installation und der Betrieb der Ausrüstung sind uneingeschränkt.

For Transmitter:

This device meets the exemption from the routine evaluation limits in section 6.3 of RSS 102 and compliance with RSS 102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

cet appareil est conforme à l'exemption des limites d'évaluation courante dans la section 6.3 du cnr - 102 et conformité avec rss 102 de l'exposition aux rf, les utilisateurs peuvent obtenir des données canadiennes sur l'exposition aux champs rf et la conformité.

This equipment complies with Canada radiation exposure limits set forth for an uncontrolled

environment. The device is installed and operated without restriction.

Cet équipement est conforme Canada limites d'exposition aux radiations dans un environnement non contrôlé. Die Installation und der Betrieb der Ausrüstung sind uneingeschränkt.

Certification

This product has been inspected and certified to meet the company's quality standards.

Product name	Truck Scanner
Product serial number	
Date of production	
Inspector	

Warranty card

Product name	Truck Scanner
Product serial number	
Purchase date	

Company name: _____

User address: _____

Contact person: _____

Contact number: _____