

DISPLAYS2GO



User Manual

43" Digital Podium Android 14 OS

SKUs:DE043NL14, DE043NLB2, DE043NLT

Version 1.0

FCC ID: 2ASCB-DE043NL14

This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions:
(1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications to this equipment not approved by the party responsible for compliance could void the user's authority to operate the equipment.



Thank you

for partnering with Displays2Go.



Scan the QR code to access product resources and view warranty details.

It's our mission to bring your brand vision to life. This digital signage was thoughtfully designed and carefully manufactured by our expert team to ensure your brand shines. Our Quality Assurance team inspects all electronics during assembly process to assure reliable operation.

Have questions or need assistance? We're here to provide clear guidance and dependable support throughout the life of your product.



Connect with Us

 844-221-3393

 info@displays2go.com

Table of Contents

BEFORE USE	
	Safety Information 4
	Packing List 7
	Product Diagram 7
OPERATION	
	Power 8
	Remote Control 9
	Onscreen Navigation 10
	Quick Start Guide for Android 14 OS 11
	HDMI Connection 12
	Android System Settings 12
APPLICATIONS	
	Home Screen Applications 15
	Google Account 15
	Fully Kiosk 16
	DIVIEX 17
	File Explorer 22
	System Assistant 23
REFERENCE	
	Technical Specifications 26
	Care & Cleaning Guide 29
	Firmware Updates 30
	Troubleshooting Guide 31
	Names and Contents of Toxic and Hazardous Substances or Elements in the Product 33
	FCC Compliance Notice 34

Before Use

Safety Information

Thank you for purchasing this high-performance digital signage from Displays2Go. We have considered the factors to ensure personal safety in product design and have tested rigorously at the factory. However, improper installation and use may result in electric shock and fire.

To safely use, maximize performance of the unit and extend the life of the product, please read and follow all instructions carefully before using the product. Keep the instructions for future reference.

We strongly recommend using a surge protector, or a power strip with internal circuit breaker to prevent damage to the digital signage.

		
Warning May cause personal injury or death	Prohibited The operation is prohibited.	Caution May cause damage or property loss

 **CAUTION:** Turn off the Digital Signage immediately, pull the plug from the power outlet, and schedule professional maintenance quickly in the case of any of the following:

- Power outage or unstable voltage.
- Abnormal sound or smell from the unit.
- AC power cord is damaged.
- Digital Signage is damaged due to drop, knock or impact.
- Any liquid or foreign matters fall into the enclosure.

 **Warning:** If coal gas or other flammable gas leaks, do not pull out the plug of the LCD digital signage or other electrical appliances; instead, turn off the gas valve immediately, and open the doors and windows quickly.



WARNING

- Cut off the power supply before connecting or disconnecting any cables.
- Do not place the Digital Signage in any instable positions to prevent damage or fire.
- The openings in the enclosure are designed for ventilation and cooling, to ensure long time reliable running of components inside the enclosure and prevent overheating. Do not block the openings when placing the unit.
- Do not place the Digital Signage in environments subject to conditions such as:
 - Direct strong sunlight, moisture, extreme temperature or too much dust,
 - Close to flammable or explosive materials, or flammable or corrosive gases.
 - Do not use damaged or inappropriate power outlets and ensure that the plugs and outlets contact properly.
 - Do not let dust or metal deposits adhere to the plugs and outlets.
- Do not damage the power cords:
 - Do not modify the power cords,
 - Do not place heavy objects on the power cords,
 - Keep the power cords away from heat source,
 - Do not pull on the cord to remove the plug.
 - Do not connect too many plugs to one outlet in parallel, or else it may cause fire due to excessive power consumption.
- Do not approach the Digital Signage with open flame (e.g. a lighted candle), or else it may cause electric shock or fire.
- Do not put any sharp objects, metal or liquid into the vents or let them touch the signal terminals to avoid short circuit, product damage, and electric shock.
- Do not touch the plugs with wet fingers, or else it will cause electric shock.
- Do not use the Digital Signage in stormy weather, especially when there is lightning. Instead, please disconnect the power and antenna plugs to avoid lightning strike.
- Do not disassemble the Digital Signage without permission, or else it may cause electric shock or fire. Please ask qualified technician for repair.



CAUTION

- Do not let children climb onto the Digital Signage.
- Keep small parts away from children to prevent them from swallowing.
- If the Digital Signage won't be used for a long time, turn it off and pull out the power plug.
- To adjust the position of the Digital Signage, please disconnect all power cords and move slowly to avoid tip over.
- Do not scratch or knock the unit with hard object.
- Do not twist and squeeze the unit.
- Do not turn on the unit immediately when it is moved from a place with low temperature to high temperature to prevent condensation or malfunction.
- Before cleaning the Digital Signage, please pull out the power plug and wipe with soft cloth.
- Do not use industrial chemicals, prevent foreign matters from entering the machine. Improper cleaning (such as cleaning solution, water) may damage the product, erase the printed information, and even cause damage of the components if fluid flows in, resulting in machine failure.
- If the unit displays the same screen for a long time or the moving picture has fixed text or icon, it can leave ghosting on the screen and won't disappear when the unit is turned off. This is normal and isn't covered by the warranty.
- The power of the Digital Signage can be cut off by pulling out the plug. Unplug device to disconnect from power.
- If the LCD screen ruptures and the liquid splashes on the skin, please rinse for 15 minutes with clean water immediately, and consult your doctor.
- When carrying the Digital Signage with hands, grab and hold the edges. Do not apply pressure to the panel.
- Use the Digital Signage properly: Use in proper lighting conditions, insufficient lighting or long time watching can impair your eyesight.
- Insert the plug into the outlet properly, or else it may cause sparks and fire.

The technical specifications printed herein and on the packaging are subject to change without prior notice. The manual may be slightly different from actual operation, and the latter is applicable.



DISPLAYS2GO

Connect with Us

 www.displays2go.com

 844-221-3393


 info@displays2go.com

Packing List

Name	Qty.	Name	Qty.
Digital Podium	1	Power Cord	1
Remote Control	1	User Manual	1



*Refer to assembly instructions.

Product Diagram

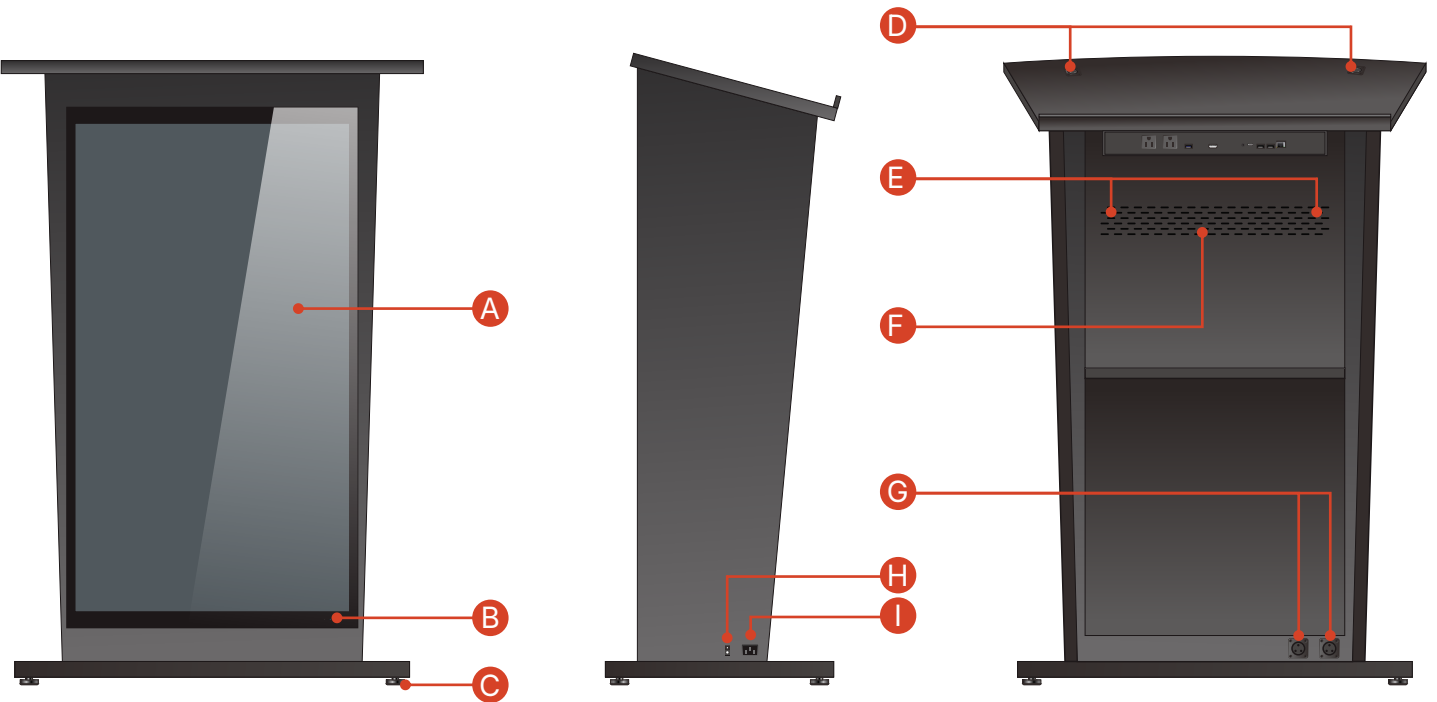

Label	Name	Label	Name	Label	Name
A	LCD Screen	D	XLR Inputs	G	Dual XLR Outputs
B	Remote Sensor	E	Speakers	H	On/Off Switch
C	Rubber Pad	F	Heat Vent	I	Power Outlet

  Ports and Connectors


							
POWER PORT	AC Outlet	USB 3.0	HDMI INPUT	AUDIO OUTPUT	TYPE-C	USB 2.0 x2	RJ45(ETHERENT)

Operation

Power

Connect to Power

Insert the power cord into the port on the unit, then plug into an outlet. We strongly recommend the use of a power strip with an internal circuit breaker to prevent damage.

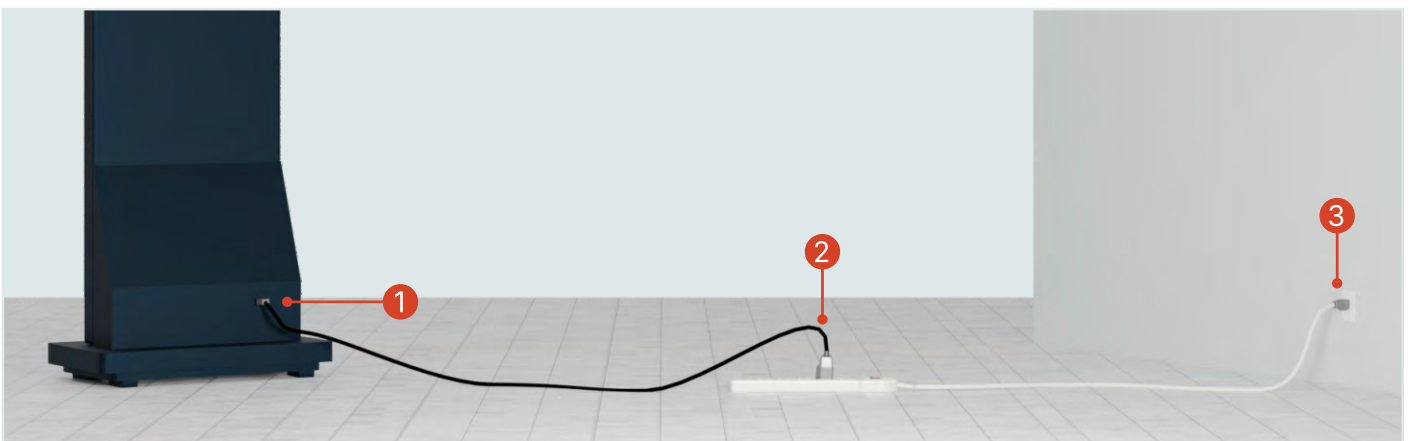

● NOTE: Always disconnect from power during assembly or disassembly!

Power On/Off


- Start up by connecting the device to power, then flip power switch to ON.
- To power on or off , use the remote control or the Status Bar.
 - Press the Power button on the remote control, then OK to confirm shutdown.
 - OR swipe down from the top of the screen to show the Status Bar. Press the Power icon to restart or power down the device.
- To shut down , flip power switch to OFF.

● NOTE: The unit cannot turn on if the power switch is OFF.

Remote Control


To control the unit, aim the remote control directly at the unit's remote sensor, located at the right corner below the screen.

For best performance, use the remote within 10 feet and keep the sensor free from obstructions. Avoid direct sunlight on the receiver window, which can affect responsiveness.

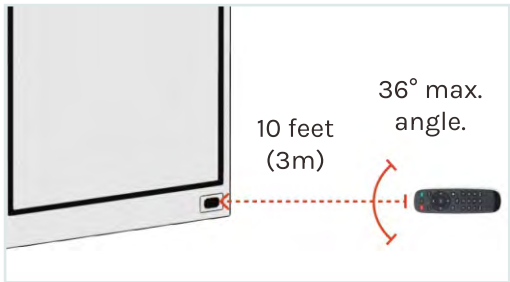

● NOTE: The remote requires 2 AAA batteries, not included.

Remote Control Functions

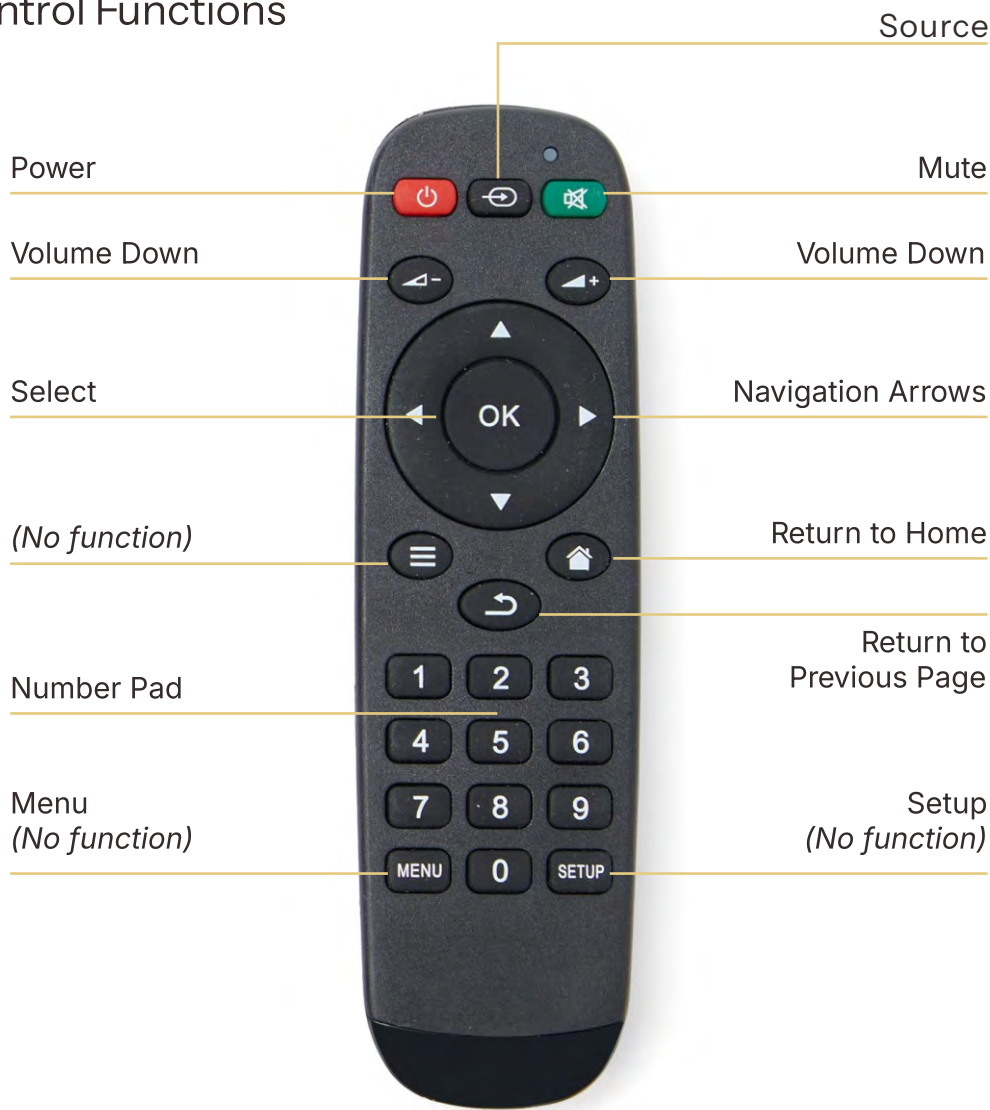

● NOTE: The real appearance of the remote control may be different from the picture. Please refer to the actual product.


Onscreen Navigation

Use the Navigation Bar and quick menus to control your device, access apps, adjust settings, and manage sound.

TIP: For easier on-screen navigation, we recommend connecting an external mouse.

Navigation Bar

The Navigation Bar provides quick access to important controls. Press the downward arrow to minimize the navigation bar. To restore it, go to Display Settings > Display Navigation .

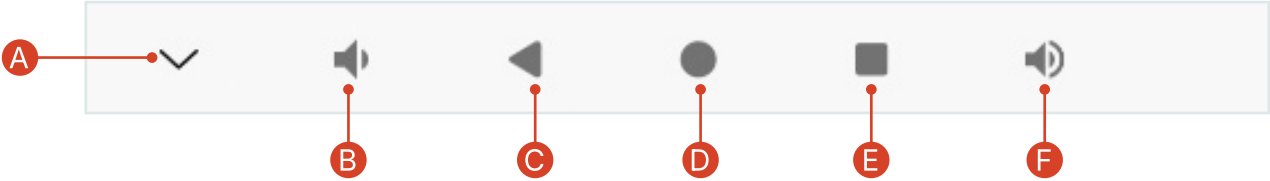


A	Minimize Nav. bar	C	Previous page	E	Open Apps/Screenshot
B	Volume down	D	Home	F	Volume up

Status Bar

The Status Bar shows standard information such as the time, network connection, and notifications.


Restart or power down the device, view notification details, or adjust key settings.

Click the top of the screen to expand the Status Bar. Click again to close it.

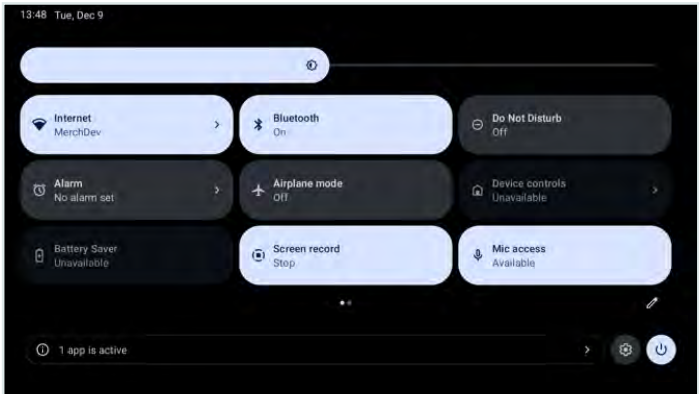

Quick Sound Settings

- Click Volume Up or Volume Down on the Navigation Bar to show the volume slider.
- Click the three-dot icon at the bottom of the volume slider to open Sound Settings .
- Use the sliders to adjust individual volume levels for Media, Calls, Ring, Notifications, and Alarms.
 - Once finished, click Done.

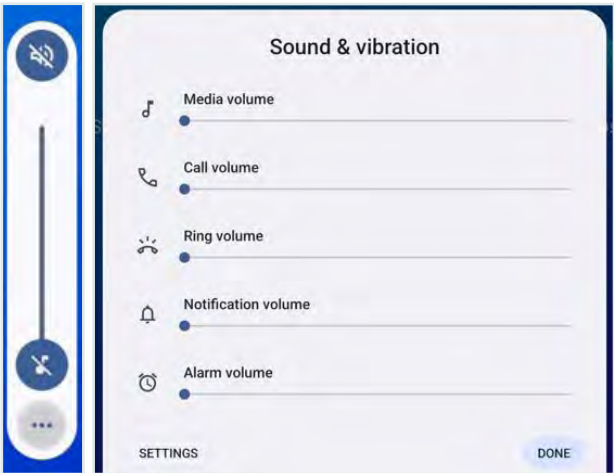

Quick Start Guide

Android 14 OS for Digital Signage

● Connect to your internet network.

Connect via Wi-Fi.

Open Settings > Network and Internet . Select your Wi-Fi network.

Enter your login credentials and click Okay.

Connect via Ethernet (RJ45).

Connect an Ethernet cable to your internet router. Insert the Ethernet cable into the Ethernet port.

Ethernet connection is complete.

● Connect any devices and accessories.

Connect Bluetooth and USB Accessories.

To connect a Bluetooth accessory, open Settings > Connected Devices . Turn on your device's Bluetooth. Click Pair new device and select your accessory.

Insert your USB device into the port. The USB accessory is connected. To transfer files, open File Explorer to copy the files to the digital signage.

Connect HDMI.

Insert HDMI cable into the HDMI IN port. Connect your supported media player to the digital signage via HDMI cable. Open the HDMI In app to show HDMI input.

● Add your content.

Transfer Media via USB.

Insert your USB into the port. To transfer files, open File Explorer to copy the files to the device.

Start presenting content quickly using DIVIEX. Use the USB 2.0 port to automatically add media files to DIVIEX (refer to complete DIVIEX instructions).

Download Apps from the Play Store.

Sign into a Google account to download additional apps from the Google Play Store and utilize Google Suite apps.

Open any Google app. Click the Profile icon in the upper right. Use your Google credentials to sign in.

Where to Go next?

Keep reading to learn more about operation and explore key Android OS features. For tips and ideas on maximizing your brand with digital signage, visit the [Articles and Guides](#) section on our website.


HDMI Connection

1. Switching Input Sources

Press the **SOURCE**  button on the remote control to bring up the OSD function menu.

The menu includes three core source mode options. Choose the one that fits your needs:

- **AUTO Mode:** Automatically detects connected signal sources. The display will switch to the HDMI interface when a signal is detected, or return to the Android interface if no signal is present.
- **HDMI Mode:** Boots directly to the HDMI interface by default upon startup.
- **Android Mode:** Boots directly to the Android interface by default upon startup.

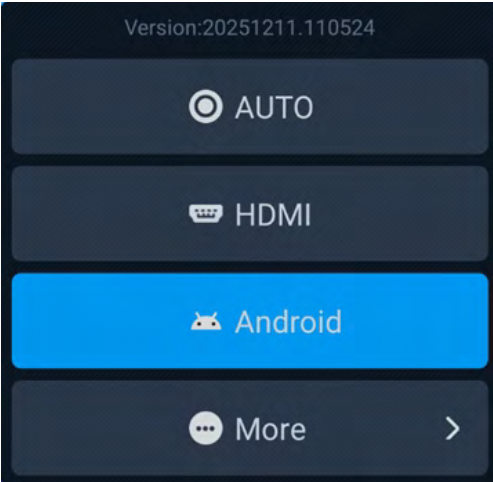


2. HDMI Interface Orientation Adjustment Operation

In the OSD menu, select the More option. Once the submenu expands, click on Orientation.

Four orientation adjustment modes are available for selection:

- **Normal (Default Orientation):** Follows the system's native orientation for display.
- **Rotate 180° (Flip 180°):** Flips the display 180 degrees based on the system orientation.
- **Turn Left (Rotate Left):** Rotates the HDMI interface display to the left.
- **Turn Right (Rotate Right):** Rotates the HDMI interface display to the right.

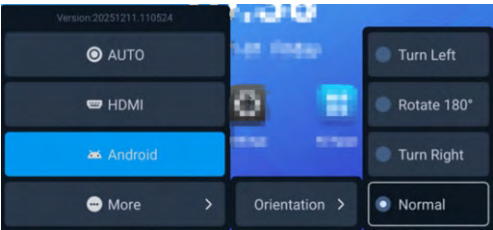

Android System Settings

Adjust software settings for the digital signage in the Settings app.

- NOTE: This manual focuses on settings that impact digital signage operation, content playback, and device reliability. Some system settings that are not relevant to typical digital signage use are intentionally omitted.



Settings

Network Connection

From the Network & Internet menu, view network details, disconnect or forget a network, or share the Wi-Fi credentials with other devices via a QR code.

Connect to Wi-Fi

1. Open Settings > Network and Internet .
2. Select your Wi-Fi network and enter your login credentials.
3. Click Okay.

Connect to Ethernet

Insert an Ethernet cable into the Ethernet (RJ45) port of the unit and connect to the Internet router. Ethernet network connection is complete.



Bluetooth Connection

From the Connected Devices menu, pair devices via Bluetooth, view all saved Bluetooth connections, and edit your Bluetooth preferences.

Connect to Device Bluetooth

1. Open Settings > Connected Devices .
2. Click Pair new device .
3. Turn on the device Bluetooth.
4. Click Saved devices > See all . Select your device from the list to connect.



Notifications

Edit notification preferences for the digital signage and individual apps.

- TIP: For unattended or customer-facing displays, we recommend limiting notifications to avoid on-screen interruptions.
- Notification History. See most recent notifications.
- Device & App Notifications. Disable individual app notifications and prevent alerts.
- Notifications on Lock Screen. Hide notifications on lock screen.
- Do Not Disturb. Toggle to enable Do Not Disturb. All notifications are silenced.
- Notification Dot on App icon. Toggle to enable or disable the notification dot on apps.

Display

Adjust screen brightness, appearance, HDMI, and screen timeout settings.

- Settings. Adjust the resolution and magnification of the screen.
- Enable Navigation. Toggle to enable the Navigation Bar at the bottom of the screen.
- Auto-Rotate Screen. Toggle to enable automatic screen orientation for portrait and landscape display.
- Screen Saver. Customize settings, apps, and appearance for device Sleep mode.

Wallpaper

Choose a new screen background from your device files.

Accessibility

Adjust display and text size, colors, and magnification, and individual app settings.

System

Check for system updates or reset apps, preferences, or the device.

- Factory Reset. Click Reset Options > Erase all data to perform a factory reset.

Security & Privacy

Set a screen lock password or PIN, or adjust other privacy settings.

- NOTE: Do not set a PIN unless absolutely necessary. A forgotten PIN permanently locks the device and prevents factory reset. Displays2Go cannot recover access.

Applications

Home Screen Applications

From the home screen, launch one of the pinned apps or show all installed apps.

			
Settings	System Assistant	Fully Kiosk	All Apps
Android Settings	Hardware-Level Settings	Browser and App Launcher	Show all installed apps.

Google Account

Sign in to your Google account for convenience and functionality, like downloading apps, file sharing, and Google Suite apps.

To sign in, open any Google app and click the profile icon in the upper right corner. Enter your Google account credentials to add your Google account.

Once signed in, you can:

- Download apps using the Google Play store
- Share files to the digital signage using Google Drive or Gmail.
- Share screenshots and files quickly by clicking Quick Share in the share options menu for that file. Select any of your Google contacts to share the file.



Chrome

Fully Kiosk

Fully Kiosk Browser and App Launcher

Fully Kiosk Browser is a secure and flexible Kiosk Browser and App Launcher. The free demo is preinstalled on your digital signage and allows additional website functionality and security in Kiosk Mode.




Fully Kiosk Browser

Once launched, click [How to Start](#) to watch the video tutorial.

To access premium features, click [Get a PLUS License](#) in the sidebar and purchase within the application. The license for the digital signage device is a one-time purchase, not a subscription.

A	Sidebar (Hidden by default)
B	Full video tutorial

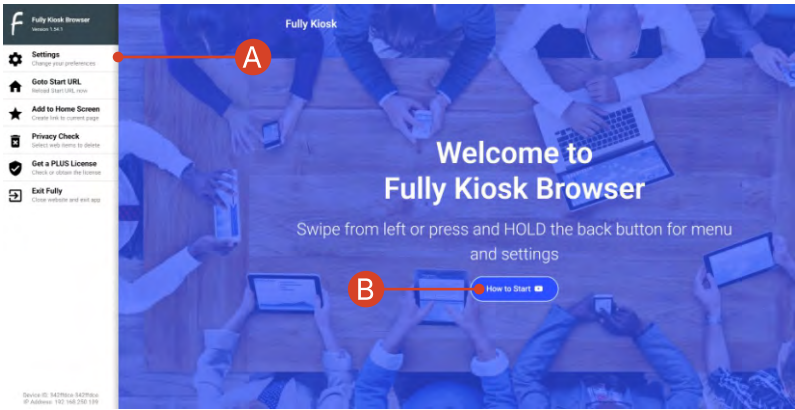

Fully Single App Kiosk

Fully Single App Kiosk is a free trial of the single-app launcher. It allows you to display a single app in Kiosk Mode, restricting any other apps from opening.



Fully
Single App Kiosk

- Select an app to enable for the single-app launcher.
- Set a PIN to exit Single App Kiosk mode.
- To exit the app, tap the screen quickly 7 times. Then enter your PIN.

To access premium features, click [Get a PLUS License](#) in the sidebar and purchase within the application. The license for the digital signage device is a one-time purchase, not a subscription.

DIVIEX

The DIVIEX Slideshow App is preinstalled for quick setup and content playback. Upload images, videos, or music from a USB or internal storage to create and customize playlists directly within the app.




DIVIEX Supported File Formats	Images	JPG, JPEG, BMP, PNG, GIF
	Video	AVI, MPEG4, WMV, MKV, FLV, MP4, MOV
	Audio	MP3

Playlist Creation

Step 1: Create the Playlist folder on a USB.


- 1. Insert a USB into your computer.
- 2. Open the USB drive and create a new folder.
- 3. Name it MediaFolder .
- 4. Inside MediaFolder, create 3 new folders.
- 5. Name the folders: ‘Images’, ‘Videos’, and ‘Music’.
- 6. Save your media files to the corresponding folder, then safely eject the USB.

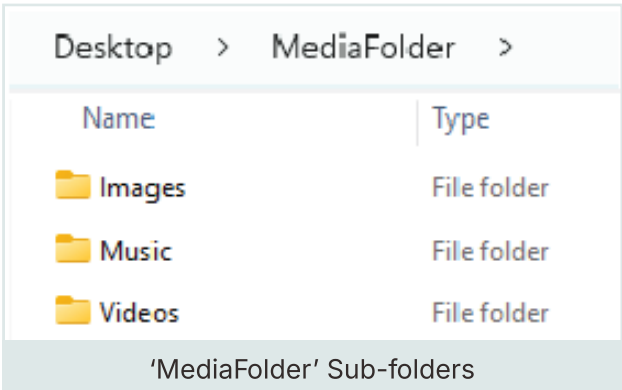

TIP: To display videos full screen, edit video files to the exact aspect ratio of your screen before importing them into DIVIEX.

Step 2: Add the Playlist to DIVIEX.


- 1. Turn on the digital signage.
- 2. Insert the USB into a USB 2.0 port on your digital signage.
- 3. ‘Allow access to drive?’ system message appears. Click Yes.
- 4. Open the DIVIEX app.
- 5. ‘Identify USB files’ system message appears. Click Confirm.
- 6. The Media Library displays your files.

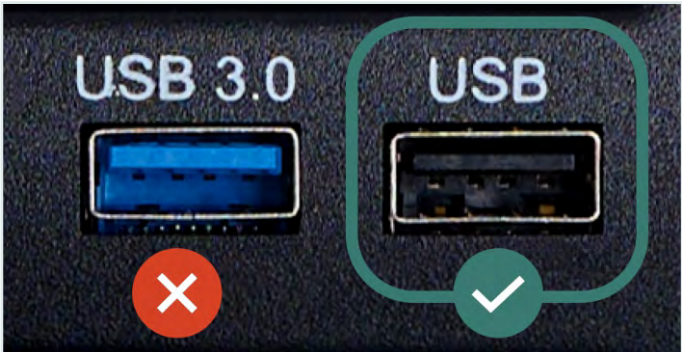

NOTE: Do not use the USB 3.0 port for import. Use the USB 2.0 port, which may be labeled ‘USB’ or ‘USB 2.0’.

Step 3: Create the DIVIEX Playlist.


- 1. In the Playing Lists tab, click Add Playback .
- 2. Select the media files from the Pictures, Music, or Video tabs:
 - Click each file thumbnail to add to the playlist or click Select All .
 - The order in which files are selected creates the playlist order.
 - Click again to deselect files.

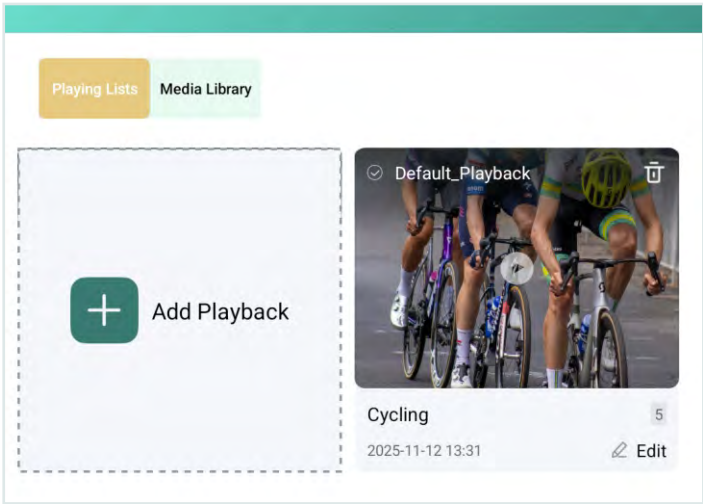

● TIP: Adjust the duration of an individual photo by clicking the  icon in the right corner of the file thumbnail. Select a time duration, then click Yes to apply.

Step 4: Customize Playlist Settings.


Click the  icon to open Play Back settings. From here, adjust the default media duration, image scaling, looping, transitions, and music.

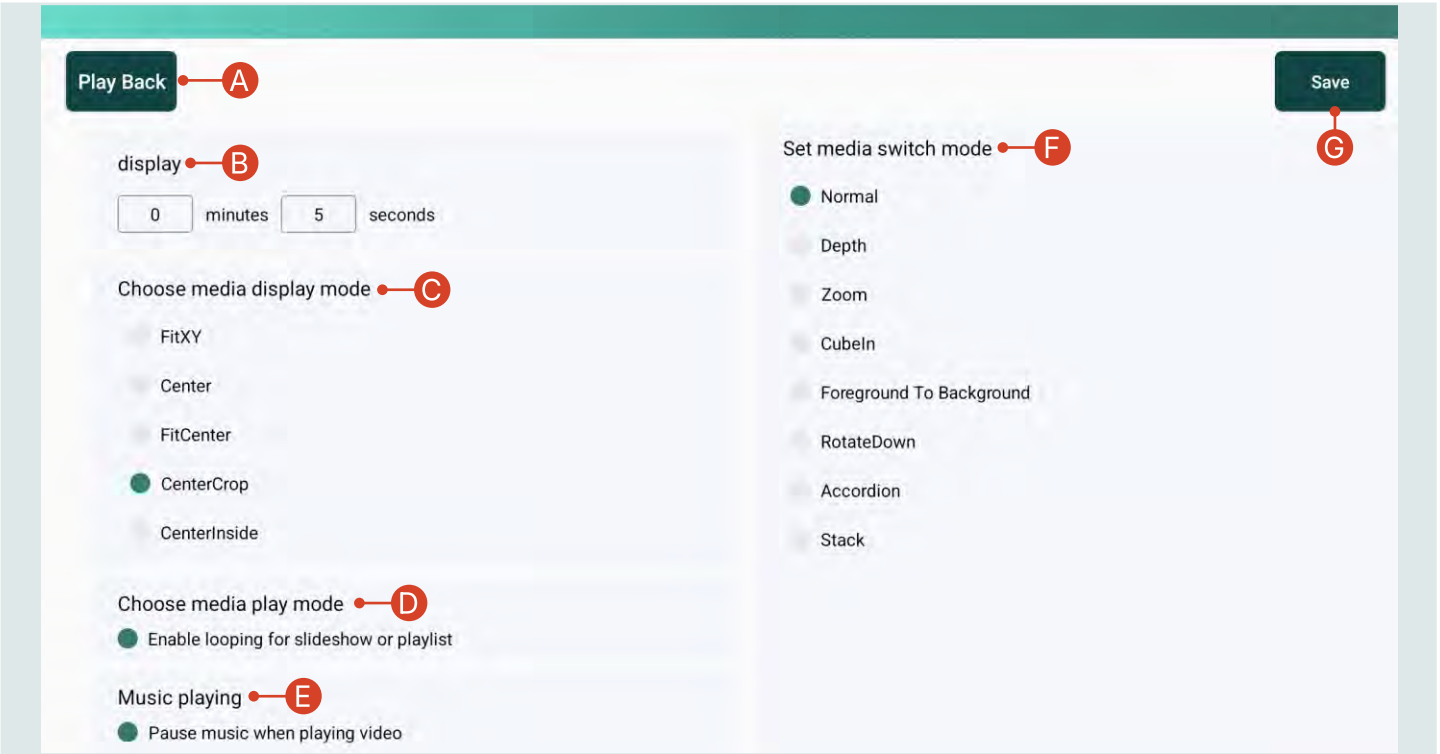

A	Exit Play Back settings.	E	Pause music during video playback.
B	Duration of each image	F	Select a slide transition effect.
C	Default crop for each image.	G	Save changes.
D	Enable continuous looping.		

Optional: Add Background Music.


- 1. Click Music  in the upper right corner to add background music files. (Background music plays during Images and pauses during Video playback.)
- 2. Click a music track to add it to the playlist.
- 3. Click  to remove a track from the playlist.
- 4. Click Confirm.

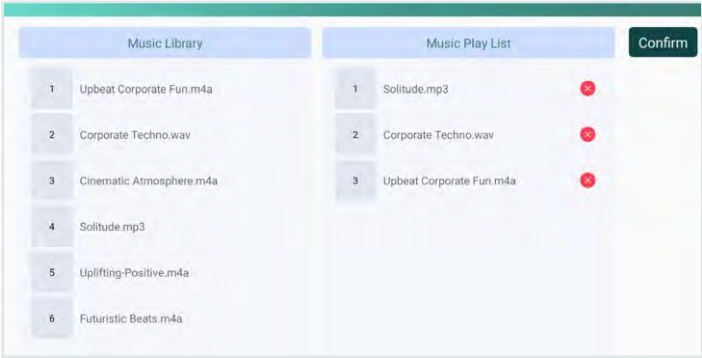

Step 5: Publish the Playlist.

- 5. Click Publish .
- 6. Name your playlist and click Yes.


NOTE: Always publish the playlist after editing to save your changes.

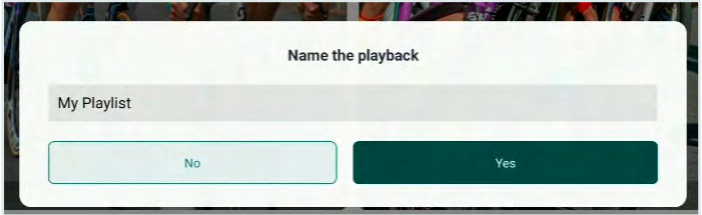

Editing Files in the Media Library

View imported files and make individual edits from the Media Library. After saving edits to a picture or video, DIVIEX copies the edited file to all playlists containing the original.

- TIP: After saving the edited file, open your playlist and delete the original to prevent duplicates in the playlist.

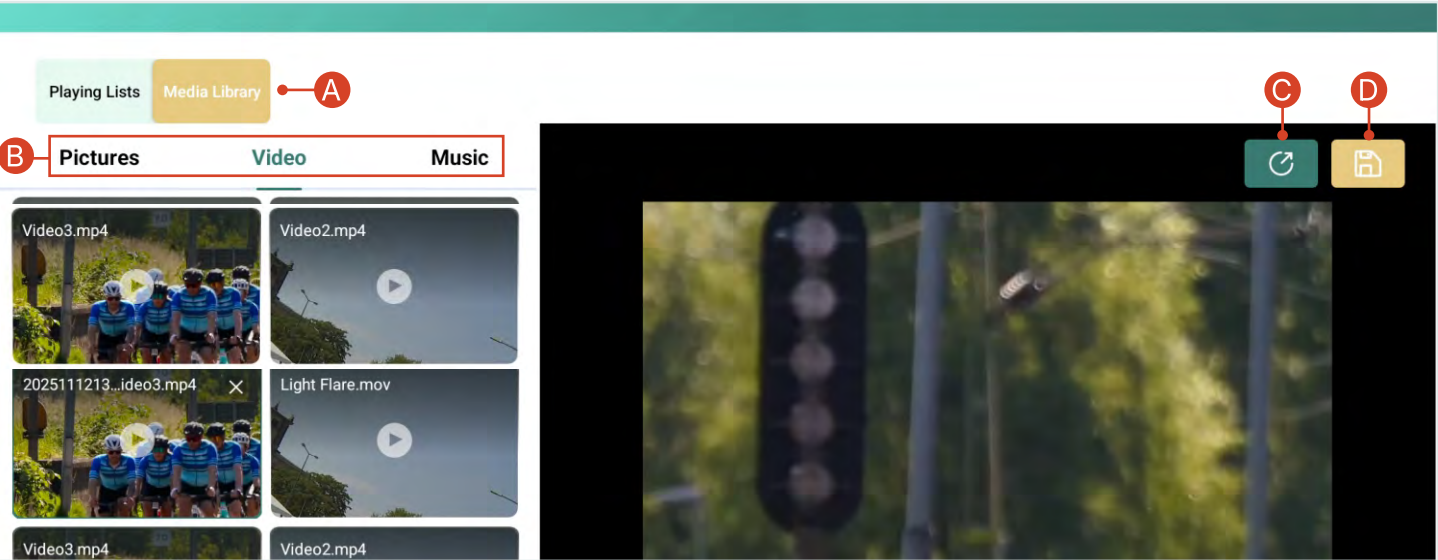


A	Access the Media Library.
B	View all Images, Videos, or Music files.

C	Publish changes to social media (Facebook, Twitter).
D	Save edits.

Pictures

1. Click the Picture tab, then click to select a picture to make edits:

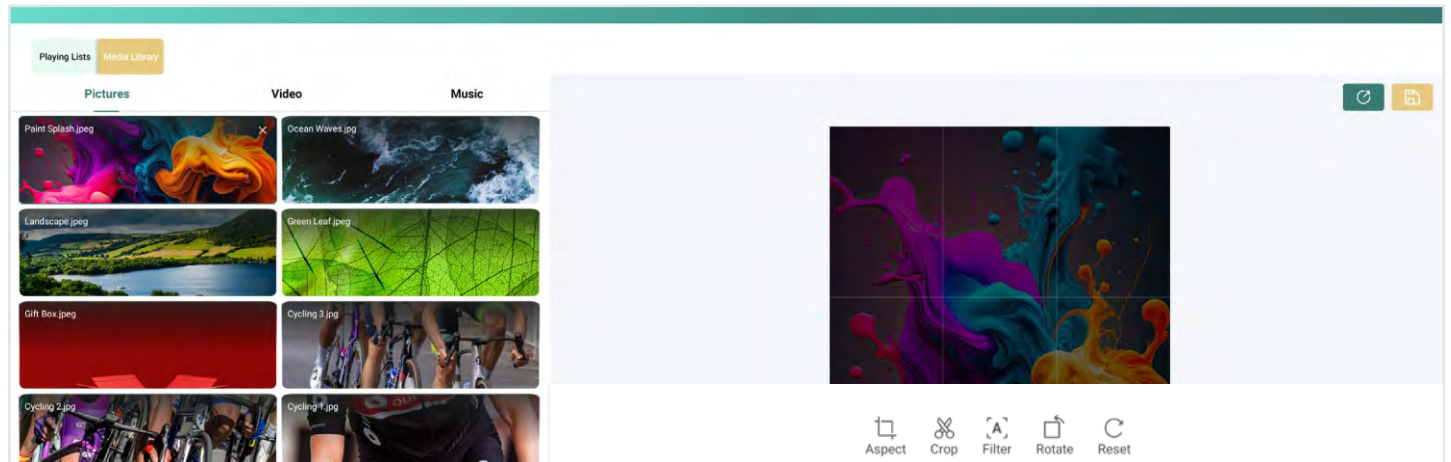


- Aspect Ratio. Stretch the picture to the desired aspect ratio.
- Crop. Drag handles to crop the picture, then click the checkmark to apply.
- Filter. Apply a stylized filter to the picture.
- Rotate. Rotate the picture clockwise or counterclockwise.
- Reset. Clear all edits and revert to the original picture.

2. Once finished, click Save in the upper right.

Video

1. Click the Video tab, then click to select a video to make edits:

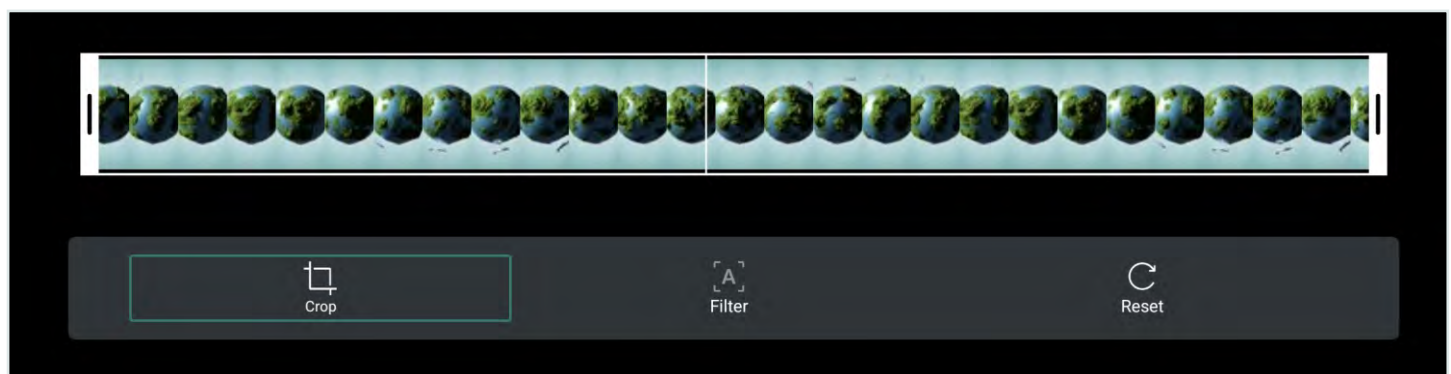

- Crop. Drag the white handles on the video timeline to keep the desired section of video.
- Filter. Apply a stylized filter to the video.
- Reset. Revert to original.

2. Once finished, click Save in the upper right.

Music

1. Click the Music tab to view all the music in the Media Library.
- To delete a track from your music library, select the track and click the  icon in the corner of the thumbnail.

Click Yes to confirm deletion.

The music is removed from your library and any playlists.

Pictures		Video		Music		
1	Uplifting-Positive.m4a	02:02		2	Upbeat Corporate Fun.m4a	01:14
3	Solitude.mp3	01:32		4	Futuristic Beats.m4a	02:01
5	Corporate Techno.wav	01:58		6	Cinematic Atmosphere.m4a	43

Playing and Managing Playlists

Click a playlist to launch it in full screen.

A

Playing ListsMedia Library

C

Auto boot

D

Auto play

B

+

Add Playback

Default_Playback



Cycling

5

2025-11-12 13:31

Edit

Default_Playback



My Playlist

15

2025-11-12 13:47

Edit

E

F

G

A	Access all playlists.	E	Make this playlist the default for automatic playback. If no playlist is selected, the left-most playlist is the default playlist.
B	Create a new playlist.		
C	Auto-Boot: Automatically launch DIVIEX when the digital signage is powered on.		
D	Auto-Play: Automatically play the default playlist when DIVIEX app is launched.	F	Delete this playlist.
		G	Edit this playlist.

21

 
File Explorer

Use the File Explorer app to browse your device’s saved images, videos, and other files. Use the toolbar to navigate folders and select, copy, paste, or move files.



Explorer

File Explorer Toolbar



Home	Return to primary folder.
LevelUp	Open enclosing folder.
Multi	Select file(s) to edit.

Editor	Show file options.
NewFolder	Create new folder.
Back/Next	Undo/redo last step.

Editor

Click Multi to enable file selection. Click the file or files, then click Editor to open the options menu.

- Copy a file to paste in a different folder.
- Delete the file from the device.
- Move the file from this folder and paste to a different folder.
- Rename this file.
- Send this file via Bluetooth, Quick Share, Print, or social media apps.



DIVIEX MediaFolder Storage

Navigate to Internal Storage > MediaFolder to view and manage the files saved in your DIVIEX Media Library.

