

COOL4



Wireless Headset
User Manual

V0.2 2026.0713

Customer Service

 
If you need assistance with your headphones, please contact us through the **Amazon Message Center**. You may also reach our support team at:

☎ **Phone: +1 (617) 997-0009 Mon.-Fri.** ✉ **Email: support@boloxa.store**


What's in the box



Headphones *1



Type-C Charging Cable *1

 

3.5mm AUX Audio Cable *1




User Manual *1

Specification

Product Model	COOL4
Product Name	Wireless Headset
Input	5V ⎓ 1A
FCC ID	2ASDY-COOL4
Battery Capacity	3.7V/500mAh, 1.85Wh
Charging Port	Type-C
Transmission Range	15m/49ft (with no obstacle)
Speaker Size	Φ 40mm

 Product Overview

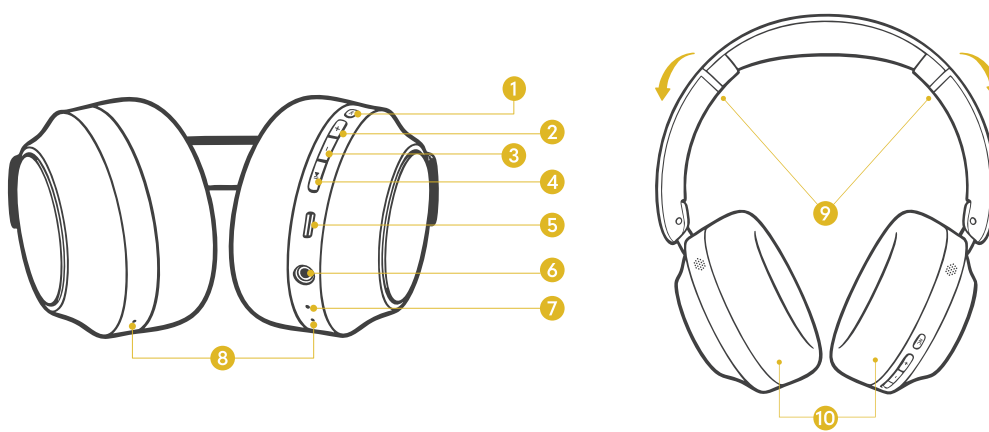

1 LED Indicator Light

2 Volume +/Next Track

3 Volume -/Previous Track

4 Multi-function Button: Play/Pause/On/Off Button

5 Type-C Charging Port

6 3.5mm AUX Audio Jack

7 LED Indicator Light

8 Microphone

9 Adjustable Headband

10 Earcuff

NC 1 ANC Function

2 Volume +/Next Track

3 Volume -/Previous Track

4 Multi-function Button: Play/Pause/On/Off Button

5 Type-C Charging Port

First to Use

Please check the following components for integrity before first use.

1. Check if the headphone has power- Press and hold the power button on the headphone to see if the LED indicator lights up. If there is no power, please charge the headset with the provided Type-C charging cable.
2. Check whether the headband and the headphone frame are adjustable.
3. Check if the product has any missing parts.

If you encounter any of the above issues, please do not hesitate to contact us, and we will assist you in resolving them.

 
Wearing the Headphone

1. Check the left and right units of the headphone.
2. Extend the slider to its full length before putting on the headphone.
3. Put on the headphone with the earpads fitting snugly over your ears.
4. Adjust the slider to a length where the headband touches the top of your head.
5. Adjust the orientation of the left and right units so that the earpads fit snugly all around your ears.

If you put on the headphone without adjusting the slider, the headphone may not be positioned properly on your head, resulting in discomfort or a weak noise cancelling effect.


Power On

Hold Multi-function Button for 2 seconds until you hear "Power on" and the status light blinks blue for 1second.

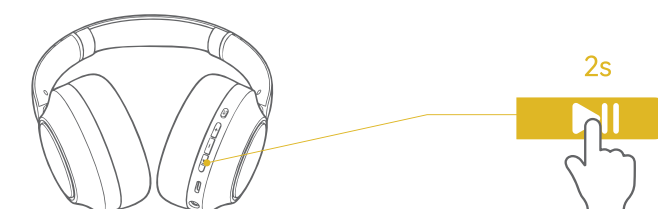

Power Off

 
Hold Multi-function Button for 5 seconds until you hear "Power off" and the status light blinks blue for 1second.

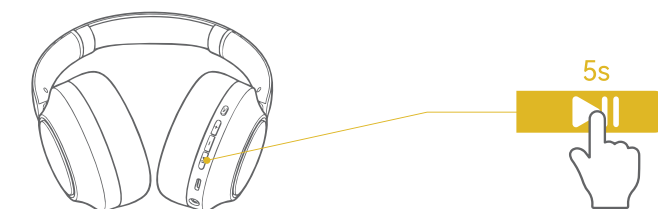

Bluetooth Connections

Connect Using the Bluetooth Menu on Your Mobile Device

 1. Hold Multi-function Button for 2 seconds until you hear "Power on" and the status light blinks blue for 1second.
2. On your device, enable the Bluetooth feature.
3. Select "Cool4" from the device list.
4. Once connected, you hear "Connected" and the status light glows blue for 2 seconds.

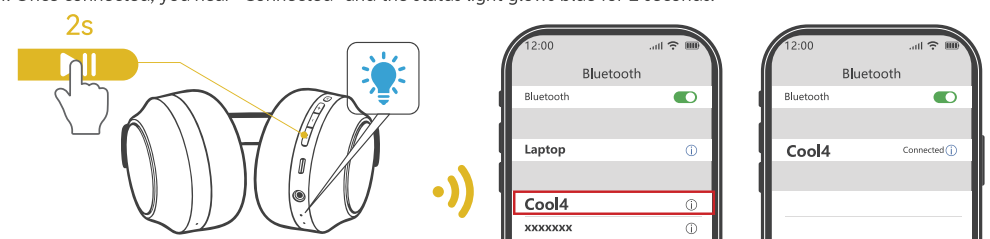

Reconnecting a Device

When powered on, the headphones try to reconnect with the most recently-connected devices.

 


Connecting Another Device

1. Disconnect audio on your previous mobile device to make it discoverable by a new one.
2. On your new device, go to Bluetooth settings, then tap "Cool4" to connect.


① Disconnect "Cool4" from your previous device

② Connect to "Cool4" on your new device

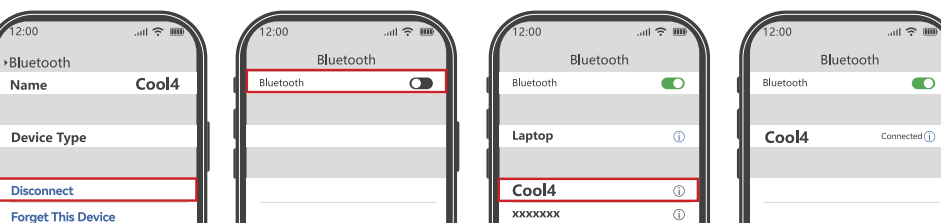


Disconnecting a Device

 You can use Bluetooth settings on your device to disconnect. Disabling the Bluetooth feature disconnects all other devices.

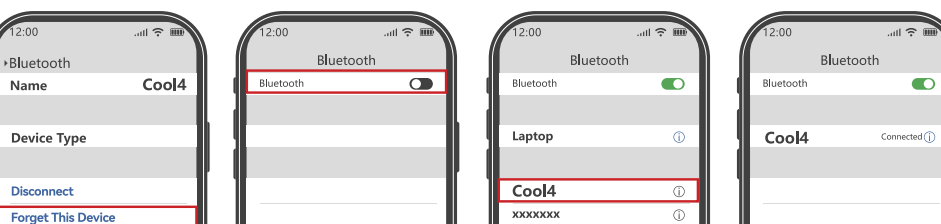


Clearing the Bluetooth Paired Device List

 1. Delete your headphones from the Bluetooth list on your device. Repeat for each previously-connected device.
2. All devices are cleared, and the headphones are ready to connect.

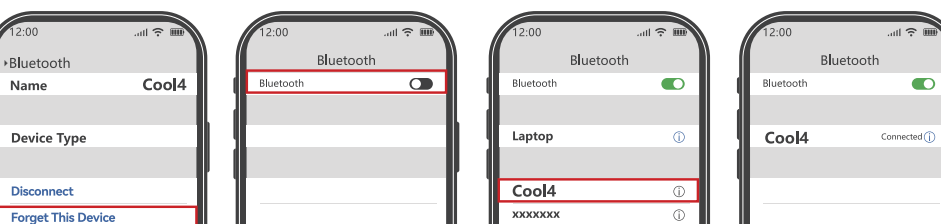

Button Controls

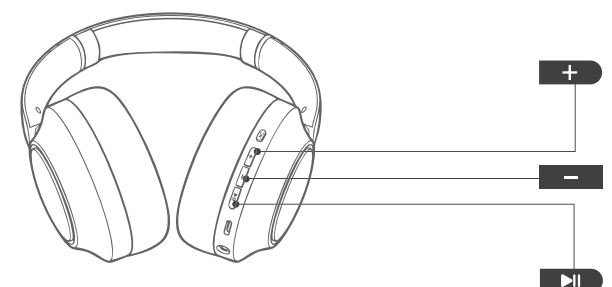 

Music Control

Play/Pause: Once click

Next Track: Double click<

Volume +: Once click

Enable/Disable Voice Assistant: Double click

Previous Track: Double click>

Volume -: Once click

Phone Call Control

 
Answer Call: Once click

End Call: Once click

Reject Call: Press and hold for 2s

Change the Noise Cancelling Mode

1. Press the "ANC" button 2s to change mode: ANC On

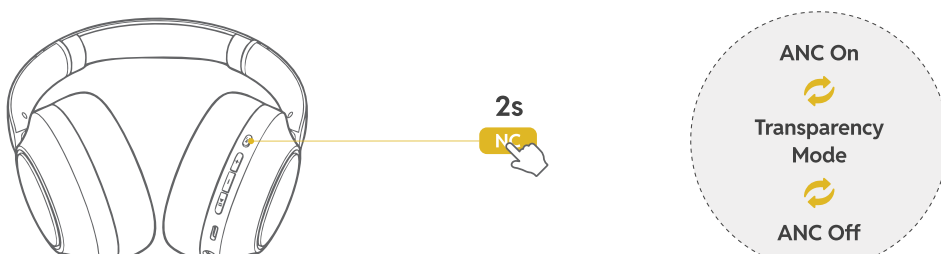


ANC On

Transparency Mode

ANC Off

Using Noise Cancellation Only

 1. Do one of the following:
 - Disconnect your device.
 - Turn the Bluetooth feature off on your device.
2. Press the "ANC" button 2s to change the mode.

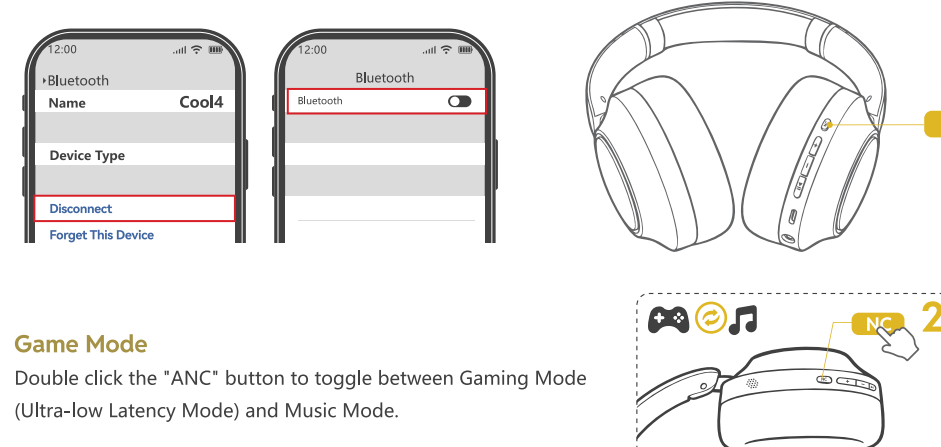


Reset

Factory Reset

With the earbuds powered on but not connected to any device, press and hold both Volume + and Volume - Button for 5 seconds.

 You will hear "power off" and the red and blue lights will flash simultaneously 3 times — reset is now complete.

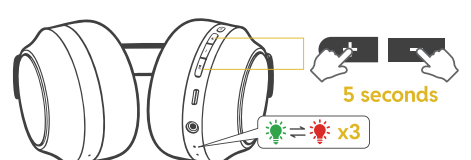

When to Reset Your Headphones

You should perform a reset if you encounter any of the following issues:

1. The headphones frequently disconnect from your device.
2. The headphones frequently disconnect from your device.
3. Audio is only coming from one side.
4. There is no sound even when the headphones are connected, and both the device and headphone volume are set to maximum.
5. The audio is out of sync with the video.

Wired Listening Mode

Connect the AUX Audio Cable

 
Use the 3.5 mm audio cable to listen to audio from your source device when a Bluetooth connection isn't available.



Charging

Charging the Headphones

1. Connect the small end of the USB cable into the USB-C port on the earcup.
2. Connect the other end into a USB-A power source such as a computer or wall charger.

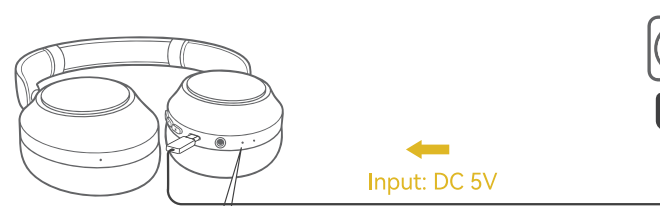

Charging Status

The headphones begin charging, and the status light blinks red.

When the headphones are fully charged, the indicator light turns off.

Checking Battery Level

When headphones are on, press the **ANC** button once. The red light flashes to show battery status:

4x flashes	3x flashes	2x flashes
100~96% (Full)	95~11% (High)	10~0% (Low)

Charging Status

NOTE: Charge your headphones regularly to ensure you have enough battery for listening to music each time.

Maintenance

Cleaning the Headphones

The headphones may require periodic cleaning. If the headband or other exterior surfaces need to be cleaned, gently wipe with a slightly damp cloth.

 
Use only a water-dampened cloth. Don't use cleaning products. Don't allow any moisture to enter the headphones through the ports or earcups.

Don't force any dirt or debris into the ports. Don't blow air into or vacuum the ports or the interior of the earcups.



Storing the Headphones

The earcups rotate for easy, convenient storage. Place the headphones flat into the case.

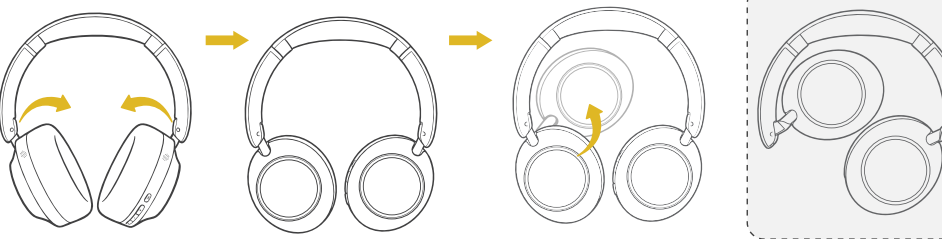

Battery Warning

Using the wrong battery can cause fire and other hazards (for example, in the case of some lithium battery types).

1. Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
2. Do not leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
3. A battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.

FCC Caution

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

ISED Warning

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference, and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The device is compliance with RF exposure guidelines, users can obtain Canadian information on RF exposure and compliance.

Le présent appareil est conforme

Après examen de ce matériel aux conformités ou aux limites d'intensité de champ RF, les utilisateurs peuvent sur l'exposition aux radiofréquences et la conformité et compliance d'acquiescer les informations correspondantes.

Caution

DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS

⚡ The symbol indicates DC voltage

♻ Recycling

This product bears the selective sorting symbol for Waste electrical and electronic equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment.

User has the choice to give his product to a competent recycling organization or to the retailer when he buys a new electrical or electronic equipment.

This product can be used across EU member states.

The device is low power device, it can meet the requirement of the RF exposure.

Notes:

1. High Sound Pressure
2. Hearing Damage Risk
3. Do not listen at high volume levels for long periods.

CE

Recycling

♻

Made in China

尺寸: 142.5x142.5mm
材质: 70g书纸
对折方式: 风琴折