

User Mannel

Electronic Drum X3



FLYKEYS

Achieve Your Music Dream

INFORMATION FOR YOUR SAFETY!

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.

CAUTION

The normal function of the product may be disturbed by Strong Electro Magnetic Interference. If so, simply reset the product to resume normal operation by following the owner's manual. In case the function could not resume, please use the product in other location.

PRECAUTIONS

Please keep this manual in a safe place for future reference.

Power Supply

Please connect the designated AC adaptor to an AC outlet of the correct voltage.

Do not connect it to an AC outlet of voltage other than that for which your instrument is intended.

Unplug the AC power adaptor when not using the instrument, or during electrical storms.

Connections

Before connecting the instrument to other devices, turn off the power to all units. This will help prevent malfunction and / or damage to other devices.

Location

Do not expose the instrument to the following conditions to avoid deformation, discoloration, or more serious damage:

- Direct sunlight
- Extreme temperature or humidity
- Excessive dusty or dirty location
- Strong vibrations or shocks
- Close to magnetic fields

Interference with other electrical devices

Radios and televisions placed nearby may experience reception interference. Operate this unit at a suitable distance from radios and televisions.

Cleaning

Clean only with a soft, dry cloth.

Do not use paint thinners, solvents, cleaning fluids, or chemical-impregnated wiping cloths.

Handling

Do not apply excessive force to the switches or controls.

Do not let paper, metallic, or other objects into the instrument.

If this happens, unplug the AC adaptor from the wall outlet.

Then have the instrument inspected by qualified service personnel.

Disconnect all cables before moving the instrument.

Contents

Installation Instructions

Installing frame	6
Install Toms	7
Install Hi-hat/Crash/Ride	7
Install Kick Drum	7
Install drum module	8

Panel & Display Description

Front Panel	9
Rear & Side Panel	10

Setup

Connecting Pads and Pedals	11
----------------------------------	----

Connections

Connecting an Audio Equipment	12
Connecting a set of Headphones	12
Connecting an MP3/CD Player	12
Connecting a Computer	12
Connecting a Midi Keyboard	12
Power Supply & Switch	12

Performing

Selecting a Drum Kit	13
Playing the Pads	13
Adjusting the Sensitivity of a Pad	14
Using the Metronome/Click Feature	14
Adjusting the Tempo	14

Editing and Saving a Drum Kit

Adjusting the Volume of a Drum Kit	15
Switching Reverb On/Off and Setting EQ	15
Selecting the Drum Instrument of the Pad	15
Adjusting the Volume, Pan and Pitch of the Pad	15
Setting the Pads to Play Songs	15
Saving the Edited Kit	15

Playing Along with Songs

Selecting and Playing Back a Song	16
Adjusting the Volume of the Accompaniment and Drum	16
Muting the Drums in Songs	16

Recording Your Performance

Recording Your Performance Quickly	17
Playing Back Your Recorded Performance	17

Bluetooth Feature

Beat and rhythm

Base type of Beat and rhythm	18
------------------------------------	----

Making the Settings for Pads

About Settings of Pads	19
Adjusting the Pad Sensitivity	19
Setting the Pad Threshold	19
Eliminating Crosstalk between Pads	19
Selecting the Pad Curve	19
Setting Rim Sensitivity on Pads	20
Adjusting the Hi-Hat Pedal Splash Sensitivity	20
Saving Settings of Pads	20

DRUM KIT LIST

DRUM INSTRUMENT LIST

SONG LIST

Quick Start

 
Installation Instructions



Completed ①

Note: Use the drum key (V) to loosen or tighten the bolts of clamps when assembling the kit or making adjustments.

1. Installing frame

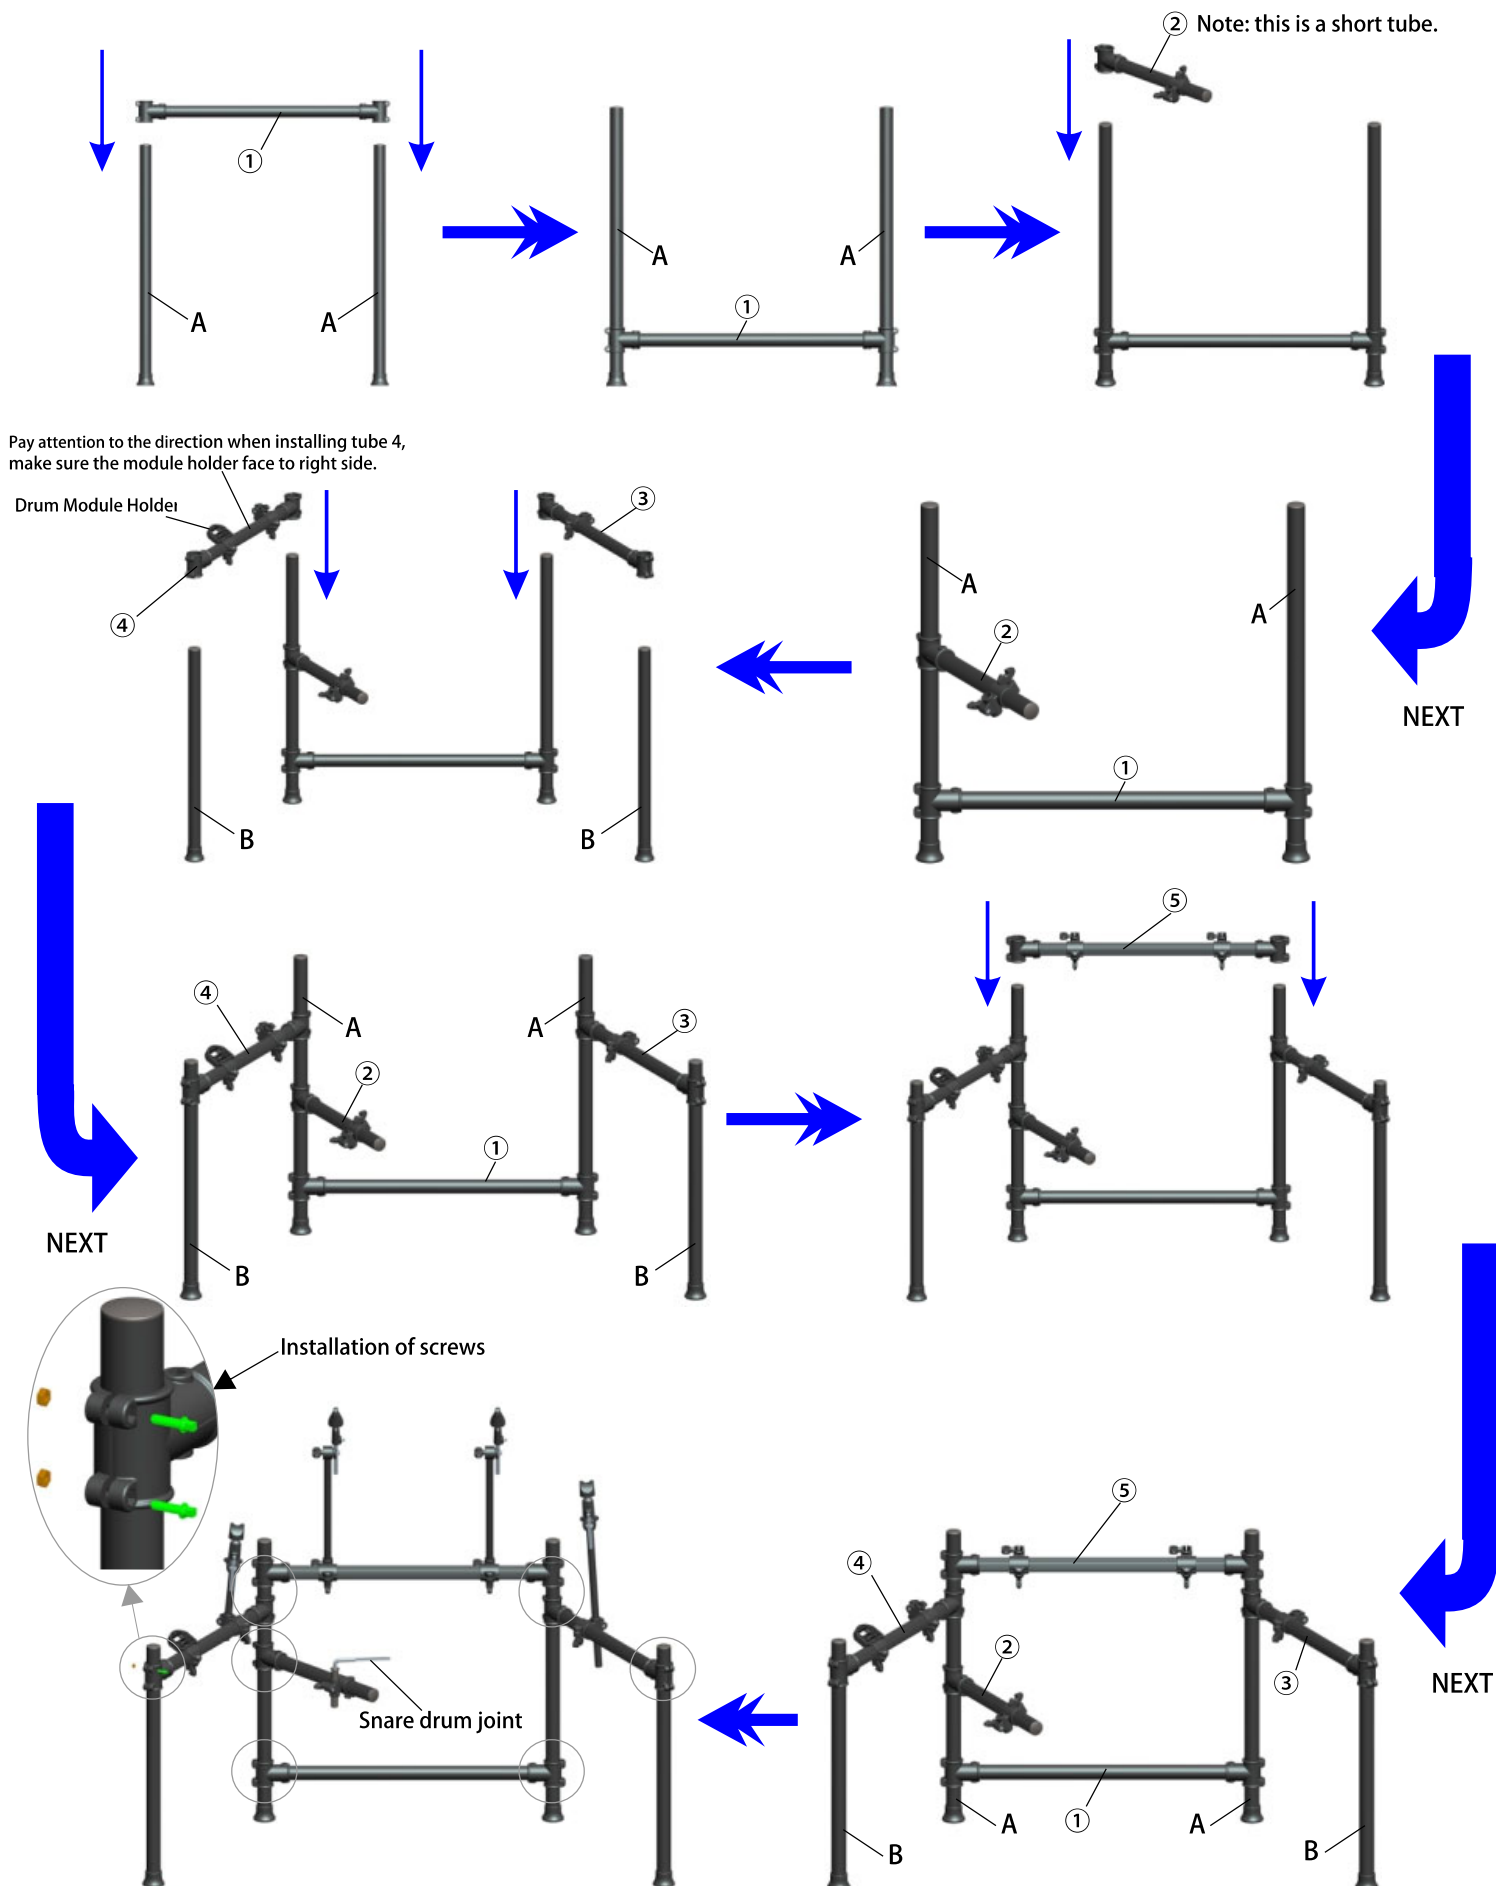


Install the cymbal stands, be attention, the shorter tube is for Hit-Hat. Adjust the heighth, width, and tighten screws of frame. The electric drum frame is done.


2. Installing toms

Referring to Fig. ①, the drum is mounted on the drum frame, and the installation method is as follows.

 
(1) Install the Tomdrum on the aluminium tube, cover the back cover and lock it with three screws.

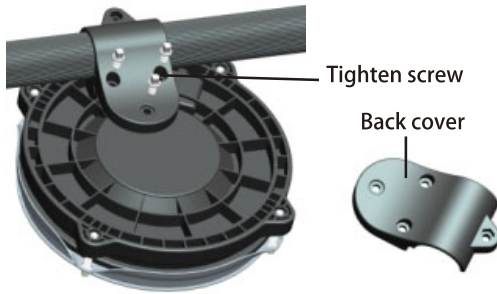

 
(2) Install the locking screw, adjust the angle of the drum and lock it tightly..

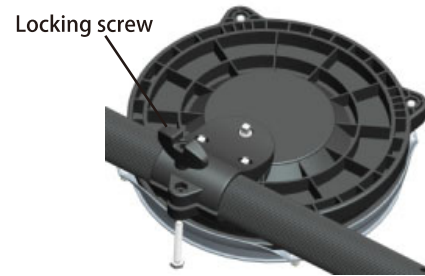

 3. Install Snare Drum to frame Put pad in the "L" shape bar, and tighten screw

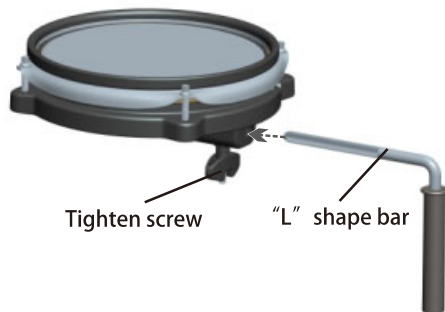


 4. Install Hi-Hat, Crash, Ride to frame. Put cymbal on the straight bar, and tighten screw of cap.

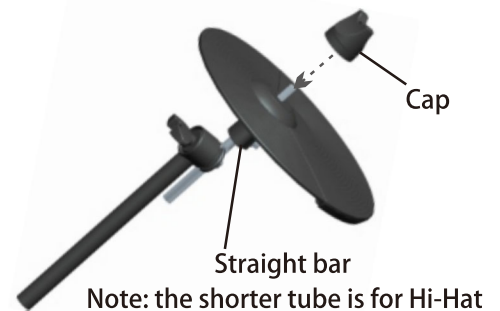

5. Install Kick Drum

 (1) Connect L shape and V shape stand by screws, and Install the anti-skidding screws with springs on the V shape stand.

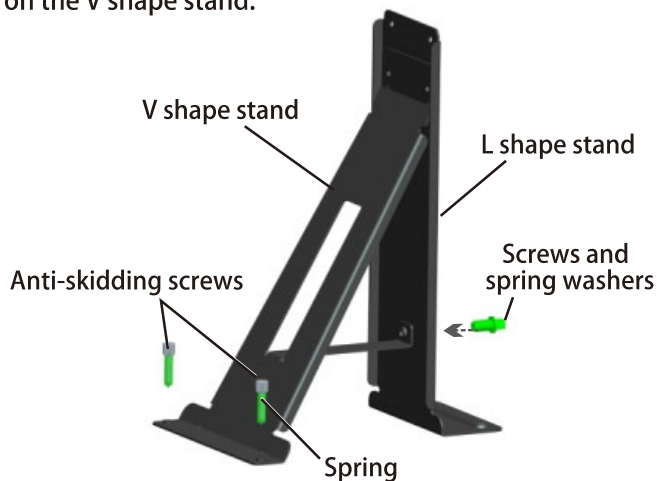

(2) Install kick drum pad on stand by 4 screws.



(3) Install kick drum pedal: put the kick drum hammer into the hole on the pedal, and tighten screws.

 


(4) Connect kick drum stand and kick drum pedal through locker, and tighten screw.




6. Install drum module

- (1) Insert the drum module into the drum module holder and Lock it by the hand screw.

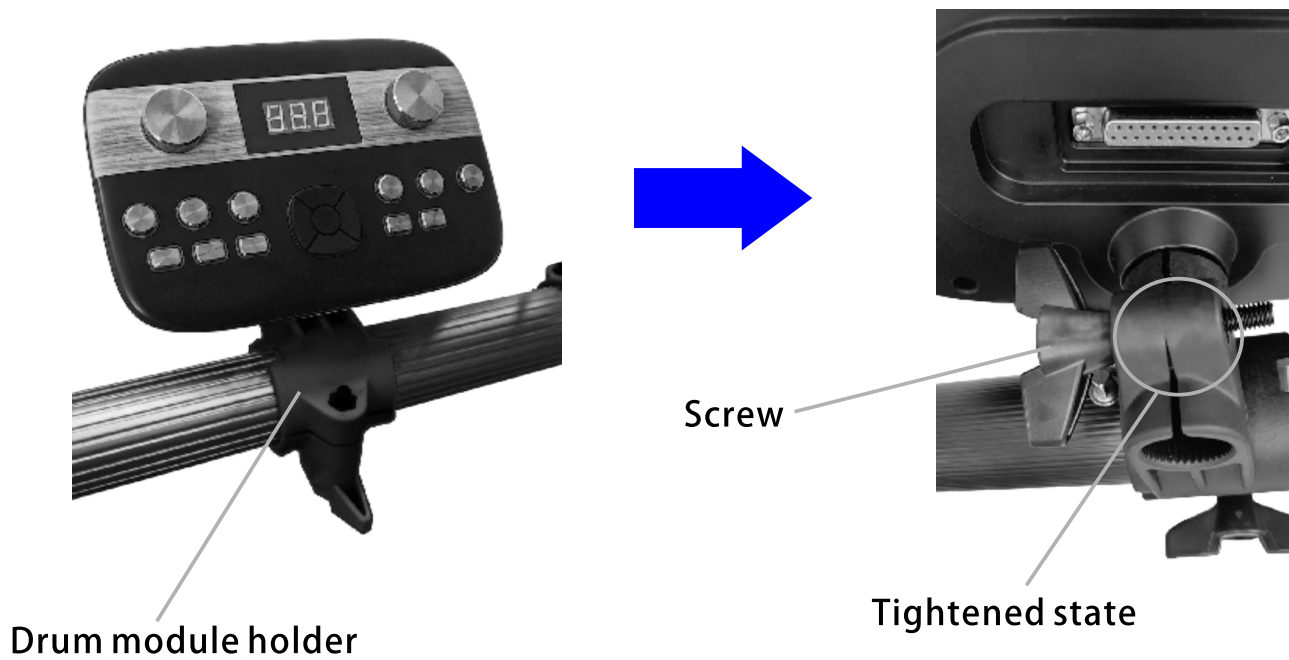


 - (2) Connect the drum module with the cable snake, and Lock it by two screws.

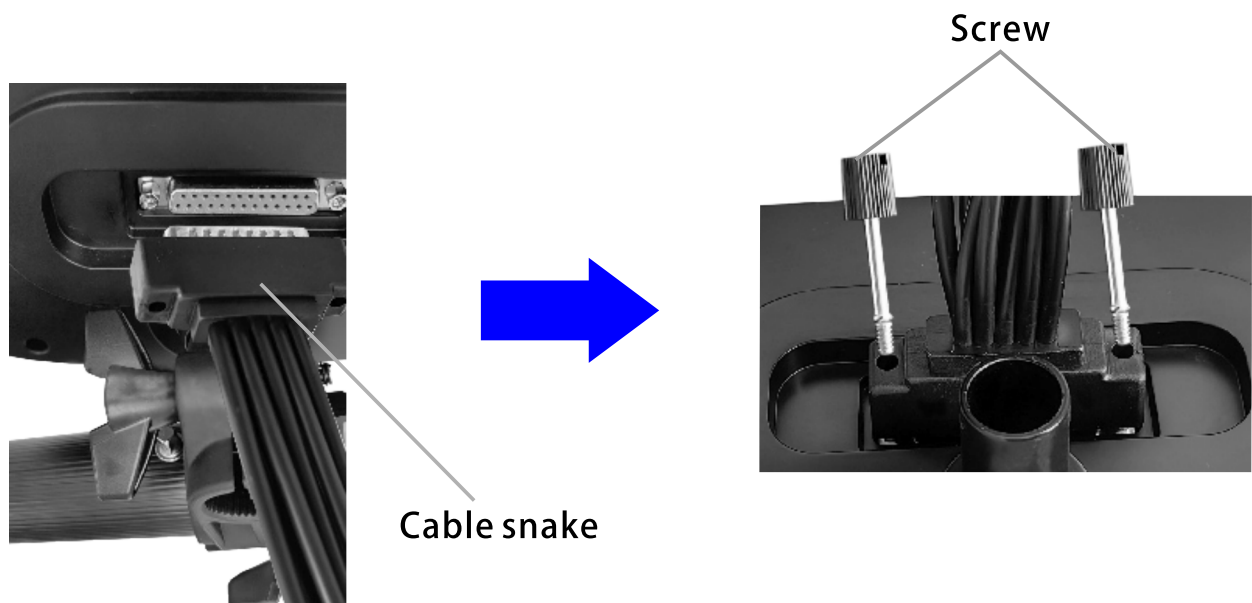

PANEL DESCRIPTION

 Front Panel

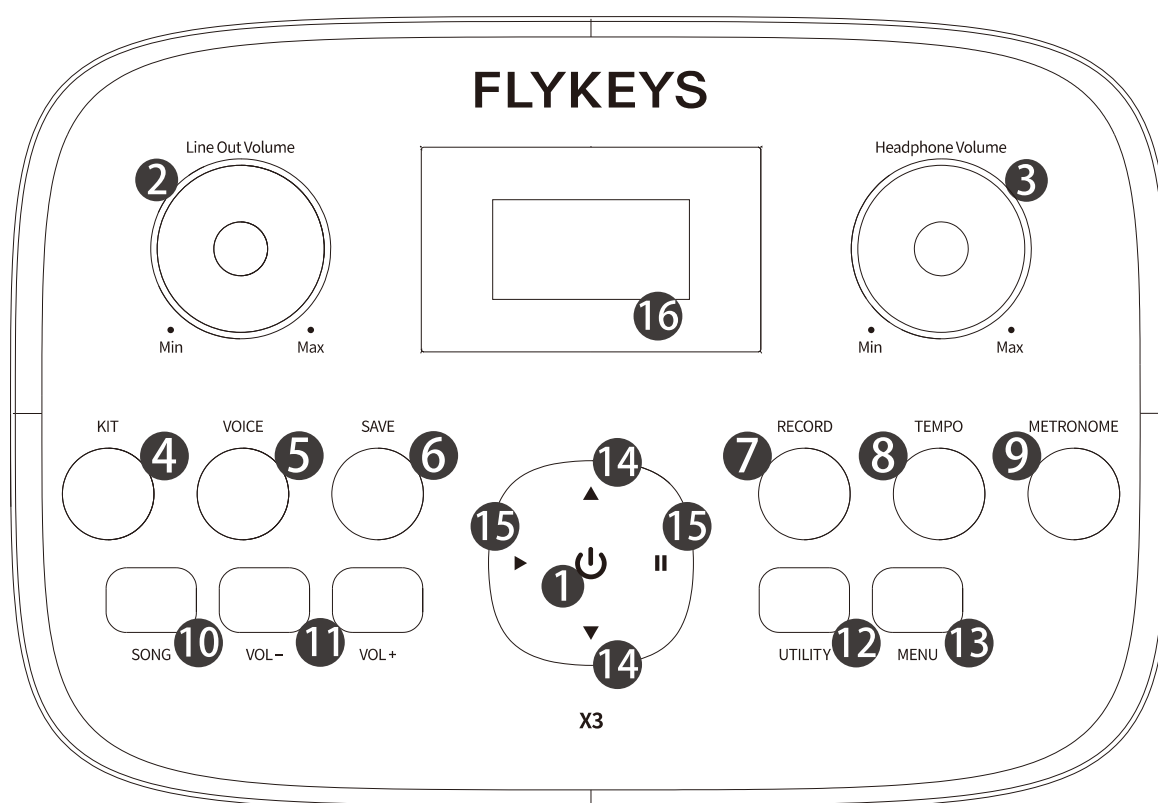

1 POWER Button

This button turns the power on and off.

2 LINE OUT VOLUME Knob

Adjust the volume of line output.

3 HEADPHONE VOLUME Knob

Adjust the volume of phone.

4 KIT Button

Enter the Kit menu.

5 VOICE Button

Enter the voice menu.

6 SAVE Button

Press the button to save the data.

7 RECORD Button

Enter the record menu.

8 TEMPO Button

Adjust the current tempo.

9 METRONOME Button

Turn the metronome on or off and enter the click menu.

10 SONG Button

Enter the song menu.

11 VOL-/VOL+ Button

Press the [Vol+] button increases and [Vol-] button decreases the song volume.

12 UTILITY Button

Enter the Utility menu.

13 MENU Button

In the VOICE, SONG, CLICK, UTILITY mode, press the MENU button to enter the submenu.

14 ▲/▼ Button

Press the [▲] button increases and [▼] button decreases the current parameter.


15 ►/|| Button

Start or stop song playing.

16 LED Display

Indicators for Coach playing.

 Rear Panel & Side Panel

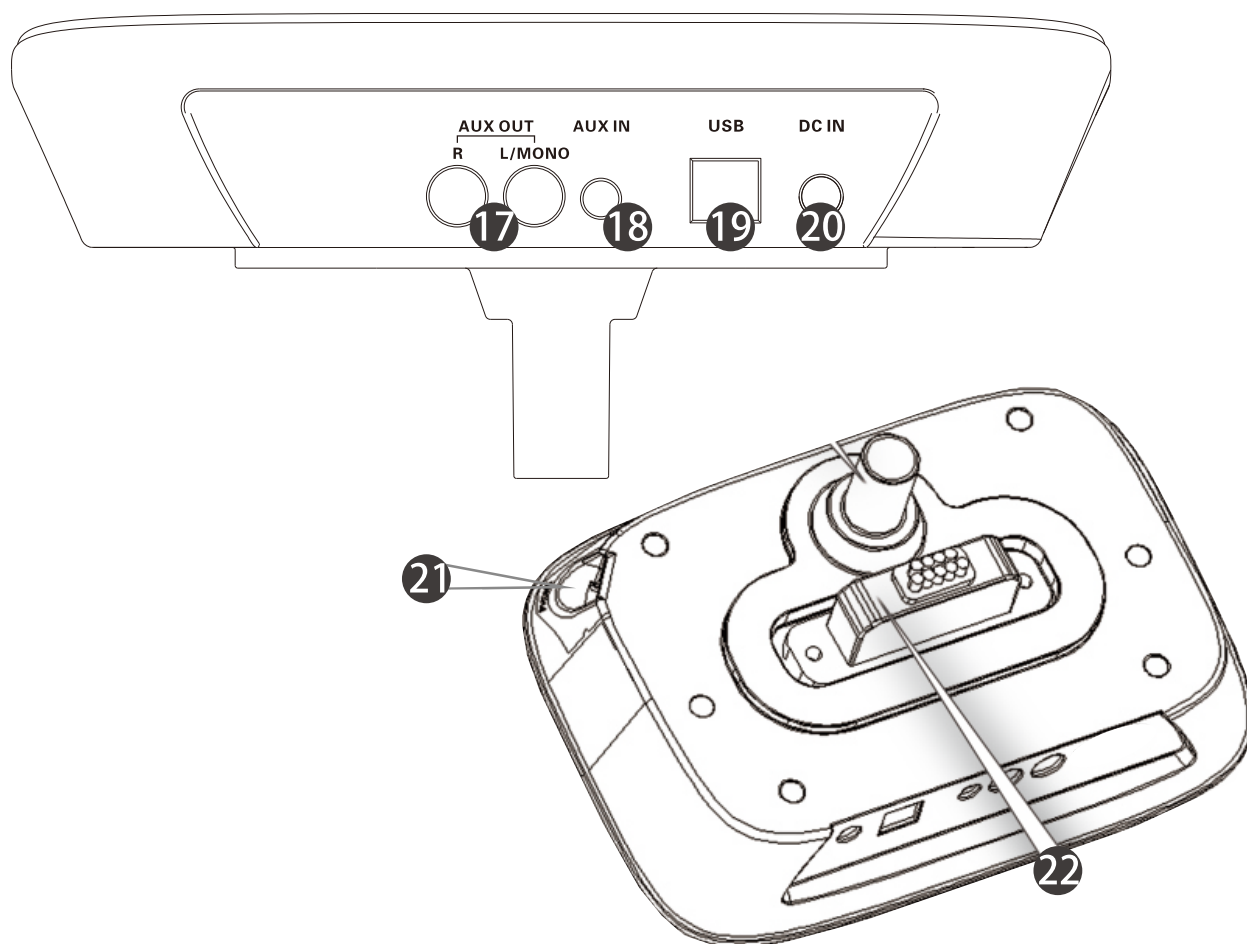

17 LINE OUTPUT Jack

Stereo output connection to an audio system or drum amplifier.

18 AUX IN Jack

This stereo input jack is for an external sound source, such as an Mp3 player.

19 USB Connector

This port is used to connect to a computer (MIDI In/Out via USB).

20 DC IN Jack

Connect the included DC 9V power adaptor.

21 PHONES Jack

This stereo input jack is used to connect headphones to the unit.

22 PAD Connectors

Input connections for Kick, Snare, Tom, Cymbal pads and Hi-Hat control pedal.

SETUP

 
CAUTION!

To prevent electric shock and damage to the device, make sure the power is turned OFF on the drum and all related device before making any connection

Connecting Pads and Pedals

Standard: KICK, SNARE, TOM1-3, CRASH1-2, RIDE, HIHAT, HIHAT CONTROL PEDAL

Using the provided cables, connect with kick, snare, tom1~tom3, ride, crash1-2, hi-hat, hi-hat control triggers. Snare are stereo input, support double triggering (increase edge triggering); crash1-2 and ride are stereo input, which support choke; kick, hi-hat are mono input, which can't response edge triggering. Hi-hat control pedal is mono input.

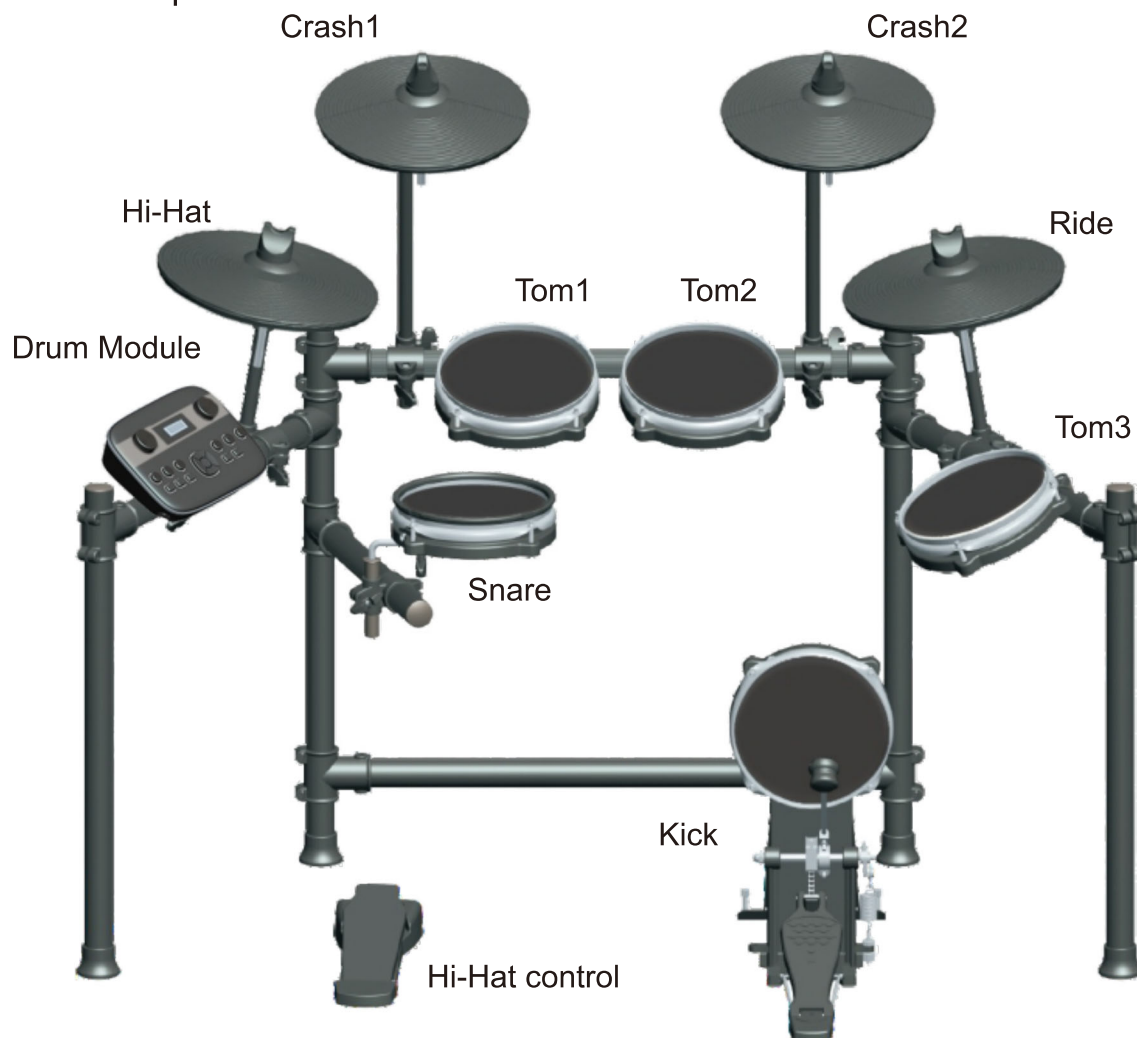

Note:

For details on assembling the drum stand, attaching the digital drum and connection pads, refer to the Installation manual.

Connections

Connecting an Audio Equipment

When using an amplifier, connect the Output L/MONO jack located on the side of the drum module.

Note:

The line output volume is controlled by the LINE OUT knob.

Connecting a set of Headphones

Headphones can be connected to the PHONES jack located on the side of the drum module.

 
Note:

The headphones output volume is controlled by the VOLUME knob.

Connecting a MP3 Player

Connect MP3 player or other audio source to the stereo AUX IN jack located on the side of the drum module.

The input signal is mixed with the drum signal, allowing you to play along.

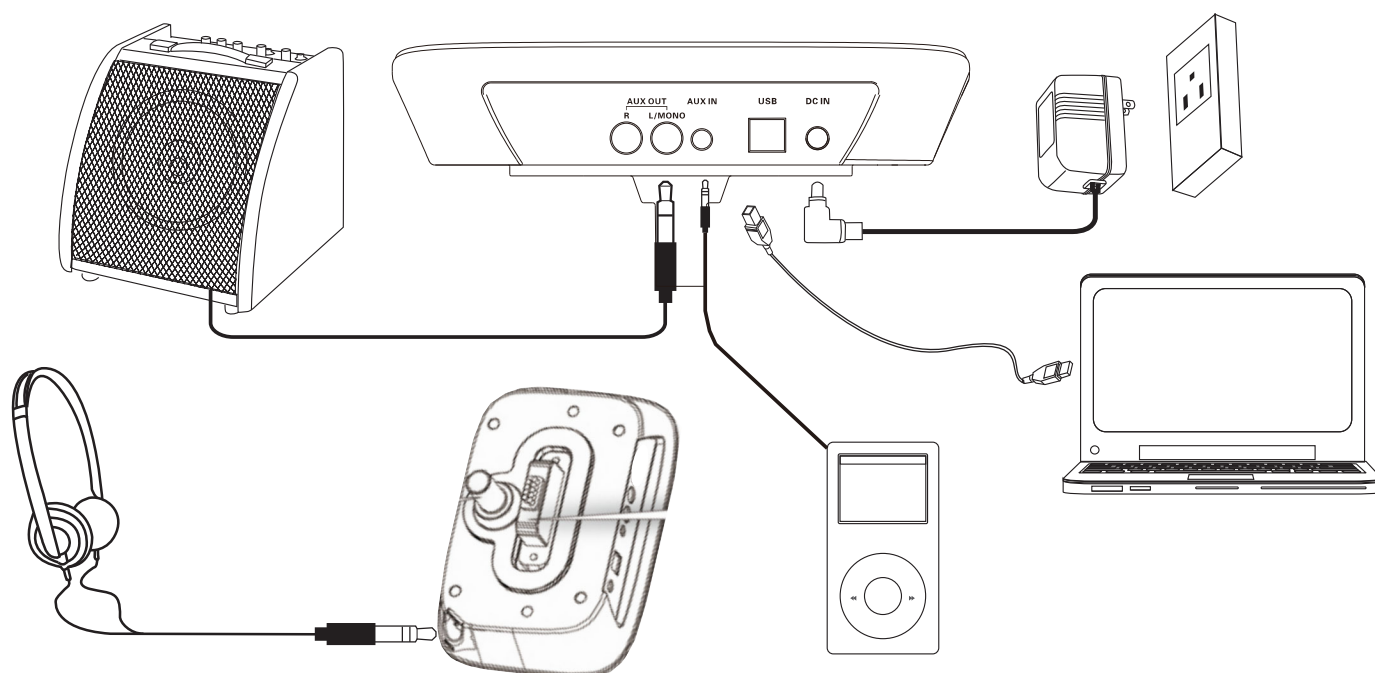

Connecting a Computer

Via the USB Connector, which can receives and transmits MIDI messages to a computer.

Power Supply & Switch

Make sure the power is switched OFF. Connect the adaptor to the DC IN jack on the side panel. After confirming that all connections have been completed, rotate the volume knob to the left (minimum volume level) before switching the power on. Press power button to turn on the drum, the digit tube will show kit number 001.

*TURN OFF:

The drum kit will be turned off after pressing power button.

Factory Reset

Press the [Vol-] and [Vol+] button at the same time and then turn on the power, then the digital drum will complete the factory reset.

Performing

Selecting a Drum Kit

After powering up, the digital drum will be in KIT menu(KIT button's led ON).

1. Use the [▲] and [▼] buttons to select the kit.

There are 15 kits in the digital drum:

- 10 preset kits (Kits 001-010)
- 5 user kits(Kits U01-U05), the parameter will display as "U01-U05", with an additional letter "U".

2. Hit the pad to play the current kit.

Playing the Pads

Similar to an acoustic drum kit, the digital drum responds differently to various playing techniques and dynamics. All the pads are velocity sensitive. And some voices change timbre depending on the striking force.

Drum Pad Head or Rim shot

The pad detects head and rim shots(rim shots trigger the rim voice).

Cymbal Bow shot and Choke

The cymbals detect bow shot.

Only the Crash1-2 and Ride cymbals have cymbal choke. To mute the sound, Choking the cymbals' edge with the hand immediately after hitting the Crash1-2 or Ride.

Hi-Hat

 
 
The Hi-Hat sound varies depending on the position of Hi-Hat pedal.

Open Hi-Hat: Strike the Hi-Hat pad without pressing the pedal.

Closed Hi-hat: Strike the Hi-Hat pad with the pedal Pressed completely down.

Pedal Close: Press the pedal completely down without striking the pad.


Splash: Press the pedal completely down and release it immediately

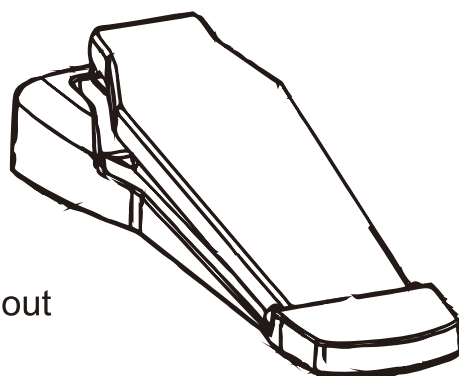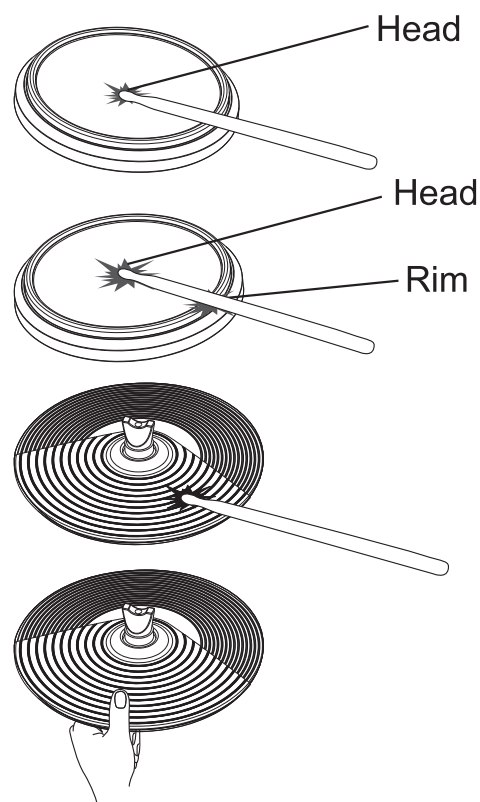

Adjusting the Sensitivity of a Pad

You may wish to adjust the sensitivity of the pads according to your playing style and desired dynamic range.

 1. Press the [UTILITY] button
The UTILITY led will be ON.
2. Strike a pad or press [▲] or [▼] button to select a pad or cymbal you want to adjust.
The digit tube shows the selected pad.
3. Press the [MENU] button twice to SENSITIVITY submenu.
4. Press the [▲] or [▼] button to adjust the sensitivity.
(The sensitivity range is from 1 to 16).
5. After the sensitivity is adjusted, it will be saved automatically.

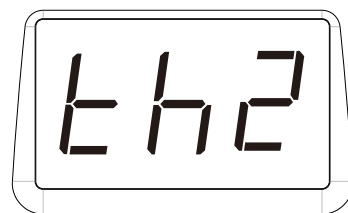

Metronome Feature

Press METRONOME button to Start/Stop Metronome function,
The Metronome LED will lighten.

Press Menu button to "Metronome" submenu,

Press once—Time signature

Press twice—Interval

 
Press three times—Volume

Then press the [▲] or [▼] button to set time signature interval and volume.


Time signature: 1~9 -2, 1~9 -4, 1~9 -8, 1~9 -16

Volume of metronome: 0~31

Time-Signature

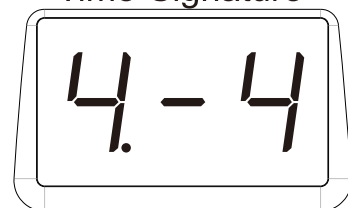

Interval

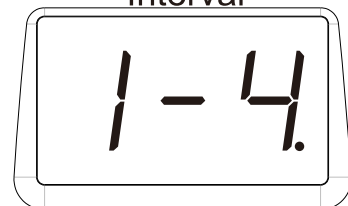 

Volume



Adjusting the Tempo

You can adjust the tempo of the Metronome, the current song.

1. Press the [TEMPO] button.
2. Press the [▲] or [▼] button to adjust the current tempo.

Note:

If there's no operation in 3 seconds, it will return to the previous menu page automatically.

Tempo

 


EDITING AND SAVING A DRUM KIT

In module, you can modify the parameters as you like and save to the selected user kit.

Adjusting the Volume of a Drum Kit




1. Press the [KIT] button, press the [▲] or [▼] button to select the kit you want to edit.
2. Press the [MENU] button once to Volume page.
3. Press the [▲] or [▼] button.
Adjust the kit volume.
Volume: 0~31

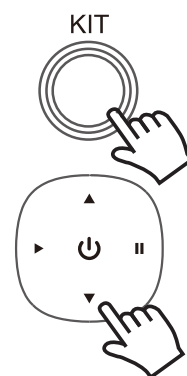

Selecting Voice for Pad or Cymbal



1. Press the [VOICE] button.
2. Strike a pad or press [▲] or [▼] button to Voice Page select the pad or cymbal you want to adjust.
3. Press the [MENU] button to Voice page.
4. Press the [▲] or [▼] button to select the voice you like for the pad you chose.

   Voice List is at the page 19

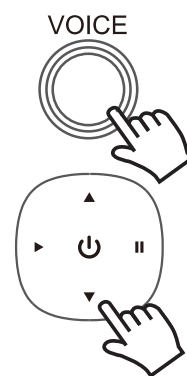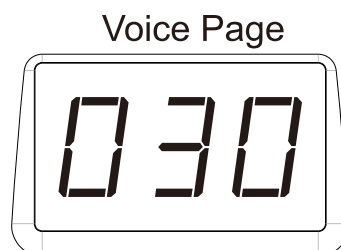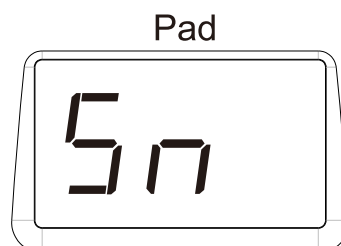



Adjusting the Volume of the Pad

  1. Press Voice button.
2. Press the [MENU] button to Volume page.
3. Press the [▲] or [▼] button.
Adjust the voice volume of pad.
(range 0-31)

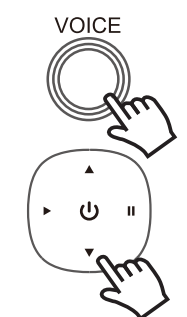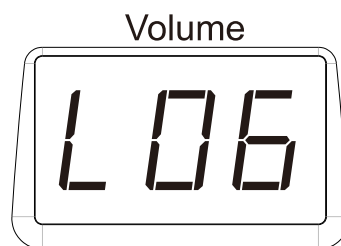

Saving the Edited Kit

  
1. Press the [SAVE] button, if the LED display will flash.
2. Press the [▲] or [▼] button.
Choose the user kit you want to save.
3. Press the [SAVE] button again,
the LED display of not flashing,
Save the setting the selected user kit.

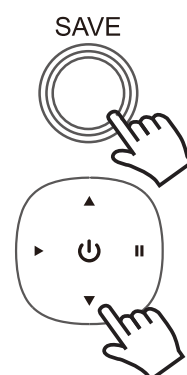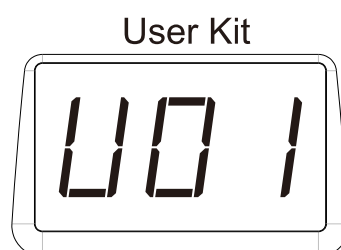

PLAYING ALONG WITH SONGS

Selecting and Playing Back a Song

1. Press the [SONG] button.
 2. Press the [▲] or [▼] button to select a Song you want to play with. The digital drum has 30 songs. Please refer to Song List.
 3. Press the [▶] or [||] button. Start or stop playing back.
- * The 31th song is for saving recording.

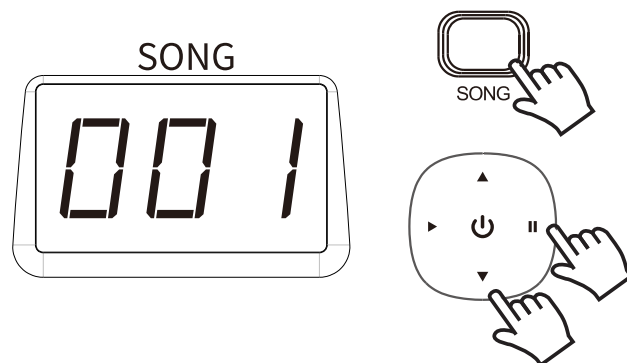 

Adjusting the Volume of the Song

In Song model

Press the [VOL-] or [VOL+] button.

 
Adjust the corresponding volume.

or: 1. Press the [MENU] button again.

Select the Volume Page.

2. Press the [▲] or [▼] button

Adjust the corresponding volume.

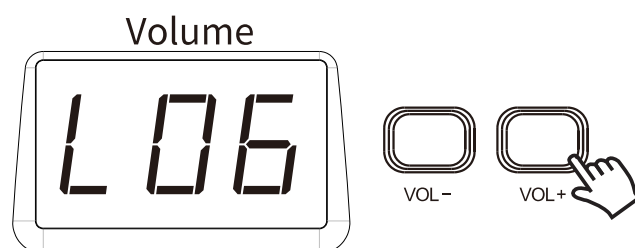


Muting the Drums in Songs

In Song model

1. Press the [MENU] button again.


Select the Drum off Page.

 2. Press the [▲] or [▼] button to set drum on/off.

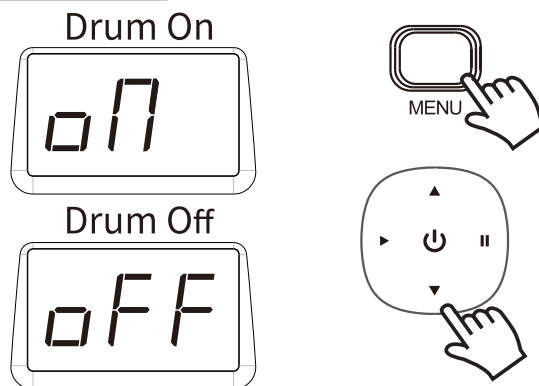

Bluetooth Feature

 1. Press the [UTILITY] button.
2. Press the [MENU] button again. Select the Bluetooth Page.
3. Press the [▲] or [▼] button to set Bluetooth on/off.
4. Search for Bluetooth devices: X3 Password: 6666

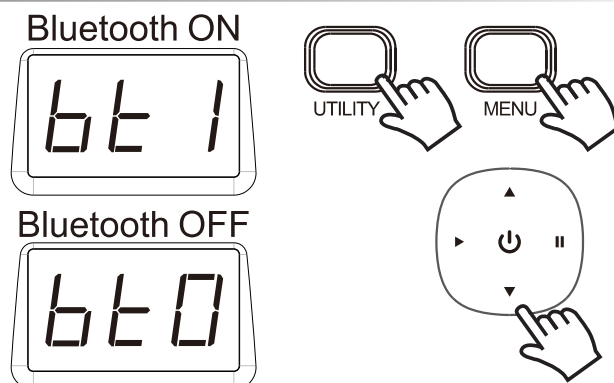

RECORDING YOUR PERFORMANCE


1. Into the recording mode press the [►] button to start record.
2. in the recording preparation state, press the [RECORD] button again.
The recording function will be cancel.

Note:

1. Under the recording preparation state, the guide metronome will automatically turn on, press [METRONOME] button to close it.
2. Press the [►] to turn on the recording and LED flashing, start recording after the guide metronome and LED displays the recording duration.
3. Press the [||] button to stop recording. The [RECORD] button LED stop flashing and automatically saves to U01


Recording Your Performance Quickly

1. Press the [RECORD] button.
The Metronome will be turned on automatically.
2. Press the [►] button to start recording.
3. Press the [||] button to stop recording, your performance has been recorded to user song.

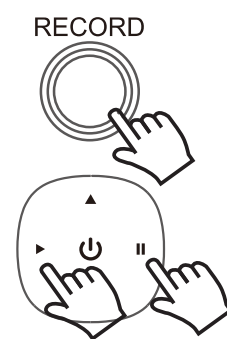 

Playing Back Your Recorded Performance

1. Press the [SONG] button.
2. Press the [▲] button.
Select the U01.
3. Press the [►] or [||] button.
Start or stop playing back this record song.

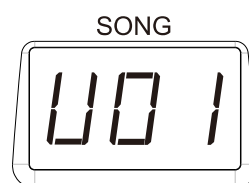 

You can record it again, the new record will replace the previous record automatically.

Beat and rhythm

Basic type show as follows:



MAKING THE SETTINGS FOR PADS

About Settings of Pads

If the digital drum is not yet in UTILITY menu,
Press the [UTILITY] button to enter it.

The UTILITY's LED will light up. You can use [▲] or [▼]
button to choose pad which you want to set or adjust
parameters for each pad.
All parameters will save automatically after choosing.

Threshold: This setting allows a trigger signal to be received
only when the pad is struck harder than a specified force.
This can be used to prevent a pad from sounding in response
to extraneous vibrations from another pad.
Press Utility Button, the LED shows threshold value, e.g. th2,
press [▲] or [▼] to set it.

Sensitivity: Adjust the sensitivity of the pad to regulate the pad
response. Higher settings result in higher sensitivity, so that
the pad will produce a loud volume even when struck softly.
Press [MENU] again, LED shows sensitivity value, e.g. S03,
press [▲] or [▼] to choose sensitivity.

Crosstalk: When two pads are mounted on the same stand,
the vibration produced by hitting one pad may trigger the sound
from another C t 3 pad unintentionally(This is called crosstalk).
You can avoid this sounding inadvertently. If the value is set
too high, then when two pads are played simultaneously, the
one that is struck less forcefully will not sound. So be careful
and set this parameter to the minimum value required to
prevent such crosstalk. With a setting of 0, crosstalk prevention
does not function.

Press [MENU] again, till LED shows Crosstalk Value, e.g. Cr3,
press [▲] or [▼] to choose the value you prefer.

Press [MENU] till LED shows Retring Cancel, e.g.r05,
press [▲] or [▼] to choose Retrig Cancel value.

Press [MENU] till LED shows Rim-Adjust Value, e.g. rA3,
press [▲] or [▼] to choose Rim-Adjust value.


Press [MENU] till LED shows Trans midi ch Value, e.g. h08,
press [▲] or [▼] to choose trans midi channel.

Curve: This setting allows you to control the relation between
the velocity (striking force) and changes in volume (the dynamic
curve).

Adjust this curve until the response feels as natural as possible.
Press [MENU] till LED shows Curv value, e.g. CU3,
press[▲] or [▼]to choose the Curv value.

Pad Settings	
Pad	Threshold (1-8)
	Sensitivity (1-16)
	Crosstalk (0-9)
	Retrig Cancel (1-16)
	Curve (1-6)
Special	Rim-Adjust (1-6)
	Transmit midi chanel (1-16)

 
Threshold

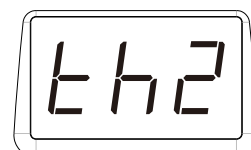

Sensitivity



 
Crosstalk

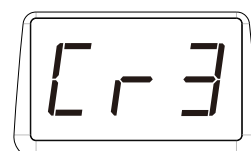

Retring Cancel



 Rim-Adjust

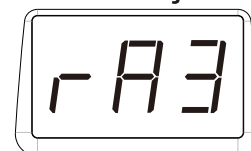

Trans midi ch



Curve



Curve refers to how the trigger signal's dynamic response relates to your pad hit.

Curve1:

The standard setting, this produces the most natural correspondence between playing dynamics and volume change.

Curve2,3:


Compared to Curve1, strong dynamics produce a greater change.

Curve4,5:

Compared to Curve1, a soft playing produces a greater change.

Curve6:

 Very little dynamic response, making it easy to maintain strong volume levels. If using drum triggers, these settings help maintain stable levels.

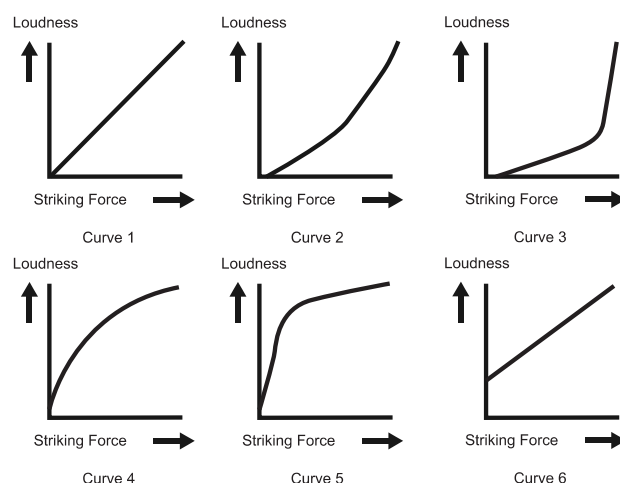

Retrig-Cancel: This setting prevents double triggering (retriggering) in response to a single strike. In particular for a drum trigger, the waveform is irregular, which can cause triggering to occur at point A in illustration. this is especially likely to occur as the waveform diminishes. The Retrig Cancel setting detects this irregularity in the waveform and prevents false triggering from occurring.

Retrig-Cancel



Saving Settings of Pads

After adjusting the trigger settings, you can save them into memory. In UTILITY menu, press the [UTILITY] button for a long time, the module will store all pad settings.

Note:

1. If you turn off the power without saving, you Will lose the trigger setting changes you have Just made.
2. These parameters affect all kits.

DRUM KIT LIST

NO.	Preset Kit
1	ROCK
2	POP
3	FUNK
4	METAL
5	JAZZ
6	BRUSH
7	VINTAGE
8	LATIN
9	DANCE
10	CONCERT

NO.	User Kit
1	PERCUSSION1 (U01)
2	PERCUSSION2 (U02)
3	PERCUSSION3 (U03)
4	PERCUSSION4 (U04)
5	PERCUSSION4 (U04)

DRUM INSTRUMENT LIST

NO.	Name	NO.	Name
	KICK		SNARE
1	KICK01	26	SNARE01
2	KICK02	27	SNARE02
3	KICK03	28	SNARE03
4	KICK04	29	SNARE04
5	KICK05	30	SNARE05
6	KICK06	31	SNARE06
7	KICK07	32	SNARE07
8	KICK08	33	SNARE08
9	KICK09	34	SNARE09
10	KICK10	35	SNARE 10
11	KICK11	36	SNARE 11
12	KICK12	37	SNARE 12
13	KICK13	38	SNARE 13
14	KICK14	39	SNARE 14
15	KICK15	40	SNARE 15
16	KICK16	41	SNARE 16
17	KICK17	42	SNARE 17
18	KICK18	43	CONCERT SN
19	KICK19	44	BRUSH SN
20	KICK20	45	SN_808
21	CONCERT BD1	46	SN_909
22	CONCERT BD2	47	SN_SDx
23	KICK_808	48	SIDESTICK1
24	KICK_909	49	SIDESTICK2
25	KICKSDX	50	SIDESTICK3

NO	Name	NO	Name
	SNARE		HIHAT
51	SIDESTICK4	101	CLOSED IHAT1
52	SIDESTICK5	102	CLOSED IHAT2
53	SNARERIM1	103	CLOSED IHAT3
54	SNARERIM2	104	CLOSED IHAT4
55	SNARERIM3	105	CLOSED IHAT5
56	SNARERIM4	106	CLOSED IHAT6
57	SNARERIM5	107	CLOSED IHAT7
58	SNARERIM6	108	CLOSED IHAT8
59	SNARERIM7	109	CLOSED IHAT9
	TOM	110	CLOSED IHAT10
60	TOM1H	111	CLOSED IHAT11
61	TOM1M	112	CLOSED IHAT12
62	TOM1L	113	PEDAL HIHAT1
63	TOM1F	114	PEDAL HIHAT2
64	TOM2H	115	PEDAL HIHAT3
65	TOM2M	116	PEDAL HIHAT4
66	TOM2L	117	PEDAL HIHAT5
67	TOM2F	118	PEDAL HIHAT6
68	TOM2LF	119	PEDAL HIHAT7
69	TOM3H	120	PEDAL HIHAT8
70	TOMBM	121	PEDAL HIHAT9
71	TOM3L	122	PEDAL IHAT10
72	TOM3F	123	PEDAL IHAT11
73	TOM4H	124	PEDAL IHAT12
74	TOM4M	125	OPEN HIHAT1
75	TOM4L	126	OPEN HIHAT2
76	TOM5H	127	OPEN HIHAT3
77	TOM5M	128	OPEN HIHAT4
78	TOM5L	129	OPEN HIHAT5
79	TOM6H	130	OPEN HIHAT6
80	TOM6M	131	OPEN HIHAT7
81	TOM6F	132	OPEN HIHAT8
82	BRUSHTOMH	133	OPEN HIHAT9
83	BRUSHTOMM	134	OPEN HIHAT10
84	BRUSHTOML	135	OPEN HIHAT11
85	TOM808H	136	OPEN HIHAT12
86	TOM808M	137	LOOSE HIHAT1
87	TOM808L	138	LOOSE HIHAT2
88	TOM808F	139	LOOSE HIHAT3
89	ELE TOMH	140	LOOSE HIHAT4
90	ELE TOMM	141	LOOSE HIHATS
91	ELE TOML	142	LOOSE HIHAT6
92	ELE TOMF	143	LOOSE HIHAT7
93	TOM909H	145	ELE HIHAT1
94	TOM909M	146	ELE HIHAT2
95	TOM909L	147	ELE HIHAT3
96	TOM909F	148	ELE HIHAT4
97	TOMSDXH	149	ELE HIHAT5
98	TOMSDXM		
99	TOMSDXL		
100	TOMSDXF		

NO.	Name	NO	Name	DEMO SONG LIST	
	CRASH	194	METRO_CLICK	NO	Name
150	CRASH01	195	METRO_BELL	1	16BEAT1.mid
151	CRASH02	196	808_CLAP	2	16BEAT2.mid
152	CRASH03	197	TAMBRINE	3	16BEAT3.mid
153	CRASH04	198	COWBELL1	4	8BEAT1
154	CRASH05	199	COWBELL2	5	8BEAT2
155	CRASH06	200	ECOWBELL	6	ROCK1
156	CRASH07	201	VSLAP	7	ROCK2
157	CRASH08	202	HIBONGO	8	ROCK3
158	CRASH09	203	LOBANGO	9	ROCK4
159	CRASH10	204	MUTECONGA1	10	BALLAD1
160	CRASH11	205	HICONGA1	11	BALLAD2
161	SPLASH01	206	LOCONGA1	12	BALLAD3
162	SPLASH02	207	HSTIMBLH	13	BALLAD4
163	SPLASH03	208	HSTIMBLL	14	BASSLINE
164	BRUSH CRASH1	209	HIAGOGO	15	POP BALLAD
165	BRUSH CRASH2	210	LOAGOGO	16	DANCE1
166	BRUSH CRASH3	211	CABASA	17	DANCE2
167	CHINACRASH1	212	MARACAS	18	DANCE3
168	CHINACRASH2	213	WHISTLE_S	19	POP
169	CONCERT CRASH	214	WHISTLE_L	20	BEGUINE
170	ELE CRASH1	215	GUIRO_S	21	FUNK
171	ELE CRASH2	216	GUIRO_L	22	SWING1
172	ELE CRASH3	217	CLAVE1	23	SWING2
173	ELE CRASH4	218	WBLK_H	24	SWING3
174	ELE CRASH5	219	WBLK_L	25	SWING4
175	ELECRASH6	220	CUICA_M	26	LATIN1
	RIDE	221	CUICA_O	27	LATIN2
176	RIDE1	222	MTRIANGLE	28	SLOWROCK1
177	RIDE2	223	OTRIANGLE	29	SLOWROCK2
178	RIDE3	224	SHKR1	30	JAZZ
179	RIDE4	225	JNGLBL		
180	RIDE5	226	BLLTREE		
181	RIDE6	227	CSTNTS1		
182	RIDE BELL1	228	SURDO_M		
183	RIDE BELL2	229	SURDO_O		
184	RIDE BELL3	230	CLICK_808		
185	RIDE BELL4	231	COWBELL_808		
186	ELE RIDE1	232	TIMPANI		
187	ELE RIDE2	233	RECYMBAL		
	PERCUSSION	234	DOWN		
188	HI Q	235	DJEMBEL		
189	SLAP	236	DJEMBEH		
190	SCR_PUSH	237	DJEMBEM		
191	SCR_PULL	238	TAIKO		
192	STICK	239	TAIKOS		
193	SQ_CLICK	240	LOGONG		

Manufactured by
Guangzhou Pearl River Amason Digital Musical Instrument Co.,Ltd.

Add:No.38.Xiangshan Ave,Zengcheng Economic and Technological Development
Zone,Guangzhou China
Tel:+86-20-36574618
Fax:+86-20-81764948
Email:maggiechen@prpiano.cn
NO.:01