

FCC Part 15 C Notice

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC RF Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and any part of your body. (Only for Boat receiver)

**INSTRUCTION MANUAL**

Thank you for purchasing the WAVE MASTER™. With proper care, your new WAVE MASTER™ will provide you with hours of enjoyment. Please read this instruction manual completely before using the product for the first time, and then keep this manual in a handy place for future reference.



Distributed by:
Costco Wholesale Corporation
P.O. Box 34535
Seattle, WA 98124-1535
USA
1-800-774-2678
www.costco.com

Conforms to safety requirements of ASTM, FCC and CPSIA.

WAVE MASTER™ is the registered trademark of AMAX Industrial Group LTD.
Office No.3,10/F Witty Commercial Building 1A-1L Tung Choi street, Mongkok.
Kowloon Hongkong © 2025 All Rights Reserved. Visit us at www.amaxbrands.com

Made in China
CT-6689
C009-USA-V1.0



WAVE MASTER™



Remote Control



AC Adapter Charger



Spare Parts & Tools

Instruction
Booklet

Colors and styles may slightly vary.

TABLE OF CONTENTS

Warning.....	1
Remote Control Battery Installation.....	2
Boat Preparation Before Playing.....	2
Charging the Boat's Battery.....	3
Boat Diagram.....	3
Safety Precautions.....	3
Remote Control Diagram.....	4
Syncing your boat.....	5
Operation Controls.....	6
Low Voltage Protection (Boat):	7
Properly Steering the Boat	7
Adjust Turn Fins.....	7
High Performance Mode.....	7
Cage Removal and Replacement of Propeller.....	8
Instructional Video.....	8
Care and Maintenance.....	9
Battery Charging Caution.....	9
Remote Control Battery Caution.....	9
Battery Disposal Caution.....	9
Limited 90-Day Warranty.....	10
FCC Information.....	11

WARNING


This product is not suitable for people under the age of 14.

Please follow this instruction manual to ensure the unit is assembled correctly before play. Some parts require adult assembly. The boat should be used under the supervision of an adult.

- Only when the boat has been assembled via the above instructions can it be used normally.
- Small parts are included with this product and may have a choking hazard
- Please contain all packaging material and keep out of reach of children to avoid injury.
- Please do not control the boat outside of the specified range to avoid losing the boat.
- Please do not use the boat in areas of water with a lot of grass or weeds. The grass and weeds can get caught in the propeller causing the boat to stop working.
- Please only use the boat in fresh water as salt water can damage the boat.
- Using the boat in public swimming areas with others in the water is **HIGHLY FORBIDDEN** as it may cause injuries to spectators.
- Using the boat in deep water is **HIGHLY FORBIDDEN** as it may cause accidents.
- Please ensure a safe distance from the moving propeller as to avoid injury or being wounded
- The battery and motor can heat up during normal use. Please **DO NOT** touch the motor or battery after play to avoid being burned.
- Please keep this instruction manual for future reference because it contains important information related to this item.


REMOTE CONTROL BATTERY INSTALLATION

1. Open the battery cover of the remote control, install 4 x 1.5V AA batteries(see diagram A).
2. Before turning on the remote control, ensure that the steering trim dial is roughly centered. This counteracts the natural torque of the propeller (see Figure B).

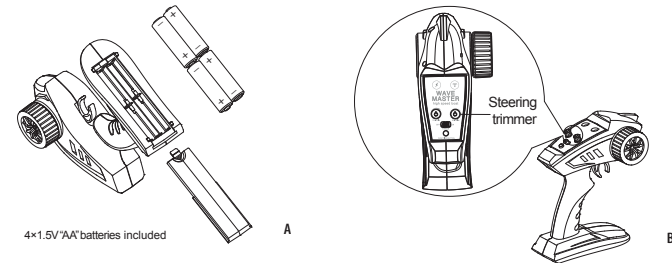


BOAT PREPARATION BEFORE PLAYING

1. Remove the top of the boat by turning the knob located towards the back of the boat, as shown in **diagram C1**.
2. Remove the additional protective cover inside the boat body. Once removed, clip the battery into position, as shown in **diagram C2 / diagram C3**. Ensure that the cables are close to each other and that the battery doesn't move freely.
3. Attach the battery to the power cable within the boat. **The connector will only fit one way** to ensure the correct orientation of the cables, do not force the connector **diagram C4**.
4. Place the inside protective cover back on the boat by sliding the front end in first and closing the back down, as shown in **diagram C5**. Twist the knobs to the closed position, ensuring the cover is clamped down, as shown in **diagram C6**.
5. Insert the outside cover back onto the boat by sliding the front end in first and closing the back down, as shown in **diagram C7**. Then twist the locking knob located towards the back end to the closed position, as shown in **diagram C8**.

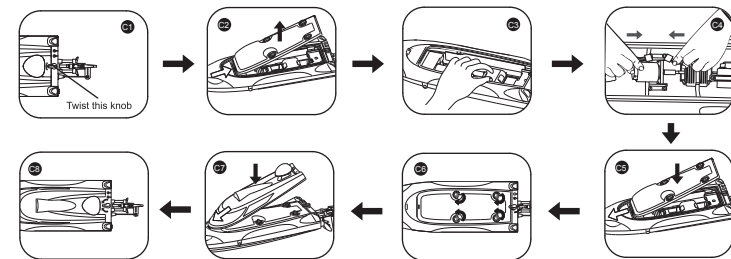

The battery is not connected when this product is shipped. Please connect the pre-installed battery according to the manual before using it for the first time.

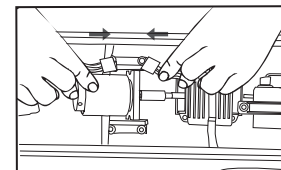


NOTE: The battery should be disconnected from the boat when it is not in use.


CHARGING THE BOAT'S BATTERY

Plug the charging brick into a compatible wall socket. Insert the battery's charging connector into the balance charger. The power indicator light will turn green when the charger is powered on. The connector can only be inserted in one direction—do not force it. The charging indicator light will turn red while the battery is charging. It takes approximately 200 minutes for the battery to fully charge. The charging indicator light will turn off when charging is complete. The boat can operate for approximately 18 to 22 minutes on a full charge. Once charging is finished, disconnect the battery from the charging cord and unplug the charger from the wall socket. The battery is now ready to be inserted into the boat. Do not store the battery while it is connected to the charger, and do not leave it connected inside the boat for extended periods of time.

Note: This product can only be charged indoors.

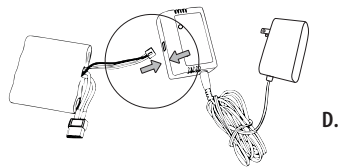


BOAT DIAGRAM

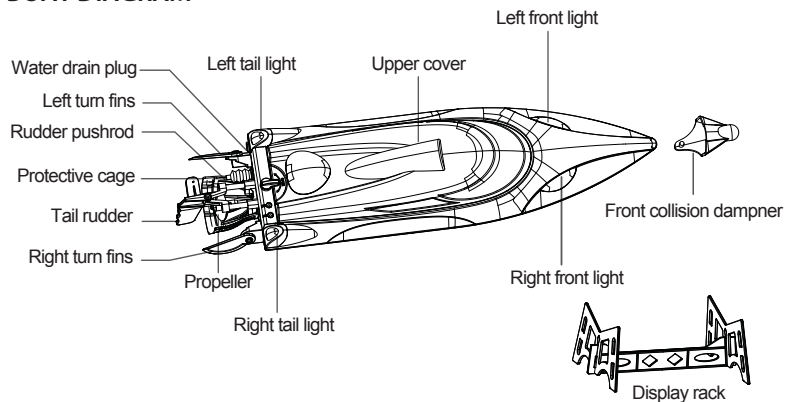


SAFETY PRECAUTIONS

Please **DO NOT TOUCH** the propeller while it is rotating. Failure to follow this instruction may cause serious injury.

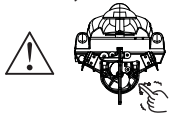


Please **DO NOT TOUCH** the motor after using the boat. Allow the motor to fully cool down before touching. Failure to follow this instruction may lead to serious injury.

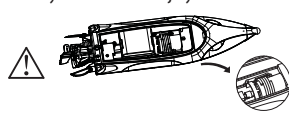

WARNING :


The propeller of this boat is made of metal. Do not touch it with your hands after the power is turned on.

REMOTE CONTROL DIAGRAM

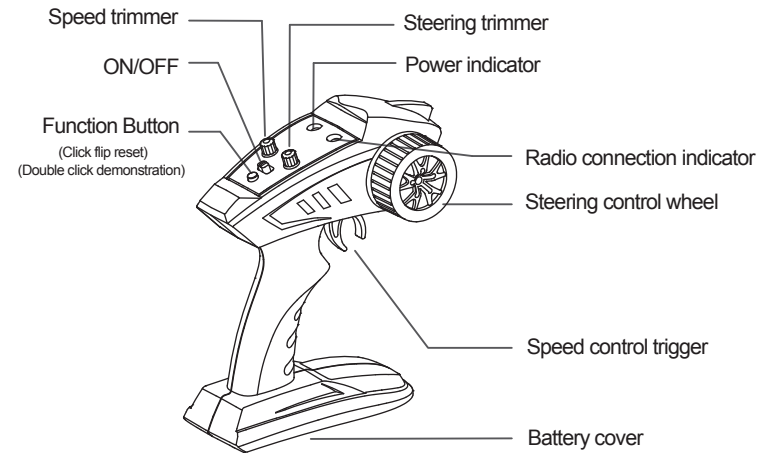


FUNCTION BUTTON

1. If the boat is upside down, or Capsized, press the Function Button once and the boat will self-right automatically.
2. Double click button to automatically demonstrate a figure 8. Pull the speed control trigger or steering wheel to exit the figure 8 maneuver.

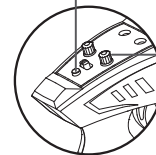

Adjust the steering trimmer if there are any issues with the maneuver. Perform this maneuver in a 65 ft x 65 ft minimum area to avoid collision.

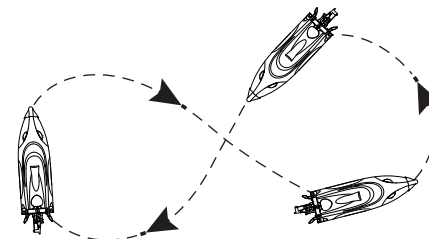

SYNCING YOUR BOAT

Your BOAT utilizes an automatic 2.4G selection system that allows up to 8 people to drive side by side in the same wireless range.

FOR ONE-PERSON PLAY:

1. Before starting, make sure there are no other 2.4G devices nearby.
2. Place the boat in the water. **The boat will automatically power on**, and its lights will begin flashing. Press and hold the "Function Button" on the remote control while turning on the remote's power switch. You will hear a single "beep" sound, and the remote's indicator light will flash green. When you hear two "beeps," pairing is complete — both the remote's green indicator light and the boat's lights will stay solid. Your boat is now ready to use.
3. **Automatic Pairing:** Once successfully paired, the boat and remote will automatically connect in future uses.

Note: If the LED indicators do not stay solid, repeat steps 1–3 to resynchronize the boat.

FOR MULTI-PERSON PLAY:

4. Before starting, make sure that all of the boats and remote controls are turned OFF. Ensure that there are no other 2.4G devices nearby.
5. Players must sync their boats successively. Make sure that no one else is syncing while you sync your boat by following steps 1–3 above.
6. When a player's boat is synced and working, it should be left ON while the other players sync their boats.
7. Should there be a mistake or interference, all players must turn off their remote controls and boats and start the process all over again.

WARNING TIPS:


When finished playing, take the boat out of water and then switch off the remote control. Failure to follow this instruction may cause the boat to lose control due to the interference of other signals. The boat will automatically turn off once it is removed from the water. Make sure to disconnect the battery after use!

OPERATION CONTROLS

Forward




Pull the speed control trigger slowly backward to propel the boat forward. Pull the trigger further backwards to increase the speed of the boat. Adjust the maximum speed of the boat via the speed trimmer if necessary.

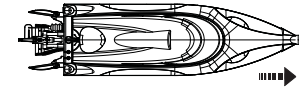

Backward





Push the speed control trigger slowly forward to propel the boat backward. Push the trigger further forward to increase the speed of the boat.

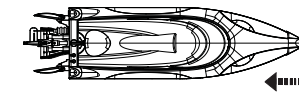

Turn left





Rotating the steering wheel in a counter clockwise motion will steer the boat left when moving forward. Increase the steer for a sharper turning radius.

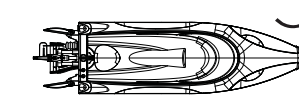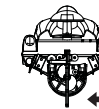

Turn right




Rotating the steering wheel in a clockwise motion will steer the boat right when moving forward. Increase the steer for a sharper turning radius.

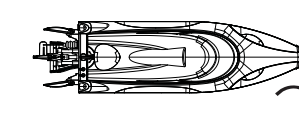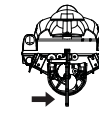

Automatic reset function after capsizing

Click the button

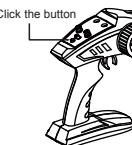

If the boat becomes inverted during play, press the function button once to automatically flip the boat over.




LOW VOLTAGE PROTECTION (BOAT):

When the battery has become exhausted, the boat may stop or slow down while in normal use. The boat body will begin to flash. Additionally, the green light on the remote control will begin to flash and a beeping sound will be produced. If this happens, release the speed control trigger and then pull the trigger again to drive the boat back to shore (driving speed will be significantly decreased to ensure the boat has enough power to make it back to shore). Charge the boat per the charging instructions to resume full operation.

PROPERLY STEERING THE BOAT


The boat has digital proportional steering. The boat has the ability to go straight-forward, forward-left, forward-right, straight-backward, backward-left, backward-right (See Diagram E). With the boat's proportional steering system you can accurately control your boat in all types of situations making driving this boat a blast! We suggest practicing with gentle movements on the steering wheel so you can get used to the feeling and sensitivity of the boat steering system. Start slow and remember, practice makes perfect!

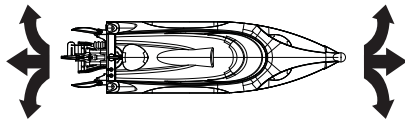

E.

ADJUST TURN FINS


Turn fins are key components for remote-controlled boats, aiding in steering and stability. The fins included on this boat have 3 different positions. The recommended position for the left fin is position 3 (lowest in the water) and the right fin in the first position (highest in the water). The fins in this position provides strong steering force for sharp direction changes (but increases resistance). So with the fins down, the boat may lose some top speed, but have an improved turning stability.

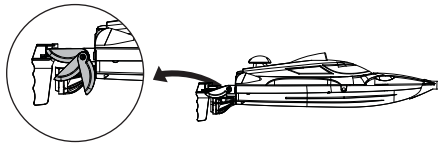

HIGH PERFORMANCE MODE

Once you've become skilled at operating the boat and want to experience higher performance, you can remove the propeller guard to unlock the full potential of the Wave Runner. In this mode, your boat will reach higher speeds and run more smoothly for an enhanced experience! See below for instructions of how to remove the protective cage.


Important Notice: The propeller is made of metal and can be sharp. Please handle it with extreme care after removing the protective cover to avoid injury.

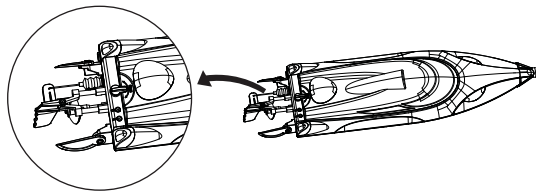


CAGE REMOVAL AND REPLACEMENT OF PROPELLER

Before starting, ensure the vessel is completely powered off and the battery is disconnected (see diagram F1). Using the included screwdriver, remove the two screws from the protective cover and take off the propeller guard (see diagram F2). Then, use the provided hex wrench to unscrew the damaged propeller from the motor (see diagram F3) and remove it. Replace the damaged propeller with the spare one supplied in the package, and securely screw it back onto the motor. Finally, reinstall the propeller guard and tighten all screws firmly.


Note: Make sure all parts are properly secured before operating the vessel again.

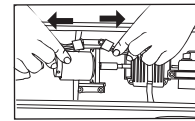

F1

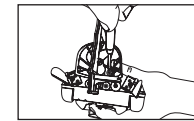

F2

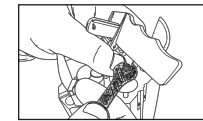

F3

IMPORTANT

Please watch this short instructional video before attempting to play your **WAVE MASTER™**

HOLD YOUR PHONES CAMERA OVER QR CODE



CARE AND MAINTENANCE

1. Please avoid letting this unit be exposed to direct sunlight for a long duration. If the unit becomes stained or soiled, please use a neutral detergent mixed with water to clean the unit. Do not let water get into the inner workings of the boat.
2. Please clean the boat before storing for extended periods of time.
3. Please remove the lithium battery from the boat before storing for an extended period of time.
4. Please remove the batteries from the remote control before storing for extended periods of time.

BATTERY CHARGING CAUTION

- Only the original charging cable included can be used.
- This charging cable is not a toy.
- Do not leave battery charging unattended
- If the battery is found very hot during the course of charging, please stop charging immediately.
- When charging is completed, remove the battery from the charger and unplug the charger from the wall.
- If the battery becomes hot suddenly, or appears abnormal odor or deformed or discolored or any other abnormal phenomenon during charging, please stop using this battery immediately.
- When finished using the product, it is highly recommended that you wait for 30 minutes before charging the battery, this helps extend the battery life.
- If you are expected to store the battery for an extended period of time. Fully charge the battery and then use the boat for 50% of its maximum run time. This lowers the voltage of the battery to an recommended storage charge.
- Please disconnect the boat with the charging cable before cleaning.

REMOTE CONTROL BATTERY CAUTION

- Rechargeable batteries are to be removed from the toy before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Different types of batteries, new or used, are not to be mixed.
- Only batteries of the same or equivalent type are recommended to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the toy.
- The supply terminals are not to be short-circuited.
- Do not mix old and new batteries
- Do not mix alkaline batteries, standard (carbon-zinc), or rechargeable (Nickel-cadmium) batteries.
- Use alkaline batteries for best performance and longer life.
- Please remove the batteries when it is not used for a long time.
- Please check periodically the charger, electric wire, plug, outer shell, and other parts. In the case there is any damage found, please stop using it right away until it is fixed.

BATTERY DISPOSAL CAUTION

- Disassembling or re-equipping the battery is HIGHLY FORBIDDEN.
- Short-circuit is HIGHLY FORBIDDEN.
- Throwing the battery into the water is HIGHLY FORBIDDEN.
- Directly contacting the fluid leakage of the battery is HIGHLY FORBIDDEN.
- Striking or throwing the battery is HIGHLY FORBIDDEN.
- Charging the battery near the fire or charging under the direct sunshine is HIGHLY FORBIDDEN.
- Using the damaged or deformed battery is HIGHLY FORBIDDEN.
- Inserting the object of sharp edge into the battery or other way of damaging the battery is HIGHLY FORBIDDEN.
- Please follow the charging requirement and use the charger assigned to charge the battery.
- Always replace the whole set of batteries at one time.

Limited 90-Day Warranty

NORTH AMERICA

AMAX Industrial Group warrants to the original consumer that this product is free from any electrical or mechanical defects for a period of 90 DAYS from the date of purchase. If any such defect is discovered within the warranty period, AMAX Industrial Group will repair or replace the unit free of charge upon receipt of the unit, shipped postage prepaid and insured to our warranty center ALONG WITH THE ORIGINAL RECEIPT evidencing that the product was purchased from an approved AMAX retail partner and that the product is still within the 90 day warranty period. The warranty covers normal consumer use and does not cover damage that occurs in shipment or failure that results from alterations, accident, misuse, abuse, neglect, wear and tear, inadequate maintenance, commercial use or unreasonable use of the unit. Removal of any parts/components voids all warranties. This warranty does not cover cost of repairs made or attempted outside by third-party individuals or companies. Any applicable implied warranties, including warranties of merchantability and fitness, are hereby limited to 90 DAYS from the date of purchase. Consequential or incidental damages resulting from a breach of any applicable express or implied warranties are hereby excluded. Some states do not allow limitations on the duration of implied warranties and do not allow exclusion of incidental or consequential damages, so the above limitations and exclusions in these instances may not apply.

REPAIR/REPLACE PRODUCT

If your product begins to malfunction or stop working, immediately contact our warranty center (contact details listed below). If it is determined that a return is necessary, our warranty department will issue you an RMA number/form and an address to the nearest return center for shipping the product to us. When honoring the warranty, AMAX reserves the right to either repair, replace or refund the product.

IMPORTANT NOTICE:

We will reject and return to sender returns that are not accompanied by an AMAX issued RMA form and RMA number so make sure to contact our warranty center before attempting to return your product!

PREPARATION FOR SHIPPING YOUR PRODUCT:

Please repack your product in a durable box, preferably in the original carton, and send it prepaid, and adequately insured. Include the RMA form that was issued by our warranty department along with your daytime telephone number and email address inside the shipping carton. If your warranty has expired and you still require service please contact our customer care team. For further information please send all inquiries to: customer care@amaxbrands.com

IMPORTANT NOTICE!
DO NOT ATTEMPT TO SHIP YOUR PRODUCT BACK
WITHOUT FIRST CONTACTING OUR WARRANTY
DEPARTMENT AT:

Phone 1-866-360-1510

English Support Hours of Operation:

Days: Monday to Friday

Time: 9:00 AM to 6:00 PM Eastern Standard Time (EST)