

PERSONAL HYGIENE APPLIANCE

NB-R3063VS



CONTENTS

3	Important Safeguards
5	Grounding Instructions
6	Parts Identification
8	Basic Instructions
9	Functions & Operation
12	Installation
16	Trial Operation
17	Detachment
18	Maintenance
20	Troubleshooting
21	Regulatory Information
22	Product Specifications
23	Warranty

-
- This product was manufactured for household use only.
 - Read all operating instructions before installation and use.
 - Please save this operating instruction manual and place it in an easily accessible location.
 - External appearance and specifications are subject to change for the improvement of a product without notice.

IMPORTANT SAFEGUARDS

READ ALL INSTRUCTIONS BEFORE USING.

| DANGER – To reduce the risk of electrocution.

- Do not use while bathing.
- Do not place or store product where it can fall or be pulled into a tub or sink.
- Do not place in or drop into water or other liquid.
- Do not reach for a product that has fallen into the water. Unplug immediately.

| WARNING – To reduce the risk of burns, electrocution, fire or injury to persons.

- Close supervision is necessary when this product is used by, on, or near children or invalids.
- Use this product only for its intended use as described in this manual.
Do not use any attachments unless recommended by the manufacturer.
- Never operate this product if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water.
Return the product to a service center for examination and repair.
- Keep the cord away from heated surfaces.
- Never block the air openings of the product or place it on a soft surface, such as a bed or couch, where the air openings may be blocked.
Keep the air openings free of lint, hair, and the like.
- Never use while sleeping or drowsy.
- Never drop or insert any object into any opening or hose.
- Do not use outdoors, or operate where aerosol(spray) products are being used or where oxygen is being administered.
- Connect this product to a properly grounded outlet only. See Grounding Instructions.
- Any other servicing should be performed by an authorized service representative.
- Do not dismantle, repair, or alter the unit.
- Do not pour or spray water on to the unit.
- The unit must be grounded.
- Do not touch the power plug with wet hands.
- Properly connect the power cord to the electrical outlet corresponding to the rated voltage of the unit.
- Do not use a damaged or loose power cord.
- Do not use steam cleaner.
- Keep the unit away from fires or inflammable substance.
- Do not connect to the industrial water supplies.
- Do not connect other electrical appliances to the same power socket connected to the unit.
- Replace damaged power cord and plug by authorized service center.
- Caution against low-temperature burns.
- Before removing the unit from the toilet bowl, disconnect the power plug first.

SAVE THESE INSTRUCTIONS

IMPORTANT SAFEGUARDS

| CAUTION – To reduce the risk of injury to persons or damage to the product or the property.

ATTENTION – Réduire les risques de blessures aux personnes ou de dommages au produit ou aux biens.

- Do not connect the main water supply to the hot water pipe or supply.
(only connect to the cold water supply)
Ne raccordez pas l'alimentation principale en eau à la conduite d'eau chaude.
(raccordez-la uniquement à la conduite d'eau froide)
- After the installation, make sure to check all water supply connections for leaks.
Rubber washers should be in place for the water connection hoses & T-Valve.
Après l'installation, n'oubliez pas de vérifier la présence de fuites dans tous les raccords d'alimentation en eau. Des rondelles de caoutchouc doivent être posées à chaque raccordement des tuyaux et autour de la valve en T.
- Do not open/close the seat or seat cover with excessive force.
N'abaissez pas et ne relevez pas le siège ou le couvercle du siège en utilisant une force excessive.
- Exercise caution that urine does not come into contact with the product failure to do so may result in bad odors or malfunction.
Veillez à ce que l'urine n'entre pas en contact avec le produit. Tout manquement pourrait entraîner de mauvaises odeurs ou une défaillance.
- If the product will not be used for a long period of time, unplug the power cord, close the main water supply valve, and drain any water in the water tank.
Lorsque le produit ne sera pas utilisé pendant une longue période, débranchez le câble d'alimentation, coupez l'alimentation principale en eau et videz l'eau du réservoir.
- Do not pull out the bidet hose using excessive force.
Ne tirez pas sur le tuyau du bidet en utilisant une force excessive.
- Do not use thinner, benzene, acidic chemicals, chloride, or hydrochloric acid detergent on or near the product. This may result in corrosion to the metal parts or discoloration or scratches to the bidet body.
N'utilisez pas de diluant, de benzène, de produits chimiques acides, de chlorure ou de détergent à l'acide chlorhydrique sur le produit ou à proximité de celui-ci. Cela peut entraîner la corrosion des pièces métalliques, ou encore des égratignures ou une décoloration du bidet.
- This appliance is not intended for use by persons (including children and seniors) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
Cet appareil n'est pas conçu pour être utilisé par des personnes (notamment des enfants et des personnes âgées) présentant des capacités physiques, sensorielles ou mentales réduites, ou un manque d'expérience et de connaissances, sauf si elles sont supervisées ou informées sur l'utilisation de l'appareil par une personne responsable de leur sécurité.
- Children should be supervised to ensure that they do not play with the appliance.
Les enfants doivent être surveillés pour s'assurer qu'ils ne jouent pas avec l'appareil.




SAVE THESE INSTRUCTIONS CONSERVEZ CES INSTRUCTIONS

GROUNDING INSTRUCTIONS

- This product should be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This product is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.


| DANGER – Improper use of the grounding plug can result in a risk of electric shock.

- If repair or replacement of the cord or plug is necessary, do not connect the grounding wire to either flat blade terminal. The wire with insulation having an outer surface that is green with or without yellow stripes is the grounding wire. Check with a qualified electrician or serviceman if the grounding instructions are not completely understood, or if in doubt as to whether the product is properly grounded.
- This product is for use on a nominal 120 V circuit, and has a grounding plug that looks like the plug illustrated in Figure A. A temporary adapter, which looks like the adapter illustrated in Figure B and C, may be used to connect this plug to a 2-pole receptacle as shown in Figure B if a properly grounded outlet is not available. The temporary adapter should be used only until a properly grounded outlet (Figure A) can be installed by a qualified electrician. The green colored rigid ear, lug, and the like extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box cover. Whenever the adapter is used, it must be held in place by the screw.
- If it is necessary to use an extension cord, use only a three wire extension cord that has a three-blade grounding plug, and a three-slot receptacle that will accept the plug on the product. Replace or repair a damaged cord.

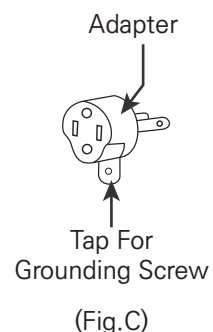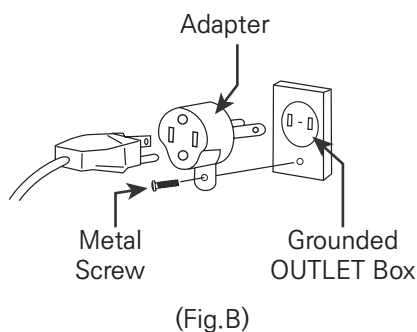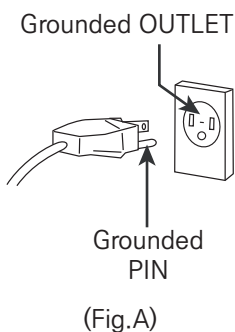

Parts Identification

| Main Unit

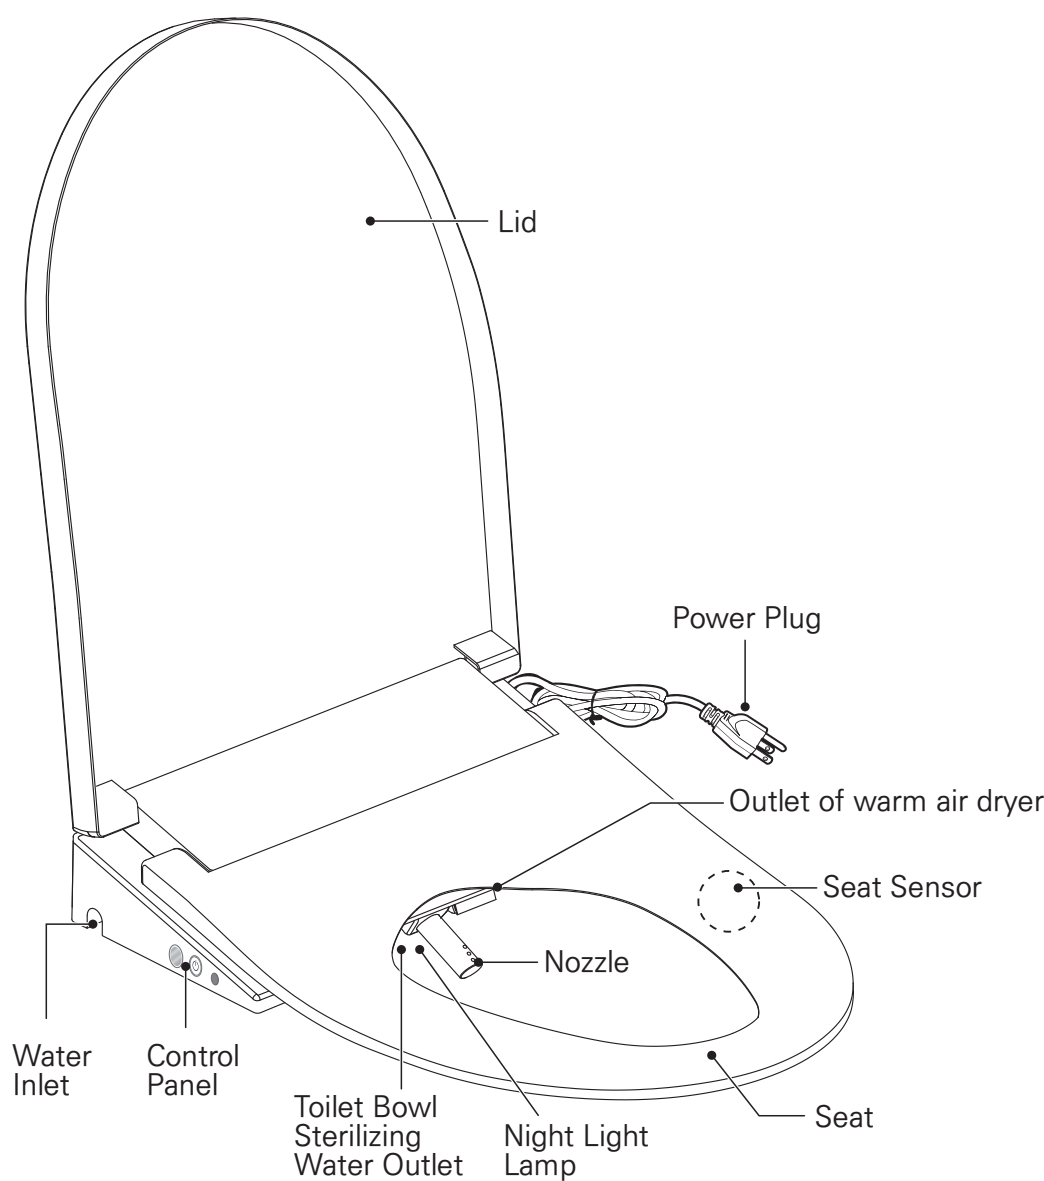


| Control Panel

·Remote control




·Unit control panel

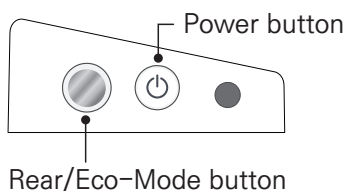

- Power: Press and hold for about 2 seconds to turn the power ON/OFF.
- Rear: Press once to start Oscillating Wash press again to stop.
- Eco-Mode: Press and hold for about 4 seconds to activate Auto Energy Saving Mode. Press and hold again for about 4 seconds to deactivate the mode.


| Accessory Parts

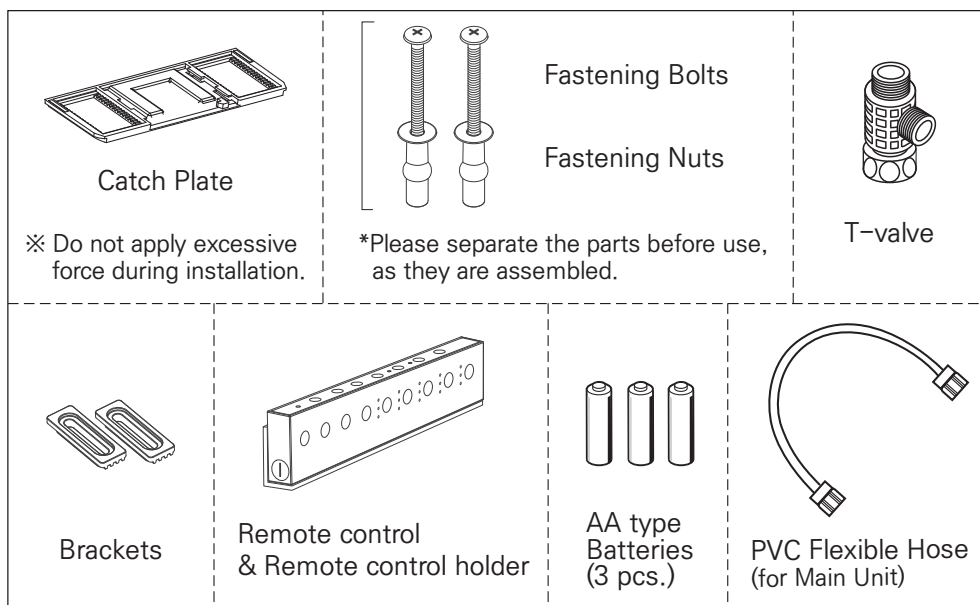

Basic Instructions


- ※ Please sit in the center of the toilet seat when using.
The seat temperature will automatically lower if it is not used for 30 minutes.
- ※ Long Sitting Alert: If the user remains seated and inactive for more than 5 minutes, an alert sound will notify to prevent discomfort and potential health issues caused by prolonged sitting.
- ※ Skin Detection Sensor: The sensor is installed inside the toilet seat and activates when it comes into contact with human skin.
Covering the seat with a mat or other material may prevent the sensor from detecting skin.
If the sensor does not activate, functions such as cleansing, bidet, drying, child mode, and spa mode will not operate.

1. Sit on the seat.

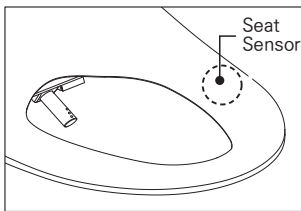


- Sit in center.

2. Press the "REAR" or "FRONT" button.

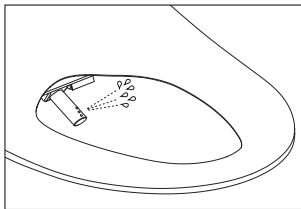


- The REAR or FRONT function will start.
- While operating, if you press the REAR or FRONT button again, the nozzle will move back and forth for a moving cleanse.

3. Press the "DRY" button.

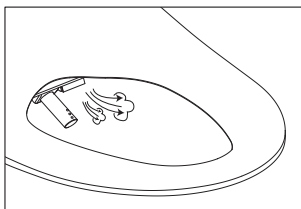

- The function will operate for 3 minutes.
- You can adjust the temperature by pressing the button again during operation.

4. Press the "STOP" button.

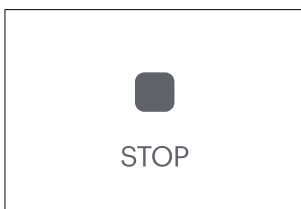

- Stops all cleansing functions such as REAR, FRONT, ENEMA, CHILD, and SPA.

Functions & Operation

| Backlight Function

- The touch remote buttons are illuminated, making it easy to identify buttons in dark environments.
- Tap the front of the remote once to turn on the backlight, then press any button to operate functions.
- When the backlight is OFF, pressing a button immediately activates the function.
- Backlight usage affects battery replacement intervals.

| Night Light Function & Remote Backlight ON/OFF

- Night Light Function: Press the "NIGHT LIGHT" button briefly to toggle the soft night light ON/OFF. When ON, the bidet detects ambient light and softly illuminates the bathroom at night. This function operates independently of the backlight and is energy-efficient.
- Remote Backlight ON/OFF: Press and hold the "NIGHT LIGHT" button for about 3 seconds to toggle the remote button backlight ON/OFF. Both functions work independently, allowing convenient use at night without turning on the main lights.

| User Settings

- While using REAR or FRONT, adjust water pressure, water/seat temperature, nozzle position, and move function. Press and hold "USER 1" or "USER 2" for about 3 seconds to save the settings. A long beep will sound to confirm.
- Saved settings can be recalled by pressing "USER 1" or "USER 2," and a short beep will sound during operation.
- Up to two personalized user profiles can be saved.

| SPA Function

- Pressing the SPA button automatically sets water pressure and temperature, and operates for 3 minutes.
- Press the button again during operation to toggle the move function ON/OFF.

| Child Function

- Press the CHILD button to start a 1-minute program with automatic water pressure and nozzle position suitable for children.
- Water and seat temperatures are limited to medium for safety.
- During operation, pressing the CHILD button again toggles the move function ON/OFF.
- A "beep" sound signals completion.
- For safety, the ENEMA button cannot be used while the CHILD function is active.

| Enema Function

- Press the ENEMA button to activate a strong water jet with a pump to enhance bowel movement.
- After use, the nozzle is automatically sterilized.

| Water Pressure Adjustment

- During REAR or FRONT use, press the PRESSURE button to adjust WATER PRESSURE.
- The last used WATER PRESSURE is remembered.

| Water Temperature Adjustment

- Press the WATER TEMP button to adjust WATER TEMP.
- LED indicators show OFF, LOW, MEDIUM, and HIGH levels.

| Seat Temperature Adjustment

- Press the SEAT TEMP button to adjust SEAT TEMP.
- LED indicators show OFF, LOW, MEDIUM, and HIGH levels.
- For safety, if set to HIGH for more than 30 minutes, the seat temperature automatically lowers to prevent burns.

| Nozzle Position

- During REAR or FRONT use, press the NOZZLE POSITION button to adjust the nozzle position.

| Automatic Nozzle Cleaning Function

- Before using REAR or FRONT, water flows to clean the nozzle automatically.
- After use, when the user stands up, the nozzle moves again and automatically cleans with water.

| Automatic Sterilization

- Press the AUTO CLEAN button briefly (without sitting) to sterilize the water path, nozzle, and bowl. Press again to stop.
- Press and hold the button for about 3 seconds to toggle automatic sterilization every 12 hours ON/OFF.
- Automatic sterilization only works in dark environments when no one is sitting. Power outages turn the function OFF.

| Nozzle Cleaning

- Short Press: When the bidet is not in use (seat unoccupied), pressing the Nozzle Cleaning button activates cleansing water flow. The nozzle moves back and forth automatically for approximately 2 minutes to perform self-cleaning.
- Long Press: Press and hold the Nozzle Cleaning button for about 3 seconds to extend the nozzle and keep it stationary for 2 minutes.
This mode allows easy manual cleaning with a brush or replacement of the nozzle.
(Press the Stop button to retract the nozzle.)

| Eco-Mode

- Press and hold the REAR/ECO-MODE button for about 4 seconds to enable Eco Mode.
The LED turns blue.
- Press and hold again for 4 seconds to disable Eco Mode; the LED turns white.
- Seat temperature is maintained while in Eco Mode. Functions temporarily resume when the user sits and pause when the user stands.

| Power ON/OFF

- Power ON: While not seated, press and hold the REAR/ECO-MODE button for about 2 seconds. The button LED lights white, and the power turns on. Make sure the power plug is connected.
- Power OFF: While not seated, press and hold the REAR/ECO-MODE button for about 2 seconds. The button LED turns off, and the power turns off.


Installation

Caution before installation


- Check whether the size and shape of the toilet seat are suitable for installation.
- A ground connection should be done by authorized service personnel only.
- Do not connect the power until installation is finalized.
- Check all the accessory parts are in place.

1. Remove the existing toilet seat.

- Remove the existing toilet seat and lid by unfastening fastening nuts underneath.
- Keep the detached seat, lid and nuts for later use.

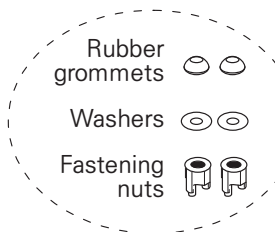


2. Drain toilet water tank completely after turning off the water supply by turning the shut off valve clockwise.

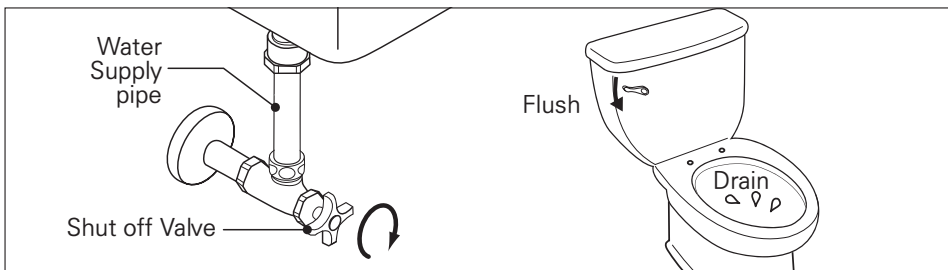

3. Detach the water supply hose on the part of the shut off valve, then install the T-valve.


- In case of a rigid pipe, T-valve cannot be installed.
Needs to purchase and install the separate flexible hose (for water tank).

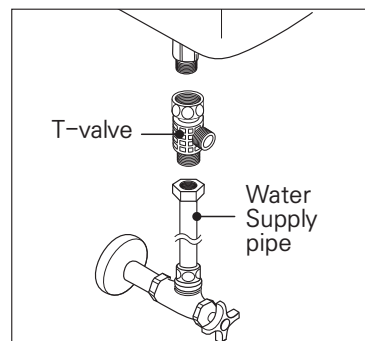

〈 Install Catch Plate for top-mounted toilet seats〉

4. Insert the Fastening Nuts into the installation holes of the toilet.


- The distance between the installation holes must be between 140 mm and 200 mm.

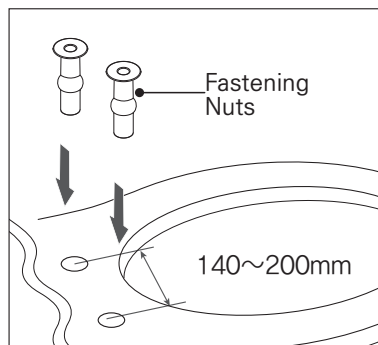

5. Place the Catch Plate on top of the inserted Fastening Nuts. Insert the Brackets and secure them with the Fastening Bolts.


- When tightening the Fastening Bolts, be careful not to push the Fastening Nuts into the ceramic and cause them to come loose.
- The Catch Plate is an important component that securely holds the bidet in place.
Avoid applying excessive force during installation.

⚠ Caution: If the Catch Plate is damaged, replacement costs may apply.
Please handle with care during installation.

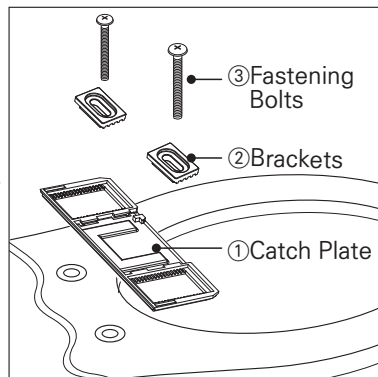


6. Align the bidet body with the grooves on the installed catch plate and slide it into place.

- The bidet seat should slide all the way back and lock into the mounting bracket. It should not be able to slide forward once locked.

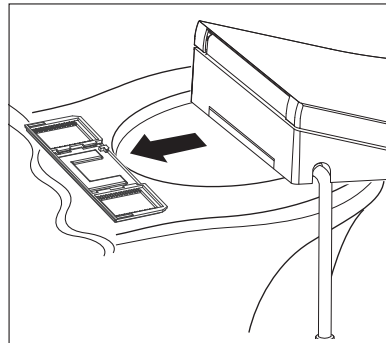


7. Connect the PVC Flexible Hose to the T-valve.

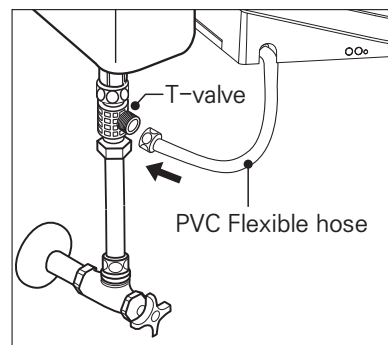


8. Attach the remote control mounting plate to the wall with double-side adhesive tape.

- Before attaching the remote control holder, clean and dry the surface thoroughly. Firmly press the holder against the wall for at least 30 seconds, and mount the remote control after at least 24 hours

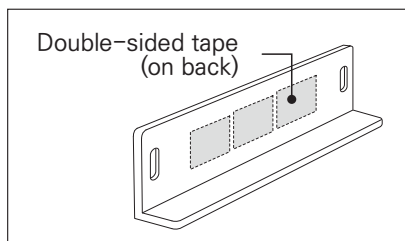

9. Insert the batteries and place the remote control into the holder as shown.

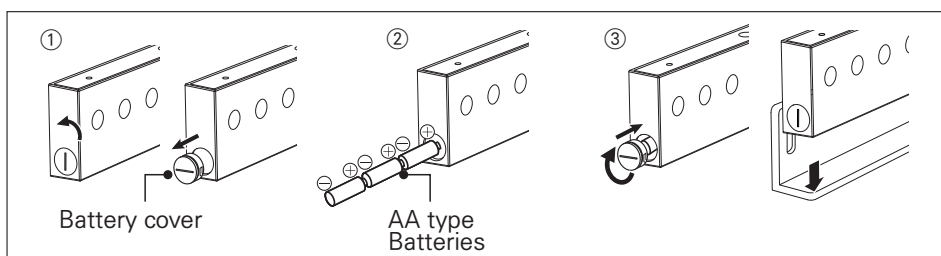

- ① Turn the battery cover counterclockwise to open it.
- ② Insert the batteries according to the (+) and (-) polarity markings inside the remote control.
- ③ Close the battery cover by turning it clockwise, then place the remote control into the holder.


⚠ CAUTION

- Replace the batteries if the battery indicator light stays on continuously.
- Do not mix new and old batteries.
- Adhesion strength may vary depending on the wall surface (e.g., porcelain tiles). Attach the holder carefully.

Trial Operation

1. Open the shut-off valve by turning counterclockwise.

- Check for any water leakage from hose connections.

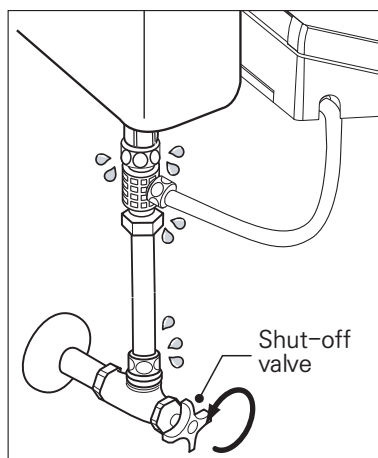


2. Plug in the power cord.

- If the power indicator light does not turn on after plugging in, press any button on the control panel to activate the power light.

※ **WARNING** : Do not tilt or move the main unit while it is powered on.

3. While touching the skin sensor with your right hand, press the Rear or Front button to check that water sprays from the nozzle.

- Get ready to cover the nozzle with your other hand to prevent water from spraying out of the bowl.

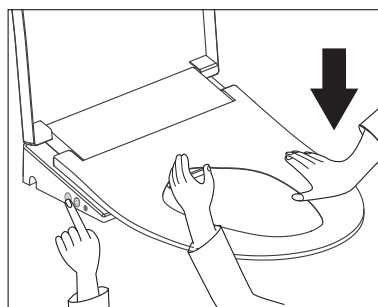


Detachment

To detach or move the unit, follow the instructions shown below.

1. Unplug the power cord.
2. Shut off the water supply by turning the shut-off valve clockwise. Then completely drain the toilet water tank.
3. Loosen the nut on the bidet PVC flexible hose connected to the T-valve, and remove the bidet main unit from the toilet.

– To detach the unit, press and hold the release lever on the side of the product, then pull the unit forward as shown.

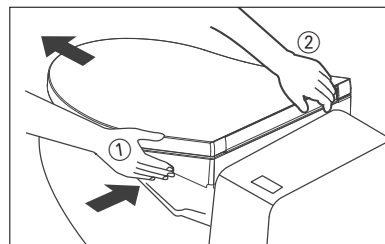


4. Disconnect the T-valve from the water supply line and remove the catch plate installed on the toilet.
5. Connect the water supply hose directly to the water supply valve, then turn the valve counterclockwise to open it. Check all connections to make sure there are no leaks.
6. Reattach the toilet seat and lid that were removed during the bidet installation.

Maintenance

| Nozzle Cleaning Method


1. When the seat is not occupied, press the Nozzle Cleaning button. Cleansing water will be sprayed, and the nozzle will move back and forth automatically for about 2 minutes.
Alternatively, press and hold the button for about 3 seconds to extend the nozzle and keep it stationary for 2 minutes. During this time, it is easy to clean the nozzle using an unused toothbrush or a small cleaning brush.

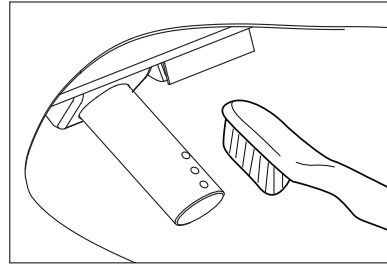

2. After cleaning, press the Stop button to retract the nozzle to its original position.


| Nozzle Replacement Method

1. Lift up the toilet seat.
2. Press and hold the Nozzle Cleaning button on the remote control for about 3 seconds. The nozzle will extend and remain stationary for approximately 2 minutes.
3. Hold the main body of the bidet firmly with one hand to prevent movement, and with the other hand, pull out the entire nozzle.
4. Align the replacement nozzle so that the spray outlet faces upward, and slowly insert it straight into the center until it is fully seated. Make sure you hear a “click” sound, indicating that the nozzle is securely attached.
5. Press the Nozzle Cleaning button again to confirm that the replaced nozzle extends and retracts properly.
※ If the nozzle does not extend smoothly after replacement, check the alignment and adjust the center position of the nozzle.

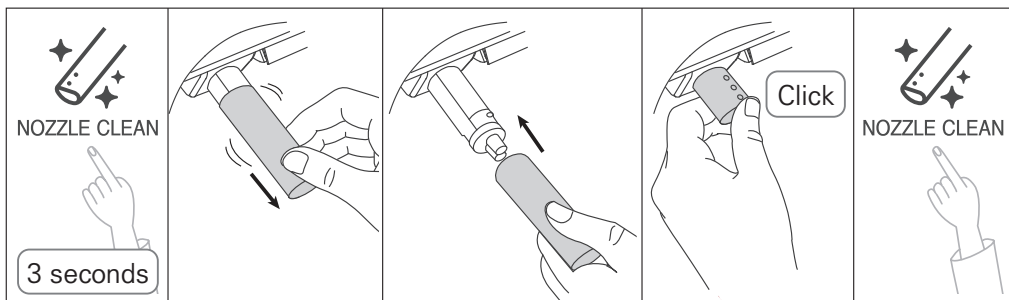

| External Cleaning

- Before cleaning, disconnect the power plug from the outlet.
Be sure not to splash water on the power plug or outlet.
- Do not touch the power plug with wet hands, as this may cause electric shock.
- The bidet surface is made of plastic and may be damaged by metal scrubbers or harsh chemicals.
Do not use acid-based cleaners, paint thinner, benzene, or toilet cleaning agents.
- Wipe the surface with a soft cloth or sponge moistened with neutral detergent.
- Rinse the bidet thoroughly with clean water.
- After cleaning, wipe the entire surface dry with a soft cloth.

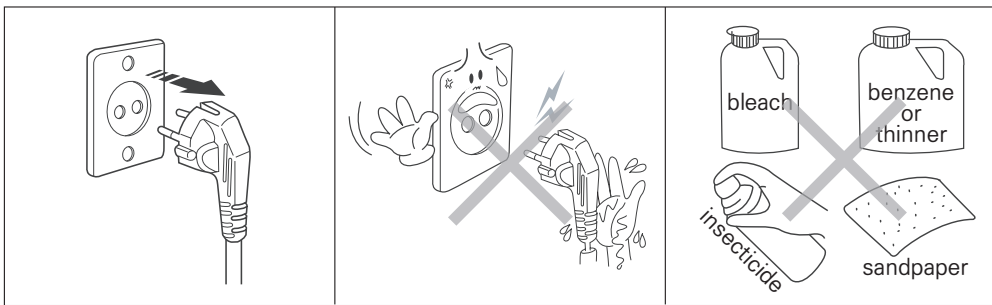

Troubleshooting

Check the following details before calling for service.

Problem	Possible Causes	Solution(s)
Unit does not operate at all	1. The power is OFF 2. The power plug is not connected 3. There is no power to the outlet 4. There is a power failure	1. Press the Power button on the main unit. The white indicator light should turn on. 2. Ensure the plug is securely connected. 3. Unplug the unit and plug another device into the outlet to make sure there is power.
Wash or Dry functions not working	1. A seat cover or something is laid on the seat	1. Have you checked if a seat cover or something had been on the surface of the seat? The unit begins to operate only when a user's skin touches the seat sensor.
Water does not come out	1. Water supply valve is closed 2. Water supply is cut off	1. Open the water supply valve. 2. Wait until the water supply is turned on.
Water pressure is weak	1. Water pressure is set at the lowest level 2. The water strainer is clogged 3. Tap water pressure used is under the minimum pressure suggested(14.2 psi)	1. Adjust the Water Pressure setting to a higher level. 2. Clean the water strainer. 3) The available water pressure is 14.2 psi – 106.6 psi
Water is not warm	1. Water temperature is set to off or lowest level. 2. When the inlet water temperature is below 59 °F (15 °C), the washing water temperature may be lower than the selected setting.	1. Adjust the Water Temp setting to a higher level.
Seat is not warm	1. Seat temperature is set to off or lowest level 2. Eco-Mode is activated 3. If the seat is unoccupied for more than 30 minutes, the seat temperature automatically decreases.	1. Adjust the Seat Temp setting to a higher level. 2. Deactivate any Eco-Mode and try again after 5 minutes.
Dryer air is not warm	1. Dry temperature is set at the lowest level	1. Adjust the Dry setting to a higher level.
Remote control not working	1. Batteries in the remote control have been exhausted 2. Are you using alkaline batteries?	1. If the battery replacement indicator lights up, refer to the Remote Control Battery Replacement section and replace the battery with a new one. 2. Always use alkaline batteries. Manganese batteries will not operate the remote control.

Regulatory Information

FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note :

This equipment has been tested and found to comply with the limits for CLASS B digital device, pursuant to Part 15 FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try correct the interference by one or more of the following measures ;

- 1.1. Reorient or relocate the receiving antenna.
- 1.2. Increase the separation between the equipment and receiver.
- 1.3. Connect the equipment into an outlet on a circuit different from that to which receiver is connected.
- 1.4. Consult the dealer or experienced radio/TV technician for help.

"This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance of 20cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter."

Product Specifications

| Main Unit Specifications

Model	NB-R3063VS
Power Voltage	120 V, 60 Hz
Max. Power Consumption	1465W
Length of Power Cord	1.2m
Water Supply Connection	Direct connection to the water supply
Supply Water Pressure	14.2 psi ~ 106.6 psi
Water Flow Rate	Cleansing: 0.75 ℓ /min Bidet: 0.75 ℓ /min Enema: 1.0 ℓ /min
Water Pressure Control	3 Levels
Water Temperature Control	4 Levels: Off, Low, Medium, High (Off: incoming water temperature)
Water Heater Power Consumption	1400W
Water Safety Device	Thermal Fuse, Thermostat, Water Level Sensor
Seat Temperature Control	4 Levels: Off, Low, Medium, High (Off: room temperature)
Seat Heater Power Consumption	55W
Seat Safety Device	Thermal Fuse
Dryer Temperature Control	3Levels: Normal Temp. ~ 122°F(50°C)
Dryer Heater Power Consumption	200W
Dryer Safety Device	Thermal Fuse
Operating Temperature	37.4°F(3°C) ~ 104°F(40°C)
Product size	15.35 in x 20.79 in x 3.74 in
Product weight	7.05 lbs

| Remote Control Specifications

Model / Product Name	3063VS / Low Power Wireless Device
Rated Voltage / Output Power	DC 4.5V / Less than 10 mW
Operating Frequency (SRD)	2481MHz, 2422MHz
Modulation Method	FSK
Operating Temperature	-10°C to 50°C

Warranty

We warrant our products to be free from manufacturing defects under normal use and service for a period of one(1) year after purchase.
This warranty is extended only to the original purchaser.

For product defects, please contact your vendor or our service center.

Please send us the proof of purchase for the product.
Without proof of purchase, we may not be able to provide warranty.

Product Name	
Model Name	
Date of Purchase	
Serial Number	
Name of Purchase	
Duration of Warranty	One year after purchase

< Free After-sales Service Regulations >

- During the duration of the warranty period, if a product defect occurs during normal application as stated in the Instruction Manual, Cautionary Notes, Direction Labels, etc., the product is applicable for after-sales service free of charge.
- Even during the warranty period, after-sales service is not applicable free of charge in case of the following conditions :
 - (1) Damage occurring from customer negligence or fault, and defect or damage occurring from wrongful repair or alteration.
 - (2) Defect or damage occurring from fire, gas, flood, earthquake, lightning, other natural calamities, pollution, or abnormal electrical power.
 - (3) Defect or damage occurring from outside of normal household usage.
(long term public usage, used inside a vehicle, installed inside a vessel, etc.)
 - (4) Defect or damage occurring from the transportation of mistreatment after purchase.
 - (5) Defect or damage occurring during removal after installation.
 - (6) Wearing of consuming parts.(Packing, Filters, etc.)
 - (7) Product reinstallation by customer request.
 - (8) Read the Instruction Manual carefully before requesting for an after-sales service since charges will be invoiced for faulty service call visits.



NCM CO., LTD.

www.bloomingbidet.co.kr

MADE IN KOREA

6522-0000-00
Rev. 0