



GRAVITY G67

User Manual

Overview



 
- 1 Front Camera
- 2 Volume Keys
- 3 Power Key / Fingerprint
- 4 Recent
- 5 Home
- 6 Back
- 7 Rear Camera
- 8 Flash

SIM Card Installation

A SIM card contains your phone number and other necessary data. Your device has SIM1 & SIM2 slots that support 4G (LTE).

To Install the SIM Card:

1.Ensure the device is turned off and facing down. Hold it firmly and use the notch at the bottom corner to loosen the back cover. Use a hard, thin-edged object (e.g., fingernail or credit card) to run along the seam and remove the cover.

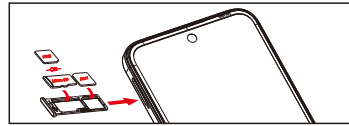

2.Locate the SIM card slots and insert the appropriate SIM card into the correct slot. For detailed instructions, refer to the included SIM Card & MicroSD Card Installation Guide.

3.Enable/disable a SIM card, go to Settings > Network&internet > SIMs>then click the SIM Slot 1&2 slider to manage the SIM cards. To manage data connections, go to Your primary SIMs for select a 4G capable SIM card.

Keys/Touch Points:

Power Key: Press and hold to power on/off the device. Press once to activate/deactivate the screen.

Home key(○): Tap to return to the home screen. Tap and hold to view recent apps.

Options key(□): From the home screen, tap to set wallpaper, manage apps, or access system settings.

Back key (<): Tap to go back to the previous screen.

Charging the Battery

 
New batteries are shipped partially charged. Batteries perform best after several full charge/discharge cycles.

Charging Methods:

1.Connect to a computer via USB cable.

2.Connect the USB cable to the phone and plug the AC adapter into a wall outlet.

When charging, a battery icon will appear in the status bar. When fully charged, a full battery icon will be displayed.

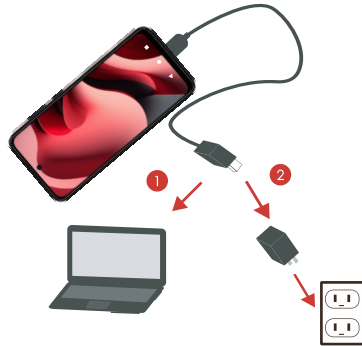


Warning: Do not remove the battery while charging. Use only the provided charger and USB cable.

Note: For safety, stop charging if the battery overheats.

Audio Profile / Sleep Mode / Screen Lock

Intelligent keyboard:

 From the home screen, swipe up to open APP Drawer & select "Settings".Go to"Sound & vibration"and change the audio settings by Changing Sound levels and change your ring tones.

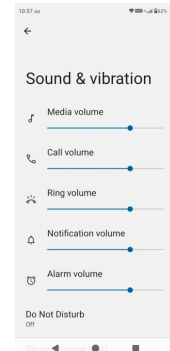

Sleep Mode:

1.Open App Menu > Settings > Display.

2.Tap Screen timeout > then choose a timeout duration.

Screen Lock:

1.Go to App Menu > Settings > Security & Privacy > Device Unlock.

2.Choose your preferred lock type and follow the prompts.

Phone Features

Description Icons:

Icons	Descriptions	Icons	Descriptions
	Shows the phone's network signal strength.		Show the phone's battery capacity.
	Speaker has been activated.		You have unread SMS.
	Call on hold		USB storage Turned on.
	The ringing type is set on Vibration.		Flight Mode
	4G network in use.		3G network in use.
	You have missed calls.		A clock alarm is active.
	In call		Bluetooth ON

Main Menu Functions:

Select to enter the main menu. Allow you to view a list of features available in your phone.

- 1.Clock – Set alarms.
- 2.Browser – Access the internet (default: Google).
- 3.Calculator – Perform calculations.
- 4.Calendar – View and manage events.
- 5.Camera – Take HD photos with LED Flash and features like Face Detection.
- 6.Contacts – Access your digital phonebook.
- 7.Gmail – Set up your Gmail via POP/IMAP.
- 8.Photos – Photos allows you to store all your photos and videos, and it automatically organizes them, making it easy for you to share them.
- 9.Google Play – Download apps and content.
- 10.Messaging – View/send texts in conversation threads.
- 11.YouTube Music – Stream music via YouTube.
- 12.Phone – Make and receive calls.
- 13.Files – Browse, modify, and install files.
- 14.MAX SIM KIT – Check carrier-provided SIM plan info.
- 15.Sound Recorder – Record voice notes.
- 16.Videos – View saved videos.

Calling / Messaging

 
To Make a Call:

- 1.Tap the phone icon.
- 2.Select a contact to call.



To Send a Text:

Maxwest includes automatic spelling suggestions and corrections.

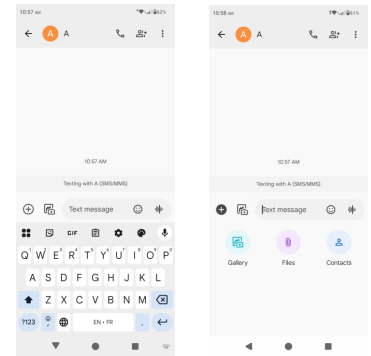

Cut, Copy & Paste:

Tap and hold to highlight text. Drag handles to adjust, then choose to cut /copy/paste.



Android, Google Play, Gmail and YouTube Music are trademarks of Google LLC.

Wi-Fi / Internet Access

 
Turn on WLAN:

Go to Settings > Network & internet > internet> Wi-Fi.


Wi-Fi Direct:

1. Tap Network Preferences > Wi-Fi Direct.
- 2.Tap Search, then select a device and tap Connect

Maxwest device supports Wi-Fi Direct, which allows devices to connect directly without a router useful for file sharing or multiplayer gaming.

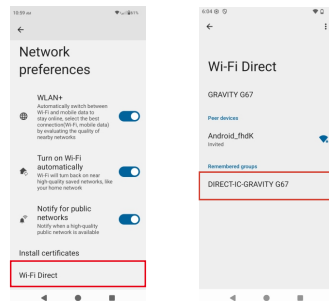


Camera

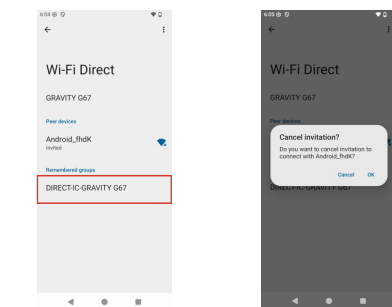 

Click "OK" and the devices will be connected.

Camera:

 Capture images or record videos and share with family and friends!

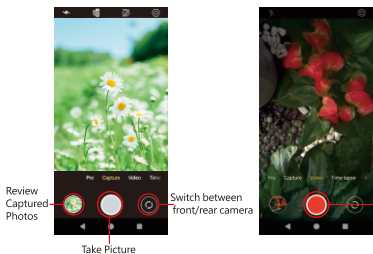

Connecting to E-mail

Email Setup:

- 1.Open the Email Go app.
- 2.Enter your email address and password, then tap Next.
- 3.Select the account type (POP3/IMAP/Exchange).
- 4.Enter additional details as needed via Manual Setup.
- 5.Tap Next, then OK.

To Compose an Email:

- 1.Tap Menu > Compose.
- 2.Add recipients (contacts auto-suggested).
- 3.Write the message and tap Send, Save as Draft, or Discard.
- 4.Reply options: Reply, Reply All, Forward.

To Delete an Email:

- 1.Open the inbox.
- 2.Tap and hold the message.
- 3.Tap Delete.

File Transfer

Connect to PC:

- 1.Use the USB cable to connect your phone to a computer.
- 2.Swipe down the top menu on the phone and tap Android™ System.
- 3.Tap Transfer Files.
- 4.On the computer, open My Computer > GRAVITY G67 to view and transfer files.

 
 
Notes:

When finished, safely disconnect the device.



Screenshot Capture:

Press Volume Down + Power simultaneously. Screenshots are saved in the Pictures folder.

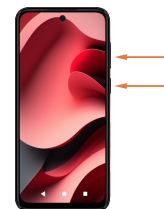

Photos go to "DCIM".

Music files should be placed in the "Music" folder.

Warning

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules and contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: (1)This device may not cause harmful interference. (2)this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -Consult the dealer or an experienced radio/TV technician for help.

SAR tests are conducted using standard operating positions accepted by the FCC/ISED with the device transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new device is available for sale to the public, it must be tested and certified to the FCC/ISED that it does not exceed the exposure limit established by the FCC/ISED, Tests for each device are performed in positions and locations as required by the FCC/ISED.

For body worn operation, this device has been tested and meets the FCC/ISED RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 10 mm from the body.

Non-compliance with the above restrictions may result in violation of RF exposure guidelines.

FOR ISED: The device for operation in the band 5150-5350 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.