



maxwest



MAX V FLIP

User Manual

Get to Know Your Phone



Components	Description
	Left Soft Key ● Open notifications on the home screen ● Select options shown on the lower left of the screen
	Right Soft Key ● Open Messages on the home screen ● Select options shown on the lower right of the screen
	Call Key ● Make or answer a call ● View call history from the home screen

	End / Power Key ● End a call ● Return to the home screen ● Long press to power the phone on or off Press the Power Button with the Volume Down Button at the same time to take a screenshot
	OK Key ● Confirm a selection ● Open the Main Menu from the home screen


	Navigation Keys (Up / Down / Left / Right) Move through menus and options Access assigned shortcuts: ● Up: Quick settings (Wi-Fi, Bluetooth, etc.) ● Down: Messages ● Left: Gallery ● Right: Contacts
	Favorite Contact Button Open your favorite contacts list
	Speaker Button ● Press to mute/unmute the media players and adjust the media volume by using the Volume Buttons on the side ● Press to mute incoming call ringtone
	Back Key Return to the previous screen

	Number Keys ● Dial phone numbers ● Enter text ● Long press 1 to access voicemail ● Long press other keys to speed dial saved contacts ● Long press # to activate Vibrate mode
	Volume Buttons ● Adjust ringtone or media volume ● Mute incoming call ringtone
	Camera Button ● Press to take a photo or start recording a video ● Long press to enter Camera when phone is unfolded or folded

Installing SIM Card, SD Card, and Battery

To install a SIM or SD card, follow these steps:

1. Power off the phone.
2. Remove the back cover using the notch on the bottom edge.
3. Remove the battery.
4. Insert the SIM card into the SIM slot with gold contacts facing down.
5. (Optional) Insert a Micro SD card into the SD slot.
6. Reinsert the battery.
7. Replace the back cover until it clicks into place.

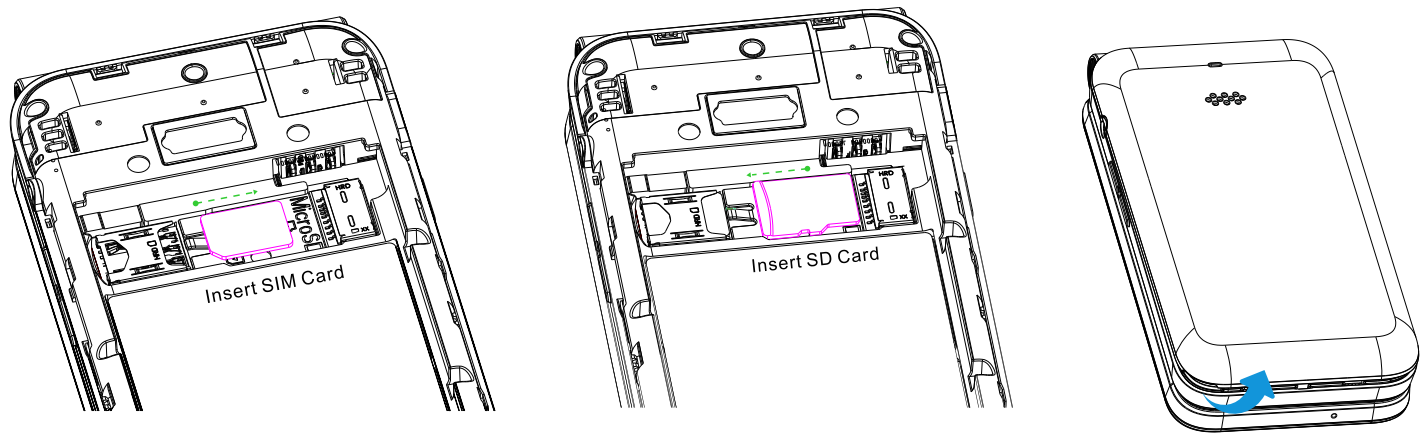

Charging the Battery

1. Connect the USB-C end of the USB cable to the charging port on the phone and connect another end to the travel adapter.
2. Plug the travel adapter into an electric socket to start charging your phone.
3. After charging is finished, disconnect the phone from the charger and unplug the travel adapter from the socket.

Attention: Use of unauthorized accessories could damage your phone and void your warranty.

Powering the Phone On & Off

1. Flip the phone open.
2. Press and hold the **Power Button**  for a few seconds to turn your phone on.
3. To turn off your phone, press and hold the **Power Button**  until the menu pops up, and then select **Power off**.

Add, Find and Make a Contact Favorite

On the home screen, press  to enter the app list and then use the Navigation Buttons to locate **Contacts** , then press  to open.

Add a Contact

- Press OK to open the Menu.
- Select Contacts.
- Press New contact.
- Enter contact details and press  Save.

Find a Contact

- Open Contacts and use the navigation keys to scroll or search.

Set a Favorite Contact

- Open a contact.
- Select Add/Favorites.
- Selection Options > Add Favorites
- Select Contact and Press LSK Add

Making Calls

1. On the home screen, dial a number using the keypad. Press the **Return Button**  to delete a number.
2. Press  to place the call.
3. To end the call, press  or close the phone.

Call from Call History or Contacts

4. Press  on the home screen to access the call history, choose a phone number, press  again to make the call.
5. Press  on the home screen to access the Apps List, select **Contacts** , choose a contact, and then press  to make the call.

Emergency call

If your phone has network coverage, dial the emergency number and tap  to make an emergency call. This works even without a SIM card and without typing the PIN code. Although all devices are equipped with 9-1-1 emergency calling, this device may or may not permit its location to be approximated during a 9-1-1 call.

Note: *Availability of this feature depends on upgrades to the (a) wireless network and (b) 9-1-1 calling system that is required to be installed by the local 9-1-1 response agency or public safety answering point (PSAP); these upgrades may not be available everywhere within our wireless coverage area. This approximation of the device's location and the transmittal of location information are subject to emergency situations, transmission limits, network problems/limitations, interconnecting carrier problems, your device, buildings/tunnels, signal strength, and atmospheric/topographical conditions, and may be curtailed, interrupted, dropped or refused. The device's approximate location is transmitted to the local 9-1-1 response agency or PSAP while the call is in progress; this approximation is intended solely to aid the PSAP in dispatching emergency assistance or to limit the search area for emergency services personnel. You should not rely solely on a device for essential communications (such as a medical or other emergency). Please see your wireless carrier's Terms and Conditions and Privacy Policy for additional service restrictions and details.

Answering Calls

- Press the  Call key or open the phone to answer.
- Press the  End key to reject a call.

* You can choose different answer call options from **Apps List > Settings > Call settings > Answer options**

Messaging

1. Press the Right Soft Key  to open Messages.
2. Press the **Left Soft Button**  to select **New**, then enter the recipient's name or enter a phone number. Use  to change the input method between numbers and letters.
3. Enter your message. Select **Options** to add attachments like pictures, audio, videos, or contact.
4. Tap  to send the message.

Notes: A message will be sent as a media message, or MMS when media files are included.

Connect to Wi-Fi

1. On the home screen, press  to enter the Apps List, then select **Settings > Wireless & networks > Wi-Fi**.
2. Press the **Left Soft Button**  to turn on the Wi-Fi if the Wi-Fi is not already on.
3. Select the desired network name and press  to connect and enter the password if required.

Tip: Press the **Navigation Button-Right** on the home screen to access the Shortcuts to turn Wi-Fi on/off.

Note: Your phone may automatically join a previously connected and saved network. To forget a known network, select **View** and then select **Forget**.

Notifications and Quick Settings

On the home screen, press the **Right Navigation Button** to access the quick settings panel. Press the **Left Soft Button**  to open the notifications panel and view details.

Notifications panel

Notifications remind you of the arrival of new messages, calendar events, etc.

- To check a notification, press  to select.
- Press the **Left Soft Button**  to clear a notification.
- Press the **Right Soft Button**  to clear all notifications.

Shortcut settings panel

You can access frequently used settings in the Shortcut settings panel. To turn on or off a setting, navigate to the corresponding icon and press .

Icon	Name	Function
	Wi-Fi®	Turn Wi-Fi on or off.
	Bluetooth®	Turn Bluetooth on or off.
	Airplane mode	Turn the airplane mode on or off. Turning on airplane mode disables all network features including calling, messaging, mobile data, Wi-Fi, and Bluetooth.
	Mobile data	Turn mobile data on or off.
	Ring/Vibrate /Mute	Change the phone between Ring, Vibrate, and Mute
	Location	Turn the Location on or off.

Camera and Gallery

You can use the Camera app to take photos and record videos.

Take a Photo

1. Open Camera from the Menu or long press the Camera key.
2. Press OK or the Camera key to take a photo.

Record a Video

1. On the camera screen. Press the **Right SoftButton**  to switch to the **Video** mode.
2. Tap  to start recording a video.
3. Tap  again to stop recording.

Photos

On the home screen, press  to enter the Apps List. Navigate to **Gallery** and press  to enter the App. You can view and manage photos and videos stored on your phone in Gallery.

- To delete an item, select **Options** by pressing the **Right SoftButton** , then choose **Delete**, press , then select **Delete**. Please note that deleted photos can't be restored.
- To edit an item, select **Options** by pressing the **Right SoftButton** , then choose **Edit**. Edit the item with the options available and tap **Save**.

Security & Convenience

To secure your phone from being used by others without your permission, activate the following security options:

Screen Lock: Press  from the home screen, then select **Settings**  > **Phone settings** > **Security** > **Screen lock**.

Approved Firmware Versions

This device will only operate with firmware versions that have been approved for use by your wireless carrier and the device manufacturer. If unauthorized firmware is placed on the device, it will not function.

Information about Safeguarding Handsets

We encourage customers to take appropriate measures to secure their devices and invite them to take advantage of the features available on this device to help secure it from theft and/or other unauthorized access and use. This device has a locking function (Screen lock) that can serve as the first line of defense against unauthorized use or access to stored information. Lost or stolen devices should be immediately reported to your wireless carrier so that proper measures can be taken to protect accounts. For additional information, visit your wireless carrier's Privacy Policy.

Trademarks

Wi-Fi® is a registered trademark of Wi-Fi Alliance®.

Bluetooth® is a registered trademark of Bluetooth SIG, Inc. Any use of such marks by Maxwest Telecom is under license. Other trademarks and trade names are those of their respective owners.

Warning

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules and contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s).

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

SAR tests are conducted using standard operating positions accepted by the FCC/ISED with the device transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new device is available for sale to the public, it must be tested and certified to the FCC/ISED that it does not exceed the exposure limit established by the FCC/ISED. Tests for each device are performed in positions and locations as required by the FCC/ISED.

For body worn operation, this device has been tested and meets the FCC/ISED RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 10 mm from the body.

Non-compliance with the above restrictions may result in violation of RF exposure guidelines.

MAX V FLIP

www.maxwesttelecom.com