

NO RECEIPT REQUIRED | FULLY TRANSFERABLE | WORKMANSHIP & MATERIALS COVER



**NO
MATTER
WHAT**

Visit [Bushnell.com/warranty](https://www.bushnell.com/warranty) for details

Warranty does not cover theft, loss, deliberate damage, or cosmetic damage not affecting product performance.
Valid only in the United States. Valable uniquement aux États-Unis.



LET'S GET STARTED



R5 QUICK START GUIDE

OUT OF THE BOX YOUR R5 RANGFINDER IS SET UP FOR BOW MODE IN YARDS
(TO CHANGE, YOU WILL NEED TO CONNECT TO THE BUSHNELL BALLISTIC APP.)

IN THE APP, YOU CAN CHANGE THESE SETTINGS:

- UNITS
- RETICLE
- TARGET MODE
- RANGING MODE - INCLUDING YOUR BALLISTIC DATA



APPLIED BALLISTICS ULTRALITE

When you set the R5 ranging mode to "AB INSIDE" in the Ballistic App and set up a ballistic profile, the R5 will provide elevation and windage out to 800 Yards.

UNIT SELECTION WITHOUT APP

To enter, hold the FIRE button down for 3 seconds while powered OFF. Yards, Meters, and Feet will cycle while holding the button down. Release the button while the preferred unit is flashing.

MODE SELECTION WITHOUT APP

To change between bullseye/brush/default mode, *triple press and hold to cycle between modes. Release the button while the preferred mode is flashing.

*Press, Press, Press+hold

- A BATTERY INDICATOR:**
Displays the power level.
- B BALLISTIC MODE:**
Displays when the user is in Ballistic Mode.
- C DISTANCE UNIT:**
3 available options in Yards, Meters or Feet.
- D PRIMARY DISTANCE:**
 - Direct distance measurement to target in Ballistic Mode.
 - ARC or horizontal "shoots as" distance.
- E HOLDOVER UNIT:**
4 available options in MOA, MIL, IN, or CM.
- F ELEVATION / LINE OF SIGHT DISTANCE**
 - Hold-overs will be displayed in Ballistic Mode.
 - Direct distance measurement to target in Bow mode.
- G INCLINATION READOUT:**
Displays the degrees of incline or decline to a target.
- H BULLSEYE MODE (NEAR MODE):**
When objects may be impeding line of sight, use Bullseye Mode to have the rangefinder identify the closest object. **Example:** A target in front of a berm.
- I BRUSH MODE (FAR MODE):**
When objects may be impeding line of sight, use Brush Mode to have the rangefinder select the farthest object. **Example:** A deer behind brush.
- J BOW MODE INDICATOR:**
Displays both the angle range compensated (ARC) distance and the line of sight distance beneath.
- K RETICLE SELECTION:**
Users can select the preferred reticle style.

