


D35 Instruction Manual

Contains three languages: English, Japanese, German

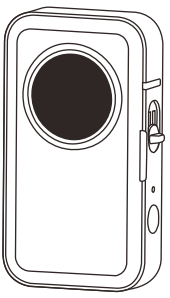

Please read the instructional manual carefully before using the product.

English



Please scan the QR code to obtain the multilingual comprehensive version of the instruction manual and more tutorials.

01. Item Checklist





The number of label rolls on the checklist is determined by the contents of the shipped package.


02. Specifications

Product name	Smart Mini Label Maker
Product model	D35
Printing technology	Thermal printing
Consumable width	6-15mm
Effective printing width	12mm
Supported consumables	Pre-cut paper, black mark paper, continuous paper
Printing density	Light, standard, dark
Printing resolution	203dpi
Print head service life	50KM
Communication interface	Bluetooth
Product Size	135*79.6*29.2mm(5.3*3.1*1.1inch)
Power Input	5V=2A
Power supply method	Type-C
Supported operating system	Lithium battery Android iOS

03. Product Introduction Parts and Features

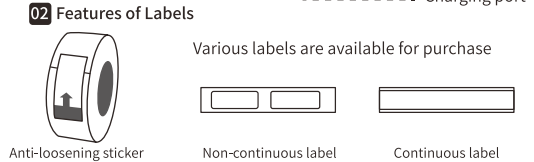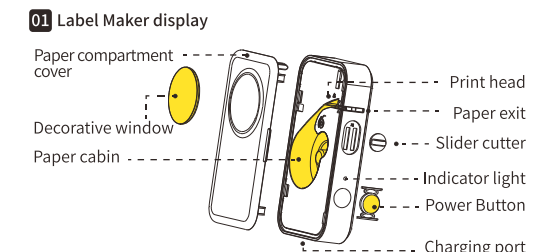

03. Features of Continuous Labels

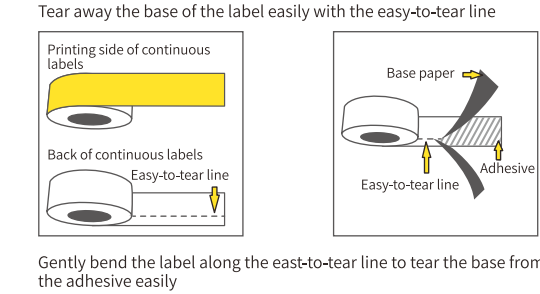


03. Product Introduction Power and Indicator Light

Button	Operation	Functions
Power button	Hold for 3 seconds	Power on/off
	Press once	Output the label
	Press twice	Print diagnostic page


Indicator Light	
Green Light	Normal
Blinking (slow) Green Light	Powered on & charging
Blinking (fast) Green Light	Powered off & charging
Red Light	Error (No Paper, Cover is open, Overheat)
Blinking (slow) Red Light	10% Power left
Blinking (fast) Red Light	5% Power left

04. Instructions for use

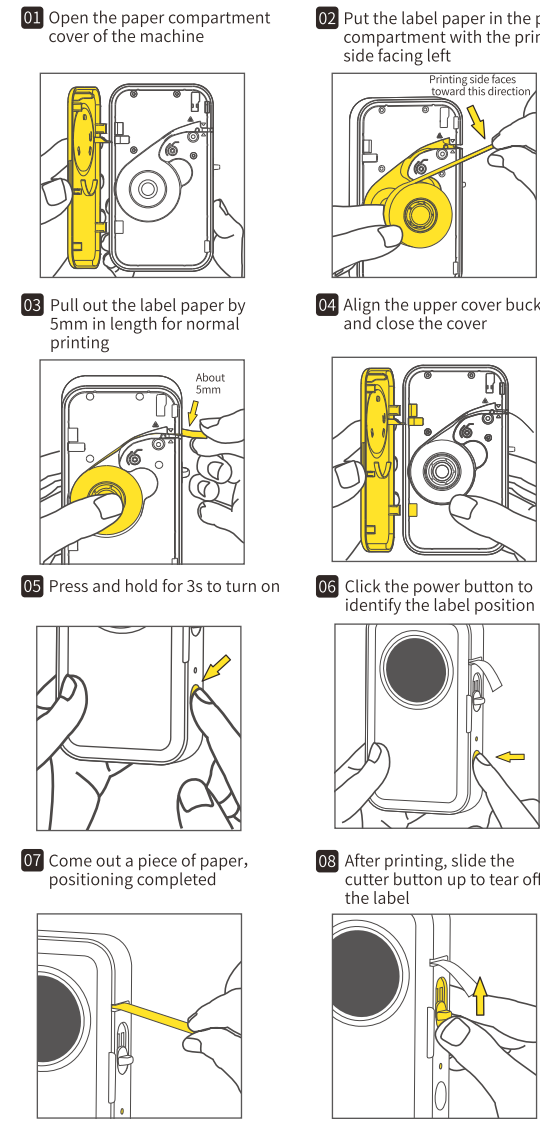


After installing the label roll for the first time or replacing the label roll, remember to reposition the label (Step No. 05).
If you do not reposition the label (Step No. 05), the first label you print will be printed incorrectly (missing contents, not aligning to the center, etc.).
Continuous labels do not need repositioning. You only need to pull the label to the opening of the Label Maker.


05. Downloading the App

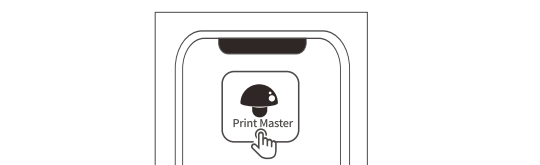

You need to connect the Label Maker through the Print Master app. In compliance with Google's requirement, Android phones must enable GPS (Location Services) before using Bluetooth.

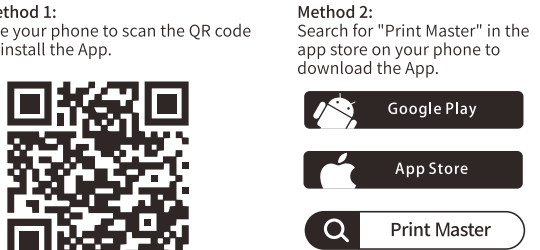


06. Connecting the Label Maker

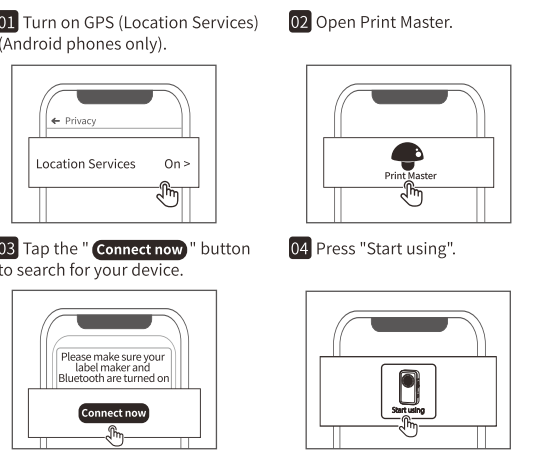


In compliance with Google's requirement, Android phones must enable GPS (Location Services) before using Bluetooth.
Before connecting to your device in Print Master, please make sure your printer is turned on and your phone's Bluetooth is on.


07. Identifying the Label Size

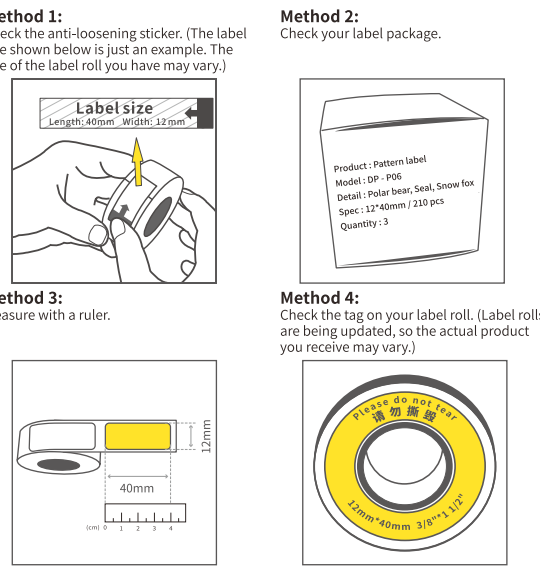

08. How to Print Selecting an Edit Mode

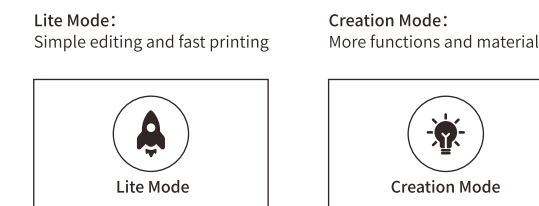

09. How to Print Lite Mode

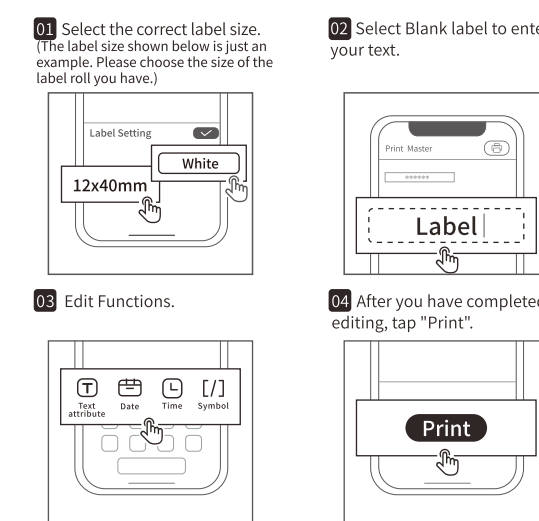

11. FCC Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.
*RF warning for Portable device:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

日本語

本製品使用前は必ず本説明書をお読みください






QRコードをスキャンすれば、更に詳しい操作方法が書かれた多言語詳細版説明書をご覧ください。

01. パッケージ内容



同梱品に含まれるロール紙の数は実物と異なる場合があります。

02. 機器について 外部パーツ

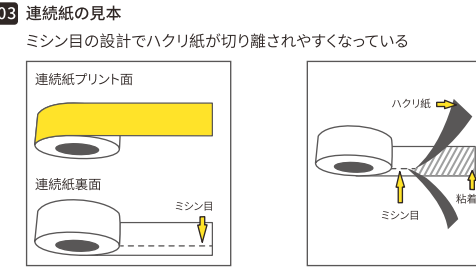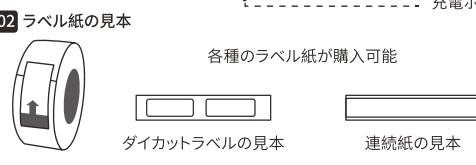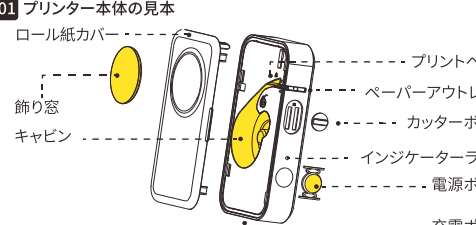

02. 機器について 電源と状態表示ランプ


電源ボタンについて		
ボタン	操作	機能
3秒長押し	電源オン/オフ	
短く押す	電源オン/オフ	電源オン/オフ
2回押す	テストページをプリント	

状態表示ランプについて		
LED	状態	機能
緑点灯	正常	
緑でゆっくり点滅	電源オンで充電	
緑で速く点滅	電源オフで充電	
赤点灯	エラー (用紙切れ・カバーが開いている・温度が高すぎる)	
赤でゆっくり点滅	電池残量10%	
赤で速く点滅	電池残量5%	

03. 使用方法について






03 3秒長押しで起動し

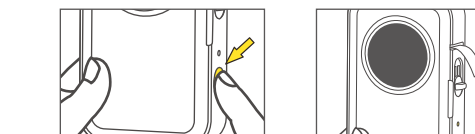

ローラー紙を初めてセットする、または交換するときは都度位置検出が必要になる (手順 05)。
ラベル紙の位置検出 (手順 05) を怠ると1回目の印刷の先頭部分が切れたり紙の真ん中で印刷できないなどの不具合が発生する可能性がある。
連続紙の場合は電源ボタンをクリックして位置を特定する必要がなく、ペーパーアウトレットの位置まで引き出せばよい。

06 電源ボタンをクリックしてラベル位置を識別します

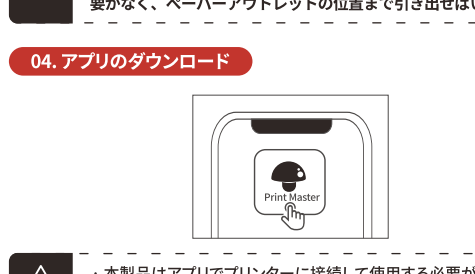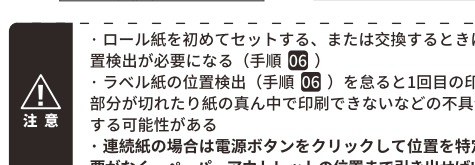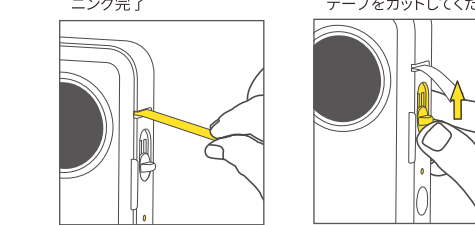

04. アプリのダウンロード




本製品はアプリでプリンターに接続して使用する必要がある。Google公式により、AndroidシステムのデバイスにはGPS機能をオンにしてからBluetoothを利用できるようにする。

05. プリンターへの接続



06. ラベルサイズの確認

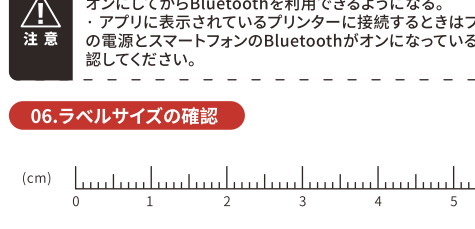

方法1: ラベル紙のパッケージを確認。



(図のラベル紙はご使用のラベル紙サイズとは異なる場合があります。確認する必要があります)

方法2: ものさしで測る。



方法3: ラベル紙のカバーを確認。




(図版と実際のラベル紙が交差しているため、図は実際の商品と異なる場合があります。)

07. プリントの方法 編集モードの選択



08. プリントの方法 ライトモード

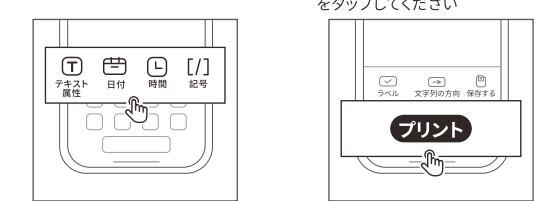

正しサイズを選択しなければ真ん中でプリントできず、文字が揃わないなどの不具合が発生する場合があります。

Deutsch

Lesen Sie sich diese Bedienungsanleitung vor dem Gebrauch sorgfältig durch.




Detaillierte Bedienungsanleitung in verschiedenen Sprachen
Bitte scannen Sie den QR-Code, um eine detaillierte Bedienungsanleitung in verschiedenen Sprachen und weitere Tutorials zur Bedienung des Druckers zu finden.

01. Verpackungsliste




Die Anzahl der Papierrollen kommt auf das wirkliche Produkt an.

02. Beschreibung des Geräts Erscheinungsteile

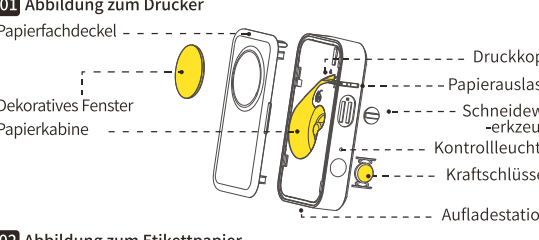

Jedgliche Arten von Etikettpapier sind verwendbar

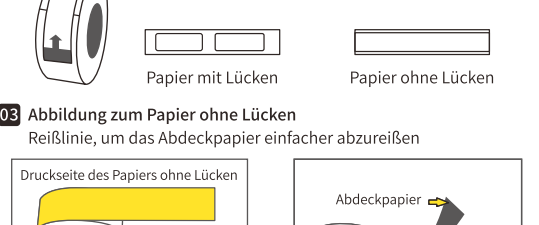


Falten Sie die Reißlinie nach ganz leicht das Etikettpapier. Dadurch kann man leichter das Abdeckpapier von der klebenden Rückseite trennen.

02. Beschreibung des Geräts Stromversorgung und Anzeileuchte

Erklärung zur Netztaete		
Taste	Bedienung	Funktion
3 Sek. drücken	An/Aus	
Kurz drücken	Papier ausgeben	
Doppelklick	Inhalt zur Selbstinspektion drücken	

Erklärung zur Anzeileuchte		
LED	Normaler Zustand	Funktion
Grün	Normaler Zustand	
Blinkt langsam grün	Aufladen wenn an	
Blinkt schnell grün	Aufladen wenn aus	
Rot	Fehler (Kein Papier, Kein Deckel, Hohe Temperatur)	
Blinkt langsam rot	Akku 10%	
Blinkt schnell rot	Akku 5%	


03. Anweisungen zum Gebrauch

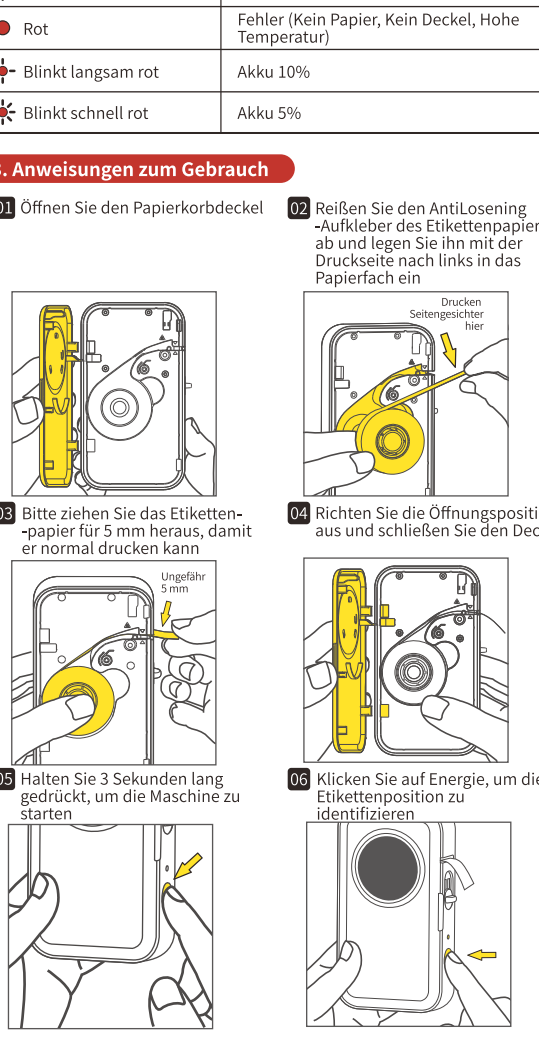

07 Beschriften Sie heraus, Positionierung abgeschlossen




Wenn der Druck abgeschlossen ist, drücken Sie die Schneidetaete, um das Etikett abzuschneiden

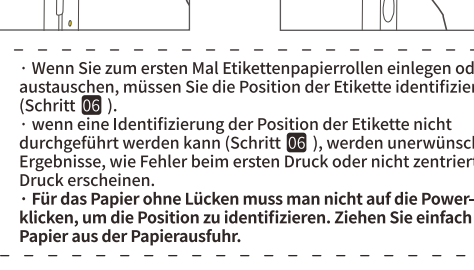

Wenn Sie zum ersten Mal Etikettenpapierrollen einlegen oder austauschen, müssen Sie die Position der Etikette identifizieren (Schritt 06).
Wenn eine Identifizierung der Position der Etikette nicht durchgeführt werden kann (Schritt 06), werden unerwünschte Ergebnisse, wie Fehler beim ersten Druck oder nicht zentrierter Druck erscheinen.
Für das Papier ohne Lücken muss man nicht auf die Power-Taste klicken, um die Position zu identifizieren. Ziehen Sie einfach das Papier aus der Papierausfuhr.

04. App herunterladen

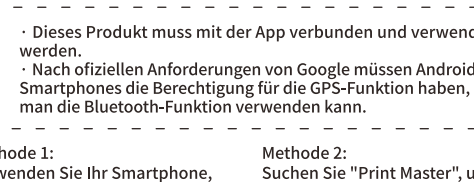

Dieses Produkt muss mit der App verbunden und verwendet werden.
Nach offiziellen Anforderungen von Google müssen Android-Smartphones die Berechtigung für die GPS-Funktion haben, bevor man die Bluetooth-Funktion verwenden kann.

05. Drucker verbinden



06. Etikettengröße finden



Methode 1: Überprüfen Sie die Verpackung des Etikettapiers



(Die Größe ist nur ein Beispiel. Die Größe variiert je nach verwendetem Etikettpapier)

Methode 2: Mit einem Lineal abmessen



Wenn Sie zum ersten Mal Etikettenpapierrollen einlegen oder austauschen, müssen Sie die Position der Etikette identifizieren (Schritt 06).
Wenn eine Identifizierung der Position der Etikette nicht durchgeführt werden kann (Schritt 06), werden unerwünschte Ergebnisse, wie Fehler beim ersten Druck oder nicht zentrierter Druck erscheinen.
Für das Papier ohne Lücken muss man nicht auf die Power-Taste klicken, um die Position zu identifizieren. Ziehen Sie einfach das Papier aus der Papierausfuhr.

07. Anleitung zum Drucken Bearbeitungsmodus wählen




Wählen Sie die entsprechende Größe des Etiketts. (Die Größe ist nur ein Beispiel. Die Größe variiert je nach verwendetem Etikettpapier)

08. Anleitung zum Drucken Schneller Modus



09. Schneller Modus

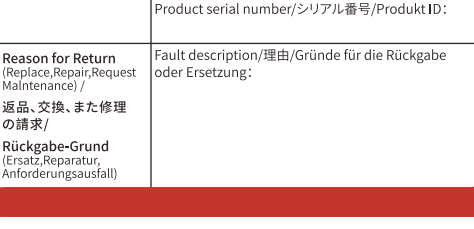

09. Schneller Modus

