


DM170 Instruction Manual


Contains three languages: English, Japanese, German

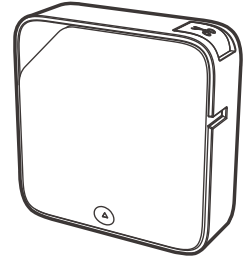

Please read the instructional manual carefully before using the product.

English

01. Item Checklist

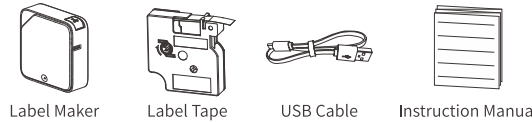


The number of label tapes in the package is subject to actual shipment.

02. Specifications

Name	Portable Label Maker
Model	D1600
Technology	Thermal Transfer Printing
Label Width (Max)	12mm
Resolution	203dpi
Print Head Lifespan	50KM
Communication Port	Bluetooth
Product Dimensions	128*128*51.5mm (5*5*2 inch)
Power Input	5V=2A
Power Supply	Lithium Battery
Supported Operating System	Type-C iOS Android

03. Product Introduction Parts Introduction

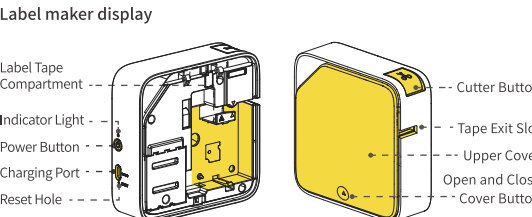

03. Product Introduction Power and Indicator Light




Indicator Light


Power button description

Button	Operation	Functions
Power button	Hold for 3 seconds	Power on/off
	Press twice	Print diagnostic page


04. How to Install the Label Tape

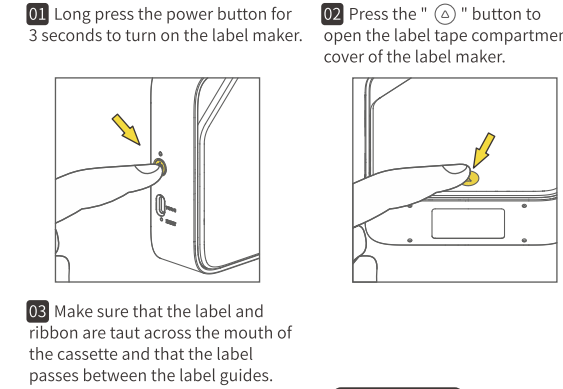

NOTE: If necessary, turn the wheel in the direction of the arrow twice to tighten the carbon tape.

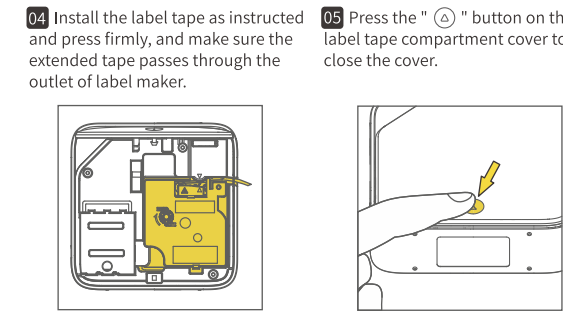

05. Downloading the App


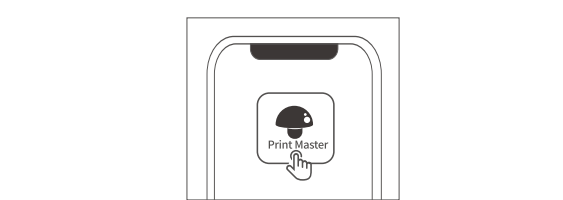


NOTE: This product must be used with the App. You need to connect the label maker through the Print Master app. In compliance with Google's requirement, Android phones must enable GPS (Location Services) before using Bluetooth.


Method 1: Use your phone to scan the QR code to install the App. Method 2: Search for "Print Master" in the app store on your phone to download the App.





06. Connecting the label maker

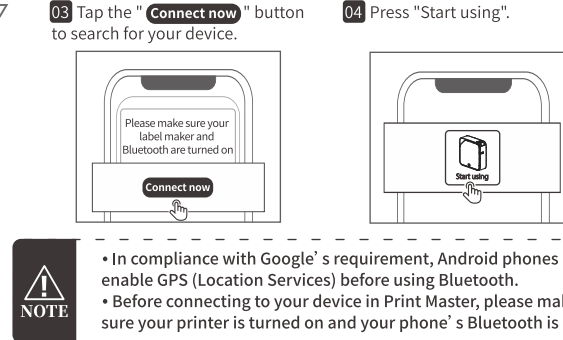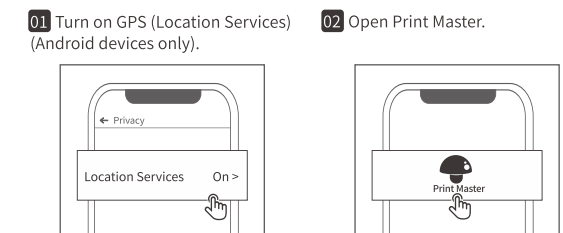

07. How to Print

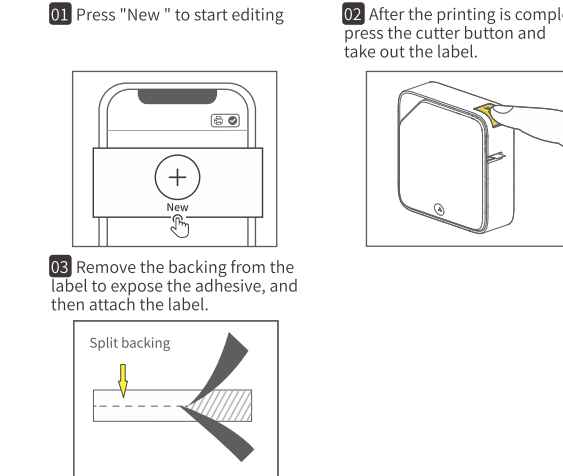

08. Print Head Maintenance

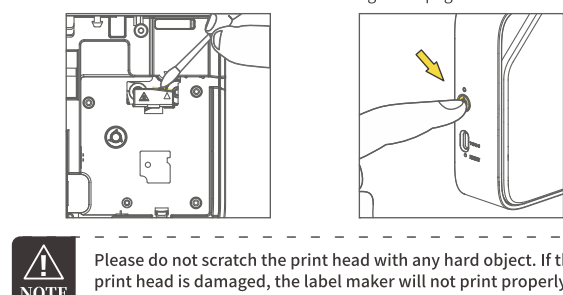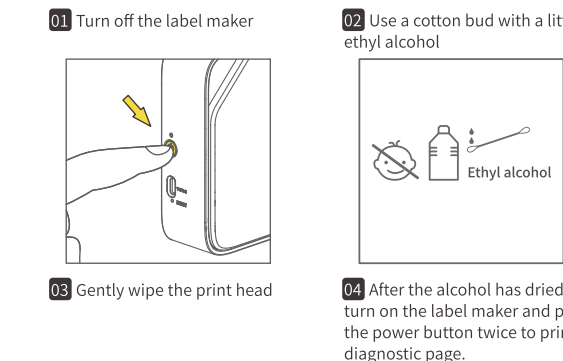

09. Troubleshooting

Problem	Solution
Unable to start the label maker	Check if the label maker has sufficient power
Cannot print or the texts are not displayed correctly	1. Check if the label tape is installed correctly 2. Check if the paper compartment cover is closed 3. Check if the label tape is exhausted The Printhead may be dusty. Take out the label tape, gently wipe the print head vertically with a dry cotton swab Warning: Please do not touch the print head with your hand to avoid getting burned
There is a white horizontal line in printed labels	
Unable to print using my phone	Check if Bluetooth is enabled on your phone and make sure the phone has connected label maker through the App

10. Warranty

Thank you for choosing our label maker.
① Our warranty provides "Exchange/Return" services within one year of purchase.
② Please keep the warranty card in a safe location for future reference.

Please contact our customer services if there is any confusion regarding the printing or contents of this manual.

11. FCC Caution

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.
*RF warning for Portable device:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.


Maintenance Card

Replace Return

User Information	Name:	
	Gender:	
	Phone:	
Product Information	Address:	
	Date of purchase:	
	Product order number:	
Reason for Return (Replace, Repair, Request Maintenance)	Product serial number:	
	Fault description:	

日本語

01. パッケージ内容

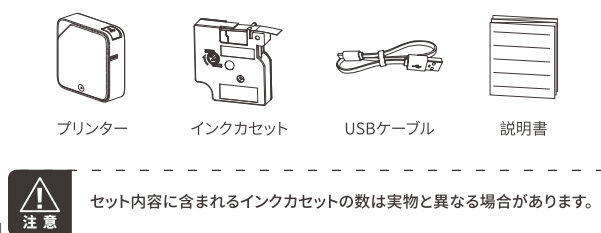


セット内容に含まれるインクカセットの数は実物と異なる場合があります。

02. 製品仕様

名称	モバイルラベルプリンター
型番	D1600
印刷テクノロジー	熱転写
ラベルの幅(最大)	12mm
印刷解像度	203dpi
プリントヘッド寿命	50KM
接続	Bluetooth
製品サイズ	128*128*51.5mm (5*5*2 inch)
電源アダプター	5V=2A
充電方法	リチウム電池 Type-C
対応OS	iOS Android

03. 機器について 外部パーツ



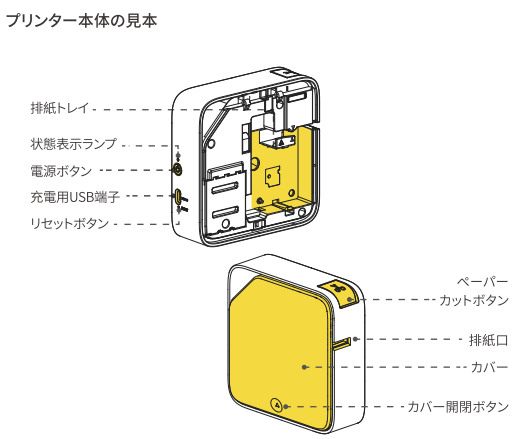


03. 機器について 電源と状態表示ランプ

電源ボタンについて	ボタン	操作	機能
	電源ボタン	3秒長押し 2回押す	電源オン/オフ テストページをプリント

状態表示ランプについて	
● 緑点灯	正常
★ 緑で速く点滅	充電中
● 赤点灯	エラー (用紙切れ)
★ 赤で速く点滅	電池不足か用紙切れ


04. 使用方法について

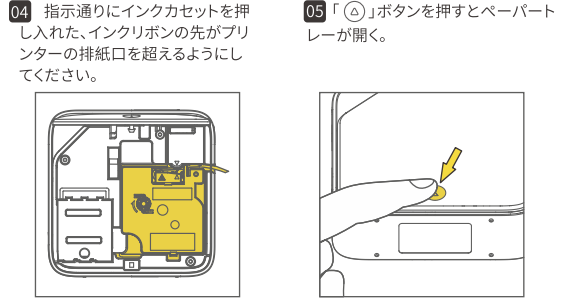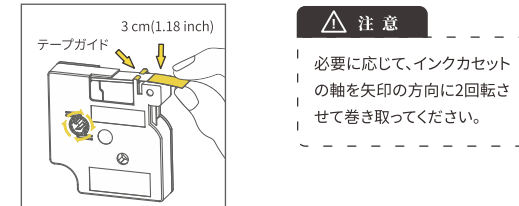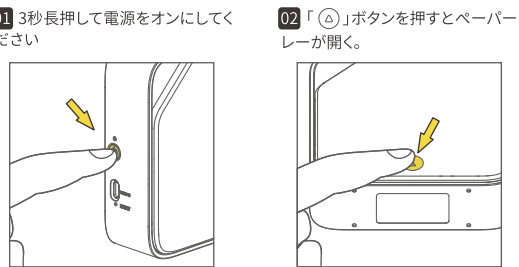

05. アプリのダウンロード




05. プリンターへの接続

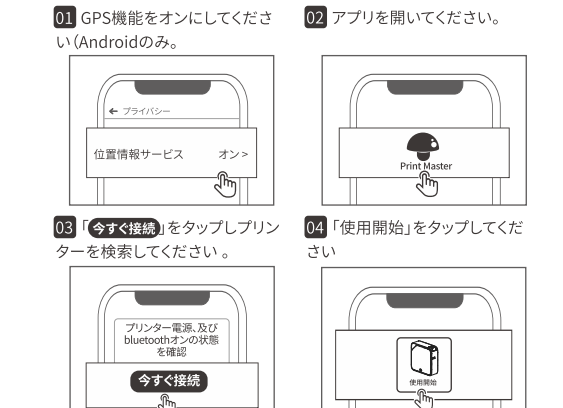


この度は弊社のプリンター製品をお選びいただき誠にありがとうございます。①ご購入日から1年は保証期間として交換・返品をお受けいたします。②修理カードは必要時に取り出せるよう保管をお願いいたします。内容に誤りや漏れ、誤解を招くような内容がある場合はカスタマーサービスまでお尋ねください。

07. プリントの方法

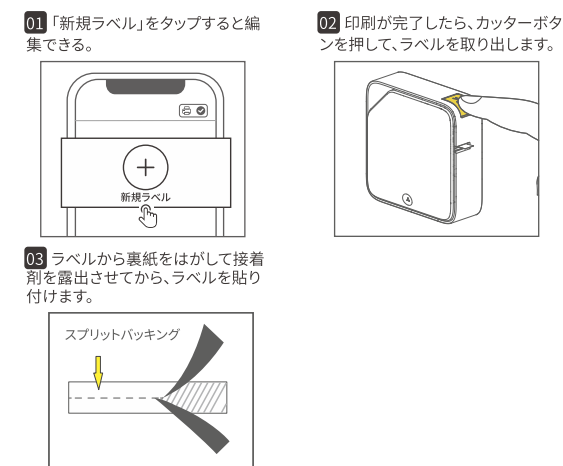

08. プリントヘッドのお手入れ

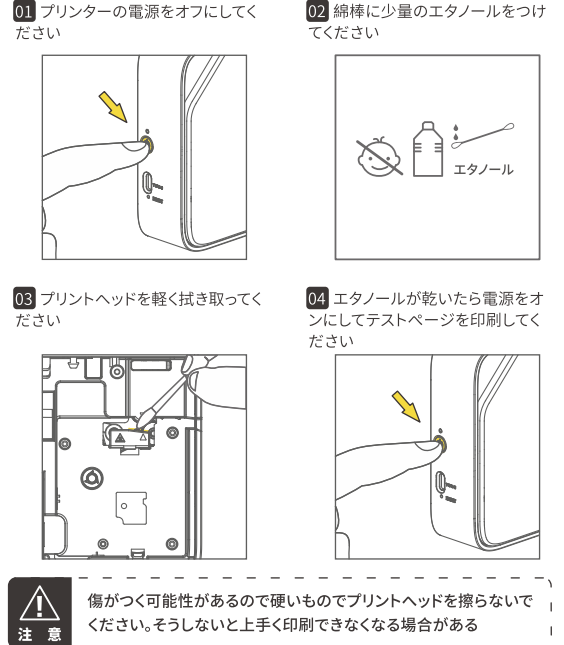

09. トラブルシューティング

トラブル	解決方法
電源が入らない	プリンターの電池残量が十分あることを確認してください。
プリントできない、またはきんと印字されない	1. インクカセットが正しくセットされているか確認してください。 2. ペーパーバートレーがきちんと閉まっているか確認してください。 3. インクカセットの残量を確認してください。
ラベルに白い線が出る	プリントヘッドにホコリがついている可能性があり、インクカセットを取り出し、乾いた綿棒で軽く垂直方向にプリントヘッドを拭き取ってください。警告: 手でプリントヘッドに触らないでください。やけどの恐れがあります。
スマートフォンからプリントできない	スマートフォンのBluetoothがオンになっているか、アプリとプリンターが接続されているかを確認してください。

10. 修理について

この度は弊社のプリンター製品をお選びいただき誠にありがとうございます。①ご購入日から1年は保証期間として交換・返品をお受けいたします。②修理カードは必要時に取り出せるよう保管をお願いいたします。内容に誤りや漏れ、誤解を招くような内容がある場合はカスタマーサービスまでお尋ねください。


保証書

交換 返品

お客様	お名前:	
	性別:	
	電話番号:	
	ご住所:	
	お買い上げ日:	
製品情報	注文番号:	
	シリアル番号:	
	理由:	
返品、交換、また修理の請求		

Deutsch


01. Verpackungsliste

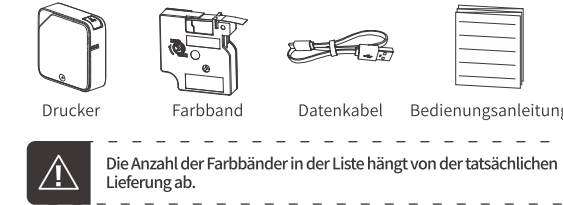

02. Parameter zum Gerät

Name	Multifunktions-Etikettendrucker
Modellnummer	D1600
Technologie	Thermotransferdruck
Breite des Etiketts (Max)	12mm
Auflösung	203dpi
Lebensdauer des Druckkopfs	50KM
Kommunikation	Bluetooth
Produktgröße	128*128*51.5mm (5*5*2 inch)
Stromzufuhr	5V=2A
Stromquelle	Lithiumbatterie Type-C
Unterstützte Betriebssysteme	iOS Android

03. Beschreibung des Geräts Erscheinungsteile

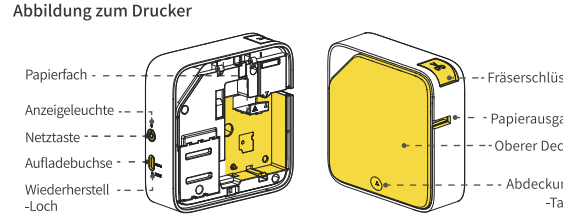

03. Beschreibung des Geräts Stromversorgung und Anzeigeleuchte

Erklärung zur Netzaste


Taste	Bedienung	Funktion
Netzaste	3 Sek. drücken	An/Aus
	Doppelklick	Inhalt zur Selbstinspektion drucken

Anzeigeleuchte

Erklärung zur Anzeigeleuchte

● Grün	Normaler Zustand
★ Blinkt schnell grün	Aufladen
● Rot	Fehler (kein Papier)
★ Blinkt schnell rot	Schwache Batterie oder kein Papier


04. Anweisungen zum Gebrauch

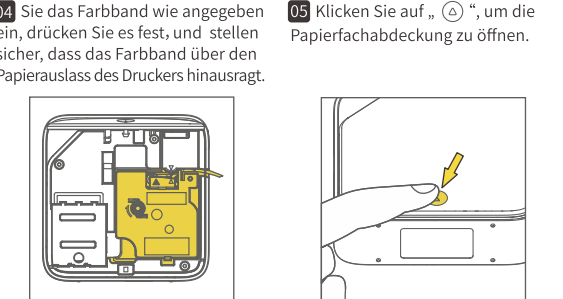



05. App heruntergeladen




06. Drucker verbinden

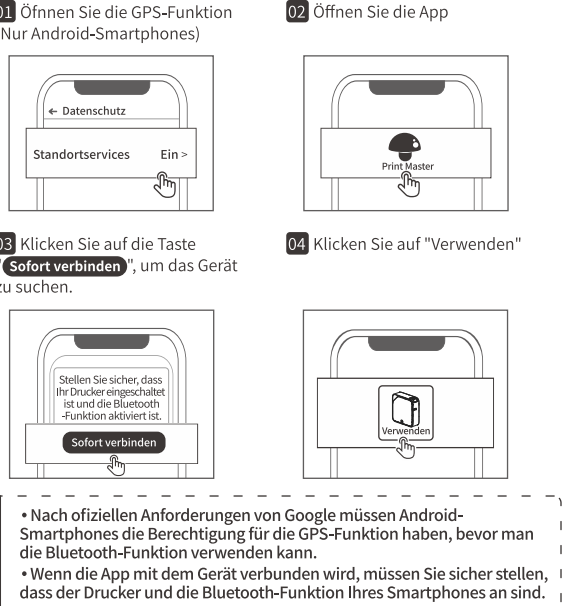

07. Anleitung zum Drucken

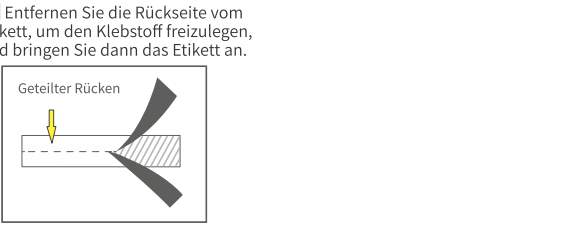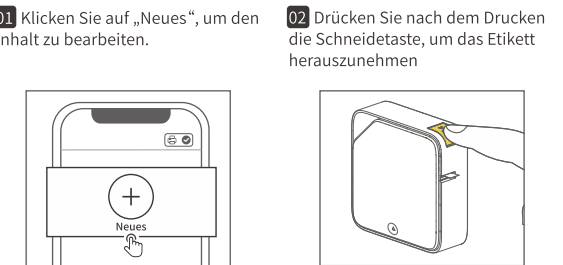

08. Wartung des Druckkopfes

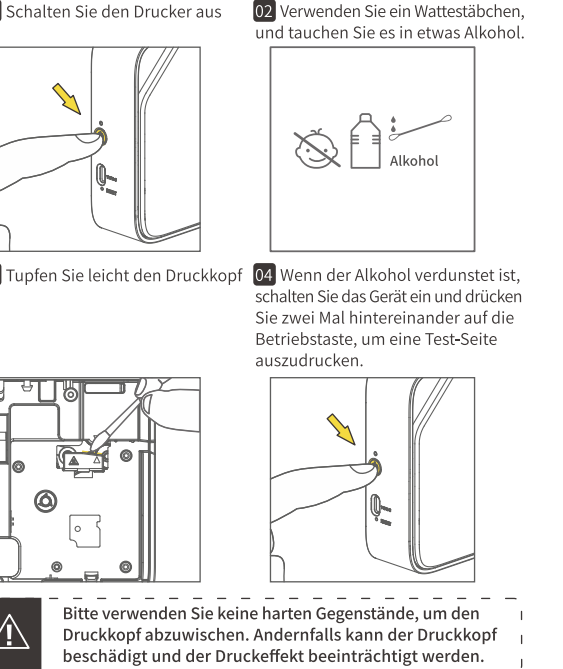

09. Troubleshooting

Problem	Lösung
Drucker lässt sich nicht einschalten	Überprüfen Sie, ob die Batterie des Druckers schwach ist.
Drucken nicht möglich oder die Zeichen erscheinen nicht richtig.	1. Überprüfen Sie, ob die Farbbandbox richtig eingesetzt haben. 2. Überprüfen Sie, ob die Papierfachabdeckung richtig geschlossen wurde. 3. Überprüfen Sie, ob das Farbband aufgebraucht ist.
Beim Drucken von Etiketten erscheint eine leere Horizontallinie.	Zu viel Staub am Druckkopf. Bitte entfernen Sie das Farbband und wischen Sie den Druckkopf vorsichtig mit einem trockenen Wattestäbchen in vertikaler Richtung ab. Warnung: Bitte fassen Sie den Druckkopf nicht an, andernfalls besteht Verbrennungsgefahr.
Drucken über Handy nicht möglich	Bitte stellen Sie sicher, dass die Bluetooth-Funktion auf Ihrem Handy aktiviert ist und dass der Drucker mit der App verbunden ist.

10. Beschreibung der Produktgarantie

Vielen Dank, dass Sie sich für eines unserer Etikettendrucker entschieden haben. Während der einjährigen Garantiezeit ab dem Kaufdatum bieten wir einen zuverlässigen "Austausch/Rückgabe"-Support. ② Bewahren Sie die Garantiekarte an einem sicheren Ort auf, damit Sie sie bei Bedarf lesen können.

Sollte es Druckfehler oder Missverständnisse im Inhalt geben, wenden Sie sich bitte an unseren Kundendienst.

Garantiekarte

Ersatz Rückkehr

Nutzerinformation	Name:	
	Geschlecht:	
	Tel:	
Produktinformation	Adresse:	
	Kaufdatum:	
	Produktbestellnummer:	
Rückgabe-Grund (Ersatz/Reparatur, Anforderungsausfall)	Produkt ID:	
	Gründe für die Rückgabe oder Ersetzung:	

