

 
User Manual

M950

Thank you for choosing our label maker (here in after referred to as the "Label Maker"). The label maker produces professional, high-quality, durable labels. In addition, the variety of tape cartridges available allows you to print labels with different widths and exciting colors.

Please read this guide, including the product safety guide, before using this label maker. After reading this guide, keep it in a safe place.

For FAQs, troubleshooting, and to download software and manuals, Please visit our official website.

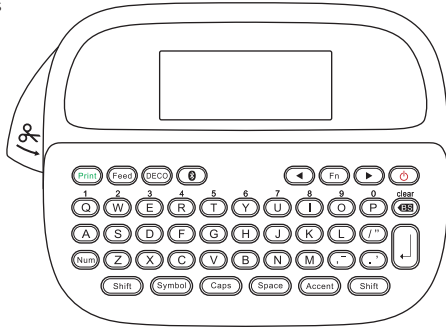


Contents

A: Before Use 1. Contents Checklist 2. Parts Description	C: Basic Operations 1. Entering Text 2. Designing Labels 3. Basic Settings 4. Printing Labels 5. Saving Label Files 6. Symbol Examples 7. Frame Examples 8. Accented Character Examples	D: Support 1. Specification 2. Charging the Label Maker 3. Replacing the Tape Cassette 4. Reset 5. Clean the Print Head 6. Print the self-test page 7. Error Messages 8. Important Note 9. Troubleshooting 10. Product Warranty Description 11. Maintenance Card
---	--	---

A: Before Use

 1. Contents Checklist

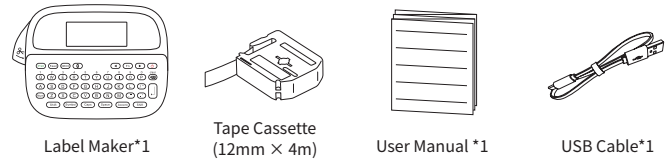


- The Tape Cassette have been placed in the machine.
- The quantity of included Tape Cassette is subject to the actual delivery.

2.Parts Description

2-1 KEYBOARD



 2-2 LCD

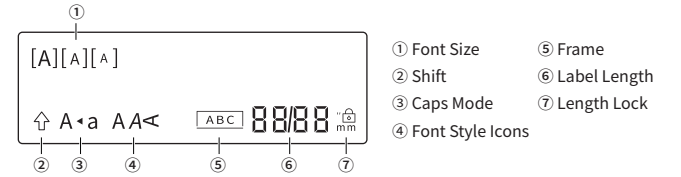


- To move the cursor to the beginning of your text, press **Shift** and the **Left Arrow** key simultaneously.
- To move the cursor to the end of your text, press **Shift** and the **Right Arrow** key simultaneously.

B: Use the Label Maker

1. Print from the Label Maker

 - 1 Remove sticker.
- 2 Press **Power** until the display lights up.

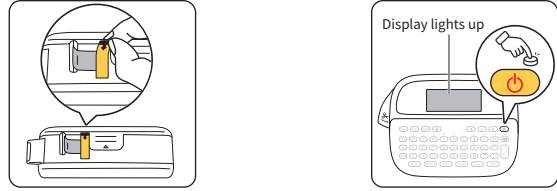

- 3 Set the language.

 
The default setting is [English].



- 4 Type text and create labels from keyboard.
- 5 Press **Print**.
- 6 Press the cutter button to cut the label.



- 7 Tear off ribbon.
- 8 Tear off the backing paper from the back of the label along the easy-tear line.
- 9 Attach labels to dry, flat objects.

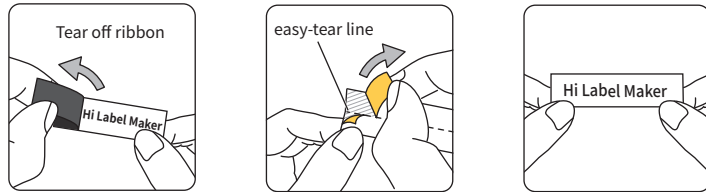

2. Print from Your Mobile Device

- 1 Download App
Method 1: Search for the "Print Master" on Google Play or the App store and download and install it.
Method 2: Scan the QR code to download.



- 2 Press **Bluetooth** to turn on the Bluetooth.
- 3 Open the Print Master.
- 4 Click on Auto Connect.



- 5 Search for printer.
- 6 Printer connected successfully.
- 7 Edit your first label, click print when done.



- 8 Printing completed.



C: Basic Operations

1. Entering Text

Upper-Case Lower-Case	Caps	Switch between upper-case and lower-case characters.
Numbers and Symbols	Symbol Or Num	Insert numbers: Press Num to turn the num lock on or off. Insert symbols: Symbol -> Select a category -> Select a symbol
Line Feed	Line Feed	Press Line Feed to start a line feed. Maximum number of lines for 0.47" (12mm) tape width: three lines.
Delete Text and Format	Delete	1 Delete one character at a time: Delete . 2 Delete all characters: Shift + Delete -> [Text Only]. 3 Delete all text and formatting: Shift + Delete -> [Text & Format].
Accented Characters	Accent	1 Entering accented characters. A-Z -> Accent -> Accent -> Select an accent. 2 To cancel operations, press Delete . • See C-8 for examples of accent characters. • The order of accented characters differs by the selected LCD language.
Label Length	Fn	Set the label length. [Auto]: Automatically adjusts the label length to the length of the text. Fn -> [Label Length] -> Select a value
A/F	Fn	This function allows you to choose a fixed label template length. Fn -> [A/F] -> Select a value

2. Designing Labels

Press **Fn**, use **Left Arrow** / **Right Arrow** to select a functions to design labels.

- 1 [Size]: Adjusting font size. **Fn** -> [Size] -> Select a value
- 2 [Width]: Adjusting font width. **Fn** -> [Width] -> Select a value
- 3 [Style]: Adjusting font style. **Fn** -> [Style] -> Select a category -> Select a style
- 4 [Undl/Frame]: Select a decorative underline/frame to add to your label. **Fn** -> [Undl/Frame] -> Select a category -> Select a underline/frame
- 5 [DECO]: This function allows you to create unique labels using built-in templates. **DECO** -> Select a deco mode
- 6 [Alignment]: Adjust text format. **Fn** -> [Alignment] -> Select a value

3. Basic Settings

Label Width	Fn	The default setting is [12mm]. Fn -> [Label Width] -> [9mm/12mm Select a value]
Cutting Line	Fn	The Cutting Line (:) indicate the end of the label. Cut along the Cutting Line (:) with scissors. Fn -> [Cutting Line] -> [OFF]
Label Width	Fn	Set the print density. Fn -> [Print Density] -> Select a value
Label Width	Fn	Set the language. The default setting is [English]. Fn -> [Language] -> Select a language

4. Printing Labels


Vertical	Fn	Set up vertical printing. Fn -> [vertical] -> [ON]
Feed	Feed	This function will feed approximately 0.31" (8mm) of blank tape. Feed
Print	Print	start printing. 1.If you need only 1 copy of the label, press Print . 2.When printing multiple labels (printing multiple same labels): Shift + Print -> Select a print quantity(Up to 9 copies)

5. Saving Label Files

You can save your original labels on to your label maker. Up to 9 labels can be saved and recalled for printing at a later time. You can also edit and overwrite the stored label.

- 1 [Save]: Create a label -> **Fn** -> [File] -> [Save] -> Select a save destination
- 2 [Open]: **Fn** -> [File] -> [Open] -> Select a saved file

 6. Symbol Examples

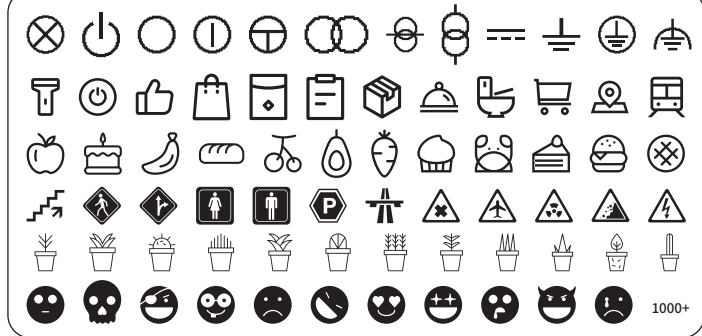

7. Frame Examples

