


Quick Start Guide

 
P3M
AI Smart Mini Printer

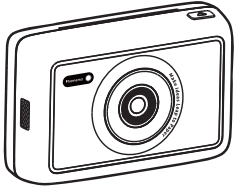

English


1.Product Introduction

1. Packing List




Refer to the actual set configuration for accessory quantities and specifications.

1.2 Printer Parts Instruction

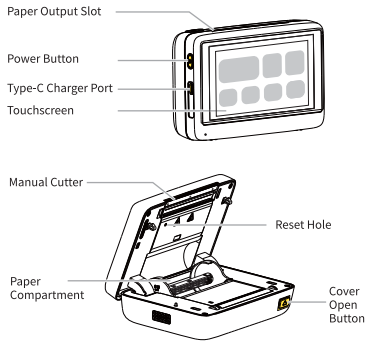


2. Getting Started


01 Press the lid open button in the direction of the arrow to remove the paper roll.

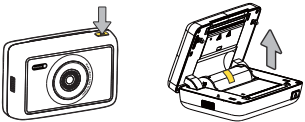

 
02 Remove the protective sticker from the paper roll, and pull the paper lead out through the holder's opening.




03 Place the paper roll in the Paper Compartment.

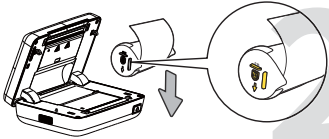

04 Pull some of the paper out until it extends beyond the Paper Output Slot, and then close the Top Cover.

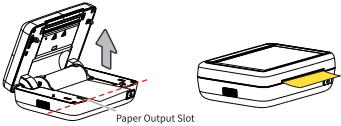

 05 Press and hold the Power button for 3 seconds to turn on the device until the touchscreen lights up.



06 Tap the Home screen, then tap [Settings].




07 Select your network and enter the password.




WiFi supports only 2.4G band networks.

08 When the connection is completed, printing can be started.

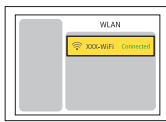


3. Detaljeret elektronisk manual

01 Press the cover open button to open the printer and remove the paper roll.

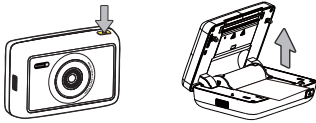


02 Pull movable damper to remove the paper roll to be replaced.

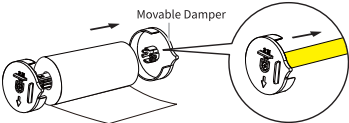


Some paper rolls include tubes. Remove the paper tube after running out.


03 Insert one section of the spindle into the paper roll to be installed.

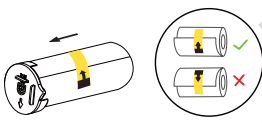


04 Reinstall the Movable Damper and push it to the edge of the paper roll.

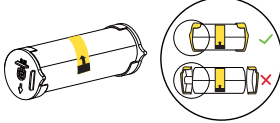

05 Remove the protective sticker from the new paper roll and place it back into the printer's internal paper compartment.

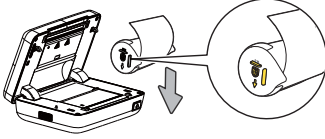

4. Cleaning and Maintenance

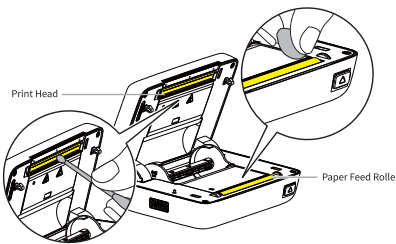

Please make sure the printer is turned off before performing any cleaning or maintenance. If you encounter issues such as blank lines, blurry print, or missing characters, it may be caused by dirt on the Print Head. Please follow these steps:

- 1. If you have just finished printing, wait for at least 30 minutes for the Print Head to cool down completely.
- 2. Use a cotton swab dipped in alcohol or a print head cleaning pen (purchased separately) to gently wipe the surface of the Print Head about 5 times to remove any dust and stains.
- 3. Wait 5-10 minutes for the alcohol to evaporate completely. Thus, the cleaning is done, and you can continue using the printer.

5. Additional Instructions

5.1 Button Instructions

Button Type	Operation	Function
Power Button	Long press for 3s	Power on/off
	Double press when printer is on	Print a self-test page

5.2 Indicator Light Instructions

Status	Meaning	Advised Action
Solid White	Functioning/Fully charged	/
Slow Flashing White	Charging when printer is on	/

6. More Help

Scan the QR code to access the Detailed Electronic Manual and instructional videos.



As the Safari browser on Apple devices does not support QR code scanning, please use your device's built-in QR code scanner instead.

7.Information to User

7.1 FCC INFORMATION (U.S.A.)

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense. The device has been evaluated to meet general RF exposure statement.

The device can be used in portable exposure condition without restriction

7.2 ISED NOTICE (Canada)

- English: This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS (s). Operation is subject to the following two conditions: (1) This device must not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device. ISED RF exposure statement: The device has been evaluated to meet general ISED RF exposure requirement. The device can be used in portable exposure condition without restriction. - French: L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: 1) L'appareil ne doit pas produire de brouillage; 2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement. ISED Déclaration d'exposition aux RF: L'appareil a été évalué pour répondre aux exigences générales d'exposition aux RF d'ISED. L'appareil peut être utilisé dans des conditions d'exposition portable sans restriction.

WARNING

Please pay attention to electrical safety. Do not disassemble, crush or puncture the battery. This product is not a toy. Bitte achten Sie auf elektrische Sicherheit. Zerlegen, zerquetschen oder durchstechen Sie die Batterie nicht. Dieses Produkt ist kein Spielzeug. Veuillez noter la sécurité électrique. Ne pas démonter, écraser ou piquer la batterie. Ce produit n'est pas un jouet. Si prega di prestare attenzione alla sicurezza elettrica. Non smontare, schiacciare o perforare la batteria. Questo prodotto non è un giocattolo. Preste atención a la seguridad del consumo de electricidad. No retire, triture o pinche la batería. Este producto no es un juguete. Lüften elektrik güvenliğine dikkat edin. Bateryi dağıtma, yıkma veya yumruklama. Bu ürün oyuncak degil. Var uppmärksam på elsäkerheten. Ta inte isär, krossa eller punktera batteriet. Den här produkten är ingen leksak. Let op elektrische veiligheid. Demonteer, verpletter of prik de batterij niet. Dit product is geen speelgoed. Proszę zwrócić uwagę na bezpieczeństwo elektryczne. Nie demontuj, nie miazdź ani nie przebijaj akumulatora. Ten produkt nie jest zabawką.

BATTERY WARNING

- 1. Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- 2. Leaving a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas
- 3. The battery subjected to extremely low air pressure that may result in an explosion or the leakage of flammable liquid or gas.
- 4. Replacement of a battery with an incorrect type that can result in an explosion or the leakage of flammable liquid or gas.
- 5. Battery cannot be subjected to extremely high or low temperatures, low air pressure at high altitude during use, storage or transportation.

Special Notes

The company assumes full responsibility for the revision and explanation of this manual, exercising utmost diligence to guarantee its accuracy. Nevertheless, please note that any technical improvements to the product, accessories, software interfaces, etc. in this manual serve solely as illustrations and references. Due to product updates and upgrades, the actual product may vary slightly from the images. Please refer to the physical product for accurate representations.