



WARNING

California Proposition 65
WARNING: This product contains chemicals known to the State of California to cause cancer, and birth defects or other reproductive harm.

ADVERTENCIA: Este producto contiene productos químicos reconocidos por el estado de California que provocan cáncer, defectos de nacimiento u otros daños reproductivos.

For more information: www.P65Warnings.ca.gov



CHARGER



CB1001
TRANSLUCENT PARTY
SPEAKER



WELCOME

Please read this manual carefully before operating the CB1001 speaker and keep it for future reference.

DEAR CUSTOMER

Congratulations on your purchase!

We encourage you to take a few minutes to read this manual, which describes the CB1001 Speaker and includes step-by-step instructions to help you enjoy the product. Read all the safety instructions as well before using it.

If you have any questions about this product, please contact customer service or your retailer.

IMPORTANT SAFETY INSTRUCTIONS

1. Read all warnings.
2. Follow all instructions in this guide.
3. The CB1001 Speaker should not be exposed to water, rain or any liquids.
4. Do not block any ventilation openings. Please keep at least a foot of distance between the speaker and any other objects.
5. Do not place the CB1001 near any heat sources such as radiators, stoves or other appliances (including amplifiers) that produce heat.
6. Do not place candles or any objects with a flame on the speaker.
7. Protect the power cord from being walked on or pinched, especially at the wall outlet and where the cord attaches to the back of the speaker.
8. Use only attachments and accessories specified by the manufacturer.
9. Unplug the speaker during lightning storms or when not in use.

CAUTION	
RISK OF ELECTRIC SHOCK. DO NOT OPEN.	
	THIS SYMBOL ALERTS YOU TO THE PRESENCE OF DANGEROUS VOLTAGE, WHICH MAY BE OF SUCH MAGNITUDE AS TO CAUSE A HARMFUL ELECTRIC SHOCK TO THE USER. PLEASE BE CAREFUL.
	THIS SYMBOL ALERTS THE USER TO OPERATION AND MAINTENANCE PROCESSES WITH SPECIFIC INSTRUCTIONS TO CONSIDER.
WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT EXPOSE THE EQUIPMENT TO RAIN OR MOISTURE.	

SPECIFICATIONS

Power input: DC 13.5V
 Lithium battery 11.1V5400mah
 Power: 50 W.R.M.S.
 Speaker: 10" Steel frame woofer 4 Ohm
 Driver: 1" titanium diaphragm 8 Ohm
 Weight: 7.5 Kgs
 Size: 13.5*12.6*20.4 in
 Working temperature: 23°F a 95°F

7 Lighting modes

- 1: Multi color automatically when on
- 2: Single color circle
- 3: Multi color Circle
- 4: Multi color Convergence
- 5: Multicolor Circle and Convergence
- 6: Multi color Circle, Convergence and Intermittent
- 7: Led light off

ACCESSORIES

Remote control
 DC Adapter 1.2m
 Stand
 Wireless microphone
 User guide

RF exposure statement

This equipment complies with the FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

WARNING	
	California Proposition 65 WARNING: This product contains chemicals known to the State of California to cause cancer, and birth defects or other reproductive harm. ADVERTENCIA: Este producto contiene productos químicos reconocidos por el estado de California que provocan cáncer, defectos de nacimiento u otros daños reproductivos. For more information: www.P65Warnings.ca.gov



TWS CONNECTION



You can pair two CB1001 speakers (sold separately) to enjoy your music in true stereo. Press the TWS button on the rear panel. The CB1001 Speakers will pair automatically.

Turn on the wireless connection function from your smartphone and search for the CB1001. Select the music you would like to hear. The CB1001 Speaker will start playing music from your mobile device.

Notes:

1. TWS doesn't work in radio mode.
2. Press the TWS button to disconnect TWS connection.

PRODUCT OVERVIEW

FRONT VIEW



REAR CONTROL PANEL




1. Memory Card port: Insert memory card to playback your stored music.
2. Flash Drive port: Insert a Flash Drive storage device to play back your stored music.
3. MODE: Press to select LINE (Aux-in)/FM/BLUETOOTH
REPEAT: Short press to repeat the track.
◀◀ /VOL-: Short press for previous song, long press for volume down.
▶▶ /VOL+: Short press to skip to next song, long press to increase volume.
▶▶ : In Flash Drive/ Memory Card Wireless Connection modes, short press to Play & Pause music.
In FM mode, press to auto search and store radio stations.
VOLUME: In Flash Drive/ Memory Card Wireless Connection modes, rotate the knob to adjust volume to your desired level.
TWS: Short press for TWS pairing.
REC: long press to start record to USB or SD card, short press to play recording, short press again to stop playing.
LED: Lighting model switch.
4. MIC volume control.
5. ECHO controls knob.
6. BASS adjustment knob.



7. TREBLE adjustment knob.
8. Balanced XLR MIC input.
9. Audio RCA input/output.
10. DC POWER input.
11. POWER ON/OFF.

REMOTE CONTROL

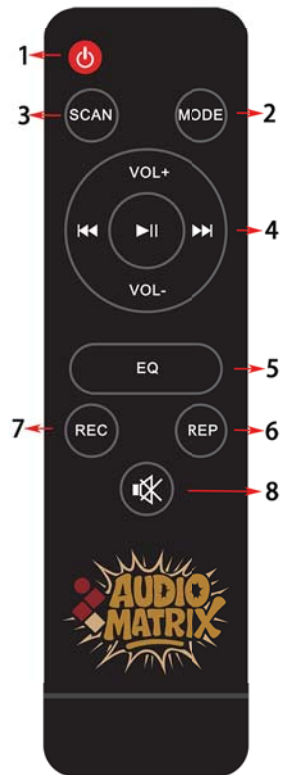

1. MP3 module standby
2. MODE: short press to select LINE (Aux-in)/FM/BLUETOOTH.
3. SCAN: short press to scan for available frequencies
4. VOL-: Short press for volume down, VOL+: Short press to increase volume
: In USB/SD/WIRELESS mode short press to Play & Pause the music.
: Short press for previous song. Under FM mode, short press to move backward FM channel.
: Short press to skip to next song, Under FM mode, short press to move forward FM channel.
5. EQ: short press to select POP, ROCK, JAZZ, CLASSICAL, VOCAL.
6. REP: short press to repeat songs in the playlist all/random/one.
7. REC: long press to start record to USB or SD card, short press to play recording, short press again to stop playing.
8. MUTE: short press to mute the sound

BASIC OPERATION

TURNING THE UNIT ON/OFF

Press the power ON/OFF button on the back of the speaker to switch on/off the speaker. If the power button is off, power button on the remote control will not be functional.

FRONT PANEL LIGHT

To turn on the Light short press LED switch on the rear panel. There are 7 lighting modes to choose from:

- Mode 1: Multi color automatically when on
- Mode 2: Single color circle
- Mode 3: Multi color Circle
- Mode 4: Multi color Convergence
- Mode 5: Multicolor Circle and Convergence
- Mode 6: Multi color Circle, Convergence and Intermittent
- Mode 7: Led light off