



	WARNING
	California Proposition 65
	WARNING: This product contains chemicals known to the State of California to cause cancer, and birth defects or other reproductive harm.

ADVERTENCIA: Este producto contiene productos químicos reconocidos por el estado de California que provocan cáncer, defectos de nacimiento u otros daños reproductivos.

For more information: www.P65Warnings.ca.gov



CBW1212

WOODEN&PLASTIC PARTY

SPEAKER



WELCOME

Please read this manual carefully before operating the CBW1212 speaker and keep it for future reference.

DEAR CUSTOMER


Congratulations on your purchase!

We encourage you to take a few minutes to read this manual, which describes the CBW1212 Speaker and includes step-by-step instructions to help you enjoy the product. Read all the safety instructions as well before using it.

If you have any questions about this product, please contact customer service or your retailer.

IMPORTANT SAFETY INSTRUCTIONS

1. Read all warnings
2. Follow all instructions in this guide.
3. The CBW1212 Speaker should not be exposed to water, rain or any liquids.
4. Do not block any ventilation openings. Please keep at least a foot of distance between the speaker and any other objects.
5. Do not place the CBW1212 near any heat sources such as radiators, stoves or other appliances (including amplifiers) that produce heat.
6. Do not place candles or any objects with a flame on the speaker.
7. Protect the power cord from being walked on or pinched, especially at the wall outlet and where the cord attaches to the back of the speaker.
8. Use only attachments and accessories specified by the manufacturer.
9. Unplug the speaker during lightning storms or when not in use.

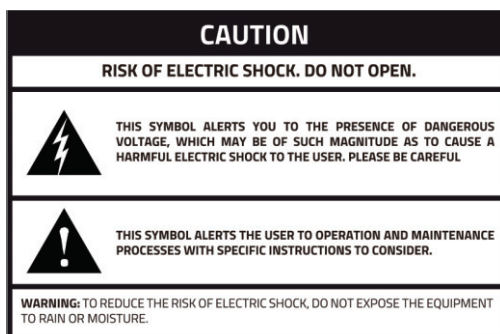

SPECIFICATIONS

Power input: .DC 15V
Lithium battery 11.1V7200mah
Power: 80W R.M.S.
Speaker: 2 X 12 inch Steel frame woofer 4 ohm
Driver: 2 pcs middle range
2 pcs high range
Weight: 21.5 kgs
size: 15*14.1*45 in
Working temperature: 23°F a 95°F

6 Lighting modes
1: Multi color automatically when on
2: Multi color Circle
3: Multi color Convergence
4: Multicolor Circle and Convergence
5: Multi color Circle, Convergence and Intermittent
6: Led light off

ACCESSORIES

Remote control
DC Adapter+AC power cord
2pcs UHF wireless microphone
User guide

RF exposure statement

This equipment complies with the FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



TWS CONNECTION



You can pair two CBW1212 speakers (sold separately) to enjoy your music in true stereo. Press and hold the "TWS" button on the rear panel. The CBW1212 Speakers will pair automatically.

Turn on the wireless connection function from your smartphone and search for the CBW1212. Select the music you would like to hear. The CBW1212 Speaker will start playing music from your mobile device.

Notes:

1. TWS doesn't work in radio mode.
2. Press and hold the TWS button to disconnect TWS connection.

PRODUCT OVERVIEW

FRONT VIEW




REAR CONTROL PANEL



1. AUX input/ USB input/TF card input/5V output/Mic input 1&2.
2. TWS: Short press for TWS pairing, Short press disconnected TWS.
EQ: Short press to select POP, ROCK, JAZZ, CLASSICAL, VOCAL.
3. REPEAT: Short press to repeat songs in the playlist(all/random/one)
VOICE CUT: Short press turn off the human voice.
4. MIC PRIORITY: Short press Microphone voice first.
LIGHT: To select different light model.
5. REC: Short press to start record into USB or SD card, Short press again to stop record.
REC PLAY: Short press to playing recorded voice.
6. VOLUME: In Flash Drive/ Memory Card Wireless Connection modes, rotate the knob to adjust volume to your desired level.
7. MIC MENU: Select Mic volume/ Mic echo/Mic treble/Mic bass.
8. MUSIC MENU: Select Music volume/ Music treble/Music bass.
9. MODE: Select USB/BT/FM/LINE mode.
◀◀: Short press for previous song, long press for rewind.
▶▶: Short press to skip to next song, long press for fast forward.
▶|: In Flash Drive/ Memory Card Wireless Connection modes, short press to Play & Pause music, In FM mode, press to auto search and store radio stations.

REMOTE CONTROL

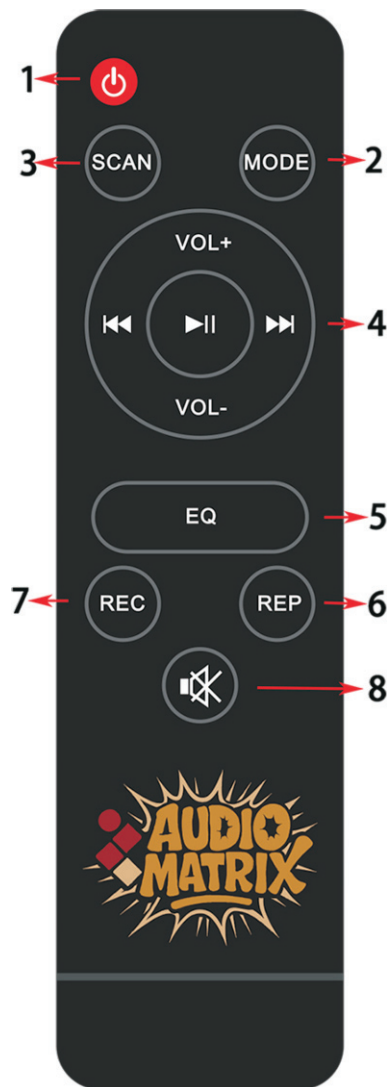

1.  MP3 module standby
2. MODE: short press to select LINE (Aux-in)/ FM/BLUETOOTH.
3. SCAN: short press to scan for available frequencies
4. VOL-: Short press for volume down, VOL+: Short press to increase volume
 ◀◀ :In USB/SD/WIRELESS mode short press to Play & Pause the music.
 ▶▶ : Short press for previous song. Under FM mode, short press to move backward FM channel.
 ▶▶ : Short press to skip to next song, Under FM mode, short press to move forward FM channel.
5. EQ: short press to select POP, ROCK, JAZZ, CLASSICAL, VOCAL.
6. REP: short press to repeat songs in the playlist all/random/one.
7. REC: long press to start record to USB or SD card, short press to play recording, short press again to stop playing.
8. MUTE: short press to mute the sound

BASIC OPERATION

TURNING THE UNIT ON/OFF

Press the power ON/OFF button on the back of the speaker to switch on/off the speaker. If the power button is off, power button on the remote control will not be functional.

FRONT PANEL LIGHT

from:
To turn on the Light short press LED switch on the rear panel. There are 6 lighting modes to choose from:

- Mode 1: Multi color automatically when on
- Mode 2: Multi color Circle
- Mode 3: Multi color Convergence
- Mode 4: Multicolor Circle and Convergence
- Mode 5: Multi color Circle, Convergence and Intermittent
- Mode 6: Led light off