



# SW183 TWO WAY DOUBLE 6.5" PARTY SPEAKER



## WARNING

### California Proposition 65

WARNING: This product contains chemicals known to the State of California to cause cancer, and birth defects or other reproductive harm.

ADVERTENCIA: Este producto contiene productos químicos reconocidos por el estado de California que provocan cáncer, defectos de nacimiento u otros daños reproductivos.

For more information: [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)





## WELCOME

Please read this manual carefully before operating the SW183 speaker and keep it for future reference.

## DEAR CUSTOMER

 
Congratulations on your purchase!

We encourage you to take a few minutes to read this manual, which describes the SW183 Speaker and includes step-by-step instructions to help you enjoy the product. Read all the safety instructions as well before using it.

If you have any questions about this product, please contact customer service or your retailer.

## IMPORTANT SAFETY INSTRUCTIONS

1. Read all warnings
2. Follow all instructions in this guide.
3. The SW183 Speaker should not be exposed to water, rain or any liquids.
4. Do not block any ventilation openings. Please keep at least a foot of distance between the speaker and any other objects.
5. Do not place the SW183 near any heat sources such as radiators, stoves or other appliances (including amplifiers) that produce heat.
6. Do not place candles or any objects with a flame on the speaker.
7. Protect the power cord from being walked on or pinched, especially at the wall outlet and where the cord attaches to the back of the speaker.
8. Use only attachments and accessories specified by the manufacturer.
9. Unplug the speaker during lightning storms or when not in use.

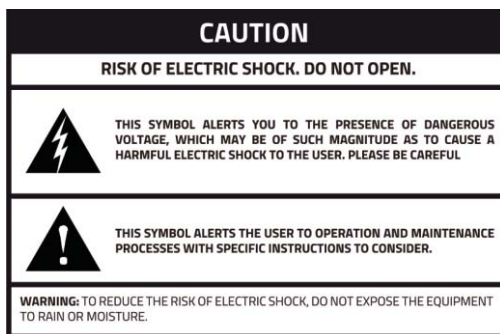

## SPECIFICATIONS

Power input: DC 13.5V  
Lithium battery : 11.1V5400 mah  
Power: 50W R.M.S.  
Speaker: 2\*6.5" Steel frame woofer 4 Ohm  
Driver: 2\*2" Driver 8 Ohm  
Weight: 7.5 Kgs  
Size: 11.3\*11.4\*22.7in  
Working temperature: 23°F a 95°C

10 lighting modes :  
1: White when opened  
2: Automatically multi-color when opened  
2: Multi colored long brightness  
3: Monochrome Change Circle  
4: Multi-color fusion  
5: Two colored circles  
6: Two color convergence and intermittency  
7: Monochrome gradient  
8: Outer light on, inner light multi-color gradient  
9: Multi-color convergence  
10: Monochromatic variation

## ACCESSORIES

Remote control  
DC Adapter  
1pcs UHF wireless microphone  
User guide

## RF exposure statement

This equipment complies with the FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

### FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



## TWS CONNECTION



Link 2 speakers to a single phone  
**without cables**

You can pair two SW183 speakers (sold separately) to enjoy your music in true stereo. Press and hold the "TWS" button on the rear panel. The SW183 Speakers will pair automatically.

Turn on the wireless connection function from your smartphone and search for the SW183. Select the music you would like to hear. The SW183 Speaker will start playing music from your mobile device.

### Notes:

 
 
1. TWS doesn't work in radio mode.
2. Press and hold the TWS button to disconnect TWS connection.

## PRODUCT OVERVIEW

### FRONT VIEW




### REAR CONTROL PANEL

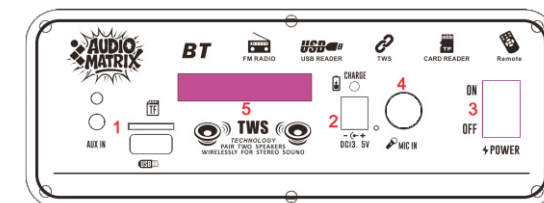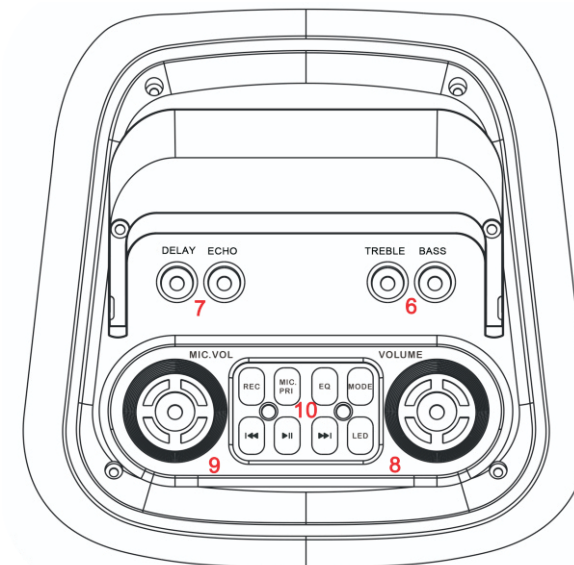

1. AUX input/ USB input/TF input.
2. DC 13.5V charging hole.
3. Power ON/OFF
4. Wired microphone in.
5. Display screen.
6. Treble/Bass knob control.
7. Microphone voice Delay/ Echo knob control.
8. Speaker main volume knob control.
9. Microphone volume knob control.
10. REC: Short press to start record into USB or SD card, Short press again to stop record.
- MIC.PRI: Short press Microphone voice first.
- EQ: Short press to select POP, ROCK, JAZZ, CLASSICAL, VOCAL.
- MODE: Select USB/BT/FM/LINE mode.
- ⏮ : Short press for previous song, long press for rewind.
- ⏭ : Short press to skip to next song, long press for fast forward.
- ⏸ : Short press to Play & Pause music, Long press for TWS pairing, long press again disconnected TWS.
- LED: To select different light modes.

## REMOTE CONTROL

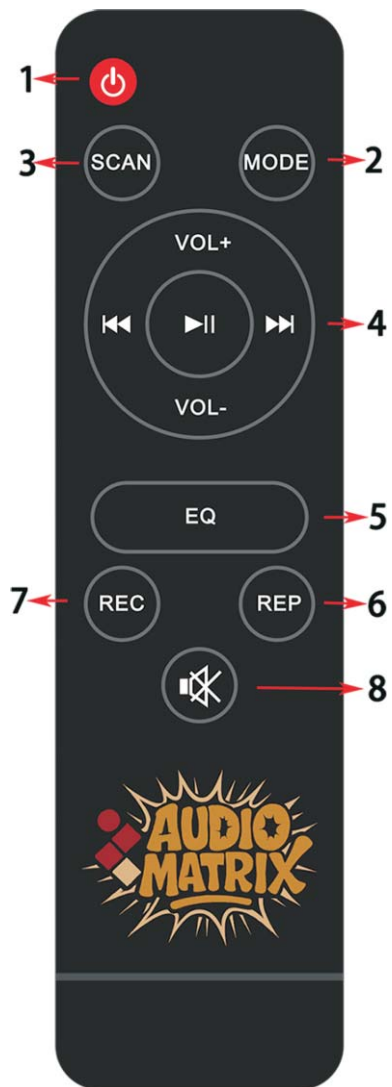 

1.  MP3 module standby
2. MODE: short press to select LINE (Aux-in)/ FM/BLUETOOTH.
3. SCAN: short press to scan for available frequencies
4. VOL-: Short press for volume down, VOL+: Short press to increase volume
  - ◀◀: Short press for previous song. Under FM mode, short press to move backward FM channel.
  - ▶▶: Short press to skip to next song, Under FM mode, short press to move forward FM channel.
  - ▶||: In USB/SD/WIRELESS mode short press to Play & Pause the music.
5. EQ: short press to select POP, ROCK, JAZZ, CLASSICAL, VOCAL.
6. REP: short press to repeat songs in the playlist all/random/one.
7. REC: long press to start record to USB or SD card, short press to play recording, short press again to stop playing.
8. MUTE: short press to mute the sound

## BASIC OPERATION

### TURNING THE UNIT ON/OFF

Press the power ON/OFF button on the back of the speaker to switch on/off the speaker. If the power button is off, power button on the remote control will not be functional.

### FRONT PANEL LIGHT

from:  
To turn on the Light short press LED switch on the rear panel. There are 6 lighting modes to choose from:

10 lighting modes :

- 1: White when opened
- 2: Automatically multi-color when opened
- 2: Multi colored long brightness
- 3: Monochrome Change Circle
- 4: Multi-color fusion
- 5: Two colored circles
- 6: Two color convergence and intermittency
- 7: Monochrome gradient
- 8: Outer light on, inner light multi-color gradient
- 9: Multi-color convergence
- 10: Monochromatic variation