



The diagram illustrates the CORN 6000 mobile phone from both front and back perspectives. The front view (left) shows the screen, navigation keys, and a numeric keypad. The back view (right) shows the camera, speaker, and battery cover. Labels with leader lines identify the following components:

- Touch**: Points to the top of the front view.
- Receiver**: Points to the top of the back view.
- Display**: Points to the screen on the front view.
- Back Camera**: Points to the camera lens on the back view.
- Navigation keys**: Points to the directional pad on the front view.
- Press long to switch torch on/off**: Points to the torch key on the front view.
- Left soft key**: Points to the key to the left of the torch key on the front view.
- Dial/Answer key**: Points to the call key on the front view.
- Right soft key**: Points to the key to the right of the torch key on the front view.
- Power on/off key**: Points to the power key on the front view.
- Speaker**: Points to the speaker grille on the back view.
- Battery Cover**: Points to the back cover on the back view.
- Headphone**: Points to the top of the back view.
- Charging port**: Points to the bottom of the back view.

- [illegible]

- El incumplimiento de las restricciones anteriores puede resultar en la violación de las pautas de exposición a RF.

