

VR^{REAL FEEL™} FISHING

3D REALITY SIMULATOR



QUICK START GUIDE

Follow these instructions and you'll be playing in just few minutes

1 Download The Free App



■■■ Search on the Apple App Store or Google Play for **VR Real Feel™ Fishing**.


System requirement: Android 11 or above / iOS 14 or above
The minimum OS requirement may change from time to time.

2 Assemble the Fishing Rod & Install Batteries

■■■ **2.1** Attach the front tip to the body by matching the D-shaped connectors.

■■■ **2.2** Decide if you want to use the Fishing rod with your right or left hand. Do a test cast to see which is more comfortable for you. Attach the Reel handle on the side that is opposite of the hand you use to throw. (Example: if you throw with your right hand, put the handle on the left hand side of the reel). Fit the slot of the handle to the spindle then push it inside.

■■■ **2.3** Similarly, attach the stopper cap to the opposite side.

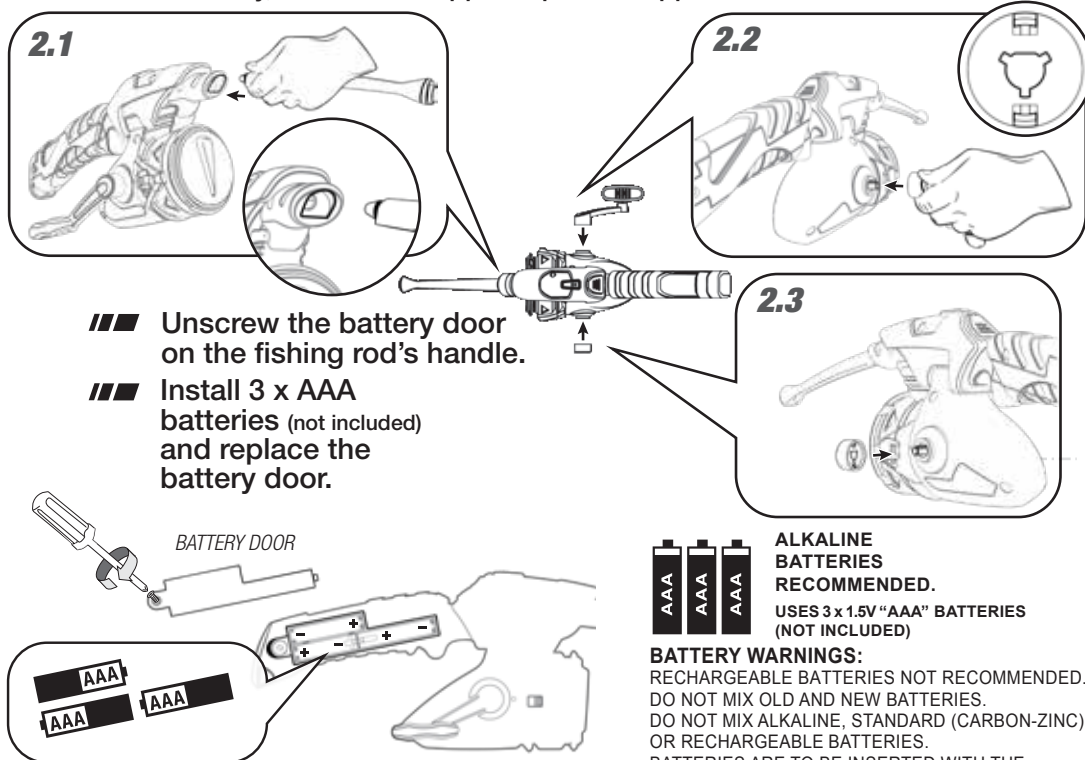

■■■ Wear the wrist strap and hold the fishing rod firmly during game play.



3 Setting Up Your Smart Phone

■■■ Make sure the volume level on your phone is set to **maximum** and that the phone is not set to **“silent” mode**.

NOTE: You will be able to adjust the volume levels of the sound effects and music in the App before you start to play the game.

■■■ Turn OFF your WiFi and Cellular data. This will keep you from being disturbed while playing. You can also set your phone to “airplane mode” but be sure your Bluetooth® connectivity is still enabled.

Bluetooth® **IMPORTANT:** Bluetooth® 5.0 or above connectivity must be working for you to play with VR Real Feel™ Fishing.

4 Launch the VR REAL FEEL™ App

■■■ Click & launch the VR Real Feel™ app on your device.

■■■ Turn the ON/OFF switch on the right side of the fishing rod to ON.

NOTE: The LED on the right side of the fishing rod will flash to tell you that the batteries are working.



Press **SCAN** in the app to connect your fishing rod by Bluetooth® technology. The game will start automatically when the fishing rod is successfully connected. **LED on the fishing rod should be lit.** This tells you that the Bluetooth® connection was successful.

NOTE:

•You must have the fishing rod connected by Bluetooth® technology for the app to open.


5 Insert Your Phone

/// To open the front of the headset, press both A and B buttons down at the same time and flip the headset open.

/// Spread the self-adjusting frame open wide enough to insert your phone. Release and make sure that it holds your phone securely.


Not for phone size over 160mm H x 78mm W x 9mm D (6.22in H x 3.07in W x 0.35in D)

Please remove the phone case and any accessories before inserting your phone into the headset.

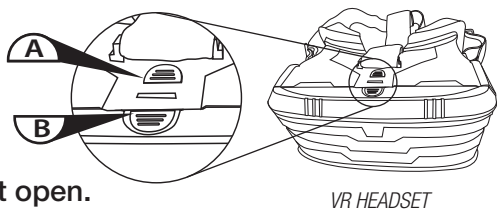


6 Center your phone

/// Align the white line on the app screen with the marker on the frame to center your phone properly for optimum viewing. Close the VR headset carefully; make sure the buttons on top are locked.

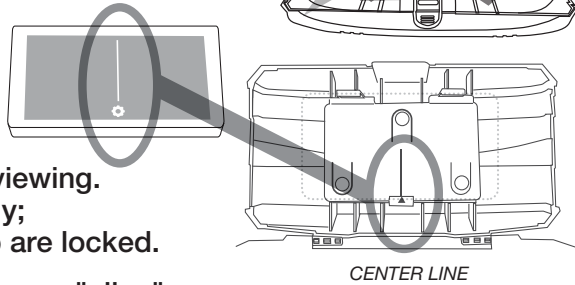

/// For some phone models the frame "clips" may align with control buttons such as power or volume. Attach the included foam pad to the frame clips to minimize pressure on those buttons.

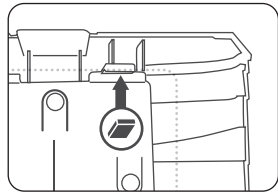

7 Put On the Headset

/// Place the headset on your head. Make sure the center strap is centered over the top of your head. Adjust the straps so the headset fits snugly and comfortably.




TIP: If the headset is putting too much weight on your nose, make the center strap shorter.

8 Let's Go Fishing!

/// Hold the fishing rod and follow the instructions in the app to start the game.

/// Select the fishing spot you want to play and press the Confirm button.

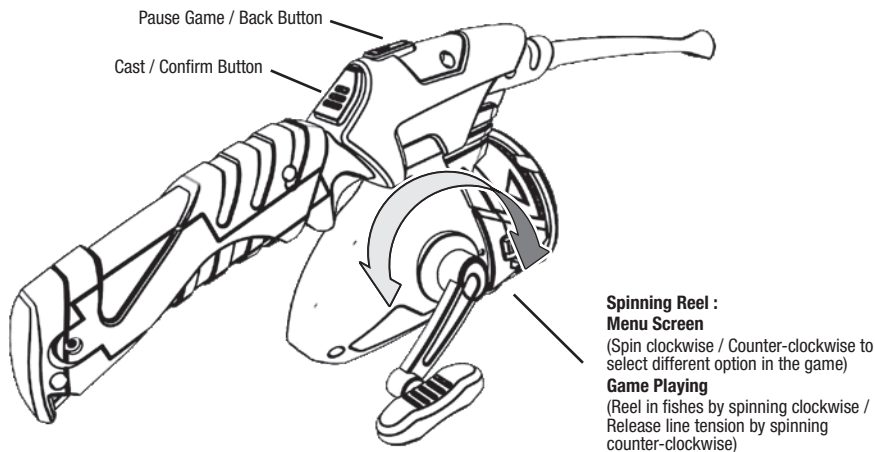

TIPS AND TROUBLESHOOTING

Make sure that furniture, objects and people are out of the play area so you don't accidentally bump into them while playing.

Because the game is generating stereo high-definition graphics, your phone's battery life may be shorter than with other games. Make sure your phone is well charged before playing.

While playing VR Real Feel™ Fishing, you may notice that the phone is warm to the touch. This is normal. If it gets too warm stop the app and let the device cool down.

If the LED on the fishing rod does not flash when you turn the ON/OFF switch to ON, replace the batteries and try again.

If the LED does not come on after you press SCAN on the app, check to make sure your Bluetooth® connectivity setting is in the ON position. You must be running Bluetooth® 5.0 or above connectivity for the app to open. Restarting the app and the rod may also help.

If you want to play silently, plug in your ear buds (not included) through the slot on the side of the headset to your phone.

Bluetooth® headphones are not available for this app because mobile devices cannot connect Bluetooth® earphone and the rod at the same time.

If the VR image in the app is out of focus, you may download Google Cardboard app to correct the view issue. You may search "Google Cardboard" on Google Play Store and iTunes App Store to download and install the app.

Please remove the phone case and any accessories before inserting your phone into the headset.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) this device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



VR ENTERTAINMENT LTD.
TANG RONG ROAD,
CHANGPING, DONGGUAN, CHINA
MADE IN CHINA



Android, Google Play and the Google Play logo are trademarks of Google LLC.



 
Apple, Apple logo, iPod touch and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.



9x9cm

PLEASE READ BEFORE OPERATION

Place the 3 self adhesive foam pads on the inside area of the frame clips of the adjustable smartphone holder. This will help prevent the frame clips from accidentally pressing your smartphone buttons.

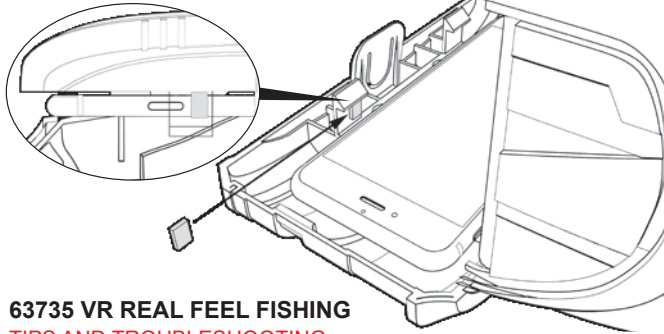

63735 VR REAL FEEL FISHING

TIPS AND TROUBLESHOOTING

To connect the fishing rod, use the SCAN button on the app instead of manually connecting it in your device's Settings > Bluetooth section. If you have already manually connected your device, disconnect and forget the fishing rod in the Bluetooth Settings, then SCAN to connect. If the problem persists, restart the smart device, app, and fishing rod.