 


Inwa®

PRODUCT MANUAL

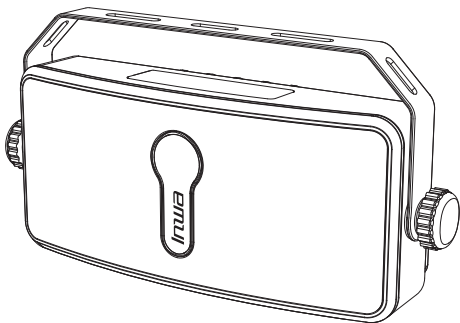

MZ-511C
Bluetooth speaker

MZ-511C

Bluetooth speaker

Thank you for buying this product. Please read all safety information and operation instruction before using the bluetooth speaker.

SAFETY INSTRUCTIONS

- Please read and follow this instruction.
- Please keep or use at room temperature.
- Please do not use this product near heat sources such as radiators, enthalpy regulators, stoves or other heat generating instruments (including amplifiers).
- All types of malfunction should be repaired by professional maintenance staff, disassemble without permission will void the warranty.

PACKAGE CONTENTS



 
Speaker



Remote control



User manual



12V DC
Power Adapter



Plastic Expansion
Nail




Screw


PARAMETER

Bluetooth version:	6.0
Wireless distance:	≤20M
Input voltage:	DC12V/2.5A
Output power:	20W
Distortion:	< 0.1%
Frequency range:	40Hz-16KHz
SNR:	>80dB
Waterproof level:	IPX5

 DIMENSIONS

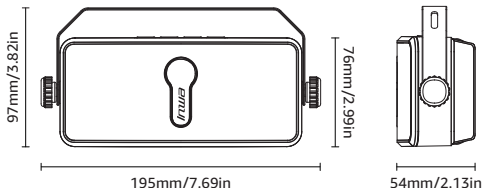

REMOTE CONTROL FUNCTIONS

 

- ⏻ On/Off key: short press to turn on/off
- EQ Short press to switch music/news mode
- ST Stereo: press for stereo mode
- L Left channel: press for left channel mode
- R Right channel: press for right channel mode
- ◀◀ Short press: previous song
- ▶▶ Short press: next song
- + Short press: increase volume
- Short press: decrease volume
- M Mode: press to toggle BT/AUX
- 📶 Bluetooth mode switch key:
press to switch **Main/Aux.** speaker mode
hold for Bluetooth pairing
- 🔊 Speaker mute key: click to mute

INDICATOR LIGHT DESCRIPTION

1. Each speaker can be individually set to left channel, right channel, or stereo mode, with different indicator colors corresponding to each channel setting.

Indicator Light Colors	Sound Channel
Blue/Red	Stereo
Purple	Left Channel
Yellow	Right Channel


2. Each speaker can be independently configured in **Main** or **Aux.** mode, primarily distinguished by blinking indicator patterns.

Indicator Light Blinking	Main/Aux. Speaker Mode
Fast Blinking	Main Speaker
Slow Blinking	Aux. Speaker

OPERATION INSTRUCTION


1. Bluetooth connection:

Press the power button "⏻" briefly to turn on one speaker. The indicator will blink rapidly. Enable Bluetooth on your phone, search for "AuraSync Speaker" and connect to it. The speaker will now function as the **Main** speaker device. (Note: If the indicator does not blink rapidly after power-on, briefly press the Bluetooth mode switch button "✳" on the remote until rapid blinking occurs. Bluetooth devices can only be connected when the indicator is blinking rapidly.)

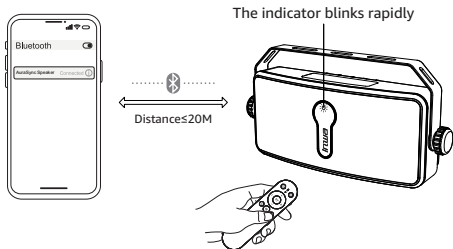


2. Wireless pairing of multiple speakers:

Power on another speaker. When the indicator blinks slowly, the Aux. Speaker will automatically pair with the **Main** speaker. Note: If the indicator does not blink slowly after the **Aux.** speaker is powered on, briefly press the Bluetooth mode switch button "✳" on the remote to change the indicator to a slow blink. In this state, the speaker will be in **Aux.** speaker mode and can automatically connect to the previously paired **Main** speaker.

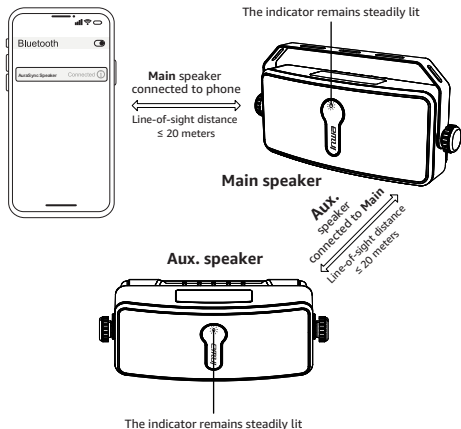

When the **Main** and **Aux.** speakers complete wireless pairing, their indicators will remain steadily lit respectively.

*Schematic diagram of **Main** and **Aux.** speakers unit connection:
Use the "❄" Bluetooth mode switch key on the remote to set any speaker as **Main** speaker (fast-blinking indicator) or **Aux.** speaker (slow-blinking indicator). **Main** speaker can connect to audio devices like phones for multi-speaker wireless collaboration, or operate independently as a standalone **Main** speaker.

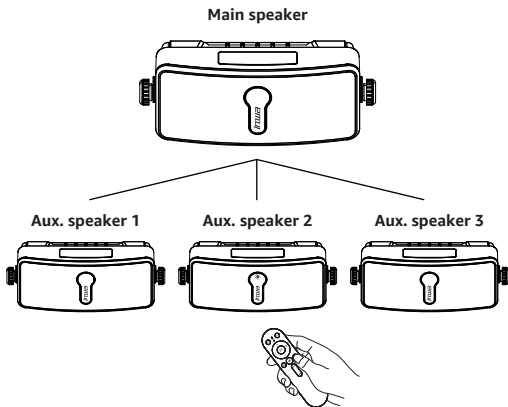

3. To connect the speaker to a new device:

Long press the "❄" Bluetooth mode switch key on the remote to disconnect the current Bluetooth connection. When the indicator flashes rapidly, the speaker is ready to pair with a new device.


4. Audio Input Switching:

Short press the Mode button "M" on the remote to switch the speaker between Bluetooth and 3.5mm Aux-in mode.

CHANNEL CONFIGURATION


Use the "L", "R", and "ST" keys on the remote control to individually set each speaker to left channel, right channel, or stereo mode.

ST Stereo Mode

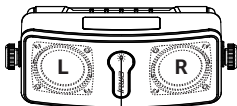

Blue Light

 
L Left Channel Mode



Purple Light



 R Right Channel Mode



Yellow Light



 
INSTALLATION DIAGRAM

Note:

1. Please confirm the speaker can work normally before installing.
2. Tools in Figure A are not included.


Step 1

Remove the bracket from the product and drill two mounting holes in the wall spaced apart (see Figure A).

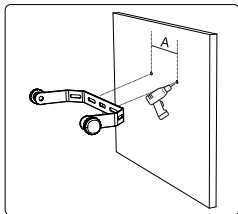


Step 2

 Screw the bracket to the mounting holes on the wall with the screws in the accessories.

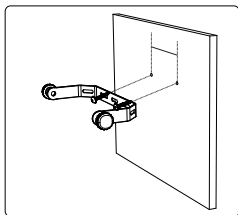

Step 3

 Install the speaker on the bracket, adjust it to your desired angle and tighten the screw.

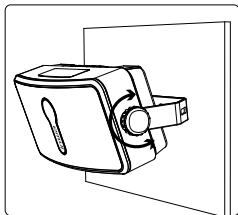

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

 
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Inwa®

产品手册

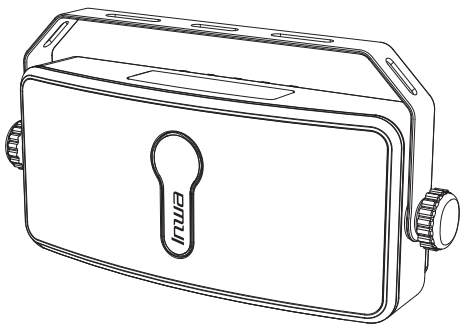

MZ-511C 无线组网音箱

Inwa®

MZ-511C

无线组网音箱

感谢您购买此产品。在使用无线音箱之前，请阅读所有安全信息和操作说明。

安全守则

- 请阅读并遵循本说明。
- 请在室温下保存或使用。
- 请勿在热源附近使用本产品，如散热器、焗调节器、火炉或其他发热仪器（包括放大器）。
- 各类故障均应由专业维修人员进行维修，擅自拆卸将导致保修失效。

包装内容



音箱



遥控器

 


说明书


电源
适配器塑料
膨胀钉

螺丝钉

产品描述

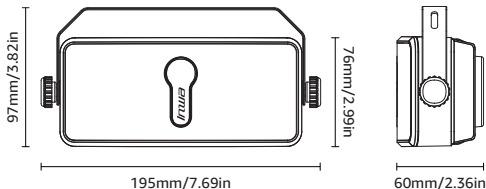

遥控器功能

 

⏻ 开关键：短按开关机

EQ 音效键：短按切换音乐/新闻模式

ST 立体声：短按立体声模式

L 左声道：短按左声道模式

R 右声道：短按右声道模式

⏮ 上一曲：短按上一曲

⏭ 下一曲：短按下一曲

+ 音量+：短按增加音量

- 音量-：短按降低音量

M 模式键：短按BT/AUX输入功能切换

📶 蓝牙键模式切换键：
短按切换主机/从机模式
长按进入蓝牙配对状态

🔇 音箱静音键：单击静音

 产品参数

蓝牙版本:	6.0
无线距离:	≤20M
输入电压:	DC12V/2.5A
输出功率:	20W
失真度:	< 0.1%
频率响应:	40Hz-16KHz
信噪比:	>80dB
防水等级:	IPX5

 指示灯说明

- 1.每个音箱可单独设置为左声道、右声道或立体声，不同声道情况下对应不同颜色的指示灯。

指示灯颜色	声道
蓝色/红色	立体声
紫色	左声道
黄色	右声道

- 2.每个音箱可单独设置主机或从机模式，这里主要通过灯光闪烁来区别。


指示灯闪烁	主/从机模式
指示灯快闪	主机模式
指示灯慢闪	从机模式

操作指令

1. 蓝牙连接方式：

短按开关键  打开音箱电源，指示灯快闪，打开手机蓝牙搜索“AuraSync Speaker”并与其连接，此时该音箱为主机音箱。

 
(注意：如音箱通电后指示灯非快闪状态，请短按遥控器上的蓝牙模式切换键  切换到指示灯快闪，只有在指示灯快闪时才能连接蓝牙设备)

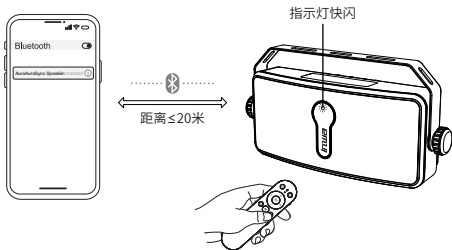

2. 多个音箱无线配对：


当从机开机后指示灯慢闪时，从机将自动与主机配对。

 （注意：如从机通电后指示灯非慢闪状态，请短按遥控器上的蓝牙模式切换键  将音箱指示灯改为慢闪，此时音箱将为从机音箱，可自动连接上之前的主机音箱）

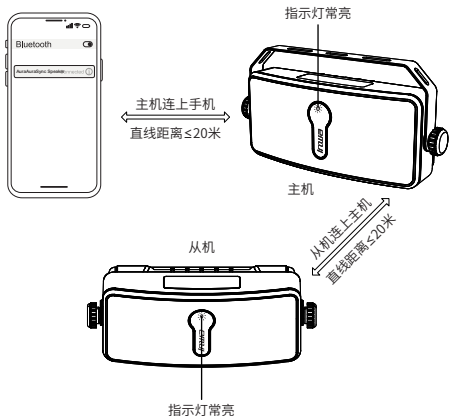

当主机和从机完成无线配对后，主机和从机指示灯分别为常亮。

 *主机连接示意图：使用遥控器蓝牙模式切换键  可将任一音箱设为主机（指示灯快闪）或从机（指示灯慢闪）。设为主机后，可连接手机等音频设备，实现多音箱主从无线协作，或各自作为主机独立工作。

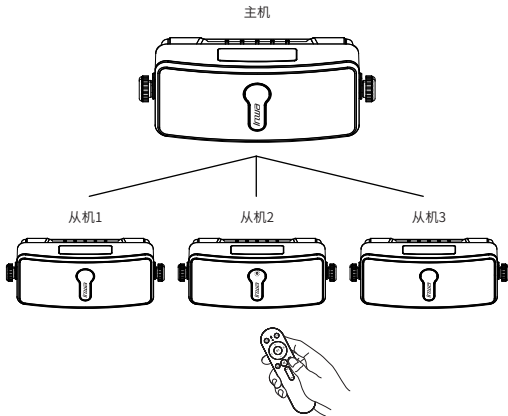

3. 音箱与新设备连接：

音箱连接新设备时，长按遥控器上的蓝牙模式切换键  以切断当前连接，指示灯快闪，即可连接新设备。

 
4. 音频输入切换：

短按遥控器上的模式键 **M** 可让音箱在蓝牙和3.5mm Aux in模式切换。

声道设置


通过遥控器上的“L”、“R”、“ST”键，可将每个音箱单独设置为左声道、右声道或立体声。

ST 立体声模式



蓝灯

 
L 左声道模式



紫灯



 R 右声道模式



黄灯




安装步骤

注意

1. 安装前请确认音箱能正常工作。
2. 图A中的工具不包括在内。


步骤1

 从产品上拆下支架，按照间距在墙上钻两个安装孔（见图A）。

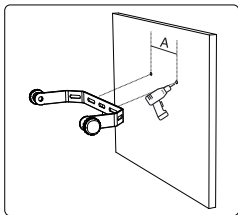


步骤2

 使用附件中的螺钉将支架拧入墙壁上的安装孔。

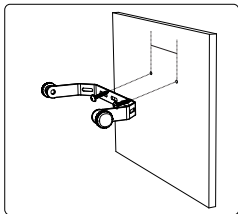

步骤3

 将音箱安装在支架上，将其调整到您想要的角度并拧紧螺丝。

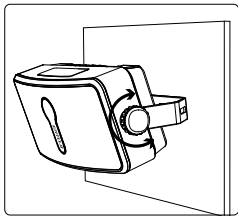

Support Information

Need further help, you can contact us by:

A. Service Email: inwa_support@innosystemtech.com

B. Or Scan the QR code for quick contact.



C. Or Contact us on Amazon:

1. Go to your orders.
2. Find your order.
3. Select "Problem with order."
4. Choose your topic, then select "Contact seller."

S/N: MP202510

Model number: MZ-511C

Brand Name: Inwa

Manufacture: hunanshenchangdeshitaoyuanxianzhangjiangjie
daoguanjiapingshequyanxidonglu1haohuidechanyeyuan

Email: inwa_support@innosystemtech.com



SUCCESS COURIER SL
CALLE RIO TORMES NUM.1, PLANTA 1,
DERECHA, OFICINA 3, Fuenlabrada,
Madrid, 28947 Spain

OST_EU_20230424000022 successservice2@hotmail.com

We simply act as EU representative for cross-border sellers, and are not manufacturers/importers/distributors for the product, nor involved in the manufacture/import/sale of the product.

Therefore, we are not responsible for any after-sales services related to the product. In case of any product quality or infringement issues, the manufacturer/importer/seller shall be solely held responsible.