

Wireless Headset

 
MZ-769



User Manual

Product Description

Wireless Headset

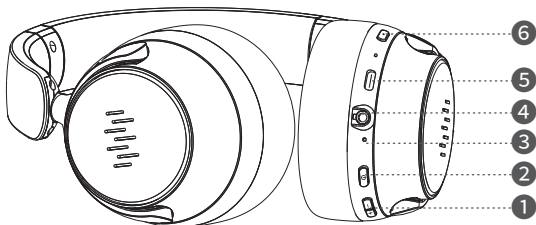

① Volume +/- Buttons

- Click the + button to increase the volume.
- Click the - button to decrease the volume.

② POWER

- Press and hold for 3 seconds to turn the device on/off, with a prompt tone indicating "Power ON/OFF".
- Double-click to switch between 2.4G and Bluetooth modes.

③ LED Indicator (2.4G/Bluetooth)

④ Microphone Interface

 
⑤ Type-C Charging Port

⑥ Microphone Mute Button

- Briefly press to turn the microphone on/off, with a prompt tone indicating "Microphone ON/OFF".
- Long press to enter pairing mode, prompt sound "Pairing".
- Double click to turn on/off the LED light.

USB Dongle

Xbox wireless controllers

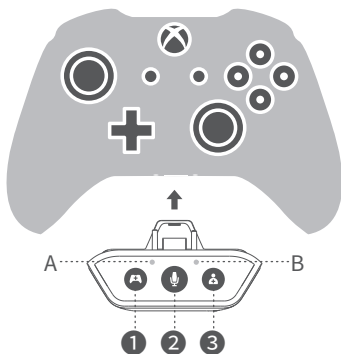

- 1 Short press the headphones to increase the game volume.
- 2 Short press to turn on microphone mute, "A" Red light stays on.
- 3 Short press on headphones to increase chat volume.

When there is a connection, "B" Green light remains on.

When there is no connection, "B" Green light flashes rapidly.

Note:

Xbox wireless controllers are not included in the packaging list.

Audio and Music

- ① Use your head mounted display device or other device to change the volume

Headphone Volume



 
Headset Chat Control Console



Headset Connection


2.4G wireless connection

1. Insert the USB Dongle into the USB port on a PC, Mac, Android device, PS5, Xbox controllers, etc.
2. Turn on the headphones, double-click "⏻" button to enter wireless dongle mode, they will automatically pair and connect to the USB dongle.
3. After successful pairing, the green light of the headset and USB dongle will remain on, and the headset will emit a "Connected" prompt sound.

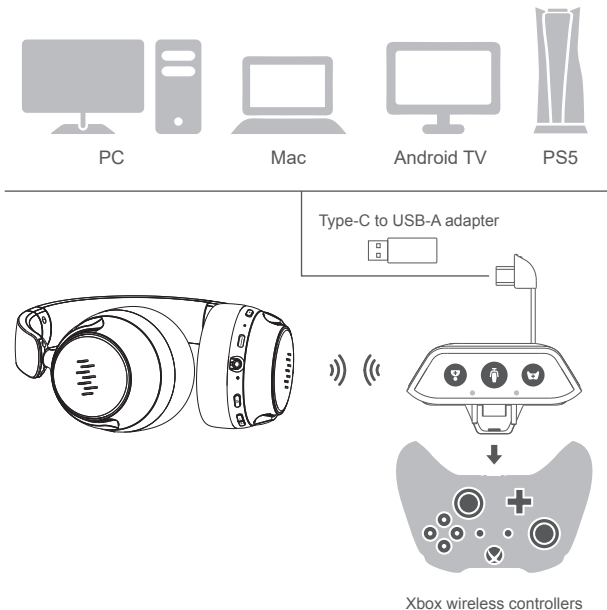

Bluetooth Connection

 1. Turn on the headphones, double-click "⏻" button to enter Bluetooth mode, the blue light flashes rapidly, and the headphones enter search mode.
2. Enable Bluetooth on your mobile phone, search for the device named "Wireless Headset" and pair with it. Once successfully paired, the blue light on the headphones will remain steadily lit.

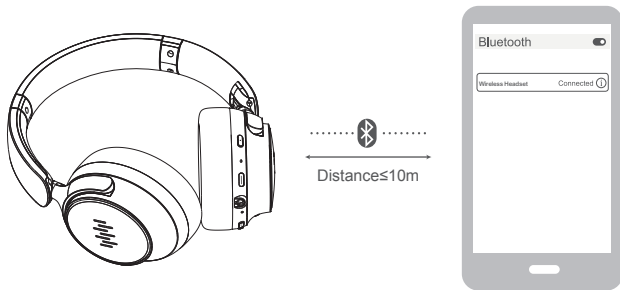

3. When the headphones are connected to the phone and in playback mode,
 - Short press the power button "⏻" to play/pause.
 - Short press the volume +/- buttons to increase/decrease the volume.
 - Long press the volume +/- buttons for the next/previous track.
4. When the headset are connected to the phone and a call is received, press the power button "⏻" briefly to answer the call; During the call, short press the power button "⏻" to hang up the incoming call.

Product Parameters

Microphone size: $\Phi 6.0\text{mm}$

Sampling rate: 48KHz

Speaker Impedance: 16Ω

Horn diameter: $\Phi 40\text{mm}$

Frequency range: 2.402-2.480GHz

Frequency response: 20Hz~20KHz

Charging time: 2.5hrs

Working hours: 24hrs

Send and receive distance: $\geq 10\text{m}$

Battery capacity: 800mAh

Product size: 194*174*80mm

Net weight: 260g

Packing List

Wireless Headset *1

Microphone *1

Type-C to USB-A adapter *1

USB Dongle *1

User Manual *1

Type-C Charging Cable *1

Function Introduction

Charging tips

- When the battery is below 20%, the headset will sound a prompt sound of "Low Battery", indicating that they are currently in a low battery state and need to be charged.

Indicator light

- When the headset are turned on and in 2.4G/Bluetooth mode, the green/blue light flashes rapidly when searching for reconnection status.
- When the headphones are turned on and connected in 2.4G/Bluetooth mode, long press the microphone mute button and the green/blue light will flash.
- When the headset are turned on and successfully connected in 2.4G/Bluetooth mode, the green/blue light remains on.
- When the headphones are turned on and disconnected in 2.4G/Bluetooth mode, the green/blue light flashes slowly.
- When the headphones are turned on/off, the red light remains on while charging, and when fully charged, the red light goes out.

Automatic shut-down

- Turn on the headset, if the pairing is not successful after 10 minutes, the headset will automatically shut down.
- When the headset are successfully paired with 2.4G/Bluetooth mode and there is no audio output for 10 minutes, the headset will automatically shut down.

Care and Maintenance

- Do not put this product in a place that is too cold or humid, so as not to affect the internal circuit of the product; avoid using this product during intense exercise or sweating a lot to prevent sweat from penetrating into the product and damaging the product.
- Do not place this product in direct sunlight or in areas with high temperatures. High temperatures can shorten the lifespan of electronic components, damage the battery, and cause deformation of certain plastic parts.
- Do not attempt to disassemble this product. Non-professionals may damage this product.
- Do not drop, vibrate strongly, or hit the product with hard objects, so as not to damage the internal circuit of the product.
- Do not use strong chemicals, cleaning agents to clean this product.
- Do not scratch the surface of this product with a sharp point to avoid damage to the case and appearance.

Precautions

- For your personal safety, do not wear or place this product too close to a pacemaker.
- Children should use this product under adult supervision, this product is not a toy.
- Using this product at high volume, especially for a long time, may damage your hearing.
- If you experience heat or hear no sound, remove and disconnect the product immediately.
- For traffic safety, do not use this product while driving or riding a bicycle.

Troubleshooting

Can't turn on headset

- The headset will automatically turn off after 10 minutes of inactivity. Please turn on the headset again.
- Charge the battery.

The headset is not connected to the mobile device

- On mobile devices, turn off the Bluetooth function and turn it back on. Then try pairing again.
- Remove "Wireless Headset" from the mobile device's Bluetooth list. Then try pairing again.
- Move your mobile device close to the headset, away from other distractions or obstacles.
- Try pairing with another mobile device.

No sound

- Make sure the headset is turned on and the battery is charged.
- Make sure your headphones and mobile device (or music app) are turned up.
- Try another music program.
- Try pairing with another mobile device.
- If two mobile devices are actively connected, first make sure the other devices are suspended.

Poor sound quality

- Keep your mobile device close to the headset and away from any distractions.
- Try pairing with another mobile device.

Support Information

Need further help, you can contact us by

A. Service Email: inga_support@innosystemtech.com

B. Or Scan the QR code for quick contact.



C. Or Contact us on Amazon:

1. Go to Your Orders.
2. Find your order.
3. Select "Problem with order."
4. Choose your topic,
then select "Contact seller."

S/N: MZ20253 Model number: MZ-769 Brand Name: INGA

Manufacture: shenzhenshibaoanquxixiangjiedaonanchangshe
quqianwanyingkejichanyeyuanCdong704

Email: innosystemtech02@outlook.com



SUCCESS COURIER SL

CALLE RIO TORMES NUM.1, PLANTA 1,
DERECHA, OFICINA 3, Fuenlabrada,
Madrid, 28947 Spain

EU001717034807604AvUR successservice2@hotmail.com

We simply act as EU representative for cross-border sellers, and are not manufacturers/importers/distributors for the product, nor involved in the manufacture/import/sale of the product.

Therefore, we are not responsible for any after-sales services related to the product. In case of any product quality or infringement issues, the manufacturer/importer/seller shall be solely held responsible.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure statement

The device has been evaluatec to meel general RF exposure requirement. The device can be used in portable exposure condition without restriction.

无线耳机

 
MZ-769



用户手册

产品概述

耳机

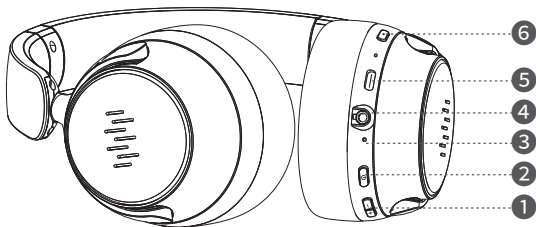

① 音量 +/- 键

- 短按 + 音量逐渐增大
- 短按 - 音量逐渐减小

② 电源开关键

- 长按3秒开/关机, 提示音“Power ON/OFF”
- 双击切换2.4G/蓝牙模式

③ LED指示灯(2.4G/蓝牙)

④ 麦克风接口

 
⑤ Type-C充电接口

⑥ 麦克风静音键

- 短按打开/关闭麦克风, 提示音“Microphone ON/OFF”
- 长按进入配对模式, 提示音“Pairing”
- 双击打开/关闭LED灯

USB Dongle

Xbox无线手柄

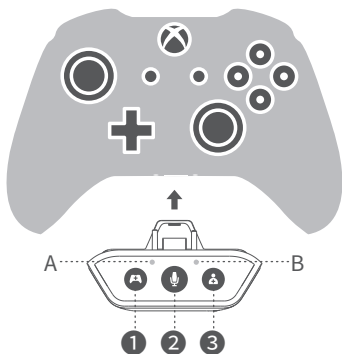

- ① 短按耳机游戏音量增大
- ② 短按打开麦克风静音,"A"红灯常亮
- ③ 短按耳机聊天音量增大

有连接状态下,"B"绿灯常亮

无连接状态下,"B"绿灯快闪

音频和音乐

① 使用你的头戴显示设备或其他设备更改音量

耳机音量



耳机聊天控制台

 


注: Xbox无线手柄不在包装清单范围

耳机连接


2.4G无线连接

1. 将USB Dongle插入PC、Mac、安卓设备、PS5、Xbox手柄等上的USB接口。
2. 打开耳机，双击电源开关键“”切换成绿灯，耳机将自动配对并连接到USB Dongle。
3. 配对成功后耳机绿灯常亮，USB Dongle绿灯常亮，耳机会报“Connected”提示音。

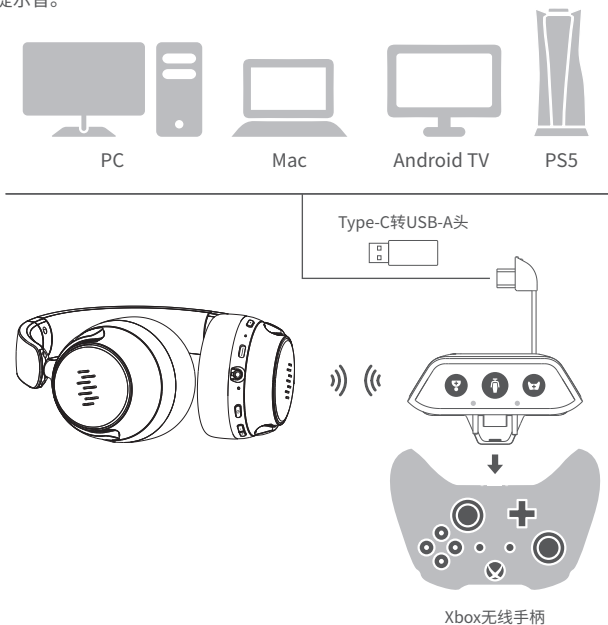

蓝牙连接

 1. 打开耳机，双击电源开关“”切换成蓝灯，蓝灯快闪，耳机进入搜索状态。
2. 手机打开蓝牙，搜索名称“Wireless Headset”并进行配对，配对成功耳机蓝灯常亮。

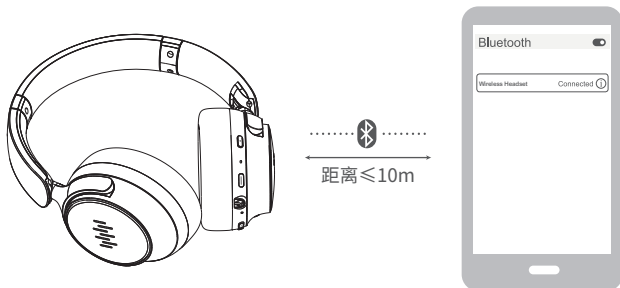

3. 耳机与手机连接状态下处于播放状态时，
 - 短按电源开关“”为播放/暂停
 - 短按音量 + / - 键为音量增大/减少
 - 长按音量 + / - 键为下一曲/上一曲
4. 耳机连接手机状态下，来电时，短按电源开关“”接听来电；通话中，短按电源开关“”挂断来电。

产品参数

咪头尺寸: $\Phi 6.0\text{mm}$	充电时长: 2.5hrs
采样率: 48KHz	工作时长: 24hrs
喇叭阻抗: 16Ω	收发距离: $\geq 10\text{m}$
喇叭直径: $\Phi 40\text{mm}$	电池容量: 800mAh
频率范围: 2.402-2.480GHz	产品尺寸: 194*174*80mm
频率响应: 20Hz~20KHz	产品净重: 260g

包装清单

无线耳机*1	USB Dongle*1
麦克风*1	说明书*1
Type-C转USB-A头*1	Type-C充电线*1

功能介绍

充电提示

- 电池低于20%,耳机会报“Low Battery”提示音,表示目前处于低电状态,需要对耳机进行充电。

指示灯

- 耳机开机,在2.4G/蓝牙模式搜索回连状态下,绿/蓝灯快闪。
- 耳机开机,在2.4G/蓝牙模式连接状态下,长按麦克风静音键,绿/蓝灯快闪。
- 耳机开机,在2.4G/蓝牙模式连接成功状态下,绿/蓝灯常亮。
- 耳机开机,在2.4G/蓝牙模式断开连接状态下,绿/蓝灯慢闪。
- 耳机开/关机,在充电状态下,红灯常亮,充满红灯熄灭。

自动关机

- 耳机开机,10分钟后没有配对成功,耳机会自动关机。
- 耳机与2.4G/蓝牙模式配对成功状态下,10分钟无音频输出,耳机会自动关机。

保养与维护

- 勿将本产品放在过冷或者潮湿的地方, 以免影响产品内部电路; 需避免在激烈运动或出汗较多时使用本产品, 防止汗水渗透到产品内部损坏本产品。
- 勿将本产品放置在太阳直射或者温度高的地方。高温会缩短电子部件的使用寿命、损坏电池、使某些塑料部件变形。
- 勿试图拆开本产品。如果非专业人员, 可能会损坏本产品。
- 不要跌落、强烈振动、用硬体撞击本产品, 以免会损坏产品内部电路。
- 勿使用烈性化学制品、清洁剂清洁本产品。
- 不要用尖体在本产品表面上乱划, 以免损坏外壳和影响外观。

注意事项

- 为保证您的人身安全, 请勿将本产品佩戴或放置在离心脏起搏器过近的位置。
- 儿童应在成人监督下使用本产品, 本产品并非玩具。
- 在高音量下使用本产品, 特别是长时间使用, 可能会对您的听力造成损伤。
- 如果您产生了热感或听不到声音, 请立即取下本产品并断开连接。
- 为交通安全起见, 驾驶时或骑自行车时请勿使用本产品。

故障排除

无法打开耳机

- 耳机在无活动10分钟后将自动关闭。请再次打开耳机。
- 给电池充电。

耳机未与移动设备连接

- 在移动设备上, 关闭蓝牙功能并重新打开。然后尝试重新配对。
- 从移动设备的蓝牙列表删除“Wireless Headset”。然后尝试重新配对。
- 将移动设备靠近耳机, 远离其他干扰或障碍物。
- 尝试对另一种移动设备进行配对。

没有声音

- 确保耳机已开启且电池有电。
- 确保耳机和移动设备(或音乐应用)已加大音量。
- 尝试对另一种移动设备进行配对。
- 尝试使用其他音乐程序。
- 如果已主动连接了两个移动设备, 首先要确保其他装置已经暂停。

音质差

- 将移动设备置于耳机附近, 远离任何干扰。
- 尝试对另一种移动设备进行配对。

保修卡

产品型号

购买日期

经销商

用户姓名

联系电话

电子邮件

用户地址

保修记录

用户姓名	故障描述	维修日期	维修员签字

合格证

日期: _____

检验员: _____