

物料编码 Z.085.00228.00

项目名称 K3(KJM-K240)

物料名称 说明书 / 美规

设计时间 2025.7.14

设 计 师 VOPLLS

文件描述

尺寸 120\*160mm

材质 105g铜板纸

印刷颜色 CMYK

工艺处理 骑马订

版本更新

|      |     |           |
|------|-----|-----------|
| V1.0 | 新设计 | 2025.7.14 |
|------|-----|-----------|

如有其他特殊要求，请写明

比例：1：1 单位:mm

# VOPLLS

HOME THEATER PROJECTOR

## User Manual



Version: 50714

# Catalog

|                                                    |    |
|----------------------------------------------------|----|
| Basic Configuration .....                          | 03 |
| ★ Important Safety Considerations .....            | 04 |
| 1. Power Supply .....                              | 05 |
| 2. Cleaning .....                                  | 05 |
| 3. Repairs .....                                   | 05 |
| 4. High Temperature Warning .....                  | 05 |
| Projector Overview .....                           | 06 |
| Remote Control .....                               | 07 |
| Projector Focus .....                              | 08 |
| Initial Power-On Settings .....                    | 09 |
| ★ Wireless Connections .....                       | 11 |
| 1. For iOS Device .....                            | 11 |
| 2. For Android Device .....                        | 13 |
| 3. For MAC OS .....                                | 15 |
| 4. For Win10 or Above .....                        | 16 |
| ★ Wired Connections .....                          | 18 |
| 1. Connecting to Windows Laptop/PC .....           | 18 |
| 2. Connecting to the External Storage Device ..... | 19 |
| ★ Additional Entertainment Options .....           | 21 |
| ★ Settings .....                                   | 22 |
| 1. Network Setting .....                           | 23 |
| 2. Bluetooth Setting .....                         | 24 |
| 3. Focus .....                                     | 25 |
| 4. Keystone .....                                  | 26 |
| 5. Zoom .....                                      | 27 |
| 6. Projection .....                                | 27 |
| 7. Picture Mode & Audio .....                      | 28 |
| 8. Setup .....                                     | 28 |
| ★ Product Features .....                           | 29 |
| ★ Trouble Shooting .....                           | 30 |
| ★ Trademarks .....                                 | 32 |
| ★ Statement .....                                  | 32 |

# Video Operation Guide

Scan QR codes below or search for "VS-KING PROJECTOR" on YouTube to get videos

VS-KING

VS-KING PROJECTOR

SUBSCRIBE

## HOW TO CONNECT TO IPHONE/IPAD?



ScreenShare



## HOW TO CONNECT TO Mac?



ScreenShare



## HOW TO CONNECT TO ANDROID SMARTPHONE/TABLET?



ScreenCast



## HOW TO CONNECT TO WINDOWS LAPTOP?



ScreenCast



# Basic Configuration



1 x Projector



1 x Power Cord



1 x HDMI Cord



1 x User Manual

(battery not included)



1 x Remote Control

## Tips:

- If there is any part missing, please contact VOPLLS support team.
- Email address of VOPLLS support team:

 


North America Marketplace:  
[VOPLLS@vskingtech.com](mailto:VOPLLS@vskingtech.com)


# Important Safety Considerations




Do not install the projector in sites with improper ventilation.

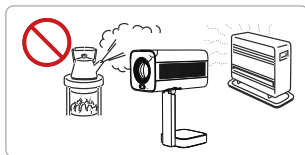

 Do not install the projector in hot and humid sites.

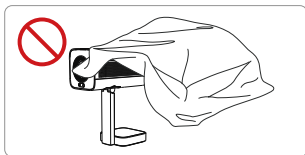

 Do not block the ventilation holes (intake or exhaust).

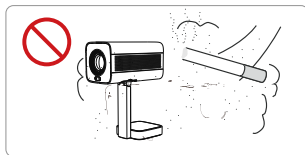

Do not install the projector in dust and smoke sites.



Do not install the projector near the temperature and smoke transducer. It may cause a sensor failure.



Do not install the projector in sites with direct blowing of warm and cool air-condition wind. Otherwise it may cause the project failure.



Please do not look into the lens when the projector is working. Otherwise it may hurt your eyes.



Please keep the projector away from water or any other liquid as it is not waterproof.

## 1. Power Supply

- Use only the provided power adapter.
- Power off the device before removing the power supply from the socket.
- Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from this device.
- Unplug this device if there are lightning storms or when unused for a long period of time.
- Where the power plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- Before you make or change any connections, ensure that all devices are disconnected from the power outlet.
- Never touch the power cable or the power connector with wet hands.

## 2. Cleaning

- Use a soft, lint-free cloth. Never use liquid, gaseous or easily flammable cleansers to clean.
- Do not use any liquid cleaning agents to clean the lens to avoid damaging the coating film on the lens.
- Use lens cleaning paper to clean the lens.
- Please clean the vents and speakers regularly with a soft brush. Dust clogging can cause the projector to overheat, which can lead to malfunction.

 
## 3. Repairs

- Do not make any repairs to this device yourself. Only have your device repaired by an authorized service center.
- Improper maintenance can result in injuries or damage to this device.
- Refer all servicing to qualified service personnel.


## 4. High Temperature Warning

- The temperature near the outlet will rise during and after the projection. Please don't touch it, otherwise it may cause burns.

# Projector Overview

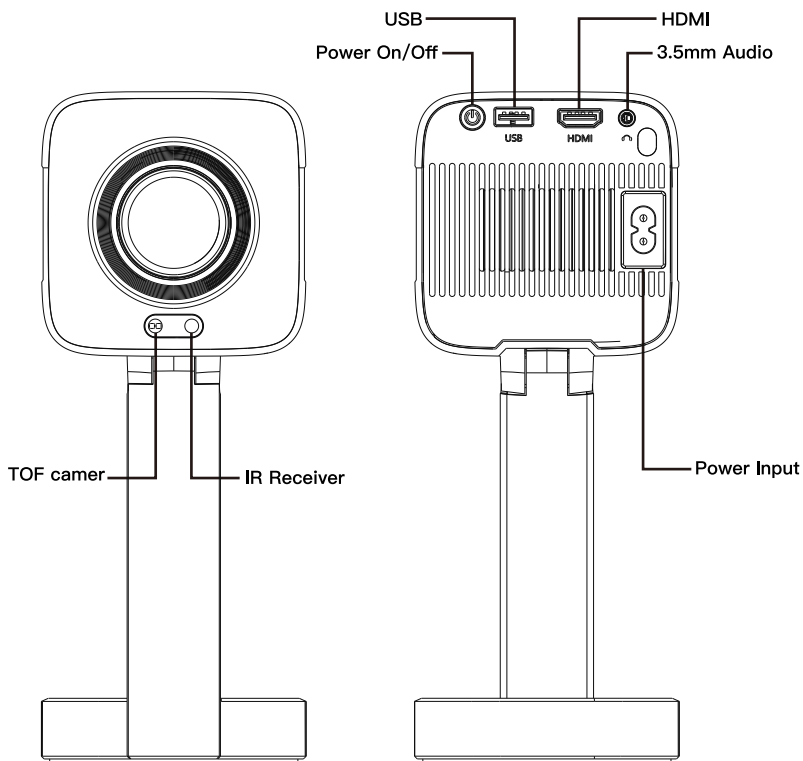


# Remote Control

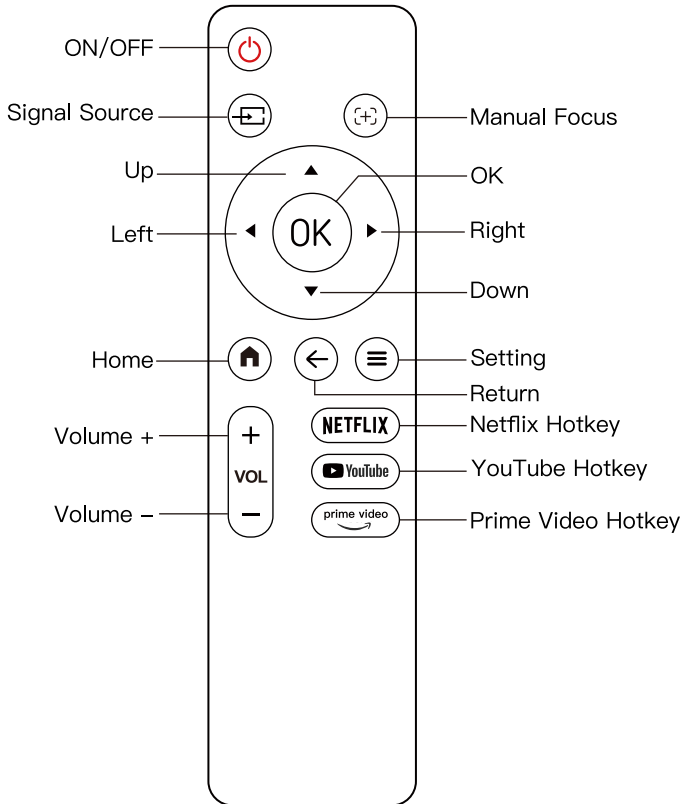 

# Projector Focus

## Manual Focusing:

 Press the "[+]" on the remote control to enter the manual focus page, you can adjust the "▲" or "▼" button to obtain a sharper image.

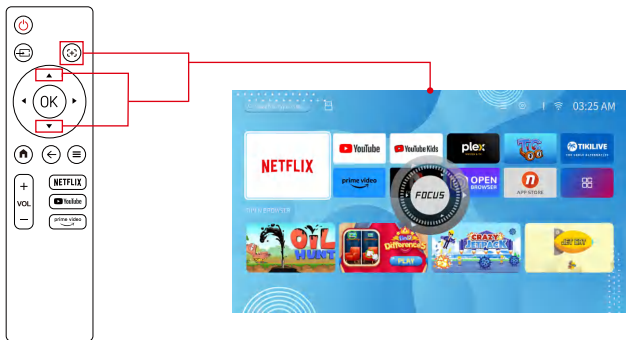

## Tips:

 
If the clarity of the projector does not meet your expectations after autofocus, you can try to use the manual focus function to adjust it to achieve a clearer image.

# Initial Power-On Settings

## 1. Please set up your projection mode.



## 2. Please set your system language.


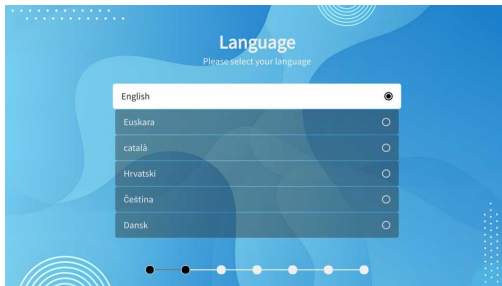


## 3. Select your region.




#### 4. Click "VIEW ADDITIONAL DETAILS" to read about firmware updates and personal information security settings.

  
Please note that we will not collect any private information that is not related to product use.

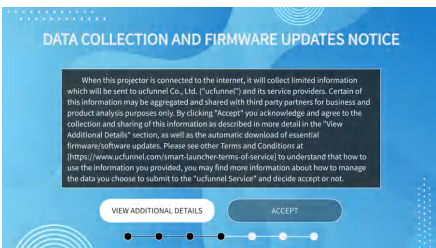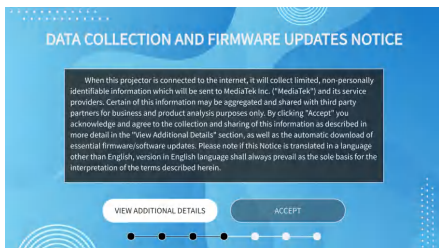


#### 5. Network setup and connecting to your home WiFi.

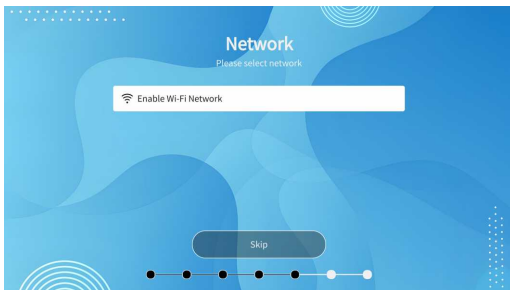 

#### 6. Set up Netflix.

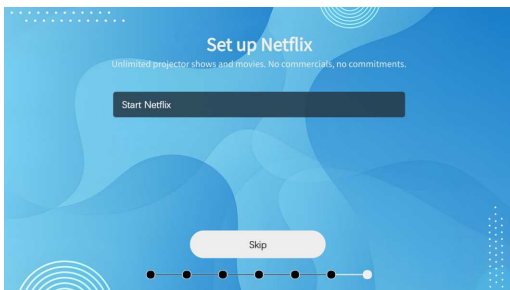 

## 7. The setup is completed.

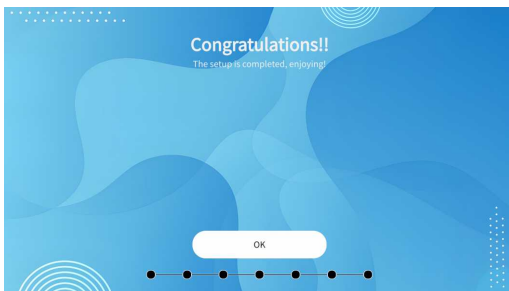 



# Wireless Connections

## 1. Connecting to the Mobile Device



### For iOS Device

Your projector and your devices need to be connected to the same home WiFi.

  
① Access "  " on the homepage, then select "  ".

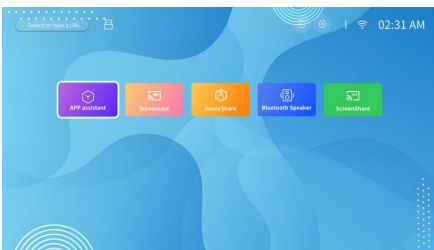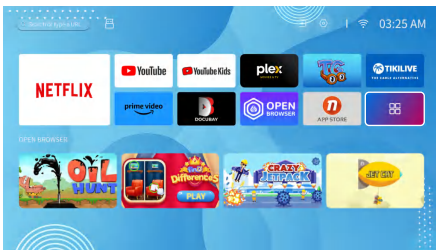

  ② Download "  " in APP assistant and go back to the APP Center homepage and select "  " .

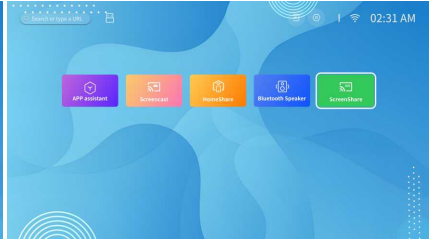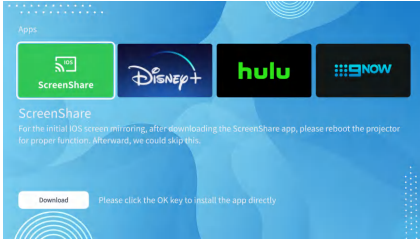


 ③ Open the Control Center of your iOS device, click "Screen Mirroring" and then select "K3\_\*\*\*\*" from the list to connect.

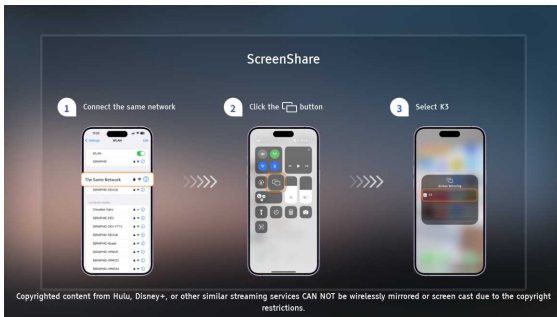


## For Android Device

 - ① Access " " on the homepage to enter, then select " ".

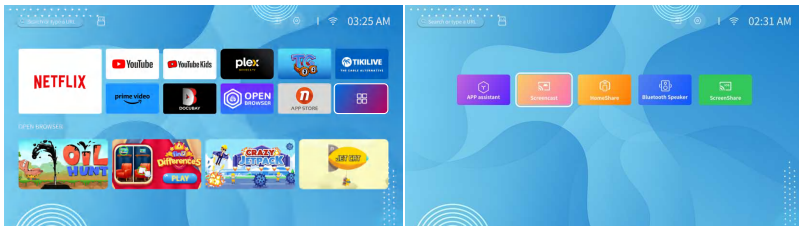

- ② Turn on the "**WLAN**" and "**Bluetooth**" on your Android device.

 - ③ Projector keeps staying in Screencast channel page.  
Open the "Multi-Screen" function and select "**K3\_\*\*\*\***" from the list.

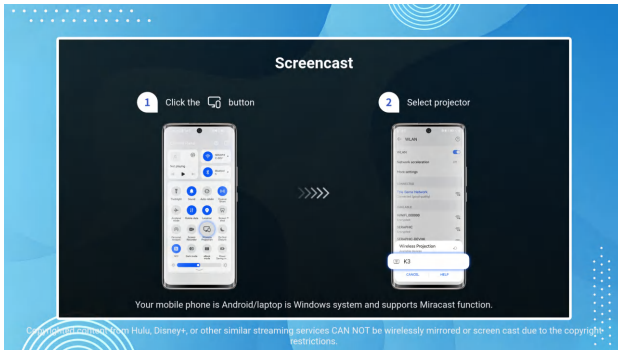


### Note:

To activate this function, your Android device must support "Multi-Screen/Wireless" display. Names of "Screen Mirroring" function may differ from different devices.

Google phones and partial Motorola phones prohibit screen mirroring directly from the projector due to mirroring protocol issues. You need to have a Google Chromecast to connect it.


## HUAWEI

 More connections - Wireless projection.

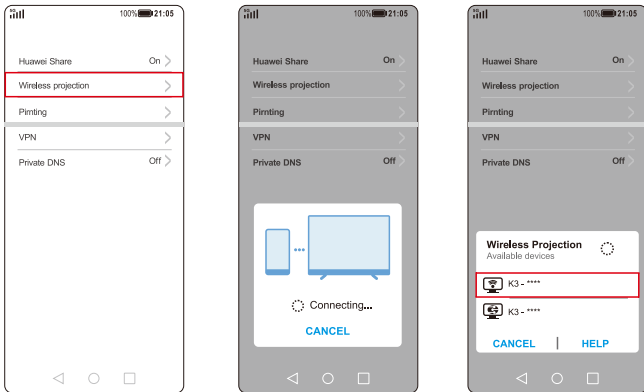


## SAMSUNG

 Swipe up the screen of your Samsung device, then click "Smart View" and search for the device of the projector.

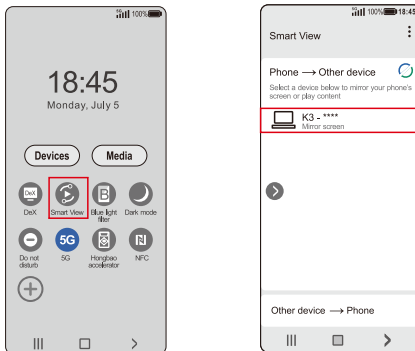

# XIAOMI

 Swipe up the screen of your Xiaomi device, then click "Connection & Sharing" and search for the device of the projector.

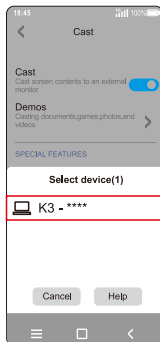

## Tips:

 
 
- Make sure your mobile device is closed to the projector when using wireless connection. A distance within 1m/3.3ft is recommended.

## 2. Connecting to computer


### For MAC OS

Your projector and your devices need to be connected to the same home WiFi.


- ① Access "" on the homepage, then select ".

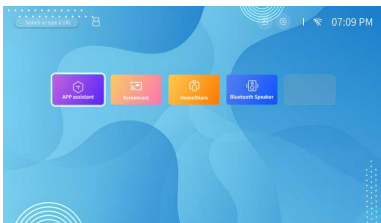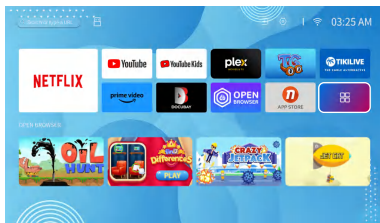

 ②Download "  " in APP assistant and go back to the APP Center homepage and select "  " .

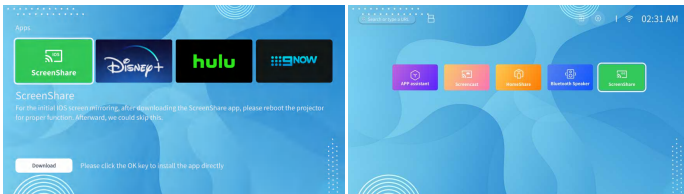


 ③Projector keeps staying in Screenshare channel page.  
Open "System Preferences" on your iOS device - Choose "Displays" - Click "AirPlayDisplay"-Connect "K3\_\*\*\*\*".

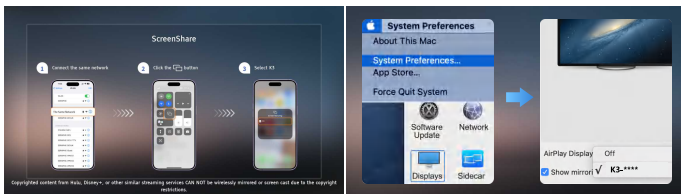

## For Win10 or Above

 
①Access "  " on the homepage to enter, then select "  " .

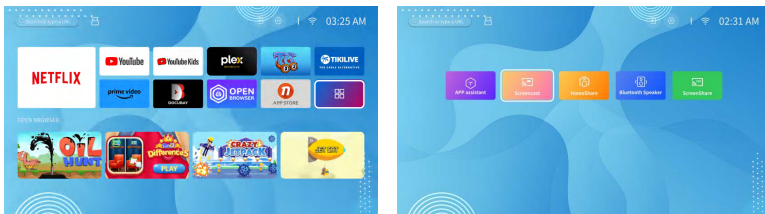

②Turn on your computer's WiFi function.

## Option 1:

 
1. Access "System"->"Display" in the computer's "Settings".
2. Find "Connect to a Wireless Display".
3. Connect to **"K3-\*\*\*\*"** and select **"Duplicate these displays"** in "Multiple displays".

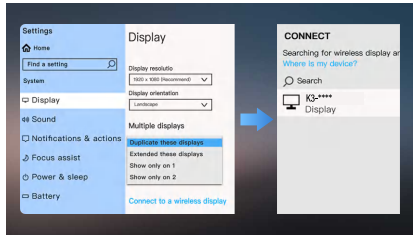

## Option 2:

When the "Connect to a Wireless Display" option does not appear in the "Multiple Displays" option list and cannot be connected.

 1. Access "Settings" - "System" - "Projecting to this PC" - "Optional Features".
2. Add a "Wireless Display" to your computer then follow the steps in Option 1 to try connecting again.

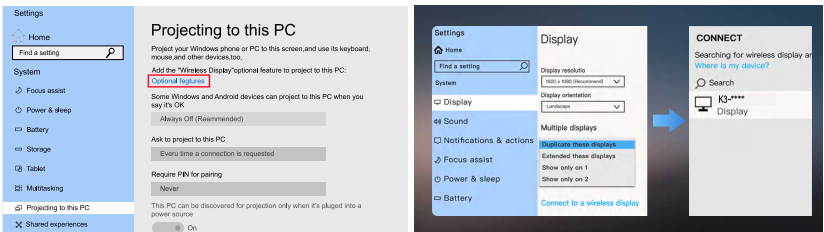

## 🔔 Tips:

- Please ensure your laptop has a wireless display function.
- Since some computers with WIN10 and above do not support the Miracast protocol, mirroring connections not be possible.
- Please ensure you have selected "1920\*1080 resolution" after you connect the projector.
- You can also press the Windows logo key + P key at the same time and select "DUPLICATE".