

 Nakamichi®
THRILL
User Manual



PORTABLE BLUETOOTH SPEAKER / NAKAMICHI THRILL

IMPORTANT SAFETY INSTRUCTIONS

For all products

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not block any ventilation openings. Install this apparatus in accordance with the manufacturer's instructions.
6. Do not install this apparatus near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
7. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
8. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles and the point where they exit from the apparatus.
9. Use only attachments/accessories specified by the manufacturer.
10. Use only with the cart, stand, tripod, bracket or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart / apparatus combination to avoid injury from tip-over.



11. Unplug this apparatus during lightning storms or when unused for long periods of time.
12. To disconnect this apparatus from the AC mains completely, disconnect the power-supply cord plug from the AC receptacle.
13. The mains plug of the power-supply cord shall remain readily operable.
14. Do not expose batteries to excessive heat such as sunshine, fire or the like.
15. This apparatus is intended to be used only with the power supply and/or charging cable provided by the manufacturer.

CAUTION

RISK OF ELECTRIC SHOCK. DO NOT OPEN.



THE LIGHTNING FLASH WITH AN ARROWHEAD SYMBOL, WITHIN AN EQUILATERAL TRIANGLE, IS INTENDED TO ALERT THE USER TO THE PRESENCE OF UNINSULATED "DANGEROUS VOLTAGE" WITHIN THE PRODUCT'S ENCLOSURE THAT MAY BE OF SUFFICIENT MAGNITUDE TO CONSTITUTE A RISK OF ELECTRIC SHOCK TO PERSONS.



THE EXCLAMATION POINT WITHIN AN EQUILATERAL TRIANGLE IS INTENDED TO ALERT THE USER TO THE PRESENCE OF IMPORTANT OPERATING AND MAINTENANCE (SERVICING) INSTRUCTIONS IN THE LITERATURE ACCOMPANYING THE PRODUCT.

WARNING: TO REDUCETHE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

CAUTION FCC AND IC STATEMENT FOR USERS (USA AND CANADA ONLY)

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference,
- (2) This device must accept any interference received, including interference that may cause undesired operation. CAN ICES-3(B)/NMB-3(B)

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

For Products That Transmit RF Energy:

FCC AND IC INFORMATION FOR USERS

This device complies with Part 15 of the FCC rules and Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference;
- (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC/IC Radiation Exposure Statement

This equipment complies with FCC/IC RSS-102 radiation exposure limits set forth for an uncontrolled environment.

RoHS Compliance

This product is in compliance with Directive 2011/65/EU of the European Parliament and of the Council of 8 June 2011 on the restriction of the use of certain hazardous substances in electrical and electronic equipment.

For Products That Include Batteries

EU Batteries Directive 2013/56/EU

A new battery directive 2013/56/EU on Battery and Accumulator replacing directive entered into force on the 01/07/2015. The directive applies to all types

of batteries and accumulators (AA, AAA, button cells, lead acid, rechargeable packs) including those incorporated into appliances except for military, medical and power tool applications. The directive sets out rules for collection, treatment, recycling and disposal of batteries, and aims to prohibit certain hazardous substances and to improve environmental performance of batteries and all operators in the supply chain.

Instructions for Users on Removal, Recycling and Disposal of Used Batteries

To remove the batteries from your equipment or remote control, reverse the procedure described in the owner's manual for inserting batteries. For products with a built-in battery that lasts for the lifetime of the product, removal may not be possible for the user. In this case, recycling or recovery centers handle the dismantling of the product and the removal of the battery. If, for any reason, it becomes necessary to replace such a battery, this procedure must be performed by authorized service centers. In the European Union and other locations, it is illegal to dispose of any battery with household trash. All batteries must be disposed of in an environmentally sound manner. Contact your local waste management officials for information regarding the environmentally sound collection, recycling and disposal of used batteries.

WARNING: Danger of explosion if battery is incorrectly replaced. To reduce risk of fire or burns, don't disassemble, crush, puncture, short external contacts, expose to temperature above 60°C (140 °F), or dispose of in fire or water. Replace only with specified batteries. The symbol indicating 'separate collection' for all batteries and accumulators shall be the crossed-out wheeled bin shown below:



In case of batteries, accumulators and button cells containing more than 0.0005% mercury, more than 0.002% cadmium or more than 0.004% lead, shall be marked with the chemical symbol for the metal concerned: Hg, Cd or Pb respectively. Please Refer to the below symbol:



Hg



Cd

 


Pb

SAFETY WARNINGS


- Thank you for purchasing our product. Please read through this manual before connecting this product to your devices.
- Do also retain this manual for future reference. Register your warranty on **www.nakamichihomeaudio.com**
- For the first use, a full charge is recommended.
- Please use and store the product at room temperature.
- Do not use near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not allow small particles to get into the product.
- Do not throw or drop the product to avoid any damage
- Please charge the speaker with the correct voltage at all times.
- Please moderate the speaker volume to avoid any temporary or permanent hearing impairment.
- Do not disassemble the product, there are no user serviceable parts inside. Do not make any modifications to the product.
- Keep the product out of children's reach.
- Do not attempt to replace the battery on your own, please refer to the authorized dealer for any battery replacement.
- Do not expose battery pack to such conditions such as direct sunlight, fire or any similar conditions.

BLUETOOTH PAIRING

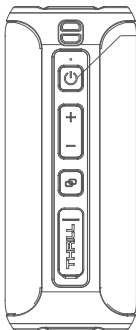

On/Off Button (Indicator)

 Step 1: Power on the unit by pressing the  button for 3 seconds. The speaker will turn on and enter Bluetooth pairing mode while the White led indicator blinks.




Step 2: Open the Bluetooth settings on your compatible device, and search for "THRILL" in the discovered Bluetooth devices.



Indicator light stays on


Step 3: Once you've selected the speaker, the indicator light will stop blinking and stay lit. This means that the Bluetooth connection is successful.

 AUX IN CONNECTION

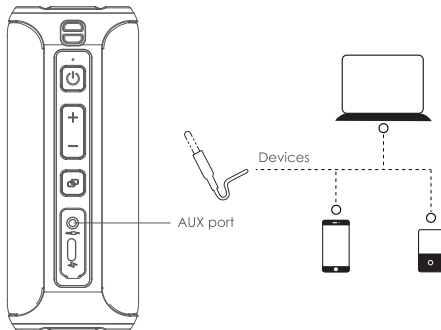

The speaker also features 1×AUX port, simply connect the speaker with your mobile phone/MP3 player/PC/Laptop or any other compatible device with the supplied 3.5mm jack audio cable. Once the connection is successful, the green indicator light will turn on and music can now be played.

 TWS PAIRING OPERATION

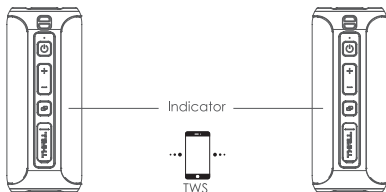

1. Turn on both speakers.
2. On the first speaker, press the “” button, this will turn on the TWS pairing mode and a sound notification will play to indicate that this is turned on.
3. Follow the instructions above for the other speaker.
4. After 1~2 seconds, the 2 speakers will pair automatically. Once paired successfully, there will be a sound notification, the TWS LED Indicator of 2 speakers will stay lit.
5. On your compatible device, look for “THRILL” on the Bluetooth pairing list, click it, and your device will pair with the two speakers with a sound notification. Now you can enjoy stereo sound.
6. Briefly press the “” button to disconnect TWS.

Note: For TWS pairing, please let the two speakers connect to each other first, then use your compatible Bluetooth device to connect with the master speaker.

BASIC OPERATION

Bluetooth Mode



1. Pressing this on either speakers during music playback to Pause or Play music.
2. When there is an incoming call, briefly press this on the master speaker to answer the call.
3. when there is an incoming call, double press this on the master speaker to reject the call.
4. During an ongoing phone call, briefly press this on the master speaker to end the call.



1. Short press on either speaker to increase the volume.
2. Long press on either speaker to go to the next track.



1. Short press on either speaker to reduce the volume.
2. Long press on either speaker to go to the next track.



1. Short press on either speaker to turn the TWS function on/off.
2. Double press either of the speaker to disconnect Bluetooth.

AUX IN Mode



1. Short press to increase the volume.



1. Short press to reduce the volume.

LED STATUS AND OPERATION

Status Description	LED Definition
Power On	The default mode when the speaker is turned on is Bluetooth pairing mode, with White light flashing. If a 3.5mm AUX IN cable is plugged in, the speaker will automatically enter AUX IN mode, and the Green light will turn on.
Bluetooth Mode	Play/Pause: White light will stay lit.
	If the paired device is moved beyond the maximum bluetooth connection range, the speaker will go back to pairing status and the White light will flash. When the speaker is left in pairing mode for over 10 minutes without any activity, it will power off automatically.
AUX IN Mode	Green light will stay lit.
Wait for Pairing	White light will flash.
Bluetooth Connected	White light will stay lit.
Charging Status	Red light will stay lit when charging; Green light will stay lit once the speaker is fully charged.

PRODUCT SPECIFICATIONS

Product Name	THRILL
Bluetooth Version	5.0
Bluetooth Range	10m (TWS Distance around 2~5m)
Driver Unit	24W=12Wx2
Battery Capacity	3.7V 3000mAh
Audio Input	Bluetooth / 3.5mm AUX IN
Working Time	10 hours (70% volume)
Charging Time	3~4 hours (Input: 5V 1.5A)
S/N	≥70dB
Handsfree Function	Supported
Dimensions	71.6 x 73.6 x 176.5mm

FREQUENTLY ASKED QUESTIONS

Q: What kind of charger should we use to charge the speaker ?

A: All common USB chargers can be used, but we recommend chargers above 5V/1.5A.

FREQUENTLY ASKED QUESTIONS

Q: What if there is noise or intermittent cutoffs during music playback ?

A: The speaker can be normally used within 10m with line of sight with the connected device.

If the connected device is moved beyond 10m or there is obstruction in between, there might be noise or intermittent cutoffs during music playback.

Q: Why will the speaker shut down automatically when it is turned on ?

A: When there is no Bluetooth pairing or AUX IN activity within 10 minutes, the speaker will shut down automatically to reduce power consumption.

Q: The speaker cannot reconnect to an already paired device.

A: First, remove the speaker's pairing name from the device's Bluetooth list and then briefly press the Bluetooth button to restart the pairing process.

Q: What is the priority input sequence of the speaker ?

A: The priority is AUX IN input, phone call in Bluetooth mode and then music playback in Bluetooth mode.

Q: The speaker cannot be turned on.

 
A: Please plug in the charger to charge the speaker and try again in a few minutes.

* This speaker supports all compatible Bluetooth devices such as (but not limited to) mobile phones, tablets, MP3 Players with Bluetooth function, computers and laptops.

注意事項

- 感謝您購買我們的產品。在將本產品連接到您的設備之前，請仔細閱讀並遵循本說明。
- 請保留本手冊以備將來參考。在www.nakamichihomeaudio.com上註冊您的保修。
- 請在常溫環境中存放和使用本音箱。
- 請勿在近熱源處使用本音箱，如散熱器、熱風調節器、爐灶或其他產生熱量的儀器（包括放大器）。
- 請勿堵塞音箱的開口處，勿將物體塞入音箱的通風口或槽隙中。
- 請勿丟擲，避免因跌落造成本產品損壞。
- 請使用本音箱額定電壓的電源充電器充電。
- 如果連接線與您的設備不匹配，請與銷售商聯繫。
- 請將本音箱調至合適音量，避免對您的聽力造成損害。
- 無論設備因何原因損壞，都必須及時請專業維修人員修理，擅自拆卸將使保修失效。
- 如果電池更換不當會有爆炸危險，只能使用同類型或等效類型的電池來更換。
- 警告：電池（電池包或者組合電池）不得暴露在諸如日照、火烤或類似過熱環境中。

藍牙連接

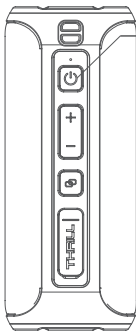

電源開關鍵（指示燈）

第一步，長按 3 秒開機

預設進入藍牙搜索狀態，白燈閃爍



第二步，選擇設備

在手機的藍牙列表中找到並選擇“THRILL”

 


指示燈

第三步，完成連接

手機顯示連接，音箱指示燈白色長亮，
連接成功

AUX連接

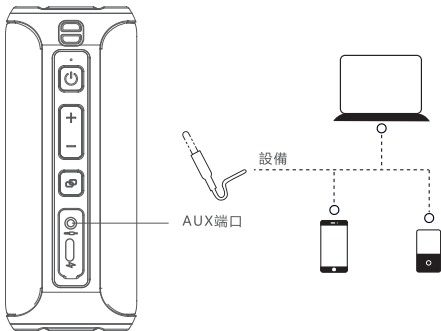

设备可通过音频线连接电脑、手机、平板电脑等设备进行音乐播放。



對箱操作步驟：

TWS對箱連接：開啟兩台設備，分別短按  按鍵，並配有開啟TWS提示音，兩台設備會自動互聯，白色指示燈快閃，配對成功後，主副機指示燈常亮，並配有配對成功提示音，此時手機可以連接藍牙，連上後即可享受立體聲音樂；

斷開TWS對箱連接：短按  按鍵後，退出TWS連接，並配有斷開提示音。
在TWS狀態下，短按任意一台設備的  按鍵，都會斷開TWS模式，進入單機模式。

注：TWS 功能必須配對成功後，再連接手機藍牙。

按鍵定義

藍牙模式



1. 播放音樂時點按任意一個音箱，播放/暫停
2. 來電時點按主機，接聽電話
3. 來電時按兩下主機，拒接電話
4. 通話中點按主機，掛斷電話



1. 點按任意一個音箱，音量增加
2. 長按任意一個音箱，下一曲



1. 點按任意一個音箱，音量減少
2. 長按任意一個音箱，上一曲



1. 短按任意一個音箱，開啟/斷開TWS對箱功能
2. 按兩下任意一個音箱，斷開藍牙模式

AUX IN模式



1. 點按，音量增加；2. 長按，无



1. 點按，音量減少；2. 長按，无

LED定義

狀態描述	LED定義
開機	預設為藍牙模式，白燈閃爍(處於搜索狀態)；如插入3.5 AUX IN插頭則自動進入AUX模式，此時綠燈長亮
藍牙模式	1. 播放，白燈長亮 2. 超出藍牙連接範圍，白燈閃爍(處於搜索狀態)，超過10分鐘無連接自動關機
AUX IN模式	綠燈長亮
搜索配對	白燈閃亮
配對成功	白燈長亮
充電狀態	充電亮紅燈，充滿亮綠燈

產品參數

產品名稱	THRILL
藍牙版本	5.0
藍牙傳輸距離	10m (對箱傳輸距離: 2~5m)
喇叭參數	24W=12Wx2
電池容量	3.7V 3000mAh
音訊輸入	藍牙連接 / 3.5mm音訊線連接
工作時間	10小時(70%音量)
充電時間	3~4小時(輸入: 5V 1.5A)
信噪比	≥70dB
免提功能支援	支援
產品尺寸	71.6 x 73.6 x 176.5mm

常見問題

使用什麼規格的充電器給音箱充電

通用的USB電源均可為音箱充電，建議使用5V/1.5A以上規格。

播放出現斷續或噪音

在無遮掩環境下距離手機10m範圍內均可正常使用，當手機與音箱超出正常使用距離或有遮擋物時，可能造成播放斷續或出現噪音的問題

音箱開機後沒有操作，為何自動關機

如果10分鐘內沒有藍牙連接或者未插入音訊線，會自行關機以減少電量消耗

音箱無法連接到已配對過的手機

遇到無法連接的情況，請先將音箱從手機的藍牙設備清單中刪除，點按藍牙斷開鍵進入重新與手機進行配對連接

藍牙播放/音訊線輸入的優先播放順序

預設情況下“音訊線輸入”優先於“藍牙音樂播放”

音箱無法正常開機

 
如果按電源鍵音箱無法正常開機，請插上充電器，幾分鐘後再嘗試

*手機、平板電腦等支援藍牙的設備均可使用，而本《用戶手冊》中使用“手機”來進行說明

安全上のご注意

- ・ 我々の製品をご購入頂きありがとうございます。本マニュアルをお読みになった上、本製品を先方の設備に接続してください
- ・ 将来のご参考になるためいつも保管してください。
- ・ 品質保証書をwww.nakamichihomeaudio.comに登録してください。
- ・ 初回は、いっぱい充電してからご使用ください。
- ・ 本製品は常温で使用し保管してください。
- ・ 放熱器、暖房、ストーブや他の熱を発する装置（アンプを含む）のすぐ傍で使用しないでください。。
- ・ 細かいものは本製品に入らないようにしてください。
- ・ ダメージされる恐れがあるので、本製品を投げたり落としたりしないでください。
- ・ 本スピーカーの充電はいつも正しい電圧で行ってください。
- ・ 一時的或いは永久的な聴力障害にならないように、スピーカーの音量は適度に調整してください。
- ・ 中にユーザーが修理できる部品がないので、本製品の解体はしないでください。
- ・ 本製品を改装しないでください。
- ・ お子さんの手が届かない場所に保管してください。
- ・ 電池の交換は自分ではなく、専門な代理店に交換してもらってください。
- ・ 電池パックは直射日光、火や他の類似した状況に暴露しないでください。

Bluetooth接続

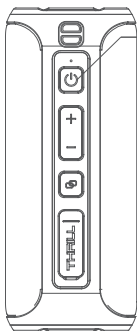

 電源ボタン(インジケータ)

- ①  を3秒長押しして、白が点滅しBluetooth探す状態になります。



 
- ② 携帯のBluetoothリストから「THRILL」を選択します。




インジケータ

- ③ Bluetooth接続後、インジケータは白点灯し、設定は完了です。

AUX端子との接続

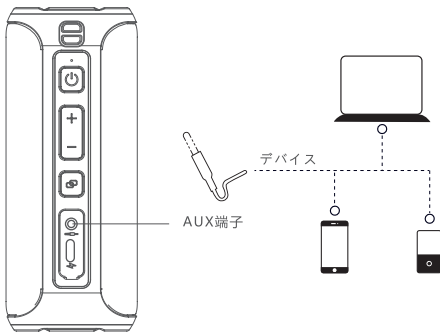

 AUX端子を使用し、パソコン、携帯、タブレットPCなどの設備に接続し、音楽を楽しむことができます

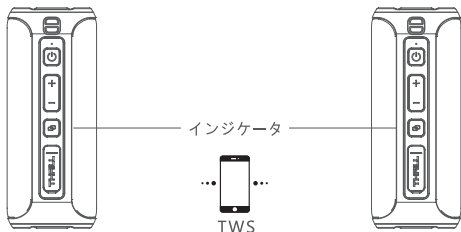

使用流れ：

接続：2台の設備をONにして、それぞれの  ボタンを短押して、TWS ONの提示音が鳴りながら、二つの設備が自動的にペアリングし、白が早い点滅になり、ペアリング後の2台スピーカーのインジケータが点灯し、ペアリングが成功する提示音も鳴ります。その後携帯のBluetoothを接続して、立体的なサウンドを楽しむことができます。

接続を解除： ボタンを短押して、TWS機能を解除します、提示音あります。TWSの状態では任意のスピーカーの  ボタンを押して、TWS機能を解除して、シングルモードになることができます。

注意：TWS機能は必ずペアリング済後、携帯のBluetoothを接続します。

ボタン定義

Bluetoothモード	
	1.音楽再生中任意のスピーカーのボタンを1回押しで、再生/一時停止します 2.着信する時にメイン設備を1回押しで、電話に出ます 3.着信する時にメイン設備を2回押しで、電話を拒否します 4.通話中メイン設備を1回押しで、通話が終了します
	1. 任意のスピーカーのボタンを1回押しで、音量を大きくします 2. 任意のスピーカーのボタンを長押しと、次の曲を送ります
	1. 任意のスピーカーのボタンを1回押しで、音量を小さくします 2. 任意のスピーカーのボタンを長押しと、前の曲に戻ります
	1. 任意のスピーカーのボタンを短押しと、TWS機能を起動/解除します 2.任意のスピーカーのボタンを2回押しで、Bluetoothモードを解除します
AUX INモード	
	1. 1回押しで、音量を大きくします; 2. 長押し、無しです。
	1. 1回押しで、音量を小さくします; 2. 長押し、無しです。

LED定義

状態	LED定義
オープン	Bluetoothモードになり（白が点滅しBluetooth探す状態）； 3.5mmのAUX INプラグを挿入すると、AUXモードになり、 緑が点灯しています。
Bluetooth モード	再生、白が点灯します
	Bluetooth接続される範囲以外になると、白が点滅し Bluetooth探す状態に入る、10分を超えて接続されて なかったら自動的にOFFになります。
AUX INモード	緑が点灯します
ペアリング中	白が点滅します
ペアリング成功 充電状態	白が点灯します 充電中であればインジケータが赤になり、 満充電すれば緑になります

製品規格

製品名	THRILL
Bluetoothバージョン	5.0
Bluetooth送距離	10M (TWSの場合は2 ~ 5M)
ドライバー	24W=12Wx2
電池容量	3.7V 3000mAh
AUX入力	Bluetooth接続/3.5mm AUX線接続
再生時間	10H(70%ボリューム)
充電時間	3~4H(出力: 5V 1.5A)
SN比	≥70dB
ハンズフリー	サポートできる
製品サイズ	71.6 x 73.6 x 176.5mm

よくある質問

再生中に音切れや、ノイズが発生します

携帯電話から10M以内の範囲で遮蔽物無しの場合は正常に使用できる、携帯電話とスピーカーの距離が正常に超えてしまうまたは遮蔽物あれば、再生中音切れたり、ノイズが発生したりの原因になる可能性があります

よくある質問

どんな充電器を使ってスピーカーに充電しますか

一般的なUSBケーブルはスピーカーに充電が可能です、5V/1.5A以上の規格を使うことをお勧めします

スピーカーがオープン後作動してないのに、なぜ自動オフになったのか

10分以内にBluetoothが接続されない場合またはAUX線が挿入されない場合、電力消費を減らすため電源は自ら停止します

スピーカーはペアになった携帯電話に接続できない

接続できない場合、携帯電話のBluetoothリストからスピーカーを削除し、Bluetoothを解除してから、携帯電話との接続をやり直します

Bluetooth再生/ AUX線入力の優先再生順位

黙認の場合「AUX線入力」は「Bluetooth再生」に優先します

スピーカーが正常に作動しない

電源ボタンを押しても正常にオープンできない場合は、充電器を差し込んで数分後にお試しください

 
*携帯電話、タブレットなどBluetooth対応できるの設備はすべて使用できる、

本『取扱説明書』では「携帯電話」を使って説明させていただきます

ADVERTENCIAS DE SEGURIDAD

- . Gracias por comprar nuestro producto. Lea este manual antes de conectar este producto a sus dispositivos.
- . También guarde este manual para futuras referencias.
- . Registre su garantía en www.nakamichihomeaudio.com
- . Para el primer uso, se recomienda una carga completa.
- . Por favor, utilice y almacene el producto a temperatura ambiente.
- . No utilice cerca de fuentes de calor como radiadores, registros de calor, estufas u otros aparatos (incluidos amplificadores) que produzcan calor.
- . No permita que pequeñas partículas entren en el producto.
- . No tire ni deje caer el producto para evitar cualquier daño.
- . Por favor, cargue el altavoz con el voltaje correcto en todo momento.
- . Por favor, modere el volumen del altavoz para evitar cualquier discapacidad auditiva temporal o permanente.
- . No desarme el producto, no hay partes internas que puedan ser reparadas por el usuario. No hacer ninguna modificación al producto.
- . Mantenga el producto fuera del alcance de los niños.
- . No intente reemplazar la batería por su cuenta. por favor refiérase al distribuidor autorizado para cualquier reemplazo de la batería.
- . No exponga la batería a condiciones tales como luz solar directa, fuego o condiciones similares.

Emparejamiento Bluetooth

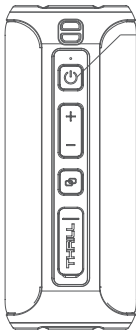


Botón de Encendido / Apagado
(indicador)

Paso 1: Encender la unidad presionando el botón  durante 3 segundos. El altavoz se encenderá y entrará en el modo de emparejamiento Bluetooth cuando el indicador LED está parpadeando.



 
Paso 2: Abra la configuración de Bluetooth en su dispositivo compatible y busque "THRILL" en los dispositivos Bluetooth descubiertos.



Luz indicadora
permanece encendida

Paso 3: Una vez que ha seleccionado el altavoz, la luz indicadora detendrá el parpadeo y permanecerá encendida. Esto significa que la conexión Bluetooth es exitosa.

 Conexión de AUX IN

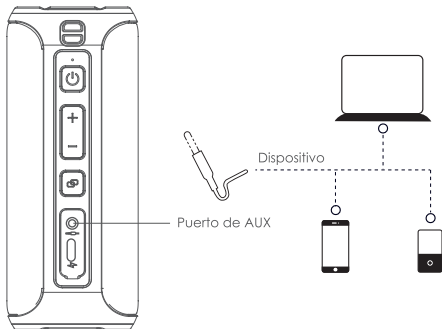

El altavoz es un puerto AUX x 1 , simplemente conecte el altavoz a su teléfono móvil / reproductor de MP3 / PC / computadora portátil o cualquier otro dispositivo compatible con el cable de audio de 3.5 mm suministrado. Una vez conectado con éxito, la luz indicadora verde se encenderá y la música ahora se puede reproducir.

Operación de emparejamiento de TWS



1. Encienda los dos altavoces.
2. En el primer altavoz, presione el botón "🔄", se encenderá el modo de emparejamiento TWS y se reproducirá una notificación de sonido para indicar que está encendido.
3. Siga las instrucciones anteriores para el otro altavoz.
4. Después de 1 a 2 segundos, los 2 altavoces se emparejarán de forma automática. Una vez que se emparejen con éxito, habrá una notificación sonora, el indicador LED TWS de 2 altavoces permanecerá encendido.
5. En su dispositivo compatible, busque "THRILL" en la lista de emparejamiento de Bluetooth, haga clic en él y su dispositivo se emparejará con las dos altavoces con una notificación de sonido. Ahora puede disfrutar del sonido estéreo.
6. Presione brevemente el botón "🔄" para desconectar TWS.

Nota: Para el emparejamiento de TWS, deje que los dos altavoces se conecten entre sí primero, luego utilice su dispositivo Bluetooth compatible para conectarse con el altavoz maestro.

OPERACIÓN BÁSICA

Modo de Bluetooth



1. Presionar este botón en cualquiera de los altavoces durante la reproducción de música para pausar o reproducir la música.
2. Cuando hay una llamada entrante, presione brevemente este botón en el altavoz maestro para que conteste la llamada;
3. Cuando hay una llamada entrante, presione dos veces este botón en el altavoz maestro para rechazar la llamada.
4. Durante una llamada telefónica en curso, presione brevemente este botón en el altavoz maestro para terminar la llamada.



1. Presione brevemente en cualquiera de los altavoces para aumentar el volumen.
2. Mantenga presionado uno de los altavoces para ir a la siguiente pista.



1. Presione brevemente en cualquiera de los altavoces para reducir el volumen.
2. Mantenga presionado uno de los altavoces para ir a la siguiente pista.



1. Presione brevemente en cualquiera de los altavoces para activar / desactivar la función TWS.
2. Presione dos veces cualquiera de los altavoces para desconectar Bluetooth.

Modo de AUX IN



1. Presione brevemente para aumentar el volumen.



1. Mantenga presionado para reducir el volumen.

ESTADO LED Y OPERACIÓN

Descripción del Estado	Definición LED
Encendido	El modo predeterminado, cuando el altavoz está encendido, es el modo de emparejamiento de Bluetooth, con la luz Blanca que parpadea. Si se conecta un cable AUX IN de 3,5 mm, el altavoz entrará automáticamente en el modo AUX IN y se encenderá la luz Verde.
Modo de Bluetooth	Reproducir / Pausar: La luz blanca permanecerá encendida.
	Si el dispositivo emparejado se mueve más allá del rango máximo de conexión de Bluetooth, el altavoz regresará al estado de emparejamiento y la luz blanca parpadeará. Cuando el altavoz permanece en modo de emparejamiento durante más de 10 minutos sin ninguna actividad, se apagará automáticamente.
Modo de AUX IN	La luz verde permanecerá encendida
Espera a Emparejar	La luz blanca parpadeará.
Conexión de Bluetooth	La luz blanca permanecerá encendida.
Estado de Carga	La luz roja permanecerá encendida durante la carga; La luz verde permanecerá encendida una vez que el altavoz esté cargado por completo.

ESPECIFICACIONES DEL PRODUCTO

Nombre del Producto	THRILL
Versión de Bluetooth	5.0
Rango de Bluetooth	10m (TWS Distancia alrededor de 2-5m)
Unidad de Controlador	24W=12Wx2
Capacidad de la Batería	3.7V 3000mAh
Entrada de Audio	Bluetooth / 3.5mm AUX IN
Tiempo de Trabajo	10 horas (70% volumen)
Tiempo de Carga	3-4 horas (sin 5V 1.5 A)
SQN	≥70dB
Función de manos libres	Soportada
Dimensiones	71.6 x 73.6 x 176.5mm

PREGUNTAS FRECUENTES

P: ¿Qué tipo de cargador debemos usar para cargar el altavoz?

R: Se pueden utilizar todos los cargadores USB comunes, sin embargo, recomendamos cargadores de 5V / 1.5A y superior.

PREGUNTAS FRECUENTES

P: ¿Qué tipo de cargador debemos usar para cargar el altavoz?

R: Se pueden utilizar todos los cargadores USB comunes, sin embargo, recomendamos cargadores de 5V / 1.5A y superior.

Si el dispositivo conectado se mueve más allá de 10m o hay una obstrucción en el medio, puede haber ruido o cortes intermitentes durante la reproducción de música.

P: ¿Por qué el altavoz se apagará automáticamente cuando se enciende?

R: Cuando no hay emparejamiento de Bluetooth o actividad AUX IN en 10 minutos, el altavoz se apagará automáticamente a fin de reducir el consumo de energía.

P: El altavoz no puede volver a conectarse a un dispositivo ya emparejado.

R: En primer lugar, retire el nombre de emparejamiento de los altavoces de la lista de Bluetooth del dispositivo y luego presione brevemente el botón Bluetooth a fin de reiniciar el proceso de emparejamiento.

P: ¿Cuál es la secuencia de entrada de prioridad del altavoz?

R: La prioridad es la entrada AUX IN, la llamada telefónica en modo Bluetooth y luego la reproducción de música en modo Bluetooth.

P: El altavoz no se puede encender.

R: Enchufe el cargador para cargar el altavoz y vuelva a intentarlo unos minutos.

* Este altavoz soporta todos los dispositivos Bluetooth compatibles, tales como (pero no limitado a) teléfonos móviles, tabletas, reproductores de MP3 con función Bluetooth, computadoras y computadoras portátiles.

CONNECT WITH US

 nakamichihomeaudio.com

 [nakamichi.global](https://www.facebook.com/nakamichi.global)

 [nakamichihomeaudio](https://www.instagram.com/nakamichihomeaudio)