


## Product Manual

### **F700/F700 Plus 2-in-1 GPS Wireless Dog Fence**

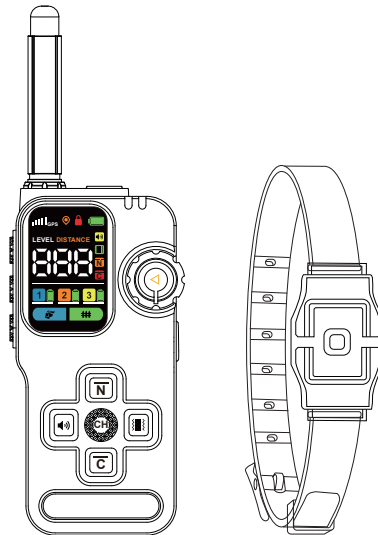

WT-F700/F700 Plus-A01

PLEASE READ THIS ENTIRE MANUAL BEFORE BEGINNING

## Important Safety Information

- This product is not suitable for use with aggressive dogs. If you're unsure, consult a vet or trainer.
- This product cannot be tested directly on humans, otherwise it will violate local laws.
- Ensure safety during on-leash training by using a strong leash and being physically capable of restraining your dog.
- Follow wearing precautions to avoid skin damage such as redness or pressure ulcers.
- Avoid prolonged use of the receiver on your dog.
- Turn off or remove the receiver before playing with the dog.
- Keep the product away from stoves or high temperatures.
- Do not open the product shell to prevent lithium battery disconnection or fire hazards.


## Table of Contents

|                                     |    |
|-------------------------------------|----|
| <b>Introduction</b>                 | 1  |
| <b>Components</b>                   | 1  |
| <b>Product Overview</b>             | 2  |
| <b>Basic Setup &amp; Operation</b>  | 5  |
| How to Charge                       | 5  |
| How to Turn On/Off                  | 6  |
| How to Pair Receivers               | 7  |
| Sleep/Wake Functions                | 8  |
| How to Use the Fence                | 8  |
| How to Use the Training Function    | 11 |
| How to Use Lighting Function        | 12 |
| <b>Prepare &amp; Fit the Collar</b> | 13 |
| How to Install the Contact Points   | 13 |
| How to Use the Test Light           | 14 |
| How to Assemble the Collar Belt     | 15 |
| How to Put Collar on Pet            | 16 |
| Wearing Precautions                 | 17 |
| <b>Frequently Asked Questions</b>   | 18 |
| <b>Warranty</b>                     | 23 |
| <b>Compliance</b>                   | 24 |

## Introduction


The F700/F700 Plus 2-in-1 GPS Wireless Dog Fence and Trainer integrate training and GPS fence, supporting management of up to 3 dogs for comprehensive pet behavior management and safety.


## Components

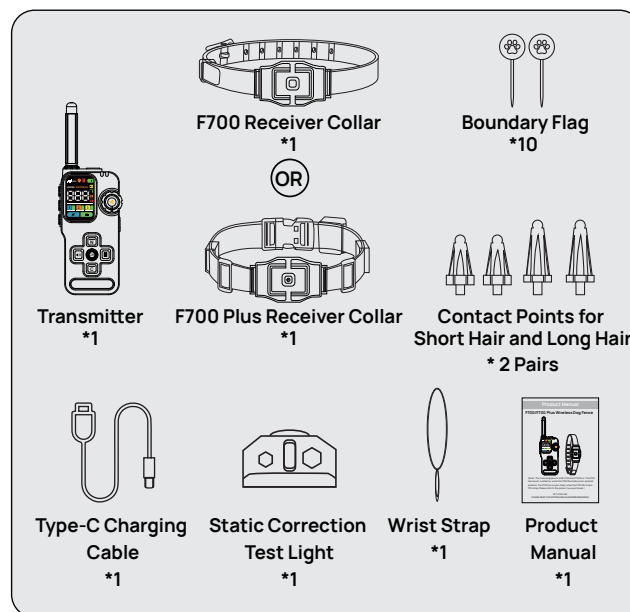


## Product Overview

### Transmitter

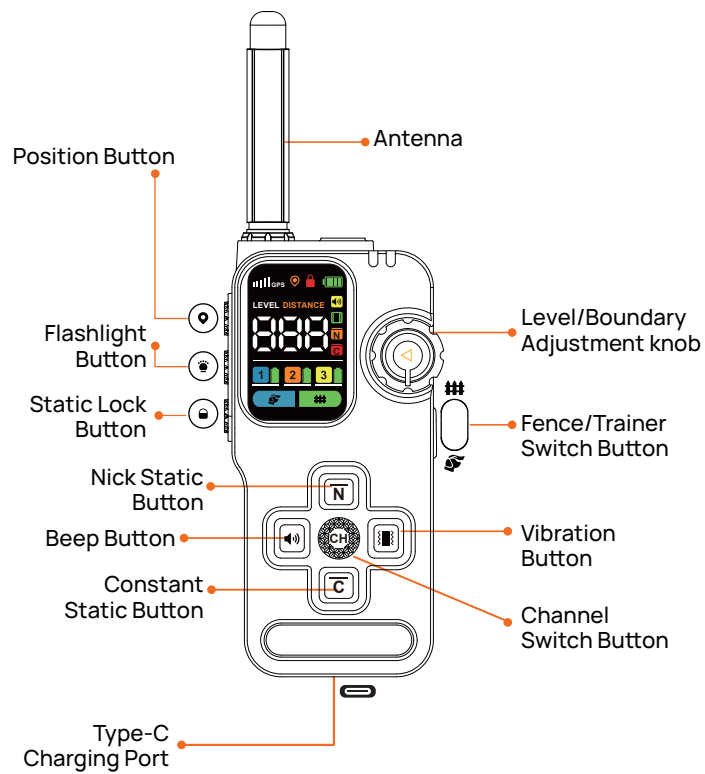


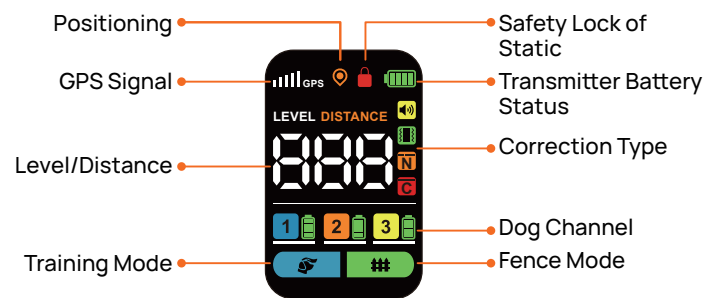

## F700 Receiver

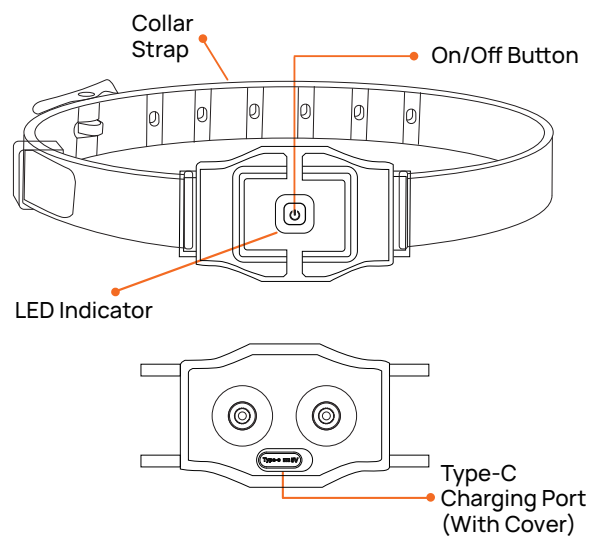

## F700 Plus Receiver

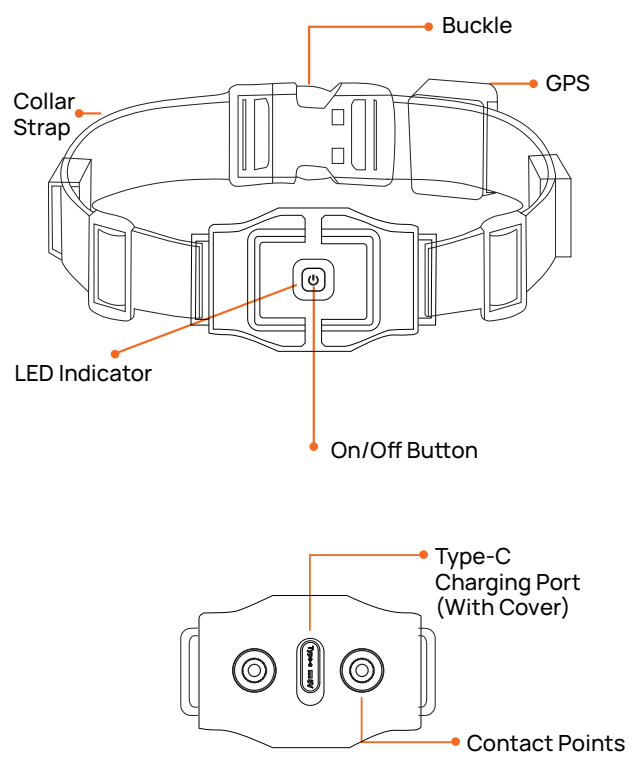

## Basic Setup & Operation

### Step How to charge

1


**Tips:** The receiver and transmitter will shut down automatically if the battery voltage drops below 3.3V. If turned on at low voltage, they will shut down again after 10 seconds. Please fully charge before use with a 5V1A adapter and the provided Type-C cable.

#### **Transmitter:**

Red light flashes while charging; steady green light when fully charged. Charging doesn't affect the receiver's fence function. The screen lights up after unplugging the charger if it was off during charging.

#### **Receiver:**

Red light flashes while charging; steady green light when fully charged. Charging doesn't affect the receiver's fence function. The screen lights up after unplugging the charger if it was off during charging.

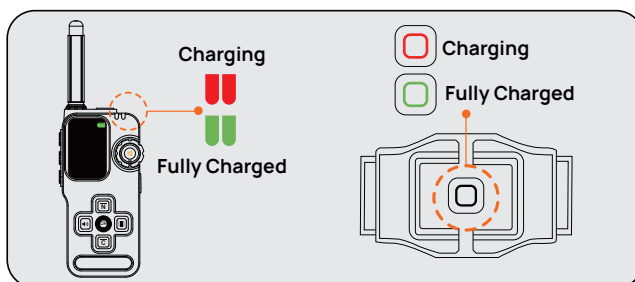

## Step How to turn On / Off

# 2

**Tips:** Please remember to install the antenna before operating.

### Transmitter:

Short press lock button (🔒) to turn on the device, and hold the lock button (🔒) for 3 seconds to turn it off.

### Receiver:


① Power On:

Short press the on/off button ("beep" sound + vibration).

② Power Off:

Long press the on/off button for 3 seconds.

("beep beep" two sounds + vibration twice)

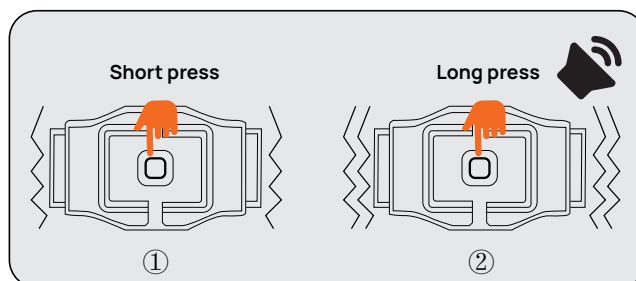

## Step How to Pair Receivers

# 3

**Tips:** The transmitter and receiver must be successfully paired before using the training and fence functions. One transmitter can pair with up to 3 receivers.


① **Receiver:** In the off state, long press the on/off button for 3 seconds to enter pairing mode (Red LED flashes quickly, 15-second timeout).

② **Transmitter:** Long press the channel switch button to enter pairing state, then short press the channel switch button to select Dog 1, Dog 2, or Dog 3.

**Success Indication:** The receiver will beep once and the green LED will flash slowly, while the transmitter will display the battery status of the corresponding channel (if pairing fails, repeat the pairing steps to ensure the operation is completed within 15 seconds).

③ **Finally press any correction mode button to complete pairing.**

Tips: If using static correction button to confirm, please make sure the static is unlocked.

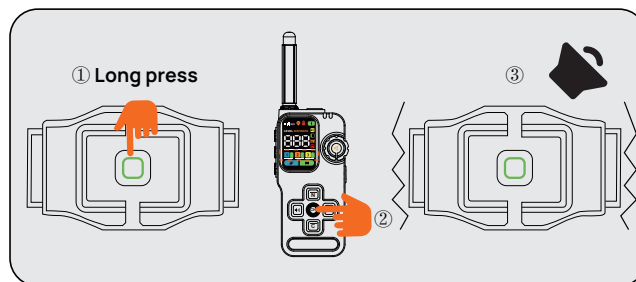

## Step Device Sleep & Wakeup

# 4

### Sleep Conditions

#### Receiver:

**In Training Mode:** Automatically enters sleep mode after 3 minutes of inactivity.

**In Fence Mode:** Automatically enters sleep mode after 5 minutes of inactivity.

**Wake-up Method:** Move the receiver or press any button on the transmitter.

#### Transmitter:

Screen turns off after 120 seconds of inactivity.

Enters sleep mode after an additional 60 seconds of inactivity.

(Note: The transmitter entering sleep mode does not affect the fence function of the receiver. The transmitter will wake up if the dog crosses the boundary.)

## Step How to Use Fence Function

# 5

**Tips:** Each dog has different fence settings. Please select the corresponding dog channel.

#### Enter Fence Function:

Short press the function switch button to enter the fence mode interface.

**Search GPS Signal:**

It takes approximately 3–5 minutes to acquire GPS signals. During this time, the position icon and the “===” icon will flash.

Once the signal is detected and displays three bars or more, you may proceed to set the center point.

**Tip:** For optimal performance, a GPS signal strength of five bars is recommended.

This product relies on GPS positioning technology. For best results, use it in open outdoor areas with a clear view of the sky. GPS performance may be affected by indoor use, dense tree cover, or cloudy/rainy weather.

**Position Center Point:**

Press and hold the position button for 2 seconds to set the center point.

**Adjust Radius:**

Short press the position button to enter the radius adjustment mode – the distance icon will begin to flash.

Rotate the adjustment knob clockwise to increase the radius. Rotate it counterclockwise to decrease the radius.

The adjustable radius range is 0.25 meter to 920 meters / 25 to 999 yards.

**Tip:** For safety, ensure the fence boundary is at least 25 feet (7.6 meters) away from any hazardous areas.

**Set correction Mode:**

Press the Vibration Button or the Constant Static Button to select a correction mode.

Vibration Mode only supports Auto Mode.

Static Mode supports both Auto Mode and Fixed Mode.

Continue pressing the Constant Static Button to cycle through the intensity levels:

Level 0: Auto Mode

Level 1–5: Fixed Mode (manual levels)

**Test the Fence:**

Before testing, ensure the GPS signal strength is at least 3 bars. The collar will only trigger corrections when it is in motion (moving or swinging).

1. Press the Vibration button to select vibration correction mode.
2. At your dog's neck height, simulate movement by walking the collar from inside the boundary to outside.
3. Test multiple points along the boundary. If the collar beeps and vibrates, the fence is working correctly.
4. If the collar doesn't trigger at the boundary, reposition the center point or adjust the radius.

**Tips:**

1. Before using the fence, please refer to the training guide to train your dog to learn the boundary.
2. Within a range of 300 yards, the Remote Transmitter can display the distance between the receiver and the center point, as well as issue a sound alert.
3. You can press the Beep Button to turn on or off the transmitter's sound alert.

## Step How to Use the Training Function

# 6

### Enter Training Function

Press the function switch button to enter, then press the channel switch button to select Dog 1/ Dog 2/ Dog 3.

### Select Warning Mode

Short press the Channel Switch Button to choose between four Warning Modes.

Sound and Vibration modes do not support level adjustment. Constant Static and Nick Static modes have 24 adjustable levels.

Rotate the Adjustment Knob to change the static level:

Clockwise to increase.

Counterclockwise to decrease.

Tip: Use the Lock Button to lock the static mode for safety.

### Beep Warning

Press the Beep Button to issue a sound command:

- Short press: Emits a single beep.
- Long press: Emits a continuous beep for up to 10 seconds.

### Vibration Warning

Press the Vibration Button to issue a vibration command:

- Short press: Triggers a 1-second vibration at 50% power.
- Long press: Gradually increases vibration strength to 100% over 3 seconds, with a maximum duration of 15 seconds.

### Static Correction Warning

- Short press the NICK Static Button: Delivers a quick static pulse.
- Long press the Constant Static Button: Delivers continuous static output for up to 10 seconds.

#### Tips:

1. Maximum remote training distance is 800 meters/880 yards in open areas.
2. The training functions can still be used while the fence mode is active.

## Step 7 How to Use Lighting Function

7




**Tips:** Operable in both training and fence modes, for auxiliary lighting in nighttime or low-light environments

### Flashlight Control:

| Light Status  | Transmitter Light |
|---------------|-------------------|
| Steady on     | 1st short press   |
| Fast flashing | 2nd short press   |
| Off           | 3rd short press   |

## Prepare & Fit the Collar


### How to Install the Contact Points

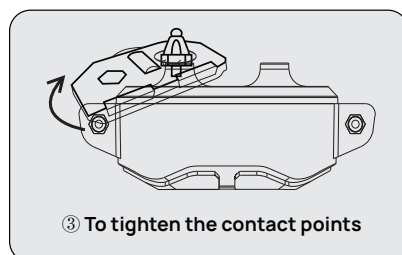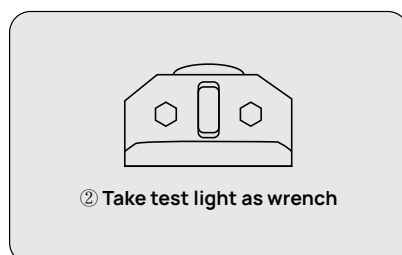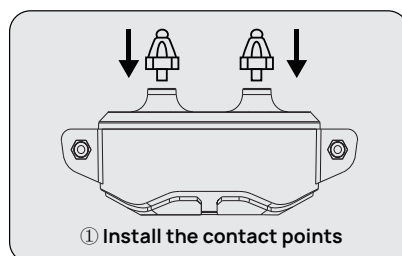

## How to Use the Test Light


**Tips:** Ensure the contact points are properly installed and the device is paired.

- ① Ensure training function and unlock the static stimulation mode.
- ② Place the test light on the contact points, and press the static button. If the test light is on, it indicates that the static stimulation is functioning properly.

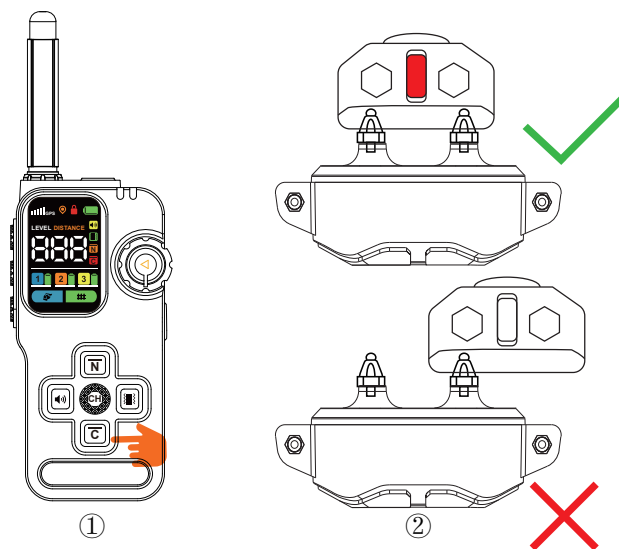

## How to Assemble the Collar Belt

### F700

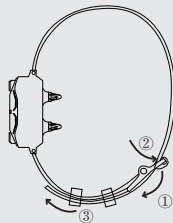


**Step 1:** Pass the longer belt through the pin buckle.

**Step 2:** Then insert the pin into the hole of the belt.

**Step 3:** Pass the excess belt through the silicone ring.

### F700 Plus




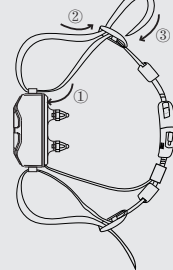


**Step 1:** Pass the belt through the receiver.

**Step 2:** Pass the belt through the tri-glides buckle.

**Step 3:** Pass the excess belt through the silicone ring.

## How to Put Collar on Pet
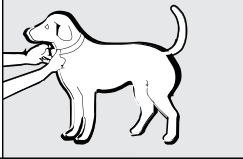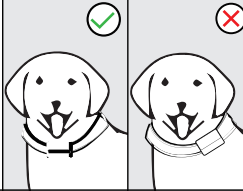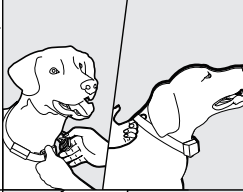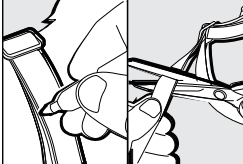
|   |                                                                                                                                                                                                                |                                                                                      |
|---|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
| ① | Please ensure the dog is in a comfortable standing position and that the receiver is turned off before putting it on.                                                                                          |    |
| ② | Please position the receiver in the middle of the dog's neck with the power button facing upward and the contact point aligned with the dog's throat.                                                          |   |
| ③ | Check the tightness of the receiver. You should be able to easily insert a finger between the collar and your dog's neck. If the collar is too loose or too tight, it will affect the operation of the device. |  |
| ④ | Mark the desired length of the collar with a pen, remove the excess collar, and cut it off.                                                                                                                    |  |

## **Wearing Precautions**

- 1.** Avoid prolonged or tight wearing of the collar to prevent skin irritation in your dog.
- 2.** Ensure your dog doesn't wear the collar for more than 12 hours a day.
- 3.** If you are using the static warning mode, regularly check your dog's neck for any signs of irritation from the contact points. If irritation is noticed, it's recommended to adjust the collar's position every 1 to 2 hours.
- 4.** Regularly check the collar's tightness to prevent excessive pressure.
- 5.** Do not attach a leash to the collar to avoid undue pressure on the device.
- 6.** Clean your pet's neck area and the receiver's contact area with a damp cloth weekly.
- 7.** Daily inspect the contact area for any signs of rash or discomfort.
- 8.** If you notice a rash or discomfort, discontinue collar use until the skin heals. If symptoms persist beyond 48 hours, seek immediate veterinary attention.

Follow these steps to ensure your pet's safety and comfort. While millions of pets find stainless steel contacts comfortable, some may be sensitive to pressure. Over time, your pet may become more tolerant of the collar, allowing you to relax certain precautions. However, it's crucial to regularly check the contact area for redness or sores. If any are found, discontinue use until the skin has fully healed.

## Frequently Asked Questions

| Question                                     | Problem                                                                              | Action                                                                                                                                                                        |
|----------------------------------------------|--------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1. Transmitter/ receiver cannot be charged   | Charging cable does not fit.                                                         | Use the charging cable that came with the device. (5V1A)                                                                                                                      |
|                                              | Charging cable is damaged.                                                           | Replace the charging cable and try again.                                                                                                                                     |
| 2. Product has not been used for a long time | If the product is left on and not used for a long time, the battery will lose power. | ① Please turn it off every time when not using it.<br>② If it is not used for a long time, please refer to the manual for charging instructions before charging and using it. |
| 3. The product does not work                 | The product enters the low power protection mode.                                    | The battery needs to be charged. Please attach the charging cable and fully charge the battery.                                                                               |
|                                              | Cannot turn it on.                                                                   | Test after charging.                                                                                                                                                          |
|                                              | Remote & receiver not paired well.                                                   | Repair the remote with receiver.                                                                                                                                              |
| 4. The dog bites the device, damaging it     | The dog resists the product.                                                         | The dog should not be able to see or reach the device it is wearing.                                                                                                          |

| Question                              | Problem                                                              | Action                                                                                                         |
|---------------------------------------|----------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|
| 5.The product does not turn on        | Check whether the touch of the key is normal.                        | No response means it is damaged.                                                                               |
|                                       | No display/sound prompt.                                             | Recharge again.                                                                                                |
|                                       | The product enters the low power protection mode.                    | Connect charging cable and wait for the battery to charge.                                                     |
|                                       | Wrong startup method.                                                | Long press the on/off button.                                                                                  |
| 6.No static stimulation /No vibration | The static level is set too low or the static stimulation is locked. | Adjust to a higher static level or unlock the static stimulation and try again.                                |
|                                       | The vibration level is set too low.                                  | Adjust high vibration level and try again.                                                                     |
|                                       | Check to see if the battery is low.                                  | Charge the receiver completely.                                                                                |
|                                       | The dog's hair is too long.                                          | Adjust the device so the contact points touch the dog's skin.                                                  |
|                                       | The collar is too loose.                                             | The receiver is worn in the middle of the dog's neck, with a finger width gap between the collar and the neck. |
|                                       | Remote & receiver not paired.                                        | Re-pair the remote with the receiver.                                                                          |

| Question                                             | Problem                                                             | Action                                                                                                                                                                                                                                                                                                                                                            |
|------------------------------------------------------|---------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 7.The collar falls off easily and isn't tight enough | The collar is too loose.                                            | The receiver is worn in the middle of the dog's neck, with a finger width gap between the collar and the neck.                                                                                                                                                                                                                                                    |
|                                                      | The excess was not trimmed off the collar during first use.         | The collar straps should be tightened correctly in each buckle so the collar fits the dog's neck then the excess should be cut off.                                                                                                                                                                                                                               |
|                                                      | The collar strap is damaged and needs to be replaced.               | Please refer to the instruction manual for wearing the collar.                                                                                                                                                                                                                                                                                                    |
| 8.The remote screen displays garbled characters      | Low battery power.                                                  | Use it after it is fully charged.                                                                                                                                                                                                                                                                                                                                 |
|                                                      | Violent handling and beating. The transmitter was damaged by a dog. | <p>①The device cannot be handled violently. This type of damage is not covered by the warranty. Keep the transmitter and the receiver out of the dog's sight when not in use.</p> <p>② If the characters on the display screen are garbled upon receiving the device, please contact customer service for repair/ replacement. Photos and video are required.</p> |

| Question                                         | Problem                                                                                          | Action                                                                                                                                                                              |
|--------------------------------------------------|--------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 9. Device injures dog                            | Wear it for too long time.                                                                       | It should not be worn for more than 12 hours and should be checked every 2 hours.                                                                                                   |
|                                                  | If the device is worn when the dog is wet or swimming, the static stimulator irritates the skin. | ① Keep your dog's neck area dry and clean, and do not wear products while swimming or playing with your owner.<br>② Use silicone caps to reduce the friction of the contact points. |
|                                                  | Dog develops a rash.                                                                             | Stop using the product for a few days. If the condition persists for more than 48 hours, consult your veterinarian for help.                                                        |
|                                                  | The dog is less than 6 months old.                                                               | The pet should be at least 6 months old before using the training collar, and the dog should be able to recognize basic obedience commands, such as "sit" or "stay."                |
| 10. Accessories missing, accessories damage, etc | Damaged in transport or packing mistake.                                                         | Contact customer service to initiate a repair/return. May require photos or video.                                                                                                  |

| Question                                         | Problem                                                                                                                                 | Action                                                                                                                                                                                                     |
|--------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 11.Product compatibility issues                  | The remote and receiver must match. If you buy another manufacturer's remote or receiver, it will not work with our product.            | Buy the same model from us to pair.                                                                                                                                                                        |
| 12.Safety of vibration/static                    | A brief vibration or static won't hurt, but it can make the dog feel uncomfortable.                                                     | The continuous use of vibration and static should not exceed 30 seconds. The dog training collar requires the user to interact with and train the pet to achieve the desired effect.                       |
|                                                  |                                                                                                                                         | Our vibration and static functions have been tested on different types of dogs over a long period of time.                                                                                                 |
| 13.Remote range does not equal actual            | The actual remote range may vary due to terrain, weather, vegetation, battery capacity, and interference from other radio devices.      | Change the venue and try to train in a place with less interference.                                                                                                                                       |
| 14.The product isn't changing the dog's behavior | The dog training collar is a training aid product, which requires users to interact and train their pets to achieve the desired effect. | <p>① Seek training support from a professional dog trainer.</p> <p>② Proper training time. The training course should be kept active and short, with a better effect of about 10-15 minutes each time.</p> |

| Question                                              | Problem                                                                                           | Action                                                                                                                |
|-------------------------------------------------------|---------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------|
| 15. It is effective at first, but does not work later | ① Check whether the device works normally.<br>② Wearing for a long time has desensitized the dog. | ① Change the levels and readjust the training mode.<br>② It is recommended not to wear the product when not training. |

## Warranty

1. If the device is found defective within 30 days of purchase, provide picture or video evidence for approval by customer service. Upon approval, a replacement will be sent. Defective product must be returned within 7 days of receiving the replacement.
2. If the device becomes defective after 30 days but within the 1-year warranty period, the customer must bear shipping costs to return the device to the factory. Faulty parts will be tested, replaced, and the device returned free of charge.
3. This warranty supplements other legal rights and remedies. For major failures or foreseeable loss/damage, you're entitled to replacement or refund.
4. You have the right to repair or replace goods if they're of poor quality and failure isn't major. For inquiries or more details, please contact our customer service.

## Compliance

 Indicates CE certification, ensuring compliance with local regulations of the European Economic Area (EEA).

 Signifies that the equipment's electromagnetic interference is below the limit approved by the Federal Communications Commission.

 Dispose of packaging materials by type. Cardboard and cartons can be recycled as waste papers, while packaging cases should be recycled accordingly.

 The system is designed for EU and other European countries, capable of categorically collecting recyclable materials.

### FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.**

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.