 





TWS 600
Owner's Guide

Accessories

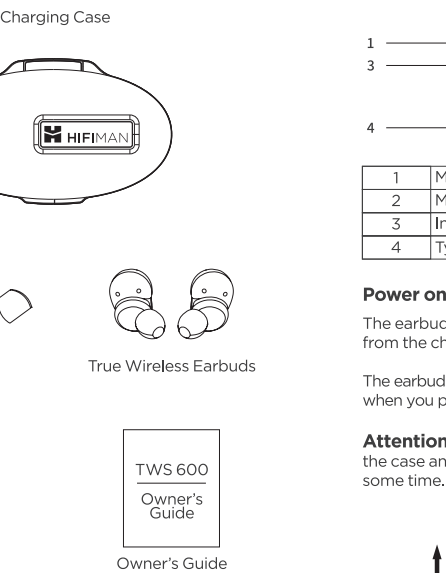

 Overview

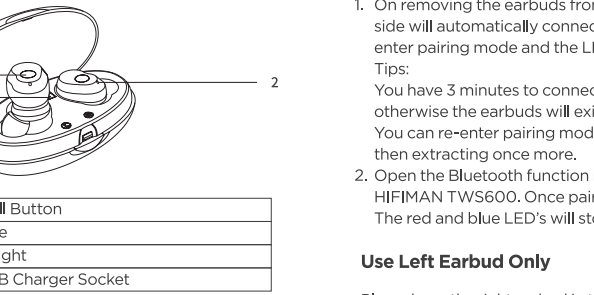

Power on / off
The earbuds will power on automatically when removed from the charging case.

Attention: When you first use the product, please allow the case and earbuds inside to fully charge, give them some time.



Bluetooth Pairing

- On removing the earbuds from the charging case the right side will automatically connect to the left. The earbuds will enter pairing mode and the LED will flash red and blue.
Tips:
You have 3 minutes to connect the earbuds to your device, otherwise the earbuds will exit and power off automatically. You can re-enter pairing mode by replacing in the case and then extracting once more.
- Open the Bluetooth function menu on your device, select: HIFIMAN TWS600. Once paired, you will hear "Connected". The red and blue LED's will stop flashing.

Use Left Earbud Only

Please keep the right earbud in the charging case. The left one will enter one-sided mode automatically to return to stereo simply remove the right earbud from the charging case.

 
Use Right Earbud Only

Remove the right earbud from the case, press the button until you hear power off. Continue to press until you hear power on. Then you can connect with the right earbud only. When you wish to return to stereo mode, put both earbuds in the charging case, then bring the left earbud out first. After it connects to your device then simply return to stereo by removing the left bud.


Tips:
The left earbud connects to your device only.
The right earbud will connect the left one.
The left and right earbuds can be used as single channel headphones.

Wear

Try all the eartips to find the best fit (To help you get for means you ought to get a complete seal, feel comfortable and can enjoy the best sound quality at once.).



 Insert earbuds with the eartips to your ear directly. Twist gently until they fit your ear perfectly and feel comfortable.

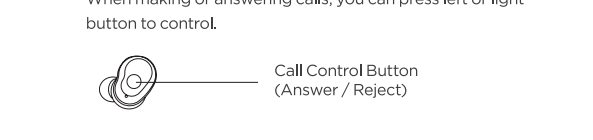

Tips:
More than one eartips' size may fit you. Please choose the best one for your ear to get the best experience. You may need different size eartips for left ear and right ear.

Music & Calls

Music

Start playing music on your device and you can control it with either left side or right side earbud.



- ※ Press once to pause, press again to play again.
- ※ Double-press left button to reduce volume, double-press right button to increase volume.
- ※ Triple-press left button to turn to the next track, triple-press right button to turn to previous track.

Calls

When making or answering calls, you can press left or light button to control.



- ※ Press once to accept an incoming call, or press and hold 2 seconds to reject.
- ※ Press once to end the call.
- ※ When you are talking on the phone and receive another incoming call: Press once to end the first call and answer new coming call.

* Press and hold two seconds to activate the phone's voice control.

Music & Calls

Music

Start playing music on your device and you can control it with either left side or right side earbud.



- ※ Press once to pause, press again to play again.
- ※ Double-press left button to reduce volume, double-press right button to increase volume.
- ※ Triple-press left button to turn to the next track, triple-press right button to turn to previous track.

Calls

When making or answering calls, you can press left or light button to control.



 
- ※ Press once to accept an incoming call, or press and hold 2 seconds to reject.
- ※ Press once to end the call.
- ※ When you are talking on the phone and receive another incoming call: Press once to end the first call and answer new coming call.

* Press and hold two seconds to activate the phone's voice control.

Music & Calls

Music

Start playing music on your device and you can control it with either left side or right side earbud.



- ※ Press once to pause, press again to play again.
- ※ Double-press left button to reduce volume, double-press right button to increase volume.
- ※ Triple-press left button to turn to the next track, triple-press right button to turn to previous track.

Calls

When making or answering calls, you can press left or light button to control.



- ※ Press once to accept an incoming call, or press and hold 2 seconds to reject.
- ※ Press once to end the call.
- ※ When you are talking on the phone and receive another incoming call: Press once to end the first call and answer new coming call.

* Press and hold two seconds to activate the phone's voice control.

Charging

Charge the Earbuds

Put the earbuds into the charging case. Close the charging case. The red light turns on when it is charging. And the blue light turns on when it is complete charged. The blue light will turn off after 30 seconds.

Charge the Charging Case

Insert a Type-C USB cable into the socket to charge the case battery and earbuds. When charging, the earbuds LED will light up red inside the case. The 3 charging lights inside the case to indicate the remaining charge.

Charge Level

When the battery level is low you will hear "Battery Low", When the battery is empty you will hear "Battery Low" every 20 seconds.

Earbuds Status Light

Charging	Light keeps steady red
Complete the charge	Light turns off
Pairing	Blinking blue and red

User Guide

Charging Case Status Light

When charging the case the indicator lights will be on.

Charging	When charging Lights will flash and the remain constant to indicate charge level
Full charged	Steady light

Note:
Please do not remove or replace the internal battery , doing so will void your warranty automatically.

The case can be used as a portable power pack to provide a small emergency power supply.

The Right and Left Earbud Pairing Guide (only use When the earbud can not be automatically paired)

- Power off both earbuds, then press the multi-function button separately for about 12 seconds. The first stage, a red-blue blinking appears about 6 seconds later. Then the flashing stop but after two seconds, a pink-blue flashing appears twice and then turns off.
- Press the multi-function button to start the earbud separately or at same time. After booting, the two earbuds will be placed close to each other. And the earbuds will paired with each other.
- Wait a moment, the left and right earbuds are paired with the "TWS connected" tone.

User Guide

Basic Specification of Earbud

Size	Earbud (Length: 25mm Width: 17.4mm Height: 26mm)
Weight	Single head: 5.9g
Battery capacity	55mAh x 2
Earbud charging time	1H
Work voltage	3.3V~4.2V
Standby time of Earbud	110H
Music time	5-6H
Call time	4-5H
Bluetooth version	Bluetooth 5.0
Pf transmission power	Class 2
Transmission range (Hz)	2.40GHz-2.48GHz
Transmission distance	>10m, up to 50m (depending on the environment)
Audio coding format	CVSD, mSBC, SBC, ACC
SNR	>95dB

Specification of Charging Case

Size	44 x 80 x 33mm
Weight	55g
Charging port	Type-C USB
Base charging (full) provide power to earbud	6 times
Charging time	1.5 H

User Guide

Safety Information

- To avoid hearing damage, please keep the volume to a moderate level. Please do not use at high volume levels as it may cause hearing damage.
- Do not use TWS600 when you are driving a car, cycling, near traffic or in any dangerous environment requires your full attention.
- Please disconnect the USB cable after charging. Leaving permanently on charge may shorten battery life.
- Please use the original charging cable of TWS600. The max input should be 5V/1.5A. If you are using an unsupported charger it may cause damage.

Please note: If using TWS600 to watch videos or for gaming, the audio will be slightly delayed. This is due to the latency of Bluetooth transmissions.

FCC STATEMENT

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

FCC Radiation Exposure Statement:

The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without RF striction.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
--- Reorient or relocate the receiving antenna.
--- Increase the separation between the equipment and receiver.
--- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
--- Consult the dealer or an experienced radio/ TV technician for help.

HIFIMAN Limited Warranty

HIFIMAN warrants this product to be free of defects in material or workmanship for a period of one year from the date of original retail purchase. If your product is found to be defective during the warranty period, HIFIMAN will, at its sole option, either repair the product or replace the product with a new or factory reconditioned or substantially equivalent model. This limited warranty does not apply to any defects attributable to damage beyond the reasonable control of HIFIMAN including damage caused by abuse, misuse, misapplication or modifications performed by anyone other than HIFIMAN.

If your product is under warranty and problem appears, please contact HIFIMAN customer service or your authorized dealer. If necessary, and at our discretion, we will provide a warranty repair or replacement of your product.

Caution: do not disassemble or modify the product in any way. Tampering with or modifying your HIFIMAN product will void its warranty.

This Limited Warranty does not apply to :
1. Defective or discolored parts if the damages are caused by fluids, dirt, missing keys, broken plastic parts or improper use.
2. Damage caused by misuse with another product.
3. Use of the product for other than its normal intended use, including, with out limitation, failure to use the product in accordance with the supplied "Owner's Guide"

For any further information or questions, please contact your authorized HIFIMAN dealer, or email us directly at customerservice@HIFIMAN.com.

facebook.com/hifimanelectronics
twitter.com/hifimanofficial
www.hifiman.com

