

4折页 正反两面 145*210mm

Quick Guide




SP320

- Product Listing
- Bluetooth Connection
- Printer Connection
- Driver Installation
- Paper Roll Loading
- Settings

1. Package List



Before using the product, make sure all parts are present. If any part is missing or damaged, please contact our after-sales support team.

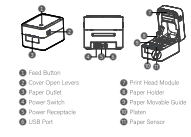

2. Bluetooth Connection

Step 1: Download the Hine Label App on your mobile device.



Scan the code to download the Hine Label application.

Step 2: Launch the application and click the upper right-hand corner to search for your printer. (BT Name: SP320_***, ** means the last four digits of the MAC address)



Note: Make sure your printer is turned on.

Get started with printing by using either the App or your PC.

3. Printer Connection

Step 1: Make sure the printer's power switch is in the "ON" position.



Step 2: Connect the power cord to the printer.



Step 3: Connect the other end of the power cord to the power cable.



Step 4: Connect the printer to the computer with the USB cable and switch the power button to the "ON" position. The blue light will light up.



4. Driver Installation

Make sure your printer is ON, and the USB cable is connected to your computer.

Warning: Under different operating systems, the process of installation has slight differences. Please operate it according to the tips.

Step 1: Visit the USB Flash Drive

Step 2: Find the driver you need

Step 3: Download the driver and follow the prompts to install it.

Scan for Installation Video



For Windows





For Mac



4. Driver Installation

Make sure your printer is ON, and the USB cable is connected to your computer.

Warning: Under different operating systems, the process of installation has slight differences. Please operate it according to the tips.

Step 1: Visit the USB Flash Drive

Step 2: Find the driver you need

Step 3: Download the driver and follow the prompts to install it.

Scan for Installation Video



For Windows





For Mac



5. Paper Roll Loading

Step 1: Push the cover open switches on the both sides with both hands to lift the top cover inward.



Note: After opening the cover, please push back a bit, after hearing the click sound, the top cover can be fixed.

Step 2: Take out the label holder.



Step 3: Assemble the label up to the label holder with the appropriate size as shown in the above figure.



Step 4: Assemble the label holder to the printer.



6. Settings


For Windows:



For Mac:




Setup the SP320 Printing Preferences:

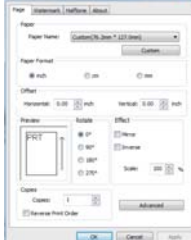

For Mac



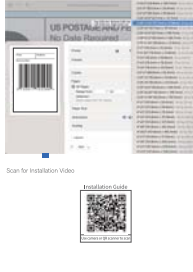

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's warranty to operate the equipment.

The equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference to residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF Exposure Statement:

The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The equipment should be installed and operated with minimum distance between 20cm the radiator your body.