 


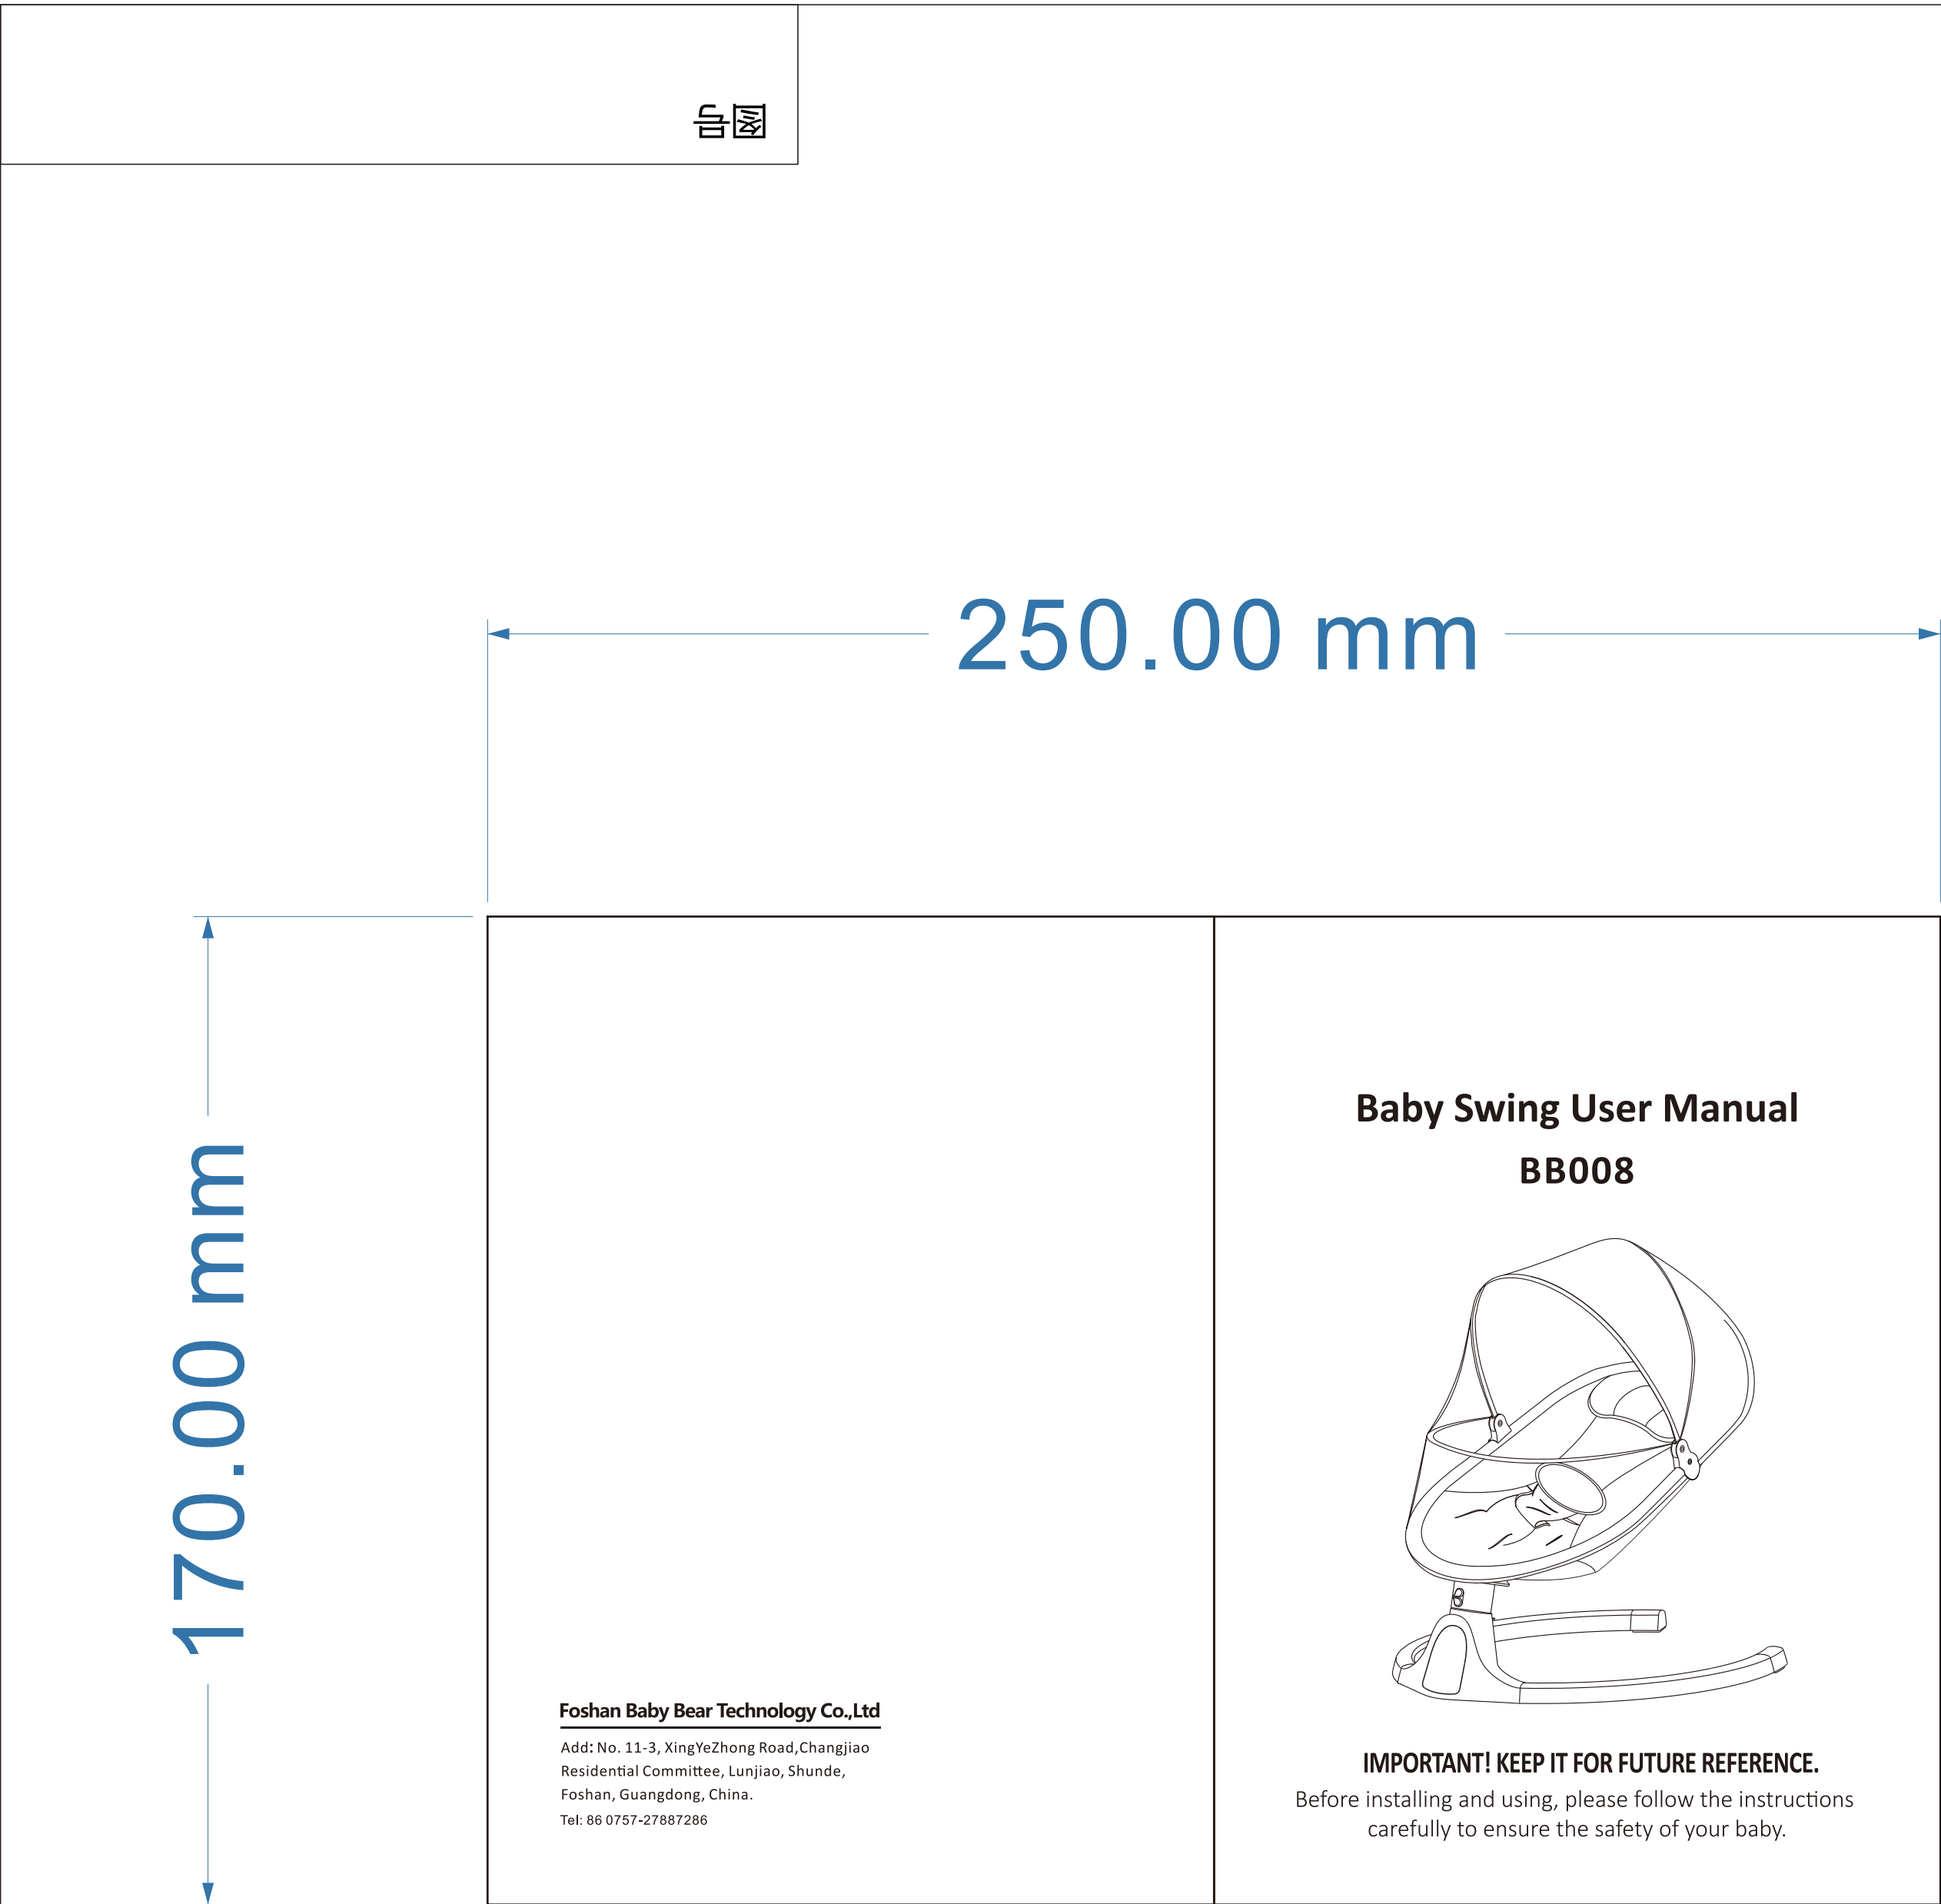


Product Contents	
Product Introduction	2
Product Specification	2
Product Features	2
Parts Instruction	3
Installation	4
For Base Bracket	4
For Pillow and Seat Cover	4
For Canopy With Toys	5
Safety Belt Instruction	5
User Instruction	6
Button Description	6
Motion Lock	6
Remote Control	7
Power Supply	7
WARNING	7
WARNING	8
Clean & Maintenance	9
Clean	9
Maintenance	9
Troubleshooting	9
After-sales Service	10

Installation

For Base Bracket

Assembling: Put the frame in the base with "O" shape components aligned.

 Disassembling: Pull out of the sheet metal and pull up the seat frame.

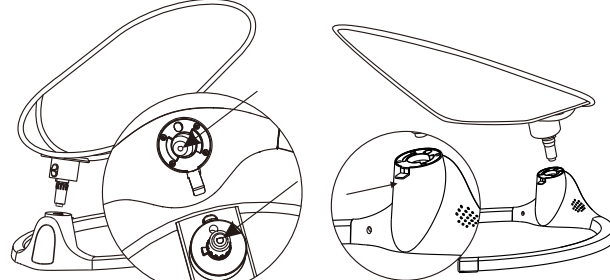


For Pillow and Seat Cover

Installation: Put the seat cover on the seat frame and fasten the snap button on the back.

Attach the pillow to the top retaining ring of the seat frame and press the Velcro of the pillow.

 Removing: Pull off the Velcro to detach the pillow and unfasten the snap button to remove the seat cover.

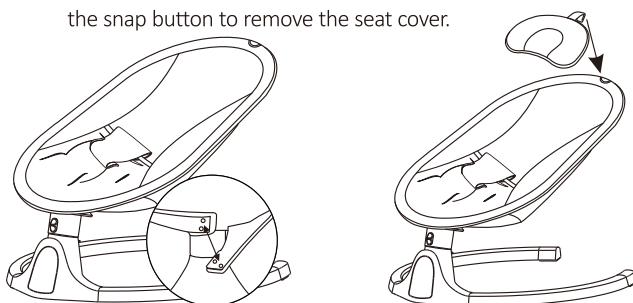

-4-

For Canopy With Toys

Installation: Attach the toys on canopy and fasten the clasps to the pipe of the seat frame, and attach mosquito net to the bottom of the seat frame.

Dismantling: Put out of the clasps to remove the canopy.

Safety Belt Instruction

Place the baby into the swing and let his legs across both sides of the crotch support restraint, then turn the crotch support cover up. Adjust the seat belt on both sides and buckle up.

Note: Be sure to use the safety belt correctly when your baby lie on the baby swing for the safety of your child. Buckle off when you take your baby out of swing.

-5-

User Instruction

Button Description

○ON/OFF: Touch this button and the indicator light is on. Touch it again to turn the swing off.

⚙️SWING: Touch the button to make swing gear settings. There are five swing gears indicated by digital light: 0-1-2-3-4-5.

⌚TIMER: Touch the button to set the time. The first touch will have the swing chain swing for 8 minutes, the second touch will have it swing for 15 minutes, and the third will have it swing for 30 minutes.

🎵MUSIC: Touch the button to play the built-in music. Touch it again to turn the sound off.
 * Turn on the bluetooth on smart phone and connect with "BT_BABY".
 The swing beeps, and then bluetooth is now connected well.
 Then the music from cellphone plays.
 * Music priority: Bluetooth>Built-in music

▲VOLUME + : Touch the button to increase the volume gradually.

▼VOLUME - : Touch the button to decrease the volume gradually.

Motion Lock

Push the motion lock down to lock the seat frame and stop movement.

Pull the motion lock up to unlock the seat frame and the baby swing will swing again.

-6-

图号

						佛山市熊宝宝科技 有限公司								产品机型		BB008			
														名称		英文说明书			
														材料		80g 双胶纸			
														图号					
标记	处数	更改文件号		签 字		日期						阶段标记		版本号		重 量		比 例	
设 计				标准化				S		A		B		A1				1:1	
校 对				批 准															
审 核																			
工 艺				日 期				共		张				第		张			