

The diagram illustrates the components of the Clear Case. It includes a top view of the closed case with a 'Touch screen' label pointing to the front cover. A side view shows the 'LED indicators/Multi Function Button (MFB) button' and the 'TYPE-C plug'. An open view of the case shows the 'Touch control area', 'LED indicators', and 'Charging case reset button'.

The diagram illustrates the components of the hearing aid system. On the left is an open charging case containing two hearing aid components, each labeled 'L' and 'R' for left and right ears. On the right is a profile view of a person's head showing the behind-the-ear unit worn on the ear.

When use for the first time, open the charging case tap and hold the reset button for 2 seconds to power on the charging case. The earbud indicators will flash red and white alternately, and the earbuds will enter automatic pairing mode.	Correct fitting position
---	--------------------------

Slide the earhook hinge and slide the earhook behind your ear until it rests gently on the top of your ears. If you feel uncomfortable or unstable, stretch the hinge appropriately to find the position that works best for you.

This section promotes the Cleer+ mobile application. It features the heading "Cleer+ App" in a large, bold, black font. Below the heading, a paragraph states: "Get even more control and personalization of your listening experience with the new Cleer+ app. It's free." To the left of this text is a square QR code. To the right is a search bar with a magnifying glass icon and the text "Cleer+". At the bottom, there are two dark rectangular buttons. The left button contains the Apple logo, the text "Download on the", and "App Store" in a large, bold font. The right button contains the Google Play logo, the text "GET IT ON", and "Google Play" in a large, bold font.

or

*The earbuds can only be powered on one by one

Tap x 2 + Hold (2s)

Dolby Atmos

This function is deactivated by default. You can quickly activate it according to your needs in the following ways:

A

Operate on the home page of the Cleer+ App

B

Operate on the Dolby page of the charging case touch screen



Dolby Head Tracking

When using the earbuds, statements to control the

- Previous song/Next song
- Play music/Pause music
- Volume up/Volume down
- Pick up/Hang up
- Take a photo

activate the function

C

and hold the touch
either earbud for
more than 2 seconds



play the following

• You can customize the touch on Clear+
[L] / [R]

	Call: Pick up
Nod x2	
	Call: Hang up/Reject
Shake head x2	
	Music: Previous track
Turn head to the left	

	Tap x 1	Music: Play/Pause
	Tap x 2	Music: Next track Call: Pick up/hang up call
	Tap x 3	Music: Previous track

Right earbud

- Tap x 1 + Hold Volume up continuing

Left earbud

- Tap x 1 + Hold Volume down continuing

The diagram shows the Clear headset with a bracket pointing to the LED status indicators. The indicators and their meanings are:

- 5 white circles: not connected to a device
- 1 white circle: connected to a device
- 2 red circles: Pairing
- 3 red circles: Battery below 10%
- Red bar: Charging
- LED OFF: Fully charged

Restore

3. Charge the case to a power source or use the charging case on wireless charging pad.

4. Charge of earbuds will offer 1.5 hours of use for up to 10 hours of total playtime with fully charged buds. With additional 40 hours with charging case.

When an earbud is lost, put the replacement earbud and the old earbud into the charging slide to the left or right on the operation interface to click [Auxiliary] → [Earbuds Sync] to complete pairing.

Restore factory setting

Using Cleert+ App, click [Settings] → [Factory Reset]

Restore factory settings for charging case

Put both earbuds back into the charging case. Close the charging case, slide to left or right to the operation interface to find [Reset Charging Case] , and tap Restore Factory Settings to complete operation.



1. Plug the Cleo Type-C socket into the smartphone.
2. Long press the LED of the Type-C socket between the smartphone and the laptop for pairing.
3. Put ARC 3 in the smartphone.

your mobile service provider for more information.

The diagram shows a USB dongle connected to a system. A bracket indicates two possible states or modes:

- Default**: LL mode, white
- Double tap**: HD mode, red

* The dongle will store the last mode.

OWN THE MOMENT

Find this user manual on www.cleeraudio.com

Follow us on social media

 @CleerSound

 @CleerAudio

Restore factory setting for Cleer Dongle	
Long press the MFB button of the dongle for 10 seconds, and the LED of the dongle turns off and then starts flashing white untill alternately between red and white. The dongle is now restored to its factory setting, and the pairing history is cleared up.	

Specifications (Dongle)	
Audio CODEC support:	aptX™ Adaptive, aptX™ HD, SBC
Frequency range:	2402-2480MHz
Support:	Bluetooth 5.4, A2DP v1.3.2, AVRCP v1.6.2, HFP v1.9
Input:	5V/100mA
Maximum power of RF:	8dBm
Weight:	2.2g

Specifications (ARC 3)	
Driver:	16.2mm neodymium dynamic driver
Audio CODEC support:	aptX™ Lossless, aptX™ Adaptive, LDAC, AAC, SBC
Frequency response range:	20 - 20,000Hz
Connections:	USB-C cable for charging, Charging current 5V/2A
UVC:	UVC 270±10nm
Battery charging (earbuds) :	A 5-minute charge will give 1.5 hour of playtime; less than 2.5 hours for a full charge (when charging via USB-C cable). Charging case is fully charged by wireless charging in 4 hours


Playback time:	Up to 10 hours*, in total 40 hours with charging case
Support:	Bluetooth 5.4, A2DP v1.3.2, AVRCP v1.6.2, HFP v1.9
Weight:	12g (per earbud), 130g (earbuds and case)

*Data comes from Cleer Lab. The playtime is tested by AAC-encoded audio at 50% volume on Apple mobile device. Specific battery life will vary depending on the volume, connected device and usage habits. Please refer to your mobile device when you use them.

** For Huawei EMUI system/VIVO/OPPO phones, find Developer Options in Settings, and then find Bluetooth Absolute Volume (the function is deactivated by default). Bluetooth earbuds will be synchronized with the phone volume after the function is activated.

***Generally, for other Android phones, it is most likely also to find Absolute Volume function in Developer Options.

- Tips**
- How to set up your iPhone to answer calls with Bluetooth earbuds:
[Settings] → [Accessibility Functions] → [Touch] → [Call Audio Routing] → [Bluetooth Headsets]
 - Volume sync setting
 - iPhone and earbuds volume are automatically synchronized, namely, the volume displayed on iPhone is the volume of the whole system of the earbuds.
 - Android phones (not all) volume is not synchronized with earbuds volume, so users need to set up the volume synchronization on their Android phones. Ways of setting are different based on phone brands, you need to consult with phone manufacturers to confirm.

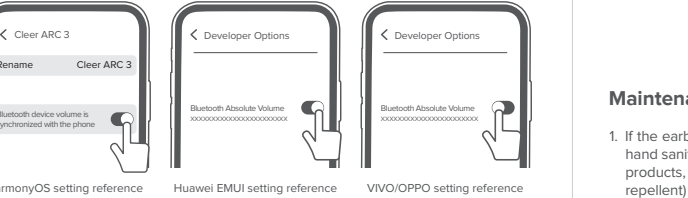

* HarmonyOS setting reference: Settings → Bluetooth → Setting Icon of Earbuds → Bluetooth device volume is synchronized with the phone.

** For Huawei EMUI system/VIVO/OPPO phones, find Developer Options in Settings, and then find Bluetooth Absolute Volume (the function is deactivated by default). Bluetooth earbuds will be synchronized with the phone volume after the function is activated.

***Generally, for other Android phones, it is most likely also to find Absolute Volume function in Developer Options.

- Quick Troubleshooting**
- Earbuds don't charge in the charging case: first make sure the charging case is charged. Then check the charging contacts of the earbuds and the charging case respectively, and use soft cloth to clean up the dirt on the contacts and then try again.
 - Touch screen of charging case does not respond: open the charging case, tap and hold the charging case reset button for 8 seconds and the charging case will be reset.
 - Earbuds are hot when charging: when charging earbuds in charging case, especially the earbuds with 0% battery level, it is normal to be slightly hot for the earbuds during fast charging. After taking the earbuds out of the charging case, the temperature of earbuds will return to normal. But when the earbuds become extremely hot, take them out of the charging case immediately and contact the after-sales service for further processing.

- Maintenance**
- If the earbuds are exposed to dust, sweat, ink, oil, pollen, or chemicals (such as soap, hand sanitizer, shampoo, shower gel, laundry detergent, detergent, cosmetics, anti-UV products, antibacterial spray, high-concentration alcohol, insecticide, and mosquito repellent) and other substances that may causedamage to the earbuds, please wet a piece of cloth with less water and wipe the earbuds. Then, wipe them with a piece of dry, hairless soft cloth and dry them in the air.
 - Do not use any chemicals or organic solvents (such as soapy water, hand sanitizer or other acid-base solvents) to clean the earbuds, or the residual may cause skin irritation.
 - Please regularly use a soft, hairless cloth to wipe the earbuds. Do not use paper towels or cloth containing wood fibers. Do not use dirty or abrasive cloth.
 - When you put the earbuds back into the charging case for charging, please make sure that the earbuds are dry and clean.
 - When charging of the earbuds fails, please check whether the charging contact point of the charging case and earbuds are dirty. If yes, please wipe them clean with a piece of cloth or cotton, then try again.

damage caused by service performed by anyone who is not a representative of Cleer Limited or a Cleer Limited authorized service provider; (g) Products whose seals are tampered; (h) Products whose serial numbers have been removed or defaced from such Product; (i) modifications, alterations or repairs to the Product made by a party other than Cleer Limited or a party authorized by Cleer Limited; (j) any failure by End User or a third party to comply with environmental and storage requirements for the Product specified by Cleer Limited, including, without limitation, temperature or humidity ranges; or (k) use of the Product in combination with any third-party devices or products that have not been provided or recommended by Cleer Limited.

LIMITATION ON DAMAGES: CLEER LIMITED SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT.

Labor: For a period of (1) year from the original date of purchase of the product ("Labor Warranty"), Cleer Limited will, at its option, repair or replace with new or refurbished product, product determined to be defective. If Cleer Limited elects to replace the product after this Labor Warranty has expired but while the parts warranty is still in effect, it will do so for the applicable labor charge.

Parts: For a period of (1) year from the original date of purchase of the product ("Parts Warranty"), Cleer Limited will supply new or refurbished replacement parts in exchange for parts determined to be defective.

This Limited Warranty covers only the hardware components packaged with the Product. It does not cover technical assistance for hardware or software usage and it does not cover any software products whether or not contained in the Product; any such software is provided "AS IS" unless expressly provided for in any enclosed software Limited Warranty. Please refer to the End User License Agreements included with the Product for your rights and obligations with respect to the software.

Instructions: To obtain warranty service, you must deliver the Product, freight prepaid, in either its original packaging or packaging affording an equal degree of protection to the original Cleer Limited retailer (point of purchase) or Cleer Limited Customer Service. It is your responsibility to backup any data, software or other materials you may have stored or preserved on your unit. It is unlikely that such data, software or other materials will be lost or reformatted during service and Cleer Limited will not be responsible for any such damage or loss. A dated purchase receipt from Cleer Limited or a Cleer Limited retailer is required. For specific instructions on how to obtain warranty service for your product.

Visit the Cleer Limited website: www.cleeraudio.com

Following warranty service your original Product or a replacement Product will be returned to you as your Product was configured when originally purchased.

Repair / Replacement Warranty: This Limited Warranty shall apply to any repair, replacement part or replacement product for the remainder of the original Limited Warranty period or for (90) days, whichever is longer. Any parts or product replaced under this Limited Warranty will become property of Cleer Limited. This Limited Warranty shall not apply to: (a) consumable parts, such as batteries that are designed to diminish over time, unless failure has occurred due to a defect in materials or workmanship; (b) cosmetic damage, including but not limited to scratches, dents and broken plastic on ports; (c) defects caused by normal wear and tear or otherwise due to the normal aging of the device; (d) damage caused by accident, negligence, abuse, misuse, fire, earthquakes, acts of God or damage resulting from liquid outside of the approved levels; (e) damage caused by operating the device outside Cleer Limited published guidelines; (f)

NOTICE

Recycling



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused. When you see the crossed out wheel bin symbol attached to a product, it means the product is covered by the European Directive 2002/96 EC:

Never dispose of your product with other household waste. Please inform yourself about the local rules on the separate collection of electrical and electronic products. The correct disposal of your old product helps prevent potentially negative consequences on the environment and human health. Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed of with normal household waste.

The device complies with RF specifications when the device used at 0mm from your body. Hereby, Cleer Limited. Declares that the product compliance with essential requirements and other relevant provisions of Directive 2014/53/EU.

Compliance with FCC rules

- This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

- (2) This device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Statement:
This equipment complies with FCC radiation exposure requirement.
The device can be used in portable exposure condition without RF restriction.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:
(1) this device may not cause interference, and
(2) this device must accept any interference, including interference that may cause undesired operation of the device."

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :
(1) l'appareil nedit pas produire de brouillage, et
(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectriquesubi, même si le brouillage est susceptible d'en compromettre le fonctionnement."

L'appareil a été évalué pour répondre aux exigences générales d'exposition aux RF. L'appareil peut être utilisé sans restriction dans des conditions d'exposition portables.

RF warning statement:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

 
Register your product and get support at www.cleeraudio.com

©2024 Cleer Limited. All rights reserved.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Cleer Limited is under license. Other trademarks and trade names are those of their respective owners.

Qualcomm aptX is a product of Qualcomm Technologies International, Ltd. Qualcomm is a trademark of Qualcomm Incorporated, registered in the United States and other countries, used with permission. aptX is a trademark of Qualcomm Technologies International, Ltd., registered in the United States and other countries, used with permission.

Made in China.





ARC 3 Gaming
AI Open Ear True Wireless Headphone

User Manual