




cloud.friggatech.com


Smart Active Data Logger




Appearance Description

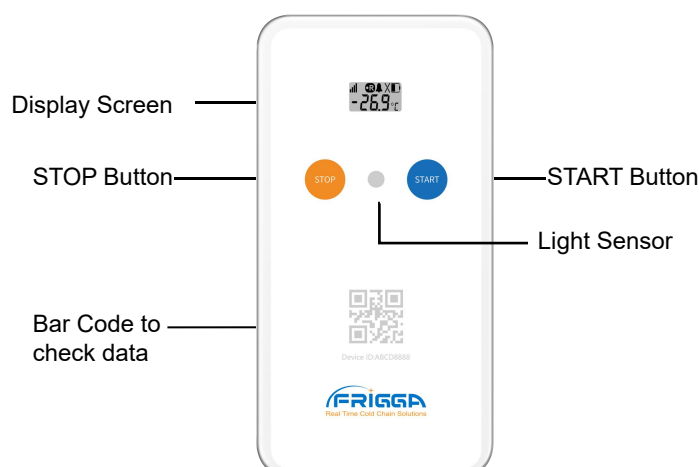

Appearance Description

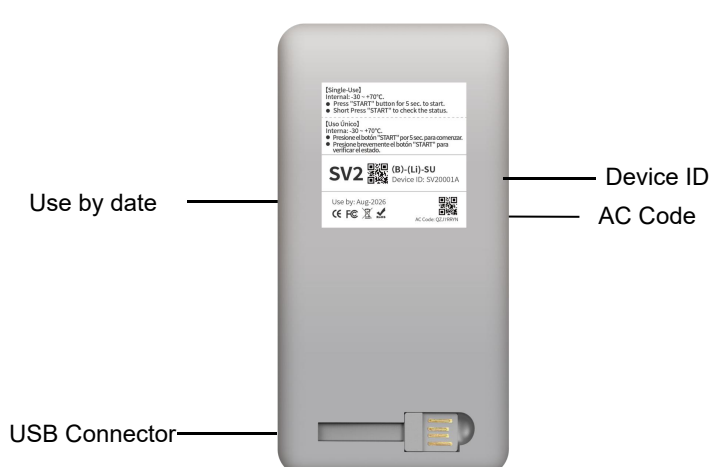


Display Description

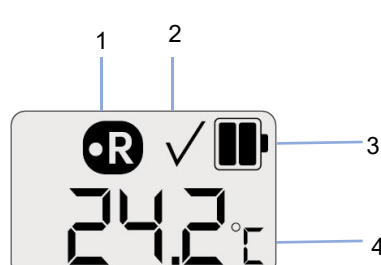

1. Status Icon
2. Alarm Status
3. Battery Icon
4. Temperature

1. Check New Logger

Short press the **"STOP"** button, and the screen will display the word "888", indicating that the logger is currently in silent state (new logger, not used). Please confirm battery power, if it is too low, charge the logger first.

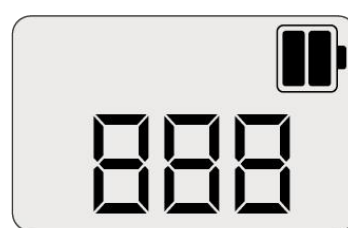

2. Turn On The Logger

Long press the **"START"** button for more than 5 seconds, the logger will be activated and show "STR" on the screen.



3. Start Delay

After activation, the "⌚" icon will be displayed on the screen, meaning the logger enters into start delay phase.

Default delay start is 30 minutes.




4. Recording Information

After entering the recording state, the "⌚" icon will no longer be displayed, and the device will start recording data according to pre-set parameters.



5. Alarm Information

Shipment status can be checked on the screen. If alarms triggered during recording, "✗" icon will be displayed on the screen. If "✓" shows on the screen, it means no alarm occurs.

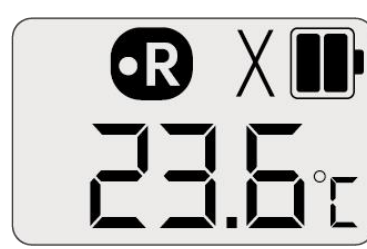

6. Upload Data To Platform

Under recording mode, short press **"START"** button to upload all the recorded data to Frigga platform.

The signal icon "📶" will flash on the screen when data being transferred. And the signal icon will disappear after all the data has been successfully uploaded to the platform.



7. Turn Off The Logger

- Long press **"STOP"** button for 5 seconds to stop the device.
- Remote stop by pressing **"End journey"** on Frigga cloud platform or mobile APP.
- Stop by connecting the USB port to PC.



8. Get Report

- Generate data report on platform or through mobile APP. Enter device ID to export data report, both PDF and CSV version supported.
- Connect to the computer and get report via the USB port.
- Automatic report can be sent to designated recipient upon request.



9. Charging

Under stop & silent mode, the device can be charged by connecting the USB port to PC, normally it takes 3 hours to be fully charged.

Note: SV2 is SINGLE USE device, don't charge it after activation, or the device will be stopped immediately.



4. Usage scenarios

Put the device in the container with goods together.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and

on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance of 20cm from your body.