


4G Mobile WiFi T9NA

User Guide



Product Appearance and Interface Description

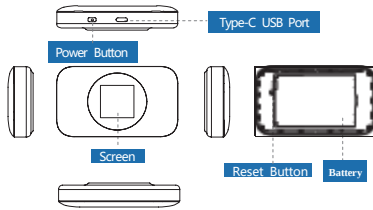

Power Button

Long press for 3 seconds to turn on or off the device.

Type-C USB Port

Charge your device by connecting the charging plug via the Type-C USB cable.

Reset Button

Press and hold for 3 seconds to reset.

Screen

The following information are displayed on screen: 3G/4G network signal strength, usage of data plan, WiFi SSID and password etc.

When not operating the device, the screen will go off automatically after 15 seconds, short press the power button to light up.

Product Specification

Dimensions		60mm×98mm×20mm
Battery Capacity		3000mAh
Normal Working Hours		About 9 h
Power input		USB Type-C DC 5V/1.5A
Network and Bands	T9JP	FDD-LTE:B1/B3/B5/B8/B18/B19/B26
		TDD-LTE:B38/B40/B41(120M)
		WCDMA/HSPA:B1/B8
	T9EA	FDD-LTE:B1/B3/B5/B7/B8/B20/B28
		TDD-LTE:B34/B38/B39/B40/B41(120M)
		WCDMA/HSPA:B1/B8
	T9NA	FDD-LTE:B2/B4/B5/B7/B12/B13/B17/B25/B26/B66
		TDD-LTE: B40/B41(120M)
		WCDMA/HSPA:NA
Peak Rate		Cat.4, DL 150Mbps, UL 50Mbps
WiFi		2.4G 802.11 b/g/n/ax
WiFi Users		Max 16 concurrent connected users

Notes:

- The charging environment temperature is between 0°C-45°C. After one year of normal use of charging and discharging, the battery capacity will be reduced by about 20%.
- 2 months. Please do not over discharge or over charge the battery. When the device is not used for a long time, suggest you charge the device.
- Device heating are normal when working, it can be used normally. The device can be placed in a cool and ventilated place to do corresponding cooling treatment.

Please do not charge the device with the charger plugged in continuously, and unplug the charger when charging is completed or when the device has not been used for a long time, so as to avoid damage to the battery caused by prolonged and continuous.

Steps for Using the Device

Step 1: Power on

- Press and hold the power button to start the device.
- (Optional) You can scan the QR code on the device screen with your phone to enter the store.

Step 2: Purchase data package(optional)

- Scan the QR code from again in online shop to perform binding
- Please restart your device after purchasing a data plan for the new plan to take effect.

Note: If you have purchased a data package at the same time as the device, you can only perform step 1.1 to turn on the device and perform step 3 to connect WiFi, you can access the internet then.

Step 3: Connect to WiFi hotspot

- Shortly press the power button to switch to display the "SSID, PWD" information page of WiFi. Set the SSID and password information for WiFi connection in the settings of your phone or computer, and connect to the WiFi.
- If the phone supports scanning QR codes to connect to WiFi, you can short press the power button to switch, and the screen will display a "Set WiFi" QR code. Use the phone's camera to scan the QR code to establish a WiFi connection.

Step 4: Check usage of data package

When checking the data usage during use, please briefly press the power button to switch and view the data usage information on the display

Step 5: Modify WiFi SSID , Password (optional)

If you need to modify the SSID, Password of WiFi, your mobile phone or computer need to access the device's WiFi hotspot, then login 192.168.100.1 with web browser. The default login user name: admin, default login password: admin.

Quick Troubleshooting

1. WiFi device can't be powered on / off

- Please check that a properly working charging cable and charging plug are used and charge for a period of time before trying to boot the device.
- Please confirm whether the power button is loose or obviously damaged, if there are abnormalities, please return for testing and repairing.
- After confirming the above is to use undamaged charging cable and charging plug, the device can't be charged, the device may be in water or hardware abnormalities, please return for testing and repairing.

2. The WiFi terminal cannot access internet

Turn the device off and on again, when the 4G signal appears on the upper left corner of the screen, then reconnect to the WiFi to use the network.

Check the network signal strength indicator in the upper left corner of the device screen, and when it indicates a weak network signal, please

3. WiFi network detected but unable to connect to the network

Please check if the WiFi SSID, Password are set correctly.

4. Device's WiFi cannot be detected

- Please turn off your phone's smart WiFi connection, or suggest you try searching with another phone.
- If WiFi signal still cannot be detected, please contact customer service.

5. Network is connected but cannot access the internet

Please contact with customer service

Safety Precautions

- Do not disassemble the equipment and accessories without authorization.
- Do not subject the device and its accessories to strong shocks or vibrations that could damage or cause combustion or explosion.
- Do not use strong chemicals, cleaning agents and strong detergents to clean equipment and accessories.
- To clean the device, please turn off and disconnect the device from the charging cable first.
- When charging is complete or when not charging, disconnect from the device and unplug the charger from the power outlet.
- Do not place the device around heating equipment such as microwave ovens, ovens, etc.
- If the battery becomes unusually hot during use, charging or storage, stop using it.
- Do not continue to use the charger if the power cord is damaged.
- Do not throw the device into fire.
- Do not replace the device parts by yourself.
- Please comply with local laws regarding the disposal of electronic device, batteries and accessories, and support recycling initiatives.
- Please do not dispose of this equipment, batteries and accessories

Disclaimer:

Please be aware that if you do not use the device in accordance with the User Guide, we assume no responsibility.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Information:

FCC RF Exposure requirements: The highest SAR value reported under this standard during product certification for use next to the Body-worn/Hotspot with the minimum separation distance of 5mm. This transmitter must not be collocated or operating in conjunction with any other antenna or transmitter.