

# NEXZDAS Series

Quick Start Guide



HUMZOR

Auto Master, Master Auto

### Safety Is Always the First Priority!

- For your safety, the safety of others, and to avoid any damage to the product and your vehicle, CAREFULLY READ AND MAKE SURE YOU FULLY UNDERSTAND ALL THE SAFETY INSTRUCTIONS AND MESSAGES ON THIS MANUAL BEFORE OPERATING.  
You must also read the vehicle's service manual, and observe the stated precautions or instructions before and during any test or service procedure.
- Keep yourself, your clothing and other objects away from moving or hot engine parts and avoid contact with electrical connections.
- ONLY OPERATE THE VEHICLE IN A WELL-VENTILATED AREA, as the vehicle produces carbon monoxide, a toxic and poisonous gas, and particulate matter when the engine is running.
- ALWAYS WEAR APPROVED SAFETY GOGGLES to prevent damage from sharp objects and caustic liquids.
- DO NOT SMOKE OR HAVE ANY FLAMES NEAR THE VEHICLE when testing. The fuel and battery vapors are highly flammable.
- DO NOT ATTEMPT TO INTERACT WITH THE PRODUCT WHILE DRIVING. Any distraction may cause an accident.
- TURN THE IGNITION OFF BEFORE CONNECTING OR DISCONNECTING THE PRODUCT FROM THE DATA LINK CONNECTOR (DLC) to prevent causing damage to the product or vehicle's electronic components.

## Software Download

### Android Download:

#### Method 1



Please use your browser to scan the QR code, then click on the download link and install the application.

Note: If your browser does not have a built-in scanning feature, please follow one of the following methods:

#### Method 2

Open the official website of HUMZOR:  
**[www.humzor.com](http://www.humzor.com)**

Click "User Center - Download Center" in the upper navigation bar to enter the download page, find the APP corresponding to your product model and click "Download" button to download and install.

### **iOS Download:**

 
WeChat scan QR code or APP  
Store search NexzDAS to down-  
load and install APP



### **APP Guide**

#### **1. Software Activation**

At first, please keep network working, run  
NEXZDAS series APP. If you are a new customer,  
please register at first Input your E-mal and set  
your password to complete binding

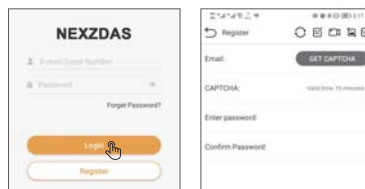


Click "Add a new product" to input the serial number (S/N) and activation code[can be obtained from the envelope in the box ]




## 2. Bluetooth setting

 Aher enter the HOME page , click the Bluetooth icon in the top right comner to connect Bluetooth

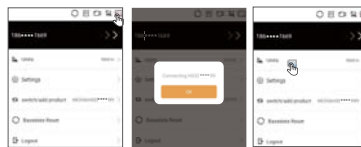

### 3. Software Downloads

 
After activation completes, click Download Center module and enter App store to

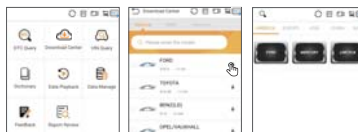

### 4. Diagnostic Feedback


The HUMZOR allows you to instantly send diagnostic feedback with logs of diagnostic data automatically attached while you are encountering a software problem with the diagnostics operations. To send diagnostic feedback:

 1. Tap the  icon located at the top right corner of any screen in Diagnostics module.
2. Select the type of problem.
3. Write a description of the problem.
4. Tap Submit to send the feedback.

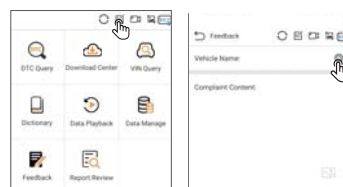



## 5.Product management

 Click - Switch/Add Product - "Add New Product" module Input Product Selection Interface You can switch, add and delete products (you can delete products by making the left slide)

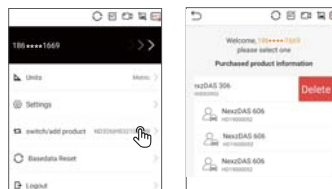

## OBD Interface

  Vehicle OBD connector locates in different parts, see the picture as below.

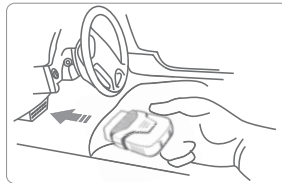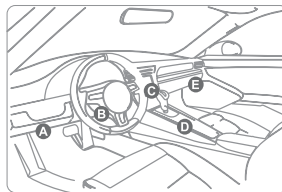

### 1. Indicators

|                                                                                     |                                |                                 |
|-------------------------------------------------------------------------------------|--------------------------------|---------------------------------|
|  | Bluetooth Connection Indicator | Solid Blue: Bluetooth connected |
|  | Power Indicator                | Solid Red: power on             |

### Specifications

|                       |                                                    |
|-----------------------|----------------------------------------------------|
| Operating System      | Android/IOS                                        |
| Processor             | ARM 32-bit Cortex                                  |
| Communications        | Bluetooth                                          |
| Input Voltage         | DC 9 ~ 12V                                         |
| Operating Temperature | -20 to 70°C (14-158°F) ,Relative Humidity:<90%     |
| Storage Temperature   | -40 to 85°C (-40 to 185°F) ,Relative Humidity:<90% |
| Dimension             | 73mm(2.8") * 47mm(1.8") * 24mm(0.9")               |
| unit weight           | net weight:0.06kg(0.132lb)                         |

### Warranty

Warranty Ordinance: Limited one years warranty for NEXZDAS

No Warranty Provided in Following Conditions:

1. Warranty service is not provided beyond the warranty period.
- 2 Product damage caused by incorrect instalation or improper operation.
- 3 Selt. modification, replacement of internal parts, and other man-made damage, etc.
- 4 Product damaged by natural disasters, accidents, infiltration of liquids, etc .

### Frequently Asked Questions

**Q What should I do if a communication error occurs?**

**A** Follow the steps below to identify the problem:  
1. Check if the ignition is ON.  
2. Check if the humzor is securely plugged into the vehicle's OBDII port.  
3. Turn the ignition off. Then, turn it on after 10 seconds and continue the operation.  
4. Check if the vehicle's control module is defective

**Q Why do I need to download the diagnostic software after installing the humzor app?**

**A** Since there are various vehicle manufacturers, different diagnostic software is required for different brands.

**Q Do I need to update the firmware before using it for the first time?**

**A** Yes. Firmware will automatically update to the latest version once the humzor is connected with your phone via Bluetooth. You can also tap Me > Firmware Update to update the firmware manually

**Q Can multiple devices be bound to one humzor app account?**

**A** Yes.



#### Warning Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.