



Photo Sticker Printer and Cutter User Manual · 01

Read this manual carefully before use, and retain it for future reference.

Photo Sticker Printer and Cutter

Name: Photo Sticker Printer and Cutter

Model: RCL1005

Input: 24V $\pm$ 1.5A

Item Dimensions: 258.2 $\times$ 195.7 $\times$ 114.5mm

Net Weight: Approx. 3.15KG

Operating Temperature: 10°C to 35°C

Wireless Connection: Wi-Fi 2.4G / 5G

Manufactured by: Shenzhen Renging Excellent Technology Co., Ltd

Address: Room 501, 5/F, Building B2, Creative

 
City Phase 2, Xiandong Road, Xili Street, Xili

Community, Nanshan District, Shenzhen, China


For further information, please go to

www.rockspacediy.com


Product Overview

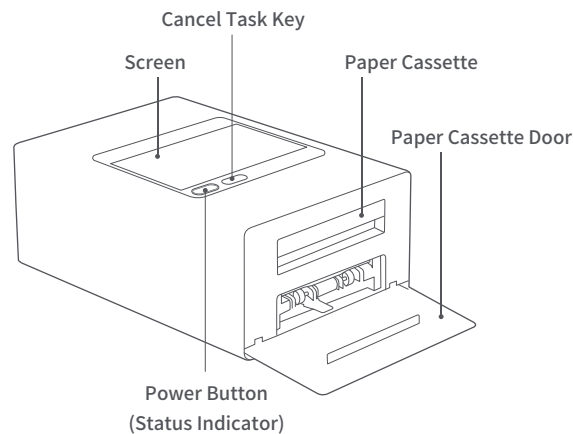

 USB Type-C Port (★ USB Type-C port is for reserved use, do not connect it to external devices.)

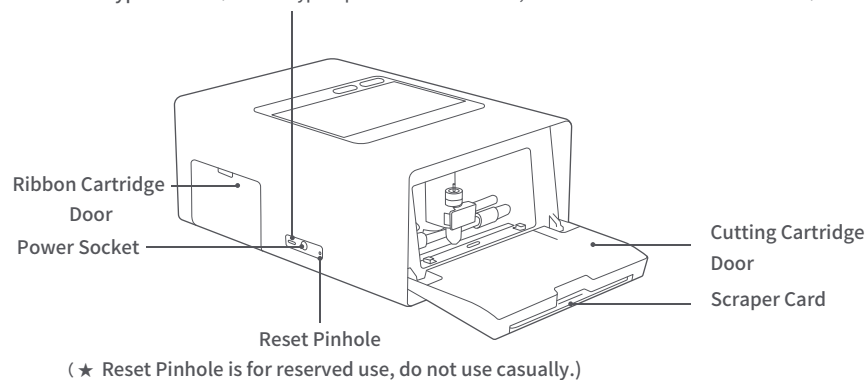


Accessory List

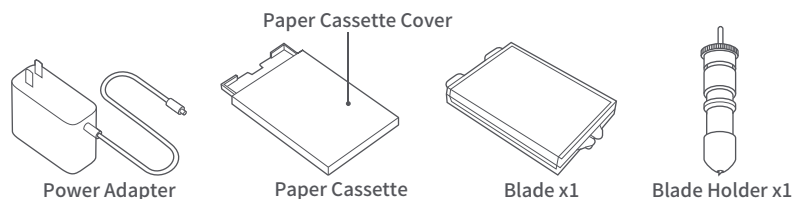 


⚠ (Pre-installed in the machine Blade is sharp. Use with extreme caution. Adult use only.)

Remove package materials

 
Before use, please remove the blue protective tape, open the cutting cartridge door, take out the blade holder limiter, and then close the cutting cartridge door securely.

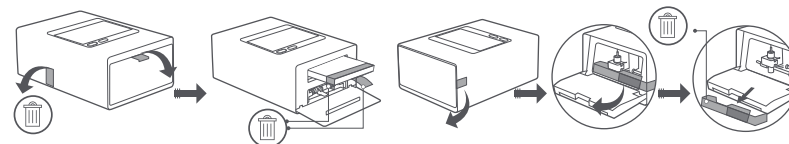


Install Ribbon Cartridge

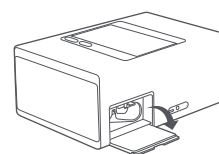 

 (1) Open the ribbon cartridge door.

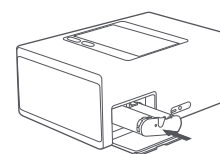


 (2) Insert new ribbon cartridge until the lock is in place.

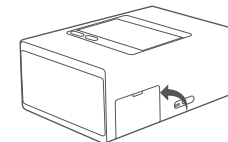


(3) Close the ribbon cartridge door.

 
Load 4×7" Sticker Paper

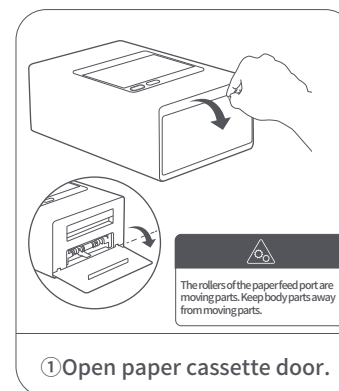

① Open paper cassette door.

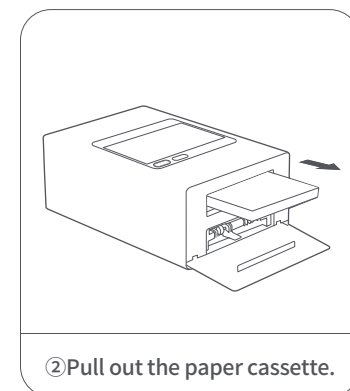 


② Pull out the paper cassette.

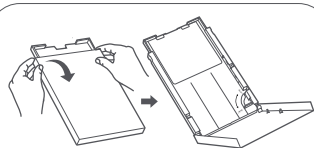 

③ Hold the two sides of the paper cassette cover, lift the cover up.


Note:

 1. Only load one sheet of sticker paper at a time.
2. Do not touch the surface of photo or sticker paper to ensure print quality.

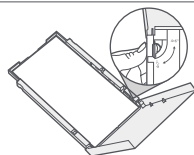


④ Keep holding the width adjuster and load sticker paper in the cassette with the glossy side face-up.

 Note: Turn the width adjuster to 4x7" mark as illustrated below to ensure the 4x7" paper fit into the cassette.

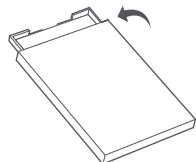


⑤ Close the paper cassette cover.

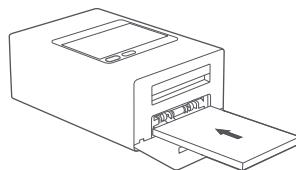 

⑥ Install Paper Cassette


Insert the paper cassette into the machine.

 Power On

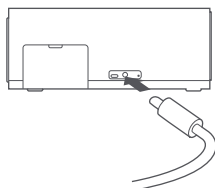

① Connect power supply

 
Plug the power jack into the power socket at the back of the machine.

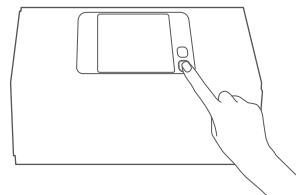

② Power on


Press the Power Button to turn on the machine.

 Usage



Working Location

 When printing, the photo paper goes back and forth for 4 times. Leave approx. 20 cm of space on both sides of the machine to allow for proper feeding, printing and cutting.



Storage

When the machine is not in use, insert the paper cassette into the cabin for space saving and easy storage.

Control Panel Operation Manual

Status Indicator Instruction

0	White	Idle
0	White Blinking	Firmware updating/running
0	Off	Power off

Instruction for Power Button

Short press the Power Button	Power On
Press and hold the Power Button for 3 seconds	Power off

Note:

 
 
 
1. During printing, printing will not be interrupted when the power button is pressed.
2. During firmware updating, upgrading will not be interrupted when the power button is pressed.
3. In the case of malfunction, press and hold the Power Button for 3 seconds to power off the machine, then restart it to initiate automatic problem resolution.

Cancel Task Key



When the machine is printing or cutting, press the [Cancel Task] button; the machine will cancel the current task and eject the corresponding paper. Cancel task


Replace Ribbon Cartridge

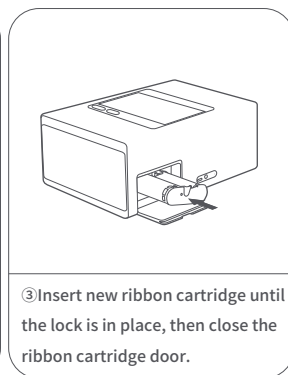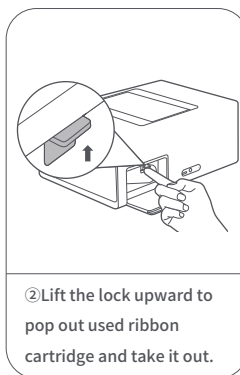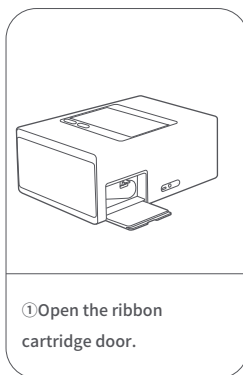

Replace Blade

① Open the cutting cartridge door;

 
② Open the blade holder clamp, and remove the blade holder;

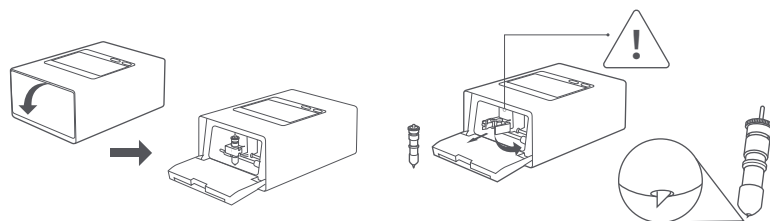


Note:

- * The blade is consumable, and its cutting quality may deteriorate after a period of use.
- * When the cutting quality is not as good as it used to be or if the blade is damaged, it is recommended to replace it with a new one.
- * Sharp blade. Use with extreme caution. Adult use only.
- * Sharp blade. Please handle with care! It is recommended to hold the cylindrical part and avoid holding the upper and lower parts of the blade.
- * The blade is sharp. When changing the blade, do not touch the tip to avoid getting cut.
- * The blade holder can move left and right. Do not touch the blade while it's moving to avoid getting pinched.

 
③ Press the protruding part on top of the blade holder to eject the blade;

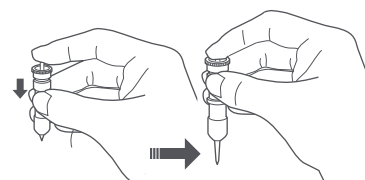

 
④ Pull out the used blade and replace with a new blade (automatic magnetic attachment);

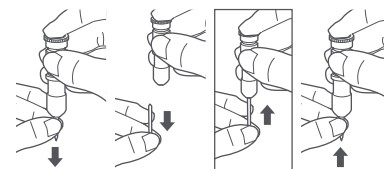

 ⑤ Reinstall the blade holder, and be sure to align it with the corresponding groove;

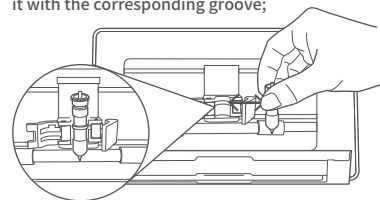


 ⑥ Securely fasten the blade holder clamp.

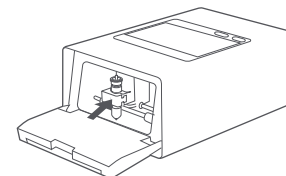

Adjust the blade tip length

 Rotate to adjust the blade tip length: 1 is the shortest, and 15 is the longest. For cutting photo paper or stickers: set to Level 1 (Level 1 is the default setting. DO NOT adjust unless absolutely necessary). For cutting front films: set to Level 5 or higher.



Scan the QR code in the [Help] Menu of the machine for detailed operation steps.

Warranty & Support

To ensure prompt and professional after-sales service, please contact your local distributor or authorized dealer

Precautions

Before installing, operating, or maintaining

Your machine, please carefully read this entire document. Always follow the included User Manual, online instructions, and other official materials. In this manual, the term 'Machine' refers to the Photo Sticker Printer and Cutter.

• **WARNING: Risk of Injury, Fire, and Electric Shock.**



• Operating the Machine in a manner not prescribed in the enclosed instructions, online instructions, and other official materials may result in damage to the Machine, property damage, injury, or even death.

• The Machine is intended to be operated by an adult only. Not intended for use by children 12 years or under. Always supervise children around the Machine.

• Use the Machine only for its intended crafting purpose. **INDOOR USE ONLY. MACHINE IS INTENDED FOR INDOOR USE IN DRY LOCATIONS ONLY.**

• **DO NOT USE IN OR NEAR WATER.**

• **DO NOT IMMERSE IN WATER OR ANY OTHER LIQUID.**

• The Machine is not intended for use by persons with reduced physical, sensory, or cognitive capabilities, or lack of experience and knowledge, unless they are supervised by a person responsible for their safety and familiar with the safe operation of the Machine.



• Keep hair, jewelry, loose clothing, fingers, other body parts, and any other items that could get caught in the moving parts away from the Machine while it is operating, as the rapid movements of the carriage and paper during operation may cause injury.

• Do not touch the sticker paper or photo paper during machine operation even if the paper stops moving.

• Do not touch the sticker paper or photo paper until the Machine ejects the sticker paper or photo paper from the Machine.

• When pasting a sticker paper, choose a smooth, flat, and clean surface. Do not expose the sticker paper to high humidity or moisture to prevent it from curling up or losing its adhesive properties.

• Machine should never be left or stored outside, in unheated or unairconditioned spaces, or in environments where the Machine can come into contact with water.

• Use only the official power adapter for use with the product.

• Do not use the original adapter for other devices to avoid damage.

• Do not plug in or unplug the product with wet hands.

• Do not damage, break, or modify the power cord.

• Do not use after immersion in water.

• The power cord should be positioned so that it will not drape over the countertop or tabletop where it can be tripped over, snagged, or pulled on unintentionally (especially by children).

• Disconnect the electrical power by unplugging the Machine before servicing or cleaning. Only clean the Machine with a soft cloth dampened with glass cleaner or water. Never use any kind of flammable liquid to clean the Machine. Do not use solvents such as acetone or nail polish remover to clean the Machine as these will permanently damage the Machine's surfaces.

• Do not touch the glossy side of photo or sticker paper to avoid leaving fingerprints and affecting printing quality.

• Do not handle paper with wet hands and keep paper free of dust.

• Do not write on paper before printing and cutting.

• Do not use unofficial ribbon and photo or sticker paper.

• Never reuse paper for printing and cutting, even if most of the paper is blank. Reusing paper may damage the machine if the paper jams or the ink sheet adheres to the paper.

• Do not load paper upside down; make sure the glossy side of photo paper is facing up. The photo and sticker paper should be laid flat in the paper cassette, and the paper cassette should be properly installed on the front of the machine.

• Do not block the left and right of the machine.

• Do not insert foreign objects or liquids into the product.

• Always unplug the Machine before replacing the blade.

• Blades are extremely sharp and should be handled with caution and extreme care.

• Prevent blade contact with hands and body to avoid injury.

• The blade is already installed. It cuts intricate shapes with ease!

• Blades and other small parts are choking hazards and should be kept and stored away from children. Adult use only.

• Do not open, modify, or otherwise tamper with the Machine.

• Do not operate if the Machine or cord is damaged.

• Place the Machine on a strong, flat, level, and stable surface. Make sure your workspace has enough space in the left and right of the Machine to allow the photo and sticker paper to move through the Machine freely.

• Do not place your fingers or other objects in the Machine while connected to electrical power, or while the Machine is powered on, or during operations.

• The optimal working temperature for the machine is 10°C~35°C (50°F~95°F), and the relative humidity is 40%-60%. Printing quality may be affected if the environmental temperature and humidity are not appropriate.

• The sticker paper storage environment: Under 30°C at lower RH 80%.

• During printing, photo and sticker paper need to go through the machine four times and will be pushed out automatically when the printing is finished. Do not pull out the photo and sticker paper forcibly to avoid damage to the machine.

• Do not touch any parts inside the product; it may cause injury.

• It is normal to have slightly different printing colors between different machines.

• It is normal to have slightly different print colors between different printouts using the same machine.

• When the machine is not in use for a long time, insert the paper cassette into the cabin to prevent dust and debris from entering the paper path. Otherwise, the printing quality of the first photo next time you print will be affected.

• When keeping unused photo and sticker paper in the machine, avoid storing it in a hot and humid environment.

• Under normal use conditions, this equipment should be kept at a separation distance of at least 20 cm between the antenna and the body of the user.

FCC Warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

* RF warning for Portable device:

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment. This device should be installed and operated with minimum distance 20cm between the radiator & your body.

Note: Illustrations of products, accessories, user interfaces, etc., in the manual are schematic and for reference only. Due to product updates and upgrades, the actual product may differ slightly from the diagrams. Please refer to the actual product.



贴纸打印切割机

使用产品前请仔细阅读本使用说明书，并请妥善保管


贴纸打印切割机

产品名称：贴纸打印切割机	产品尺寸：258.2 × 195.7 × 114.5mm
产品型号：RCL1005	产品净重：约3.15KG
输入参数：24V $\pm$ 1.5A	工作温度：10°C - 35°C
无线连接：Wi-Fi 2.4G / 5G	执行标准：GB 17625.1, GB 4943.1, GB/T 9254.1


联系方式

深圳市仁清卓越科技有限公司
深圳市南山区西丽街道西丽社区仙洞路创智云城二期B2栋5楼501室
电话:0755-83038515

 
产品介绍

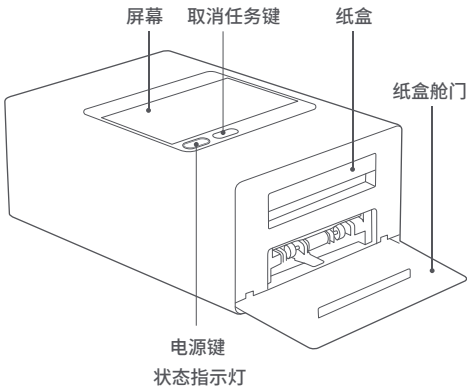

 USB Type-C插口 (★ USB Type - C 插口为预留接口, 请勿随意接入其他设备。)

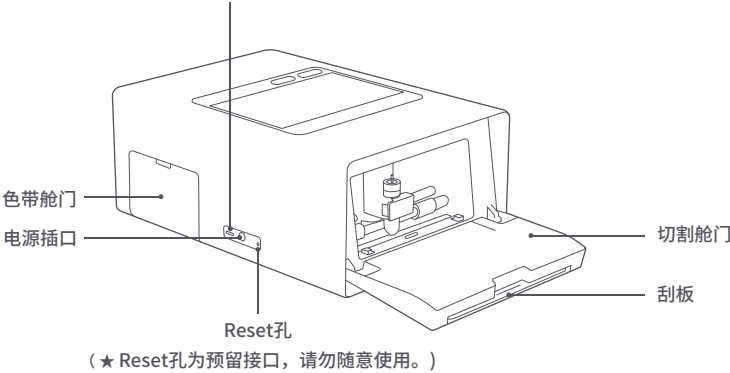


配件清单

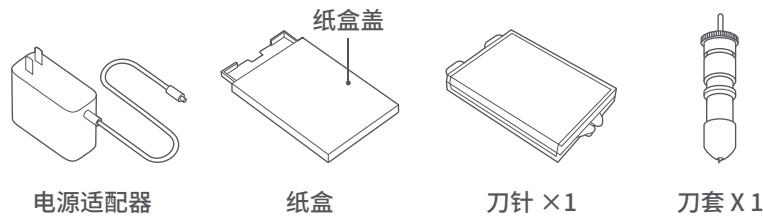 


⚠ (已预装在机器内) 刀针锋利 / 请格外小心使用 / 仅限成人使用

拆除包装材料

 使用前, 请揭下蓝色胶带, 打开切割舱门, 取出刀套限位器, 然后合上切割舱门。

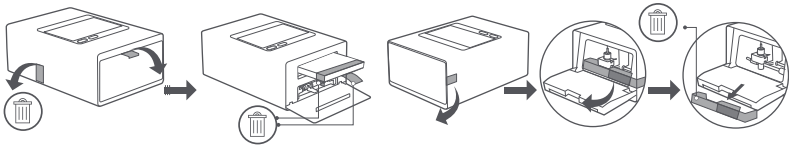



安装色带

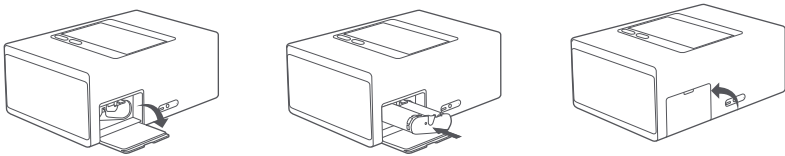 

(1) 打开色带舱门 (2) 插入新色带, 直至卡扣就位 (3) 关闭色带舱门

  装入 4×7 英寸贴纸

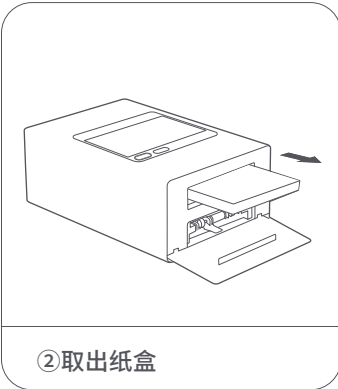


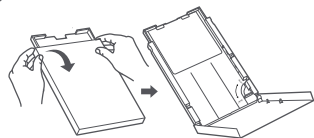

③握住纸盒盖的两侧，向上抬起盖子

注意：

 
- 1.每次只能放置一张相纸。
- 2.请勿触摸相纸或贴纸的表面，以确保打印质量。

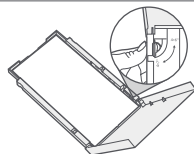


④握住宽度调节器，将贴纸装入纸盒，光面朝上

注意：

 将宽度调节器转到下图所示的 4x7 英寸标记处，以确保 4x7 英寸的纸张能装入纸盒。

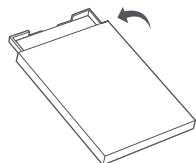


⑤合上纸盒盖

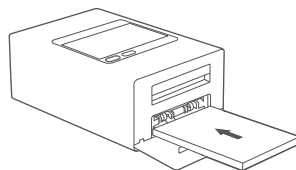 

⑥安装纸盒


将纸盒插入贴纸打印切割机

 开机

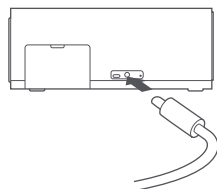

①连接电源

 
将电源插头插入贴纸打印切割机背面的电源插座。

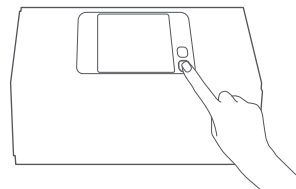

②开机

点按电源按钮以开启贴纸打印切割机。

 
使用



工作位置

打印时，相纸会前后移动 4 次。

 在贴纸打印切割机两侧预留约 20 cm 的空间，以确保进纸、打印和切割操作顺利进行。



存储

贴纸打印切割机不使用时，将纸盒插入舱内，以节省空间并便于存放。

控制面板操作说明

状态指示灯说明

0	白灯常亮	待机
0	白色闪烁	固件升级中/工作中
0	熄灭状态	关机

电源键

点按电源键	开机
长按电源键3s	关机

注意：

1. 打印过程中，按下电源按钮不会中断打印。
2. 固件更新过程中，按下电源按钮不会中断更新。
3. 出现故障时，长按电源按钮3s关闭贴纸打印切割机，然后再次开启。贴纸打印切割机开机后会尝试自动修复问题。


取消任务键

0	当机器在打印或切割中时，点按【取消任务】按键，机器会取消当前任务并退出对应的纸张。	取消任务
---	---	------

更换色带




 更换刀针

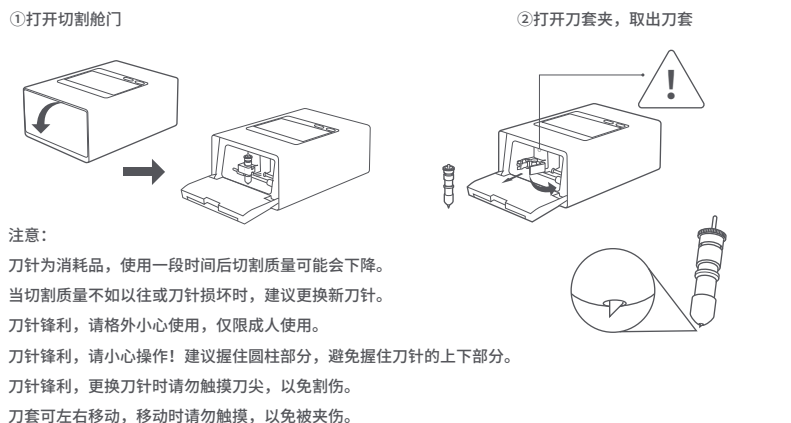

⑤重新装回刀套，请注意对准相应的凹槽

 ⑥紧紧合上刀套夹

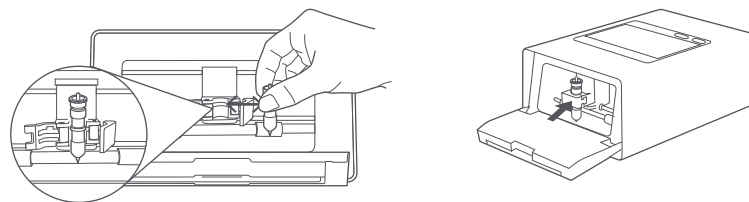


调整刀尖长度

旋转可以调整刀尖长度，1挡为最短，15挡为最长。

切割相纸/贴纸请调节到1挡，切割前膜请调节到5挡及5挡以上。

 （默认1挡，非必要情况下请勿调整）



贴纸打印切割机具体操作步骤请扫机器里面的“帮助菜单”的二维码进行观看！

质保&支持

为了能为您提供更及时、专业的售后服务，您可以请联系当地经销商或者代理商。

注意事项

在安装、操作和维护您的贴纸打印切割机之前，请务必通读本全部文档。请遵循随附的说明书、在线说明以及其他官方指导材料进行操作。在本说明书中，“机器”一词指的是贴纸打印切割机。



- 警告：存在受伤、火灾及触电风险
- 若未按照随附说明、在线说明以及官方材料中规定的方式操作机器，可能会导致机器损坏、财产损失、人员受伤，甚至死亡。
- 机器运行时，务必使头发、首饰、宽松衣物、手指、身体其他部位以及任何可能被卷入运动部件的物品远离机器，因为运行过程中滑架和纸张的快速移动可能会造成伤害。
- 机器运行期间，即使纸张停止移动，也请勿触摸贴纸或相纸。
- 在机器将贴纸或相纸吐出之前，请勿触摸。
- 粘贴贴纸时，请选择光滑、平整且干净的表面。请勿将贴纸暴露在高湿度或潮湿环境中，以免其卷曲或失去粘性。
- 切勿将机器置于室外、未供暖或未空调调节的空间，或可能接触到水的环境中存放。
- 请勿触摸相纸或贴纸的光面，以免留下指纹影响打印质量。
- 请勿湿手处理纸张，并保持纸张无尘。
- 在打印和切割前，请勿在纸张上书写。
- 请勿使用非官方的色带以及相纸或贴纸。
- 切勿重复使用纸张进行打印和切割，即使纸张大部分空白也不行。若纸张卡纸或色带粘附在纸张上，重复使用纸张可能会损坏切割器。
- 请勿将纸张装反；确保相纸的光面朝上。贴纸应平整地放入纸盒中，且纸盒应正确安装在贴纸打印切割机前部。



- 本机器仅成人可操作，不适合 12 岁及以下儿童使用。儿童在机器周围时，务必始终有成人监管。
- 本机器仅用于其预期的手工制作用途。

仅限室内使用。机器仅适用于干燥的室内环境。

• 请勿在水附近或水中使用，切勿将机器浸入任何液体中。



• 身体机能、感官或认知能力下降者，或缺乏经验和相关知识者，不得使用本机器，除非有负责其安全且熟悉机器安全操作的人员进行监管。



• 仅使用与机器配套的官方电源适配器。

• 请勿将原装适配器用于其他设备，以免造成损坏。

• 请勿湿手插拔机器电源。

• 请勿损坏、折断或改装电源线。

• 请勿损坏、折断或改装电源线。

• 电源线的放置应确保不会垂落在台面或桌面上，以免被绊倒、勾住或无意中拉扯（尤其是儿童）。

• 在维修或清洁机器前，请拔下插头断开电源。仅可用蘸有玻璃清洁剂或水的软布清洁机器。切勿使用任何易燃液体清洁机器。请勿使用丙酮或洗甲水等溶剂清洁机器，因为这些溶剂会永久性损坏机器表面。

• 将机器放置在坚固、平整、水平且稳定的表面上。确保工作空间在机器左右两侧有足够空间，以便相纸和贴纸能自由通过机器。

• 机器接通电源时、开机状态下或运行过程中，请勿将手指或其他物体放入机器内。

• 机器的最佳工作温度为 10°C 至 35°C，相对湿度为 40% - 60%。若环境温度湿度不合适，可能会影响打印质量。

• 贴纸的储存环境：本产品应置于温度为 25±3°C，湿度为

35%-75% 的环境储存，避免高温、高湿、日光直射。

• 打印过程中，贴纸需四次通过机器，打印完成后会自动推出。请勿强行拉出贴纸，以免损坏机器。



• 请勿触摸产品内部的任何部件，可能会导致受伤。

• 不同机器之间打印颜色略有差异属正常现象。

• 同一台机器不同打印照片之间打印颜色略有差异属正常现象。

• 机器长时间不使用时，请将纸盒插入舱内，以防灰尘和碎屑进入纸路。否则，下次打印的第一张照片的打印质量会受影响。

• 机器中存有闲置的相纸和贴纸时，请勿存放在炎热潮湿的环境中。

• 在正常使用条件下，该设备的天线与用户身体之间应保持至少 20 厘米的间隔距离。

• 请勿在屏幕上放置重物，以免造成屏幕变形或损坏。

• 请勿在屏幕附近放置强磁性物体，以免影响屏幕正常工作或导致数据丢失。

• 请确保贴纸打印切割机电源稳定，避免因电压不稳导致屏幕故障或触控失灵。

• 如需维修，请勿自行拆卸或修理屏幕，应联系专业人员进行处理。



请勿阻挡机器左右两侧。

• 请勿将异物或液体塞入产品内。

• 更换刀针前，务必先拔下机器插头。

• 刀针极其锋利，处理时需格外小心谨慎。

• 避免刀针接触手和身体，以防受伤。

• 刀针已出厂预安装好，可轻松切割复杂形状！

• 刀针和其他小部件可能导致窒息危险，应放置在儿童接触不到的地方，仅供成人使用。

• 请勿打开、改装或以其他方式擅自摆弄机器。

• 若机器或电源线损坏，请勿操作。

• 请使用手指或专用触控笔轻触屏幕进行操作，避免使用尖锐物品触碰屏幕，以免划伤。

• 避免将贴纸打印切割机放置在阳光直射或高温环境中，以防屏幕损坏或影响触控灵敏度。

• 清洁触摸屏时，请使用柔软的干布轻轻擦拭，切勿使用含有腐蚀性成分的清洁剂。建议定期清洁以保持触控灵敏。

• 请定期检查屏幕是否有异常显示或触控失灵的情况，如有问题请及时联系售后服务。

提示：说明书中的产品、配件、用户界面等插图均为示意图，仅供参考。由于产品的更新与升级，产品实物与示意图可能略有差异，请以实物为准。