 
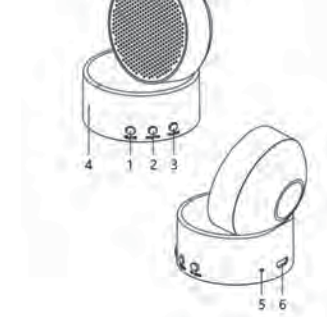 
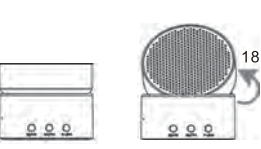 


COLOR GUIDE

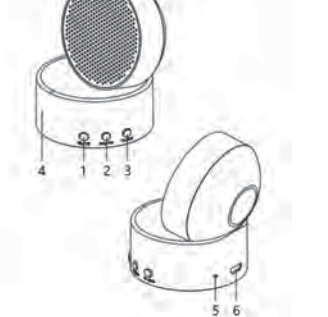

SIZE:58X696mm
P12

ATIVA™ WIRELESS SWIVEL SPEAKER USER MANUAL Altavoz giratorio inalámbrico Manuel de usuario Call for technical support 1-877-777-4357 Llame para asistencia técnica 1-877-777-4357 Before operating this unit, please read all instructions. Lee atentamente las instrucciones antes de usar este producto. version 0919 Item 6344941 ©2019 Office Depot, Inc. 5555 N. Military Trail, Suite 500, Ft. Lauderdale, FL 33466 USA. All rights reserved. Made in China.	Main Features. - Connect wireless with smartphones, tablets, pads and many notebooks and MP3 players. - Build-in speaker phone and support hands free for calling. - Up to 10 meters wireless connection range. - Built-in 680mAh re-chargable battery for up to 5 hours playing time. - USB charging port. - Swivel design to play music in any directions. Package contents 1 Wireless speaker 3 User manual 2 USB charging cable	Controls 	1 Power on/off, Play/Pause, Phone answer 2 Volume up / Previous track 3 Volume down / Next track 4 Microphone 5 LED Indicator 6 Charging port LED Indicators 1 Charging: Solid RED 2 Fully Charged: RED Off 3 Pairing Mode: Flashing BLUE 4 Connected: Slowly Flash BLUE	Charging the speaker. Before using the speaker for the first time, Approximately 2-3 hours required for fully charged. 1 Plug the USB cable into the port on the speaker, plug the other end into the USB port on the computer or on the AC adapter with USB jack (DC 5V). 2 Red LED will turn on to indicate that the unit is charging. 3 Red LED will turn off when fully charged. Start-up & Shutdown Functions 1 Long press POWER to start the wireless speaker. 2 Blue LED flashes, waiting for pairing. 3 Long press POWER to shut down the wireless speaker. 4 LED off if shutdown the speaker.	Pairing Your Device. 1 Place the speaker near the Bluetooth-enabled device. 2 Long press POWER to start the wireless speaker. blue LED flashes, the speaker is now in pairing mode. Follow the instructions of your device to search for the speaker. 3 The speaker is called "A106" 4 When your device is connected and the pairing is completed (Voice Prompt: connected) the blue LED light turn to slowly flash. 5 When your device is disconnected (Voice Prompt: disconnected), the LED light turn off. 6 Long press Volume +/- to adjust desired volume. Short press Volume +/- to skip to previous track / next track. NOTE: The speaker is in the state of pairing the last device default in the first 3 seconds after starting. If failed to pair, the speaker will be in state of pairing automatically.	Speaker Phone If a Bluetooth enabled phone is connected wirelessly to the unit, you can receive calls and speak through the microphones on the unit. Short press the  button on the unit to answer an incoming call or long press the button  to reject the call. You can also Press the power button twice to radial last call. When the call ends, music will resume playing. Swivel Design Speaker top with 180° rotation directs sound in any direction 	IMPORTANT SAFETY GUARDS 1 Do not attempt to disassemble the unit as it might get damaged if you are not professional. 2 Do not expose the device to water or attempt to disassemble the device. If the device is exposed to water or disassembled, the user may be risking an electronic short. 3 Do not expose the device to direct sunlight, heat and flame. 4 Device may be warm while charging. It is normal. 5 Use only a soft dry cloth to clean the enclosure of the unit. Never use the liquids or abrasive cleaner. FCC statement This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: —Reorient or relocate the receiving antenna. —Increase the separation between the equipment and receiver. —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. —Consult the dealer or an experienced radio/TV technician for help. FCC ID: 2AUGF-A106	Office Depot, Inc. Limited One Year Product Warranty This limited warranty covers the original purchase of new product used for normal commercial, personal or household use. Office Depot, Inc. (ODI) warrants its products will be free from defects in materials and workmanship (normal wear and tear excepted), for one (1) year from the date of purchase, except as provided below. ODI, at its option, will replace with a comparable product, free of charge, any product purchased from it that falls under normal use as a result of such defect. This warranty does not apply to damage caused by fire, accident, negligence, misuse, use other than as stated in product instructions. Proof of purchase is required in the form of a receipt (copy or original) to validate warranty. Warranty claims without the receipt may be rejected. If Office Depot, Inc. chooses to provide a refund for such product, it will be fulfilled in the form of an Office Depot Merchandise card. Claims fulfilled in this manner take approximately 30 days to process.	ODI PROVIDES THIS LIMITED WARRANTY IN LIEU OF ALL OTHER WARRANTIES EITHER EXPRESSED OR IMPLIED. EXPRESSLY EXCLUDED ARE ALL WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE OR MERCHANTABILITY. OFFICE DEPOT'S SOLE OBLIGATION AND THE USER'S EXCLUSIVE REMEDY UNDER THIS WARRANTY SHALL BE LIMITED TO THE REPAIR, REFUND (IN THE FORM OF AN OFFICE DEPOT MERCHANDISE CARD) OR REPLACEMENT AT ODI'S SOLE DISCRETION AND COST, OF PRODUCT OR COMPONENTS. IN NO EVENT SHALL ODI, ITS AFFILIATES, SUBSIDIARIES OR PARENT COMPANIES BE RESPONSIBLE FOR CONSEQUENTIAL, SPECIAL OR INCIDENTAL DAMAGES ARISING OUT OF A CLAIM OF DEFECTIVE PRODUCT EVEN IF ODI HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SOME STATES OR PROVINCES DO NOT ALLOW THE EXCLUSION OF IMPLIED WARRANTIES OR LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR THE EXCLUSION OR	LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY BY STATE OR PROVINCE. THIS WARRANTY APPLIES ONLY TO THE U.S. AND CANADA. Service Instructions Please call: 1-877-777-4357 (Monday to Friday 8am to 8pm EST) for warranty service.
--	---	---	--	---	---	---	---	--	--	--

Características principales - Conecte de modo inalámbrico smartphones, tablets, pads, un gran número de laptops y reproductores de MP3. - oSpeakerphone integrado y manos libres para realizar llamadas. - Hasta 10 metros de alcance de conexión inalámbrica. - Batería recargable integrada de 680mAh con hasta 5 horas de tiempo de reproducción. - Puerto de carga USB. - Diseño giratorio para reproducir música en cualquier dirección. Contenido del empaque 1 Parlante inalámbrico 3 Manual del usuario 2 Cable de carga USB	Controles 	1 Encendido/apagado/reproducción/pausa, responder llamado telefónico 2 Subir volumen/Pista anterior 3 Bajar volumen/Pista siguiente 4 Micrófono 5 Indicador LED 6 Puerto de carga Indicadores LED 1 Cargando: ROJO fijo 2 Completamente cargado: ROJO apagado 3 Modo de emparejamiento: AZUL parpadeante 4 Conectado: AZUL con parpadeo lento	Carga del parlante Antes de usar el parlante por primera vez. Requiere aproximadamente 2-3 horas para cargarse por completo. 1 Conecte el cable USB al puerto del parlante y conecte el otro extremo al puerto USB de una computadora o de un adaptador CA con toma USB (DC 5V). 2 El LED rojo se iluminará para indicar que el parlante se está cargando. 3 El LED rojo se apagará cuando esté completamente cargado. Funciones de inicio y apagado 1 Haga una presión larga en el botón de encendido para encender el parlante inalámbrico. 2 Si LED azul parpadea en espera del emparejamiento. 3 Haga una presión larga en el botón de encendido para apagar al parlante inalámbrico. 4 Si LED se apaga también cuando se apaga el parlante.	Emparejamiento de su dispositivo 1 Ubique el parlante cerca del dispositivo con el Bluetooth activado. 2 Haga una presión larga para encender el parlante inalámbrico, el LED azul parpadea y el parlante está ahora en modo de emparejamiento. Siga las instrucciones de su dispositivo para buscar el parlante. 3 El parlante se llama "A106" 4 Cuando su dispositivo se conecta y el emparejamiento se haya completado (Aviso de voz conectado) el LED azul parpadeará lentamente. 5 Cuando su dispositivo se desconecte (Aviso de voz desconectado), el LED azul se apagará. 6 Haga una presión larga en el botón de volumen +/- para ajustar el nivel de volumen deseado. Haga una presión corta en el botón de volumen +/- para ir a la pista anterior/pista siguiente. NOTA: El parlante está en modo de emparejamiento con el último dispositivo por defecto durante los primeros 3 segundos después de encenderse. Si el emparejamiento falla, el parlante entra en modo de	emparejamiento automáticamente. Speaker Phone Si hay un teléfono con Bluetooth conectado de modo inalámbrico al parlante, puede recibir llamados y hablar a través del micrófono de los dispositivos. Haga una presión corta en el botón  para responder a un llamado entrante o haga una presión larga en  para rechazar el llamado. También puede presionar el botón de encendido dos veces para volver a marcar el número del último llamado. Cuando el llamado finaliza, la música continúa reproduciéndose. Diseño giratorio Parte superior del parlante con giro a 180° para dirigir el sonido en cualquier dirección. 	MEDIDAS IMPORTANTES DE SEGURIDAD 1 No trate de desarmar el parlante ya que podría dañarlo si no es un profesional. 2 No exponga el dispositivo al agua ni trate de desarmarlo. Si el dispositivo se moja o si se desarma, el usuario podría recibir una descarga eléctrica. 3 No exponga el dispositivo a la luz directa del sol, al calor o a las flamas. 4 El dispositivo puede calentarse durante la carga. Esto es normal. 5 Use solo un paño suave y seco para limpiar la carcasa del dispositivo. Nunca use líquidos o limpiadores abrasivos. Declaración FCC Este dispositivo cumple con la parte 15 de las Reglas de la FCC. La operación está sujeta a las siguientes dos condiciones: 1) Este dispositivo no puede causar interferencias perjudiciales, y 2) este dispositivo debe aceptar cualquier interferencia recibida, incluidas las interferencias que pueden causar un funcionamiento no deseado. Los cambios o modificaciones no aprobados expresamente por la parte responsable del cumplimiento podrían anular la autoridad del usuario para operar el equipo. NOTA: Este equipo ha sido probado y cumple con los límites para un dispositivo digital de Clase B, de conformidad con la parte 15 de las Reglas de la FCC. Estos límites están diseñados para proporcionar una protección razonable contra interferencias perjudiciales en una instalación residencial. Este equipo genera, utiliza y puede irradiar energía de radiofrecuencia y, si no se instala y utiliza de acuerdo con las instrucciones, puede causar interferencias perjudiciales en las comunicaciones de radio. Sin embargo, no hay garantía de que no se produzcan interferencias en una instalación en particular. Si este equipo causa interferencias perjudiciales en la recepción de radio o televisión, lo que puede determinarse apagando y encendiendo el equipo, se	recomienda al usuario que intente corregir la interferencia mediante una o más de las siguientes medidas: —Reorientar o reubicar la antena receptora. —Aumentar la separación entre el equipo y el receptor. —Conectar el equipo a un tomacorriente en un circuito diferente al que está conectado el receptor. —Consultar con el distribuidor o con un técnico de radio/TV con experiencia para que le asistan. ID de la FCC: 2AUGF-A106
--	---	---	---	---	--	--	--