



R30

User Manual

 
Gebruiksaanleitung

Инструкция По Эксплуатации

Manuel d'Instruction

Manual De Instrucciones

Manuale D'Istruzione

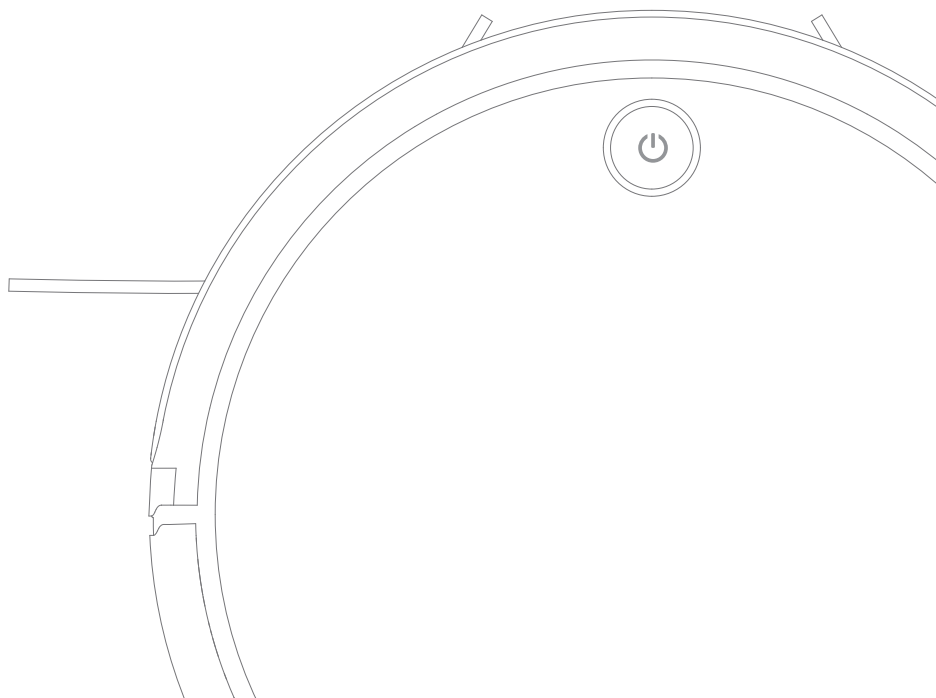

Should you have any question on this product, please contact us by phone.

Wenn Sie Fragen zu diesem Produkt haben, bitte rufen Sie uns an.

Если в процессе использования у Вас возникнут какие-либо вопросы, позвоните по телефону нашей горячей линии.

Merci pour choisir robot aspirateur R30. Si vous avez des questions sur ce produit, veuillez nous contacter par téléphone.

Se espera que tenga una buena experiencia. En caso de tener alguna pregunta sobre este producto Por favor contáctenos por teléfono.

Speriamo di potere darLe una buona esperienza d'utilizzo e nel caso che Lei abbia qualunque domanda sul nostro prodotto, si prega di contattarci direttamente tramite il nostro numero verde, siamo sempre alla Sua completa disposizione.

 **86-10-5741 7619**

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING (THIS APPLIANCE), Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

WARNING

To reduce the risk of fire, electric shock, or injury:

1. Do not use outdoors or on wet surfaces
2. Do not allow to be used as a toy. Close attention is necessary when used by or near children, pets or plants.
3. Use only as described in this manual. Use only manufacturer's recommended attachments
4. Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
5. Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
6. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
7. Do not handle charger, including charger plug, and charger terminals with wet hands
8. Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
9. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
10. Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
11. Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
12. Do not use without dust container.
13. Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energizing appliance that have the switch on invites accidents.
14. Risk Of Injury. Brush May Start Unexpectedly. Remove The Brush Before Cleaning or Servicing.
15. Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
16. Use appliances only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
17. When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.
18. Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
19. Do not use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.

- 20. Do not expose a battery pack or appliance to fire or excessive temperature. Exposure to fire or temperature above 130°C may cause explosion.
- 21. Follow all charging instructions and do not charge the battery pack or appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
- 22. Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
- 23. Do not modify or attempt to repair the appliance or the battery pack except as indicated in the instructions for use and care.
- 24. Place the cords from other appliances out of the area to be cleaned.
- 25. Do not operate the vacuum in a room where an infant or child is sleeping.
- 26. Do not operate the vacuum in an area where there are lit candles or fragile objects on the floor to be cleaned.
- 27. Do not operate the vacuum in a room that has lit candles on furniture that the vacuum may accidentally hit or bump into.
- 28. Do not allow children to sit on the vacuum.
- 29. Do not use the vacuum on a wet surface.

SAVE THESE INSTRUCTIONS

Household use only.

IMPORTANTES MESURES DE SÉCURITÉ

L'utilisation d'un appareil électrique demande certaines précautions:

LIRE TOUTES LES INSTRUCTIONS AVANT DE FAIRE FONCTIONNER (CET APPAREIL), Le non-respect des mises en garde et des instructions peut causer des chocs électriques, des incendies et/ou des blessures graves.

AVERTISSEMENT.

Pour réduire les risques d'incendie, de choc électrique ou de blessure:

1. Ne pas exposer à la pluie, Ranger à l'intérieur.
2. Ne pas permettre aux enfants de jouer avec l'appareil. Une attention particulière est nécessaire lorsque l'appareil est utilisé par des enfants ou à proximité de ces derniers.
3. N'utiliser que conformément à cette notice avec les accessoires recommandés par le fabricant.
4. Ne pas utiliser si le cordon ou la fiche est endommagé. Retourner l'appareil à un atelier de réparation s'il ne fonctionne pas bien, s'il est tombé ou s'il a été endommagé, oublié à l'extérieur ou immergé.
5. Ne pas tirer, soulever ni traîner l'appareil par le cordon. Ne pas utiliser le cordon comme une poignée, le coincer dans l'embrasure d'une porte ou l'appuyer contre des arêtes vives ou des coins. Ne pas faire rouler l'appareil sur le cordon. Garder le cordon à l'écart des surfaces chaudes.
6. Ne pas débrancher en tirant sur le cordon. Tirer plutôt la fiche.
7. Ne pas manipuler le chargeur, y compris la prise du chargeur, et les bornes du chargeur avec les mains mouillées.
8. N'insérer aucun objet dans les ouvertures. Ne pas utiliser l'appareil lorsqu'une ouverture est bloquée. S'assurer que de la poussière, de la peluche, des cheveux ou d'autres matières ne réduisent pas le débit d'air.
9. Maintenir les cheveux, les vêtements amples, les doigts et toutes les parties du corps à l'écart des ouvertures et des pièces mobiles.
10. Ne pas aspirer des liquides inflammables ou combustibles, comme de l'essence, et ne pas faire fonctionner dans des endroits où peuvent se trouver de tels liquides.
11. Ne pas aspirer de matières en combustion ou qui dégagent de la fumée, comme des cigarettes, des allumettes ou des cendres chaudes.
12. Ne pas utiliser l'appareil si le sac à poussière ou le filtre n'est pas en place.
13. Éviter une mise en marche accidentelle. S'assurer que l'interrupteur est à la position arrêt avant de raccorder la batterie, de lever ou de déplacer l'appareil. Transporter l'appareil en gardant un doigt sur l'interrupteur, ou mettre sous tension un appareil dont l'interrupteur est à la position marche peut causer un accident.
14. Risqué de blessure. La brosse peut commencer de manière inattendue. Enlevez la brosse avant le nettoyage ou l'entretien.
15. Recharger uniquement avec le chargeur prescrit par le fabricant. Un chargeur convenant à un type de batterie peut présenter un risque d'incendie lorsqu'il est utilisé avec une autre batterie.
16. Utiliser uniquement les batteries recommandées pour l'appareil. L'utilisation d'autres types de batteries peut présenter un risque de blessure ou d'incendie.

17. Lorsque l'appareil n'est pas utilisé, tenir la batterie loin d'objets métalliques comme des trombones, des pièces de monnaie, des clés, des clous, des vis ou autres petits objets qui pourraient établir une liaison entre les bornes. Un court-circuit des bornes des batteries peut causer des brûlures ou un incendie.

18. En condition d'usage abusif, du liquide peut s'échapper de la batterie ; éviter tout contact avec ce liquide. En cas de contact accidentel, rincer abondamment avec de l'eau. En cas de contact avec les yeux, consulter également un médecin. Le liquide projeté peut causer des irritations ou des brûlures.

19. Ne pas utiliser une batterie ou un appareil endommagé ou qui a été modifié. Des batteries endommagées ou modifiées peuvent avoir un comportement imprévisible pouvant causer un incendie, une explosion ou un risque de blessure.

20. Ne pas exposer une batterie ou un appareil à la flamme ou à des températures excessives. L'exposition à une flamme ou à des températures supérieures à 130 °C peut causer une explosion.

21. Respecter toutes les instructions de chargement et ne pas charger la batterie ou l'appareil à des températures qui ne sont pas incluses dans la gamme de températures indiquées dans la notice d'instructions. Un chargement mal effectué.

22. Confier les réparations à une personne qualifiée qui utilisera uniquement des pièces de remplacement identiques. Cette façon de faire garantira la sécurité du produit.

23. Ne pas modifier ni tenter de réparer l'appareil ou la batterie sauf comme il est indiqué dans les instructions d'utilisation et d'entretien.

24. Éloigner les cordons d'autres appareils de la zone à nettoyer.

25. Ne pas utiliser l'aspirateur dans une pièce où un nourrisson ou un enfant dort.

26. Ne pas utiliser l'aspirateur dans un endroit où il ya des bougies allumées ou des objets fragiles sur le plancher à nettoyer.

27. Ne pas utiliser l'aspirateur dans une pièce où il ya des bougies allumées sur les meubles que l'aspirateur peut heurter ou se cogner accidentellement.

28. Ne pas laisser les enfants s'asseoir sur l'aspirateur.

29. Ne pas utiliser l'aspirateur sur une surface mouillée.

CONSERVER CES INSTRUCTIONS

Usage Domestique seulement

FCC/IC COMPLIANCE / TM / WARRANTY

To satisfy FCC&IC RF exposure requirements, a separation distance of 20cm or more should be maintained between the antenna of this device and persons during device operation.

To ensure compliance, operations at closer than this distance is not recommended.

Les antennes installées doivent être situées de façon à ce que la population ne puisse y être exposée à une distance de moins de 20 cm. Installer les antennes de façon à ce que le personnel ne puisse approcher à 20 cm ou moins de la position centrale de l'antenne.

This device complies with Part 15 of the FCC Rules / Industrie Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

(1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Contents

1. Safety instruction	02
1.1 Usage Notice	02
1.2 About product safety precautions	02
1.3 Battery	03
1.4 Use range	03
2. Product composition	04
2.1 Host and accessories	04
2.2 Accessory name	05
3. Product installation	06
3.1 Install the charging station	06
3.2 Water tank installation and use	07
4. Product usage	08
4.1 Host usage	08
4.2 Working mode	08
4.2.1 Standby and sweeping	08
4.2.2 Manual recharge	08
4.2.3 Automatic shut-down	08
4.2.4 Automatic mode	08
4.3 Automatic mode	09
5. Product Daily maintenance	10
5.1 Battery storage	10
5.2 Clean charging electrode slice	10
5.3 Clean dust bin	10
5.4 Clean main brush	12
5.5 Clean side brush	13
5.6 Clean wheel	13
5.7 Clean sensor	13
6. App instruction	14
6.1 Sign up and login in	15
6.2 Add device	16
6.3 Operation control page	18
6.4 More function	19
7. Trouble shooting	20
8. Parameters	21

Inhalte

1. Sicherheitshinweise	24
1.1 Gebrauchshinweise	24
1.2 Sicherheitshinweise zum Gebrauch des Produkts	24
1.3 Batterie	25
1.4 Anwendungsbereich des Produkts	25
2. Produkt Komponente	26
2.1 Hauptmaschine und Zubehör	26
2.2 Komponente Liste	27
3. Installation des Produkts	28
3.1 Installation des Ladegerätes	28
3.2 Installation und Verwendung des Wassertanks	29
4. Verwendung des Produkts	30
4.1 Verwendung der Maschine	30
4.2 Arbeitsmodus	30
4.2.1 Standby und Reinigung	30
4.2.2 Manuelles Aufladen	30
4.2.3 Manuelle Ausschaltung	30
4.2.4 Automatischer Modus	31
4.3 Auflademethode	31
5. Produktpflege	32
5.1 Batteriespeicherung	32
5.2 Reinigung der Ladekontakte	32
5.3 Reinigung des Staubbehälters	32
5.4 Reinigung der rollen Bürste	34
5.5 Reinigung der Seitenbürste	35
5.6 Reinigung der Laufräder	35
5.7 Reinigung der Infrarot-Abstandssensoren	35
6. Download und Installierung der APP	36
6.1 Registrierung und Login	37
6.2 Hinzufügung des Gerätes	38
6.3 Bedienungsseite	40
6.4 Weitere Funktionen	41
7. Allgemeine Störung	42
8. Technische Daten	43

Содержание

1. Инструкция по технике безопасности	46
1.1 Инструкция пользователя	46
1.2 Меры предосторожности	46
1.3 Аккумулятор	47
1.4 Сфера использования	47
2. Список комплектующих	48
2.1 Главное устройство и аксессуары	48
2.2 Название запчастей	49
3. Сборка устройства	50
3.1 Установка зарядной станции	50
3.2 Установка и использование емкости для воды	51
4. Использование устройства	52
4.1 Использование устройства	52
4.2 Рабочий режим	52
4.2.1 Режим ожидания и начало уборки	52
4.2.2 Ручная перезарядка	52
4.2.3 Автоматическое отключение	52
4.2.4 Автоматический режим	52
4.3 Зарядка устройства	53
5. Ежедневное обслуживание устройства	54
5.1 Аккумулятор	54
5.2 Очистка зарядных контактов	54
5.3 Очистка пылесборника	54
5.4 Очистка средней щетки	56
5.5 Чистка боковой щетки	57
5.6 Очистка колес	57
5.7 Очистка датчиков	57
6. APP Руководство пользователя	58
6.1 Регистрация и вход	59
6.2 Подключение устройства	60
6.3 Управление устройством	62
6.4 Дополнительные функции	63
7. Список возможных ошибок	64
8. Технические характеристики	65

Avis de Sécurité

1. Avis de Sécurité	68
1.1 Conseils importants	68
1.2 Informations de sécurité importantes	68
1.3 Batterie	69
1.4 Restrictions d'utilisation	69
2. Liste de composant	70
2.1 Partie principale et Accessoires	70
2.2 Accessoires	71
3. Installation produit	72
3.1 Installation de chargeur	72
3.2 Installation et utilisation de réservoir d'eau	73
4. Utilisation	74
4.1 Utilisation de Robot	74
4.2 Mode de fonctionnement	74
4.2.1 Mode veille et nettoyage	74
4.2.2 Charge manuel	74
4.2.3 Arrêt automatique	74
4.2.4 Mode automatique	74
4.3 Mode de charge	75
5. Entretien	76
5.1 Stockage de la batterie	76
5.2 Nettoyez pièce polaire de charge	76
5.3 Nettoyez le bac à poussière	76
5.4 Nettoyez la brosse	78
5.5 Nettoyez la brosse bilatérale	79
5.6 Nettoyez les roulettes	79
5.7 Nettoyez les points de capteur	79
6. Utilisation APP	80
6.1 Inscription et connexion	81
6.2 Ajouter un appareil	82
6.3 Page de contrôle des opérations	84
6.4 Plus de fonctionnalités	85
7. Problème	86
8. Paramètre	87

ÍNDICE

1. SEGURIDAD	90
1.1 Instrucciones antes del uso	90
1.2 Advertencias y precauciones de seguridad	90
1.3 Sobre la batería	91
1.4 Rango de uso del producto	91
2. DETALLE DE LAS PARTES	92
2.1 Cuerpo principal y accesorios del producto	92
2.2 Nombre de los accesorios	93
3. MONTAJE DEL PRODUCTO	94
3.1 Montaje de la estación de carga	94
3.2 Montaje y uso del tanque	95
4. USO DEL PRODUCTO	96
4.1 Uso de la aspiradora	96
4.2 Modo de operación	96
4.2.1 Modo de espera y limpieza	96
4.2.2 Recargar manualmente	96
4.2.3 Apagar automáticamente	96
4.2.4 Modo automático	96
4.3 Maneras de cargar la batería	97
5. MANTENIMIENTO DIARIO	98
5.1 Depósito de la batería	98
5.2 Limpieza de las hojas polares	98
5.3 Limpieza de la caja de polvo	98
5.4 Limpieza del cepillo central	100
5.5 Limpieza de los cepillos laterales	101
5.6 Limpieza de las ruedas	101
5.7 Limpieza del sensor	101
6. INSTRUCCIONES DE LA APP	102
6.1 Crear una cuenta y acceder	103
6.2 Agregar aparatos	104
6.3 Interfaz del control	106
6.4 Más funciones	107
7. FALLAS COMUNES	108
8. INFORMACIÓN TECNOLÓGICA	109

Contenuto

1. Istruzioni di sicurezza	112
1.1 Istruzioni per l'uso	112
1.2 Avviso di sicurezza	112
1.3 Sicurezza della batteria	113
1.4 Gli ambienti utilizzabili	113
2. Componenti del prodotto	114
2.1 Unità principale e accessori	114
2.2 Elenco dei componenti	115
3. Montaggio dell'apparecchio	116
3.1 Il montaggio della base ricarica batteria	116
3.2 Il montaggio e l'utilizzo del contenitore d'acqua	117
4. L'utilizzo dell'apparecchio	118
4.1 L'utilizzo della applicazione	118
4.2 Modalità di lavoro	118
4.2.1 Standby e pulizia	118
4.2.2 Ricarica manuale	118
4.2.3 Spegnimento automatic	118
4.2.4 Modalità automatic	118
4.3 Ricarica automatica	119
5. Manutenzione dell'apparecchio	120
5.1 Batteria	120
5.2 Pulire i contatti di ricarica	120
5.3 Pulire il contenitore della polvere	120
5.4 Pulire la spazzola centrale a rullo	122
5.5 Pulire la spazzola laterale	123
5.6 Pulire le ruote	123
5.7 Pulire i sensori di distanza a infrarossi	123
6. Guida dell'utilizzo dell'APP	124
6.1 Registrazione e Login	125
6.2 Attivare l'apparecchio	126
6.3 Pagina di operazione	128
6.4 Altri funzioni	129
7. Problemi frequenti	130
8. Parametro tecnico	131

WARNING



Do not vacuum sharp objects like glass sheets, iron nail etc. , to avoid damage to the appliance.



Do not use the appliance in humid or flammable, explosive, perishable environments.



If you don't use it for a long time, unplug the charging station.



Do not remove the charge station while the appliance is working, or it may not return and recharge.



This product can only be used indoors.



Please remove vulnerable items before using and recharge.



Do not vacuum water, oil or other liquid or it will cause damage to the appliance.



Tidy cables on the ground before using, so as not to hinder the appliance work.



Place the charge station on the flat floor and keep it vertical with the wall. Avoid affection to the function of the appliance.

Children safety

1) This appliance should not be operated by children under 8 years old or people who is physically or mentally disabled or lack of relevant experience and knowledge, unless under the guidance and supervision of people who could be responsible for the user's safety.

2) Prohibit children from playing bags of the appliance, or it may cause suffocation.




1. Safety instruction

1.1 Notice for use


Before use, please read the safety precautions below carefully:

- * Please read all the instructions before using this appliance.
- * In order to ensure proper operation, please keep this manual appropriately.
- * If you want to give this appliance to a third party, please include this manual along with the appliance.
- * Any operation that does not comply with this manual may result in serious personal injury or damage to the appliance itself.

1.2 Matters need attention

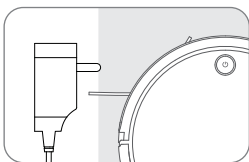

⚠ This appliance can only work with the adaptor, battery and charge station together with the parcel which committed to this appliance, otherwise it may cause damage to the machine or electric shock or fire.

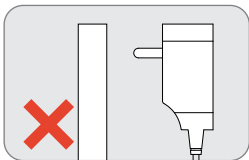


⚠ Please do not use this appliance if the machine or accessories get broken. Please contact with our after-sales service when you meet problem.

⚠ Please remove the plug from the socket before maintenance.

⚠ Please do not touch the plug or the appliance with wet hands, or it may lead to electric shock.

⚠ Please contact with our customer service if the cable got broken to avoid danger.

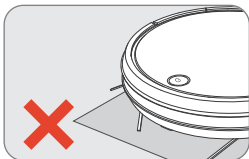

⚠ Do not use this appliance in the absence of a fence to avoid accidental fall of the robot.

⚠ Please don't replace non-original battery by yourself.



⚠ Do not get clothes or any part of your body (hair, finger, etc.) involved in the brush or wheel of the appliance, or it may cause danger.

⚠ Don't put the appliances close to fire, inflammable, explosive or corrosive materials.

⚠ Please contact with our customer service to get e-edition manual if your manual got lost.

1.3 Battery



1) This product is limited to use the battery equipped by the manufacture.

2) Please remove the battery before dispose the appliance.

3) Please contact with our after sale service if you want to replace the battery. Do not use any other charger to recharge the battery pack.


4) If the battery got leakage, do not let the liquid get into the skin or clothes, clean it with dry cloth immediately, and put it back to recycle bin, do not throw it away.

5) Please dispose the waste battery of the appliance properly. Batteries contain hazardous substances that are hazardous to the environment. Please follow your local environmental regulations and place it on the required recycling sites.




1.4 Usable range

Please use the robot cleaner in the above ground environment, otherwise it will not be able to achieve the effect and may even damage vacuum.

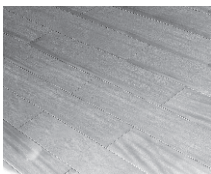

Wood Floor

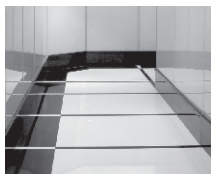


Tile



Short Hair Carpet

2. Product composition

 
2.1 Main body and components




Side brush x2





Charge Station x1

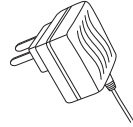


Adaptor x1

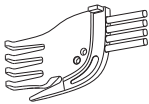


Cleaning Brush x1

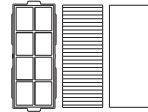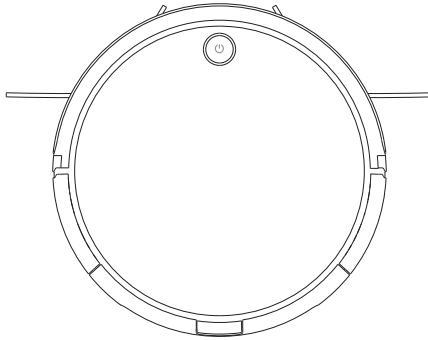

Filter screen pack x1

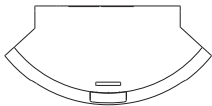

Dust cup x1

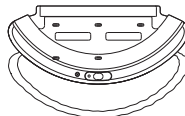



Mop x1
Pallet x1



Warm tip



1pair *Side brushes, 1 filter screen net and battery are already installed in the main body.

2.2 Parts name

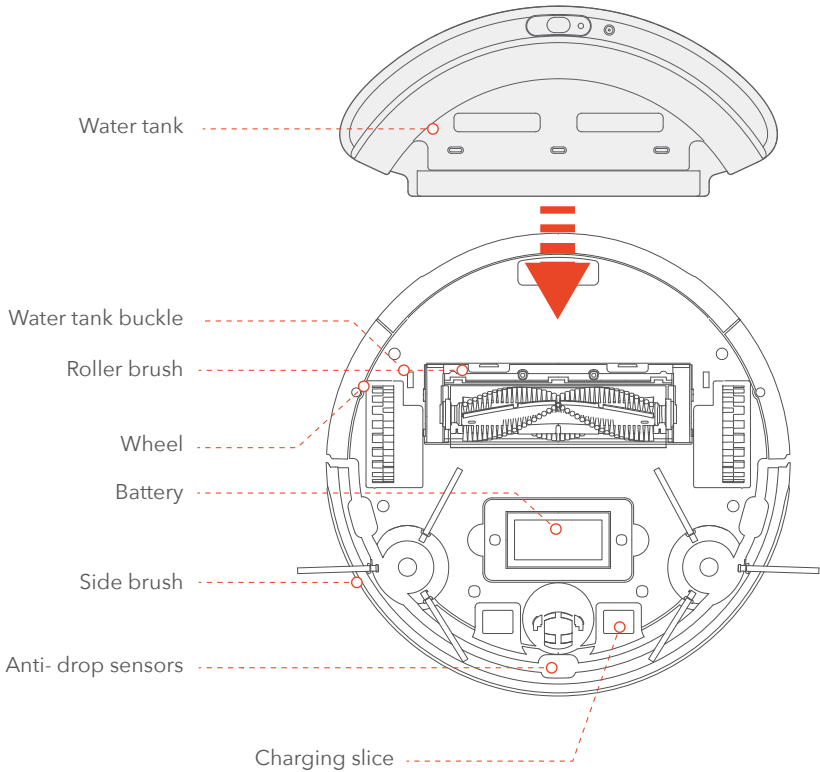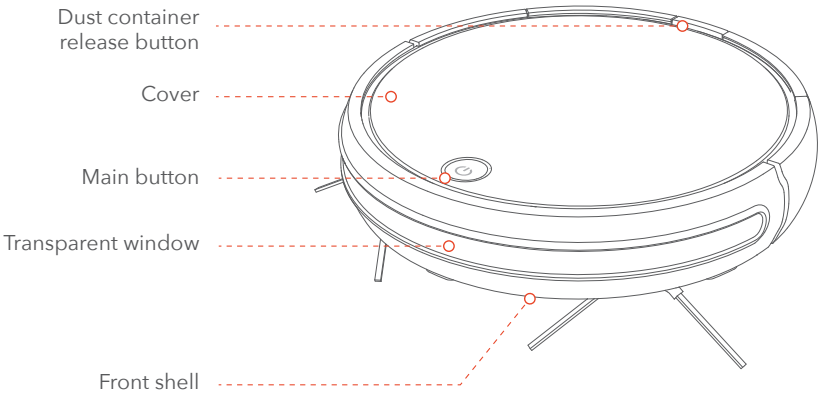

3 Product installation

3.1 Charge station installation

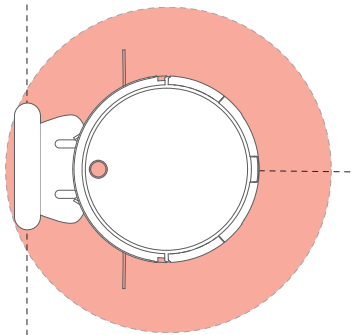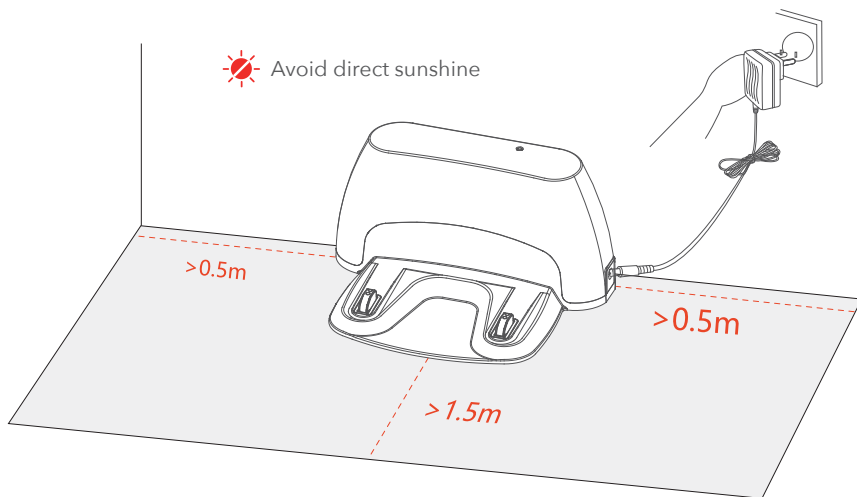

1. Lay the charge station on flat floor that vertical to the wall. No obstacle in a distance of 1m from left to right, and 1.5m in front of the station. Press the station to stick to the floor.


2. To make sure the main body works well and recharge successfully, please don't move the charge station casually or frequently, if the station is moved, main body may fail to locate the charge station and unable to go back for charging.

3. Tidy cables on the ground before using, so as not to hinder the appliance work.


Notice

Please do not move the working robot cleaner incase lost the map. Keep charging station from direct sunshine.


3.2 Install and use water tank

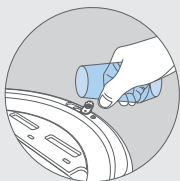


1. Fill in water from Water filling nozzle;

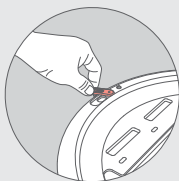

2. Seal the Water filling nozzle;

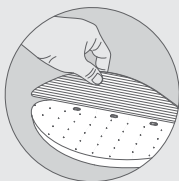

3. Stick the mop;

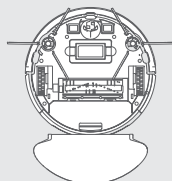


4. Stuck water tank to main body.



Warm tip

Remove water tank while charging. Do not use water tank on blanket.

2. Then another side

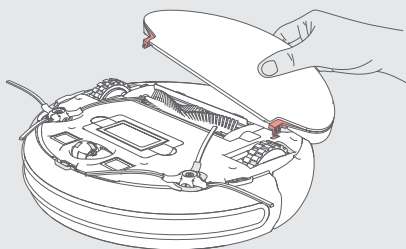

1. Snap in one end

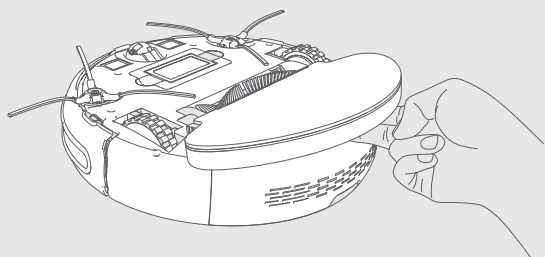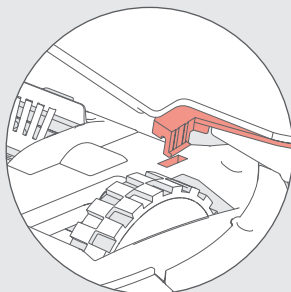


Disassemble the water tank:
Lift the front of the tank to
separate the tank from the
machine.

4. Product usage

4.1 Host usage


 Power button

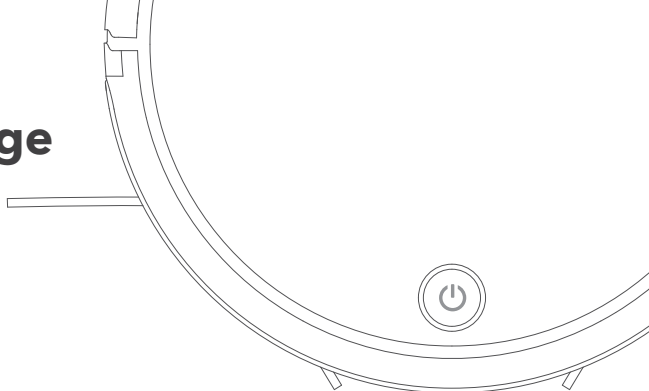

Status	Light display	Operation
Turn off	Light off	Press "⏻" and front shell at the same time
Turn on	White light on	Press "⏻" for a while to standby mode
Cleaning	White light on	Press "⏻" to automatic cleaning mode
Return	White light flash	Press "⏻" to recharge mode
Charging	White light breathing	
In trouble	Red light flash	
Full charged	White light on	
Wifi connected	Red and white lights flash alternately	Under standby mode press "⏻" till hear voice notification

4.2 Working mode

 4.2.1 Stand by and cleaning

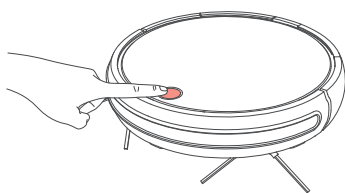


In the off state, press and hold the power button, the white indicator lights, and enters standby mode. Then press the power button again to start the automatic cleaning mode.

4.2.4 Auto-mode

For more details please refer to the app.


4.2.2 Manual recharge

When the sweeper is in the standby state, press the power button twice, the white indicator light flashes, and the automatic recharge is entered.

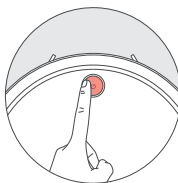


4.2.3 Manual shutdown

Press the power button and the front cover at the same time, and turn off after 5 seconds.

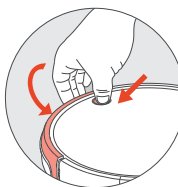

4.3 Charge way


Manual charge

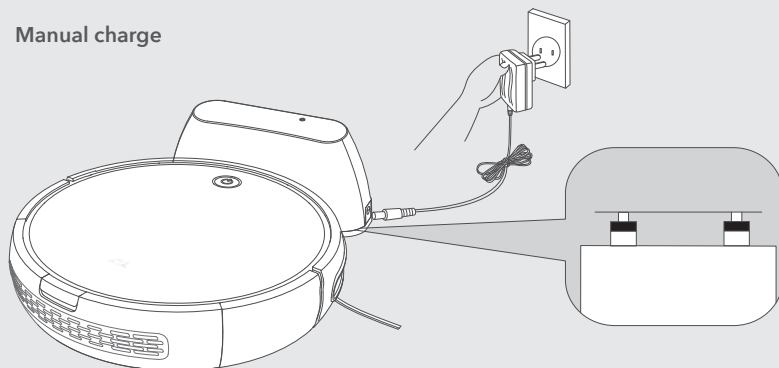

Charge by charging station:

Connect the power adapter and the charging station first, then connect the power supply; put the robot vacuum cleaner on the charging stand to charge, please make sure that the bottom charging piece of the main unit is in contact with the charging stand contact (the white light flickers when charging) , full charged white lights are always on).

Automatic charging

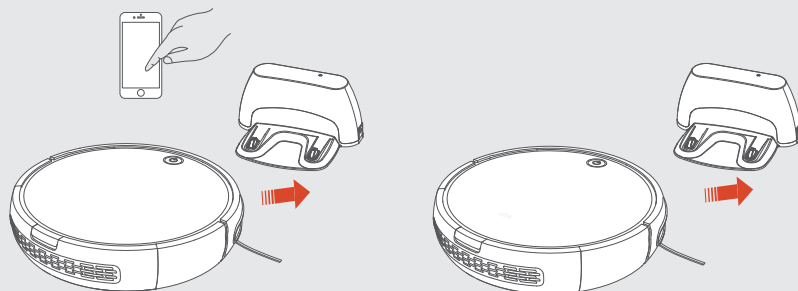

APP charging:


After the machine is connected to the app, in the power-on state, click the “recharge” button on the main interface of the APP, and the host will automatically find the charging station.

Automatic charging:

When the robot vacuum cleaner is running ,the red light flashes when the battery voltage is low. At this time, will enters the recharging mode and starts to automatically find the charging station.

5. Product daily maintenance


5.1 Battery storage

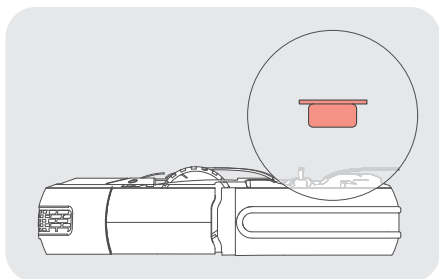

Tips


- 1) Please clean and maintain the robot vacuum cleaner regularly according to the usage condition.
- 2) If not use the vacuum cleaner for a long time, please fully charge the battery, then remove it and store in a cool, dry place. Keep the bottom of the sweeper dry.

5.2 Clean charging electrode slice

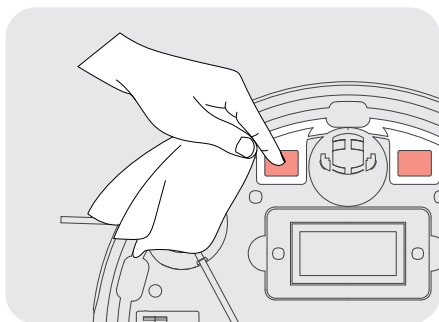

- 1) Please turn off the power or pull out the plug.
- 2) Please wipe it with dry cloth every month.
- 3) Please do not wipe with oil.


5.3 Clean dust bin

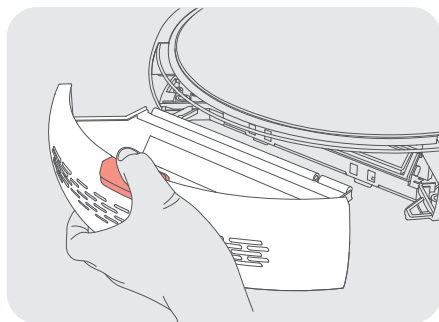


Take out the dust bin to clean it as picture shows.

Open dust bin cover ,pour dust inside.


Recommendation: new machine :cleans the dust box every three days within a month.Clean it every four weeks later.

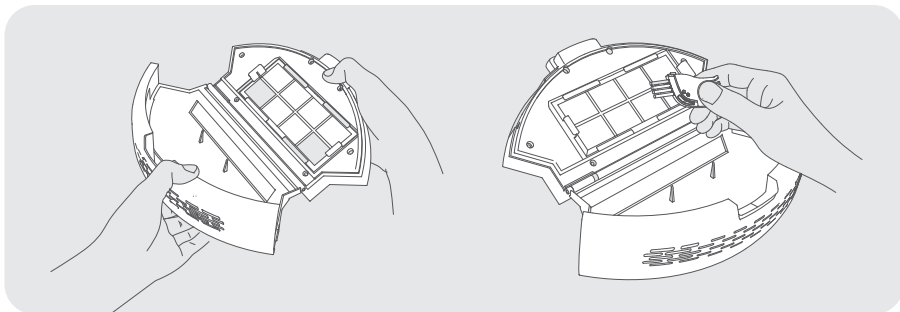

Take out filter components, clean dust on the filter with cleaning brush.

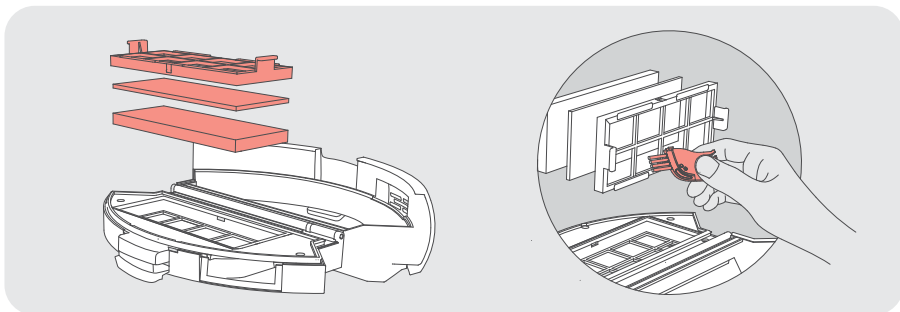


Wash dust container and filter net.

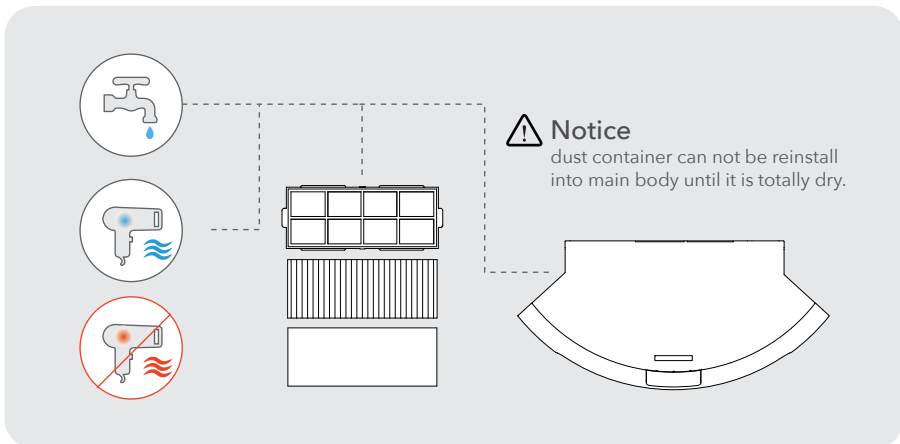


5.4 Clean main brush


Use your finger to trigger the main brush cover, lift it and take off.

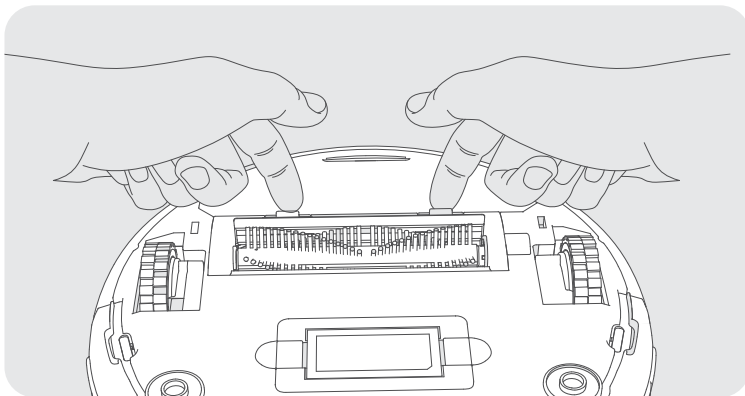

Clean main brush and surrounding.

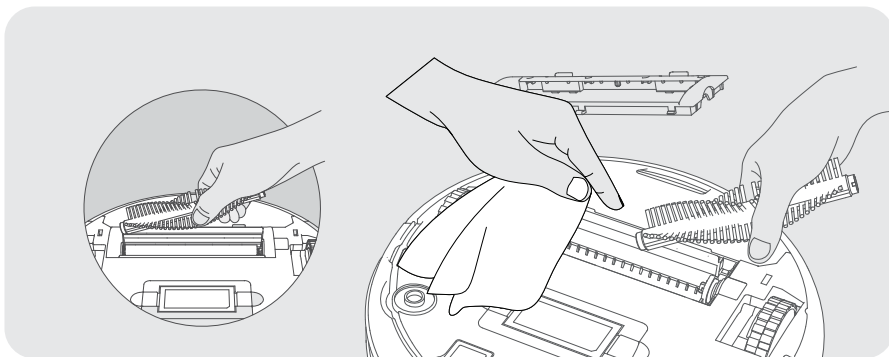


Clean the entanglement on main brush.

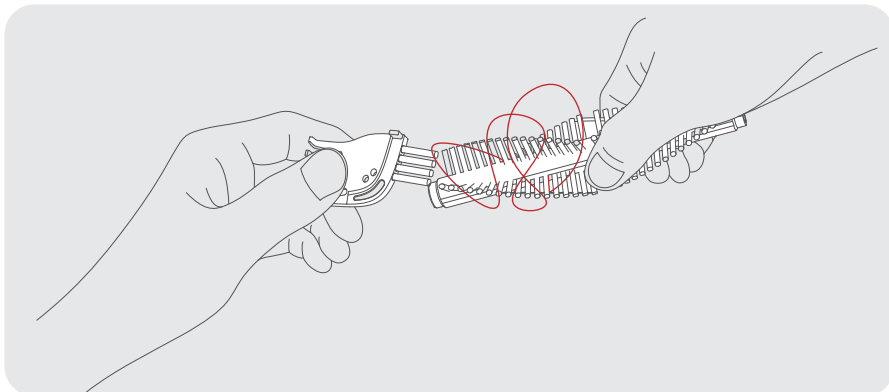


5.5 Clean side brush

1. Screw out the screws in the side brushes.
2. Take out the side brushes and clean the hair or other dust on it. Then clean the litters and other twist things inside the neck.

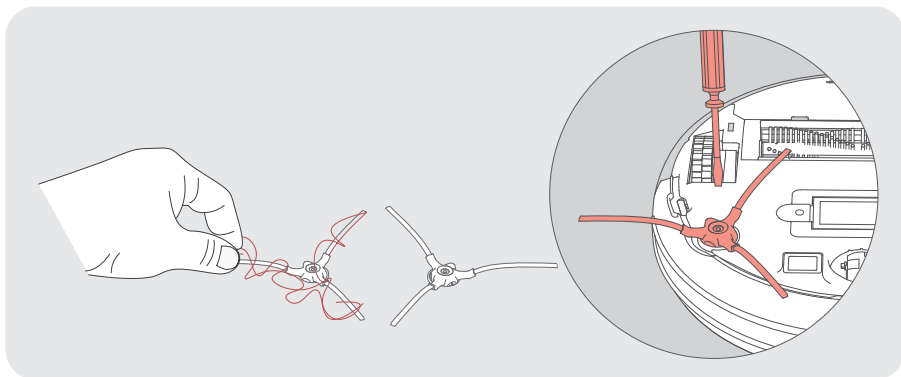


5.6 Clean wheels

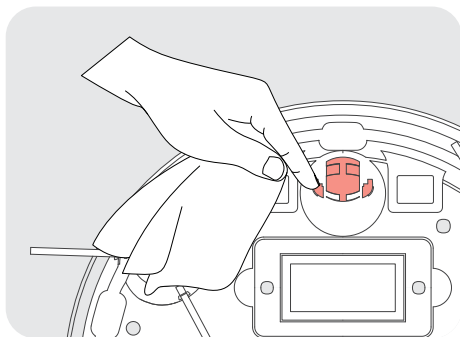

Clean the front and side wheel with the cleaning brush regularly.
(Note: There might be hair, cloth or other things twist on the wheels, please clean them in time)

5.7 Clean sensor

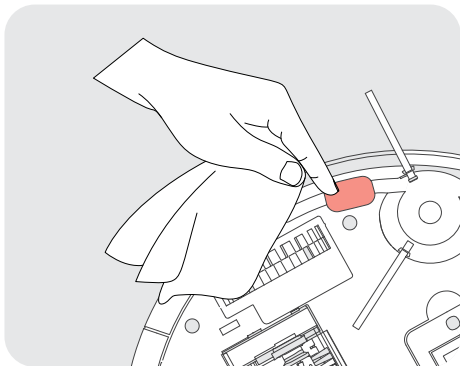

Please wipe the sensor carefully with dry cotton cloth after each use, to keep it away from dust.

6. Download and use APP

Attention

The document will update because of APP update or other reasons, and can only be used as a guidance, unless otherwise stated. Description, information and suggestions don't constitute any guarantee.

Summary

Puppy App is a smart home app based on Android and iOS platform. The document mainly states operation procedures and matters need attention for new users.

Use environment

APP download:

Phone with ios 10.0 or upper android 8.0 or upper, download puppy app from app store . Or Scan QR code to download.application.

APP name: PUPPYOO R3X


Download and install the app.




Use environment

Open PUPPYOO R3X app after login and sign in, connect the app with robot as app instruction.


6.1 Register and login

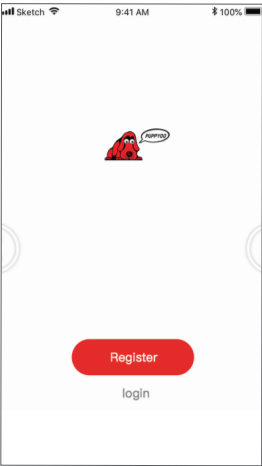

1. The above picture shows the interface after the APP is opened. On this interface, you can enter the registered phone number and password to log in. You can also click "Register" below to register.

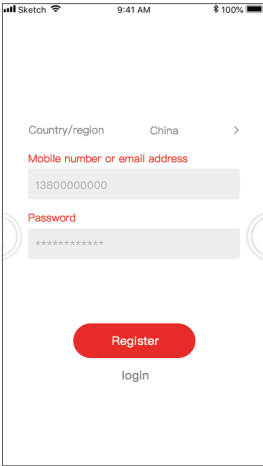


2. Enter the mobile number in the "Registration" screen shown above and set a login password. Click "Register" to send a verification SMS to this mobile number.

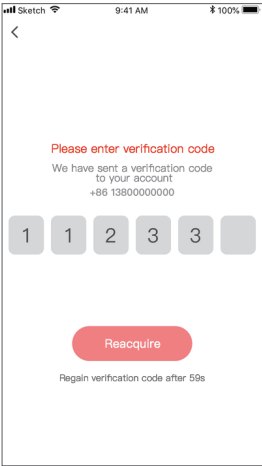


3. You can complete the registration by entering the six-digit verification code received by the SMS.

6.2 Add device

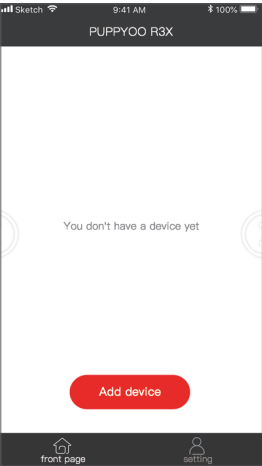


There are three ways to add a device:

- 1) Scan QR code
- 2) Identify from photos
- 3) Manual input

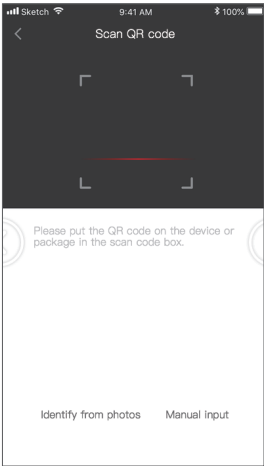


1. Click on "Add Device" to scan this QR code or manually enter the device number: r-31- for device addition.

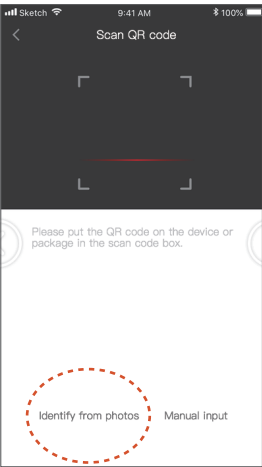


2. Click "Identify from photo", the device QR code is stored in the mobile phone album to identify the success.





3. When "Manual Input", enter the device number at the top of the screen: r-31- Click "Next".

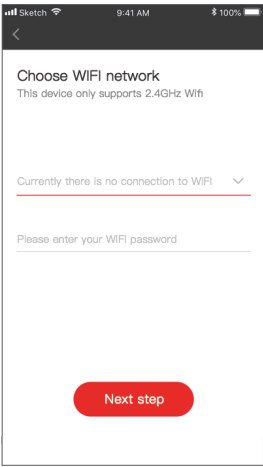




Connect to home WiFi, enter the WiFi name and password, and click Next.

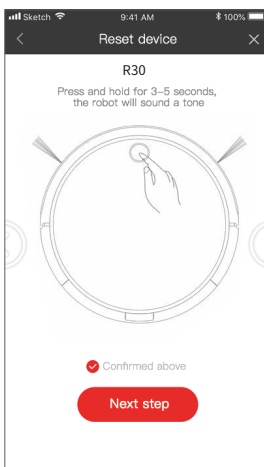

5. Press power bottom till lights on, then press power bottom again till light and voice guidance on, robot is now waiting for wifi connection. Meanwhile, release the button. Follow the APP guidance for the next step.

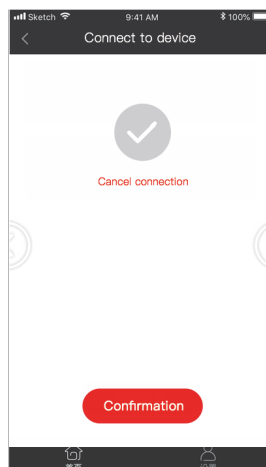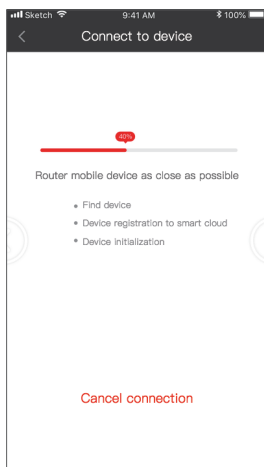


6. After waiting for the robot to be bound and added successfully, click the robot icon to enter the control page.

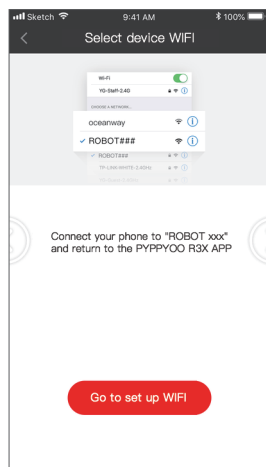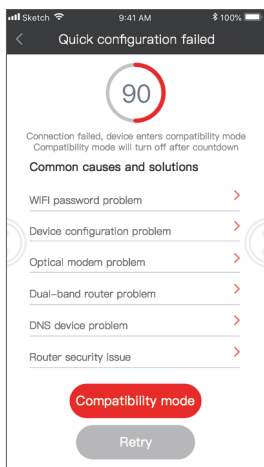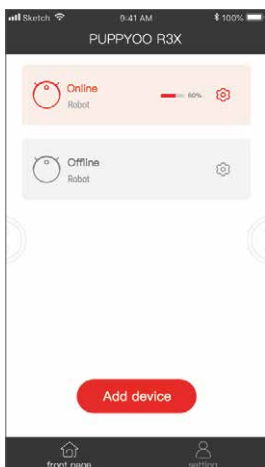

7. Compatibility mode. When the fast configuration fails, the device enters the compatibility mode and completes the binding operation as shown in the figure.

6.3 Operation page

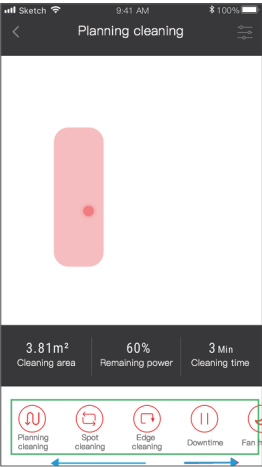


· On the main control page, there are three cleaning modes: "Planning Cleaning", "Spot Cleaning" and "Edge Cleaning" buttons.


· To switch the cleaning mode, first stop the current cleaning mode, and then click other cleaning modes.

Spot cleaning:
After using the remote control function of the APP to move the robot to the target position, select "fixed cleaning", and the robot will focus on the point and perform cleaning in the range of 1.5*1.5m.



Note: The lower control bar can be swiped left and right for other item selection.

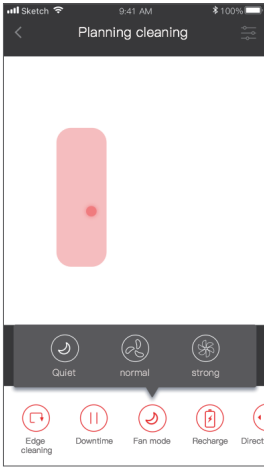


Fan mode:
Select "fan mode", 3 position suction can be adjusted.

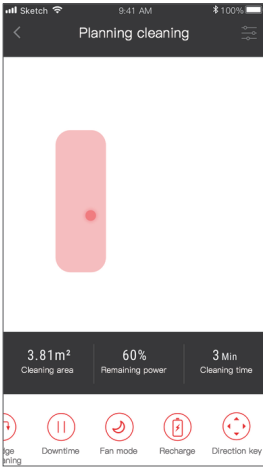


Direction key:
Select "Direction key" to enter the virtual remote control option, long press the direction key to control the direction of the robot.

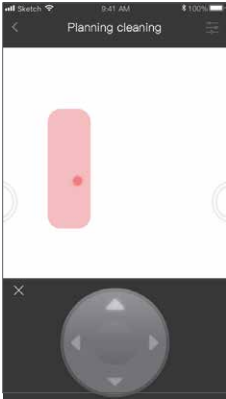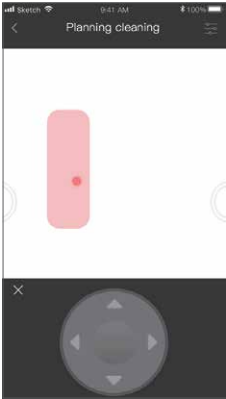



6.4 More function

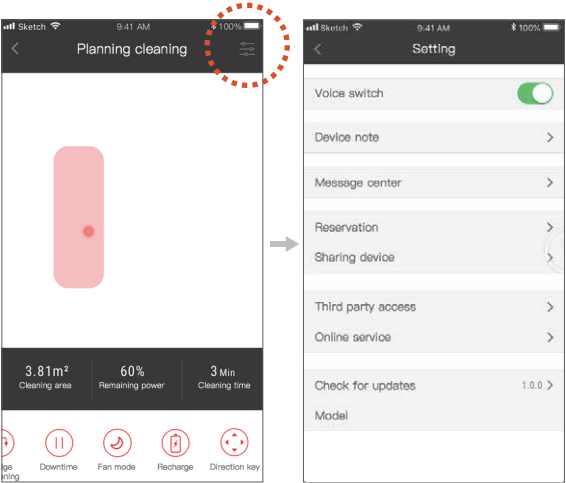

Click the “⚙️” icon in the upper right corner of the operation page to enter the setting page, and click to enter the corresponding function.

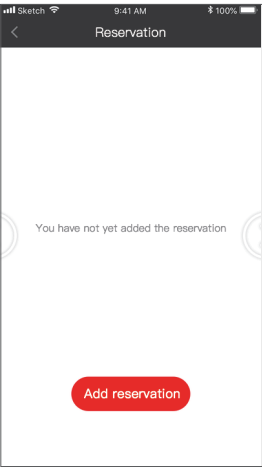

1. Reservation.
Select "Reservation" to set and save the scheduled cleaning time.

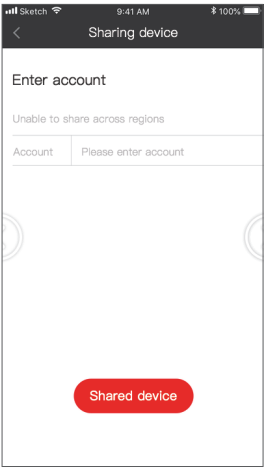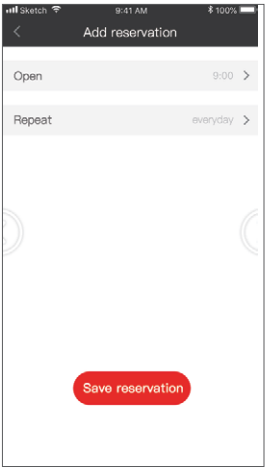

2. Sharing devices: Select "Share Device" to allow multiple users to jointly manage a robot. (Shared users need to download the app first and complete the registration)

7. Trouble shooting

Trouble indicator:

Red indicator flash on high frequency, please follow voice reminder and check problems.

Error name	Error reason	Error performance	Solution
Red light flash	Left wheel error	Wheel not roll or overload	Check if any entanglement
Red light flash	Right wheel error	Wheel not roll or overload	Check if any entanglement
Red light flash	Front wheel error	Wheel not roll	Check if any entanglement
Red light flash	Machine off the ground	Shut down if machine off ground	Check if any shelter or put in high place
Red light flash	Ground inspection error	Ground inspection unusal	Check if any shelter
Red light flash	Low power	Out of power	Recharge
Red light flash	Front collision	Front case collision switch not in position	Check if the front bump buffer is abnormal
Red light flash	Roll brush error	Too much or too little loadk	Check if any entanglement
Red light flash	Side brush error	Too much or too little load	Check if any entanglement
Red light flash	Wall inspection	Wall inspection unusal	Check if any shelt
Red light flash	Wind error	Wind motor stop working or large current	Check if any loose or entanglement
Red light flash	Charge error	No charge statue	Check charge connection and house power supply



Warm tip

If still can't solve by the above measures, please contact our after-sales service in time.

8. Parameters

Vacuum cleaner parameter	
Voltage	DC14.4 V
Rated power	25W
Battery	Li battery
Battery capacity	2500mAh
Charge time	3-5hours
Working time	60-120 mins
Working Temperature	0°C-50°C
Charging Temperature	4°C-40°C
Storage Temperature	0°C-50°C
Working humidity	≤80%RH
Net weight	2.8kg
Size	325*80mm

Accessory parameter	
Power Adapter	
Output voltage	DC19V
Output current	 600mA
Charge Station	
Charging Station Model	CD023
Input voltage	DC19V



Warm tip

The company reserves the right to make any technical or design changes to the product as the product continues to improve. The right of interpretation belongs to the company.

"" DIRECT CURRENT SYMBOL

"" STANDBY SYMBOL

Product toxic and hazardous substances

Part Name	Toxic or harmful substances or elements					
	Lead	Mercury	Cadmium	Hexavalent chromium	Polybrominated biphenyls	Polybrominated diphenyl ethers
Cover	○	○	○	○	○	○
Internal plastic parts	○	○	○	○	○	○
Metal parts	×	○	○	○	○	○
Electrical components and control components	×	○	×	○	○	○
Battery	×	○	○	○	○	○

* This form has been prepared in accordance with the provisions of SJ/T 11364.

- Indicates that the content of the hazardous substance in all homogeneous materials of the part is below the limit requirement specified in GB/T 26572.
- ×



The production level meets RoHS environmental protection requirements, and the hazardous substances contained in some components cannot be replaced under the current international technical standards. All environmentally friendly use periods of this product refer to the safe period of time during which the hazardous substances or elements contained in the product will not leak.

Puppy will upgrade and adjust products and related prints from time to time (including but not limited to product details ,color, configurations, product box and manual, etc.,)and subject to change without notice. The final interpretation right belongs to the puppy electrical internet section within the scope permitted by law.

Warnung



Schützen Sie den Staubsauger vor scharfen Gegenständen, wie Glassplitter, Nagel, um Beschädigung des Produkt zu vermeiden.



Es soll nicht in der feuchten oder entflammaren, explodierbaren, korrosiven Bedingung eingesetzt werden.



Verwenden Sie die Ladestation für längere Zeit nicht. Bitte ziehen Sie den Netzstecker aus.



Wird bei der Arbeit des Staubsaugers das Ladegerät bewegt, dann kann der Staubsauger nicht normal zurück zum Ladegerät fahren und somit nicht aufgeladen werden.



Das Produkt darf nur im Innenraum benutzt werden.



Vor dem Einsatz soll die verwundbaren Sachen weggebracht werden.



Der Staubsauger soll vor Wasser, Öl und andere Flüssigkeit geschützt werden, um Beschädigung zu vermeiden.



Vor dem Einsatz sollen die verstreuten Kabel auf dem Boden in Ordnung gebracht werden, um die Störung bei der normaler Arbeit des Staubsaugers zu vermeiden.



Das Ladegerät soll an einer flacher Stelle nahe der Wand installiert werden, um den Einfluss auf die Funktion des Produkts zu vermeiden.

Sicherheit für Kinder

1) Kinder unter 8 Jahren dürfen das Produkt nicht benutzen. Personen, die körperlich, sinnlich, geistlich behindert sind oder denen an Erfahrung und Kenntnisse mangelt, dürfen das Gerät ohne Beaufsichtigung oder Gebrauchsanleitung sowie ohne Kenntnisse von Gefahren benutzen.

2) Kinder dürfen nicht mit den Verpackungstüten des Produkts spielen, es kann zum Ersticken führen.




1. Sicherheitshinweise

1.1 Gebrauchshinweise

Bevor Sie das Produkt benutzen, beachten Sie bitte die folgenden Sicherheitsmaßnahmen:

- * Lesen Sie bitte all Inhalte in der Gebrauchsanleitung sorgfältig durch und benutzen Sie das Produkt gemäß der Beschreibung der Gebrauchsanleitung.
- * Bewahren Sie die Anweisungen an einem sicheren Ort auf, damit Sie sie später überprüfen können.
- * Wenn Sie das Produkt an Dritte weitergeben müssen, fügen Sie bitte die Bedienungsanleitung dem Produkt bei.
- * Bedienung, die den Hinweisen der Gebrauchsanleitung nicht entspricht, kann zu schwerer Verletzung oder Beschädigung des Produkts führen.


1.2 Sicherheitshinweise zum Gebrauch des Produkts

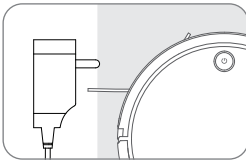

Das Produkt darf nur mit dem mitgelieferten Adapter, Batterie und Ladegerät aufgeladen werden. Sonst kann es zu Beschädigung des Produkts und sogar von Elektroschock oder Hochspannung verursachten Brand führen.



Falls Beschädigung am Grundgerät oder Zubehör des Produkts festgestellt ist, darf es dann nicht weiter benutzt werden. In diesem Fall sollen Sie sich bei unserem Kundendienst melden. Außer Techniker, der von uns designiert oder beauftragt ist, darf niemand das Produkt abbauen, reparieren oder umbauen.

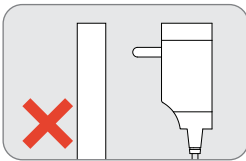


Vor der Instandhaltung soll der Stecker von der Steckdose abgetrennt werden.



Bei feuchten Händen darf man den Stecker oder das Produkt nicht berühren, um elektrischen Schlag zu vermeiden.



Bei Beschädigung des Stromkabels sollen Sie sich bei unserem Kundendienst melden, um Instandhaltungsdienst zu erhalten. Somit kann Gefahr auch vermieden werden.

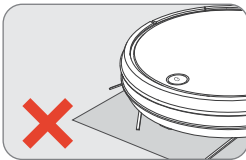

Das Produkt kann nicht an der Stelle, wo auf der Höhe ist und keine Geländer hat, benutzt werden, um Verletzung der Person wegen des Herunterfallens vom Produkt zu vermeiden.



Der Benutzer darf die Batterie nicht mit anderen ersetzen.



Beachten Sie bitte, die Kleidung oder irgendeinen Körperteil (Haare, Finger usw.) nicht in die Bürste oder Rolle verwickeln zu lassen. Sonst kann es zu Verletzung der Person führen.



Das Produkt soll fern von Feuer oder entflammbarem, explodierbarem, korrosivem Stoff gehalten werden.



Falls die Gebrauchsanleitung verloren ist, können Sie bei unserem Kundendienst elektronische Version der Anleitung anfordern.

1.3 Batterie



1) An dem Produkt darf nur die original vom Hersteller gelieferte Batterie benutzt werden.

2) Beim Entsorgen des Produkts muss die Batterie herausgenommen werden.

3) Falls die Batterie des Grundgerätes ersetzt werden muss, bitte kontaktieren Sie unseren Kundendienst. Falls falsche Batterie eingesetzt wird, kann es zu Gefahr führen.




4) Falls Flüssigkeit aus der Batterie austritt, soll vermieden werden, sie mit Haut oder Kleidung zu berühren. Die Batterie soll sofort mit trockenem Tuch geputzt werden und zur Recyclingstelle entsorgt werden.

5) Die alte Batterie soll sorgfältig entsorgt werden.


Die Batterie enthält Stoffe, die für die Umwelt schädlich ist. Beachten Sie die lokalen Umweltvorschriften und entsorgen Sie die Batterie an der vorgegeben Recyclingstelle.

1.4 Anwendungsbereich des Produkts


Anwendungsbereich Es ist geeignet, das Produkt auf den folgenden Boden einzusetzen.

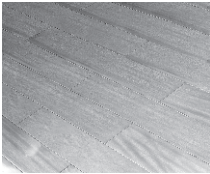

Holzboden

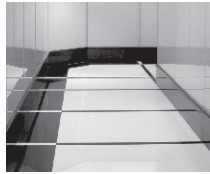


Fliesenboden

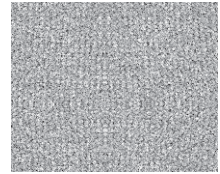

Teppich

2. Produkt Komponente


2.1 Hauptmaschine und Zubehör

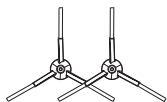


Seitenbürste x2





Ladegerät x1

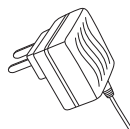


Adapter x1

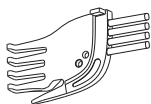


Reinigungsbürste x1

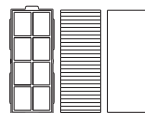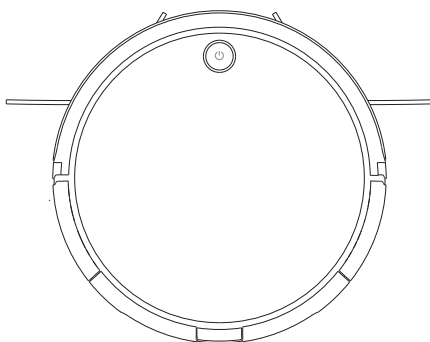


Filtrationssystem x1

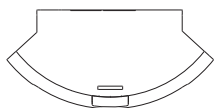

Staubbehälter x1

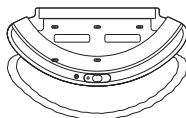

Wassertank x1
Tuchx1

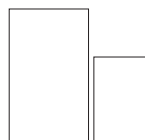



Gebrauchsanleitung



Achtung



Hauptmaschine mit 2 Seitenbürste, Filtrationssystem und Batterie.

2.2 Komponente Liste

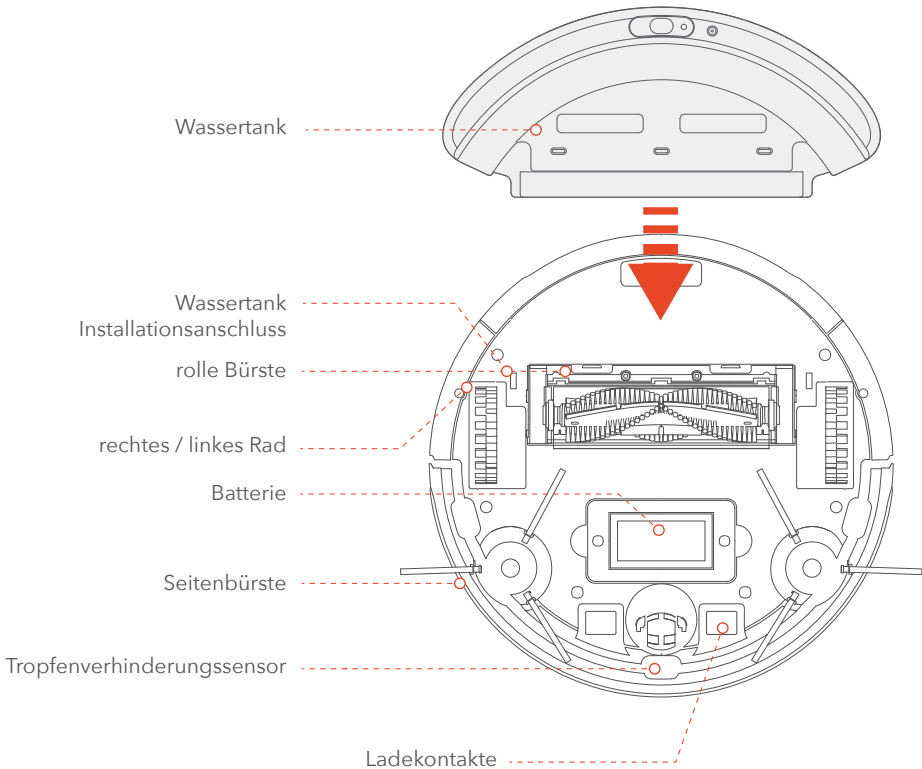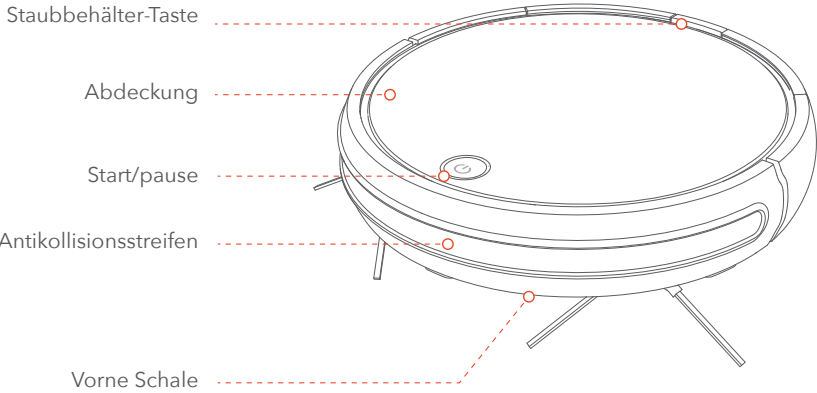

3 Installation des Produkts

3.1 Installation des Ladegerätes

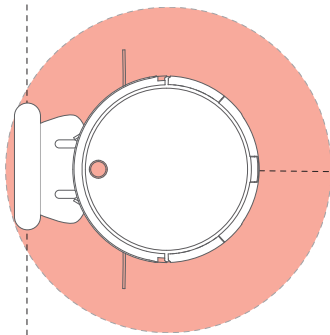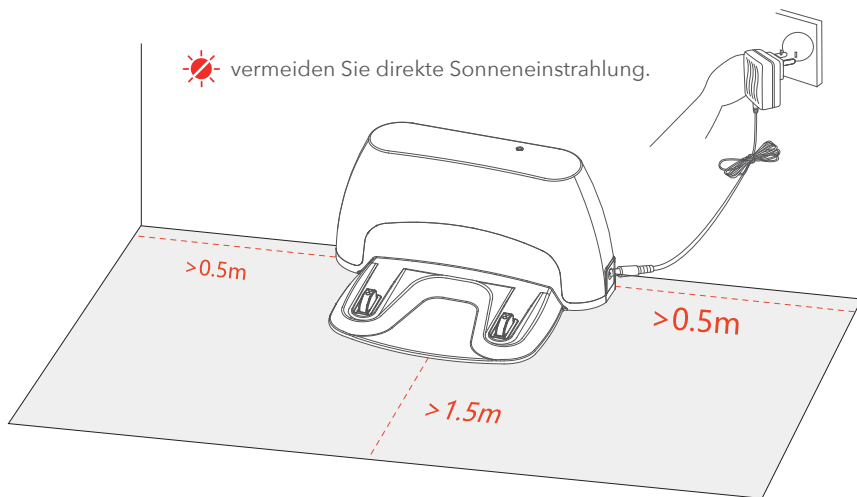

1. Legen Sie die Ladestation auf einen ebenen Boden. Es gibt kein Hindernis in einer Entfernung von 0,5 m von links nach rechts und 1,0 m vor dem Bahnhof.


2. Um sicherzustellen, dass der Hauptkörper gut funktioniert und sich erfolgreich auflädt, entfernen Sie die Ladestation nicht zufällig.

3. Vor dem Einsatz sollen die verstreuten Kabel auf dem Boden in Ordnung gebracht werden, um die Störung bei der normalen Arbeit des Staubsaugers zu vermeiden.


⚠ Hinweis

Entfernen Sie die Schutzleiste vor dem ersten Gebrauch, um sicherzustellen, dass der Hauptkörper ordnungsgemäß verwendet werden kann.


3.2 Installation und Verwendung des Wassertanks

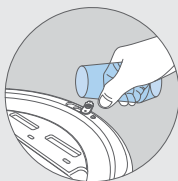


1. Hinzufügen Sie das Wasser aus dem Wassereinlass;

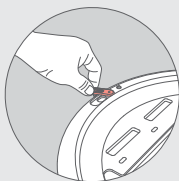

2. Befestigen Sie den Wassertank am Wassereinlass;

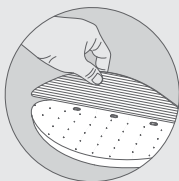

3. Kleben Sie das Tuch;

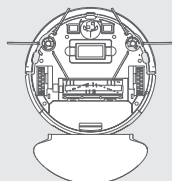


4. Setzen Sie den Wassertank in die Haupteinheit.



Achtung

Entfernen Sie den Wassertank während des Ladevorgangs. Verwenden Sie nicht den Wassertank auf dem Teppich.

2. Dann rasten Sie in ein Ende ein

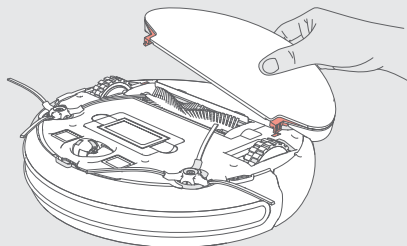

1. Rasten Sie in ein Ende ein

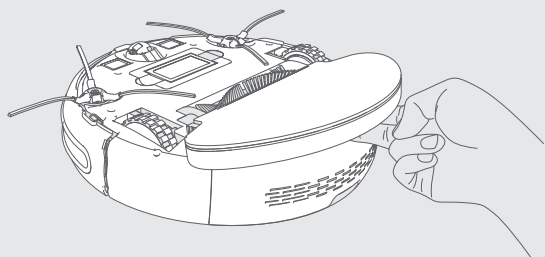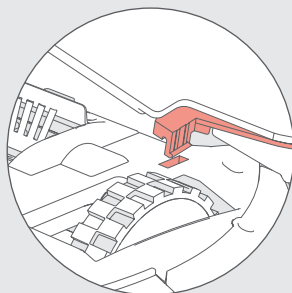

Disassemble the water tank: Lift the front of the tank to separate the tank from the machine.

4. Verwendung des Produkts

4.1 Verwendung der Maschine


 Ein-/Aus-Schalter




Nr.	Status	Funktionsbeschreibung
Ausschaltung	Licht aus	Drücken Sie gleichzeitig den den Ein-/Aus-Schalter  und die vordere Abdeckung
Einschaltung	Weißer Indikator leuchtet	Drücken Sie den Ein-/Aus-Schalter  Lang.
Reinigung	Weißer Indikator leuchtet	Drücken Sie den Ein-/Aus-Schalter  kurz.
Zurückfahren - und - Aufladen	Weißer Indikator blinkt	Drücken Sie den Ein-/Aus-Schalter  kurz.
Aufladen	Weißer Atemanzeiger	
Fehler	Rote Indikator blinkt	
Voll aufgeladen	Weißer Indikator leuchtet	
Reset WIFI	Rote und weißer Indikator blinken abwechselnd	Im Standby-Modus, drücken Sie den Ein-/Aus-Schalter  Lang, bis die Sprachansage angezeigt wird.

4.2 Arbeitsmodus

 4.2.1 Standby und Reinigung

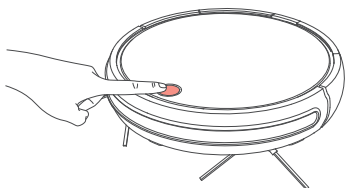


Im ausgeschalteten Zustand Drücken Sie den Ein-/Aus-Schalter.  leuchtet die Weiße Indikator und der Standby-Modus wird aktiviert. Drücken Sie dann die Taste nochmal, um den automatischen Reinigungsmodus zu starten.

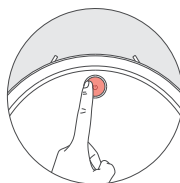

4.2.2 Manuelles Aufladen

Wenn die Maschine im Standby-Zustand befindet, drücken Sie den Ein-/Aus-Schalter  zweimal, die Weiße Indikator blinkt und die automatische Aufladung wird aktiviert.

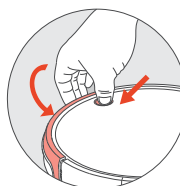

4.2.3 Manuelle Ausschaltung


Drücken Sie gleichzeitig den den Ein-/Aus-Schalter  und die vordere Abdeckung und schalten die Maschine nach 5 Sekunden aus.

4.2.4 Automatischer Modus

"Automatischer Modus" finden Sie im "Download und Installierung der APP".

4.3 Auflademethode


Manuelles Aufladen

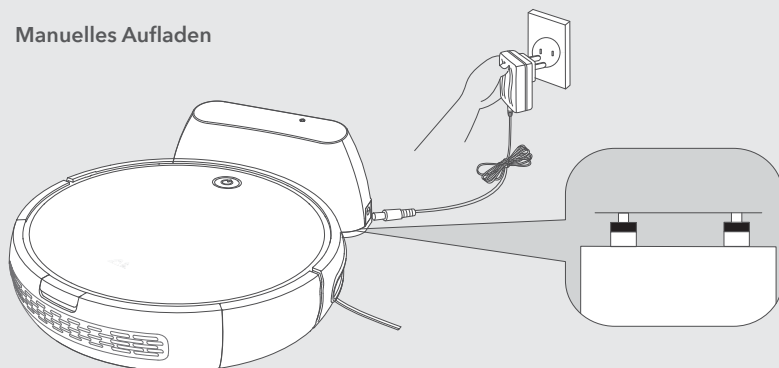

Laden Sie mit der Ladestation:

Schließen Sie zuerst das Netzteil und die Ladestation an und schließen Sie dann das Netzteil an. Stellen Sie die Maschine auf die Ladestation (Während des Ladevorgangs blinkt die weiße LED. Wenn das Gerät voll aufgeladen ist, leuchtet das weiße Licht immer).

Automatisches Aufladen

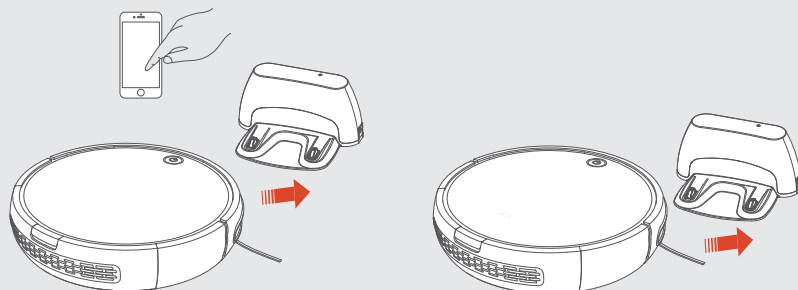

APP aufladen:


Nachdem das Gerät mit der App verbunden ist, klicken Sie „Zurückfahren - und - Aufladen“ auf die Hauptoberfläche der App. das Gerät findet dann automatisch die Ladestation.

Automatisches Aufladen:

Wenn die Maschine in Betrieb ist und die Batteriespannung niedrig ist, blinkt das rote Licht. Zu diesem Zeitpunkt wechselt sie in den Lademodus und findet die Ladestation automatisch.

5. Produktpflege


5.1 Batteriespeicherung

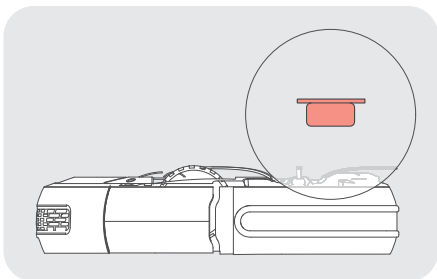

Warme Tipps


- 1) Bitte führen Sie die Wartung entsprechend Ihrer Nutzungshäufigkeit durch.
- 2) Verwenden Sie den Staubsauger nicht für längere Zeit. Laden Sie den Akku vollständig auf, entnehmen Sie den Akku und lagern Sie den an einem kühlen, trockenen Ort. Halten Sie den Boden der Maschine trocken.

5.2 Reinigung der Ladekontakte

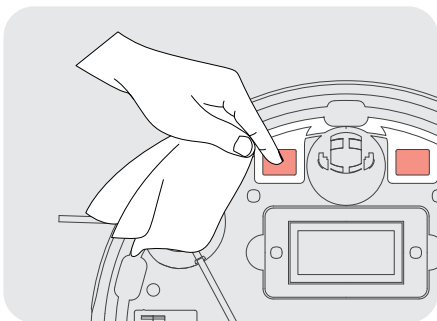

- 1) Bitte schalten Sie das Gerät aus oder ziehen Sie den Stecker heraus.
- 2) Bitte reinigen Sie die Maschine jeden Monat mit einem trockenen Tuch.
- 3) Reinigen Sie es nicht mit Ölen.


5.3 Reinigung des Staubbehälters

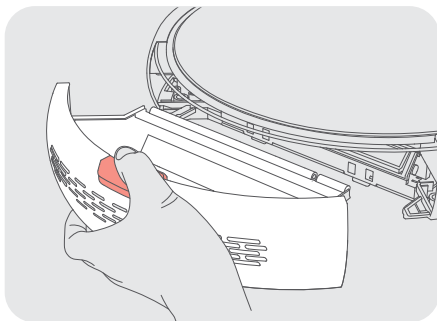


Wie im Bild gezeigt, nehmen Sie den Staubbehälter heraus.

Öffnen Sie den Deckel des Staubbehälters und lassen Sie den Staub ab.


Empfehlung: Reinigen Sie den Staubbehälter alle drei Tage für die neue Maschine, dann reinigen Sie sie einmal pro Woche.

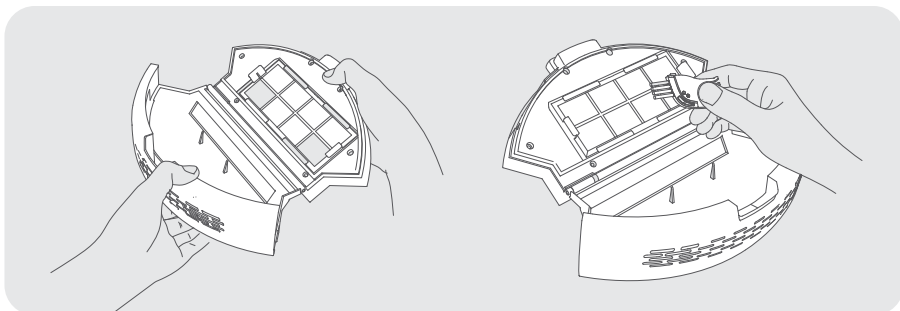

Nehmen Sie die Filterkomponenten heraus und reinigen Sie den Filter mit der Reinigungsbürste.

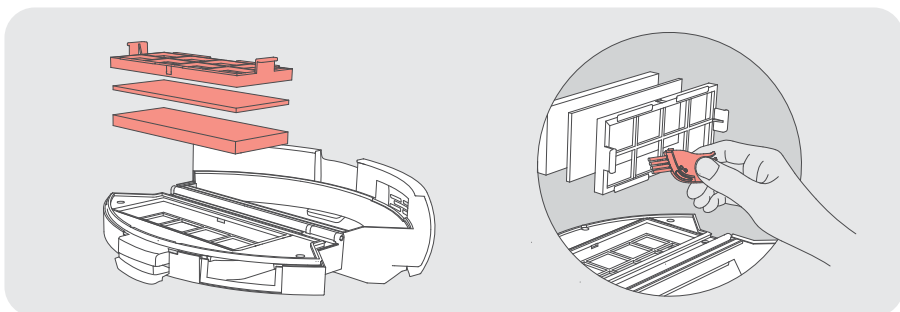


Waschen Sie den Staubbehälter und Filternetz, und dann setzen Sie den Filternetz nach der Reinigung des Staubbehälters und setzen Sie den Staubbehälter in den Roboter.

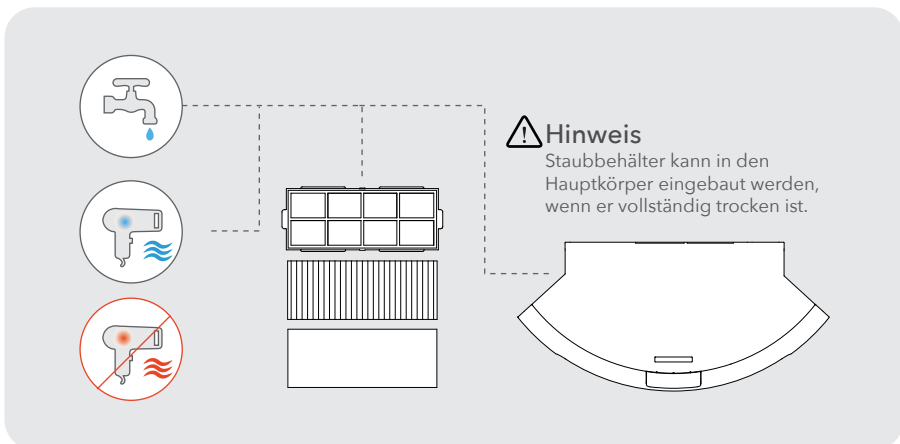


5.4 Reinigung der rollen Bürste

Nehmen Sie die Gummistange und die rolle Bürste heraus.

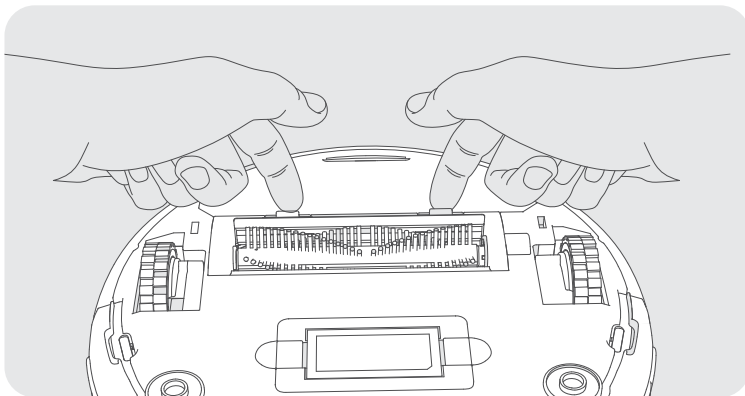

Wie im Bild gezeigt, reinigen Sie die rolle Bürste und den Gummistab regelmäßig.

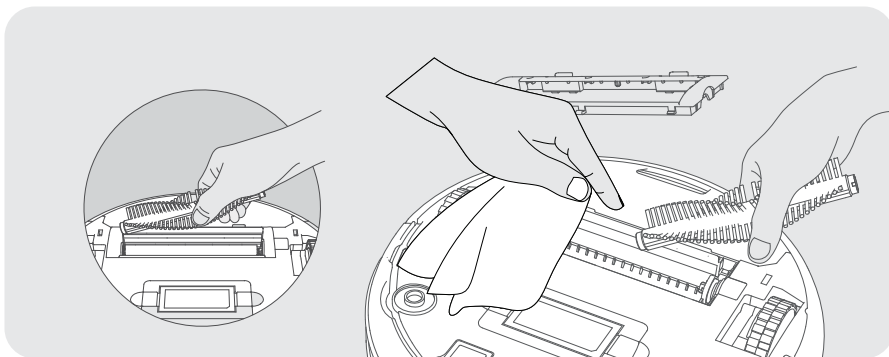

Wie im Bild gezeigt, reinigen Sie die Haare und andere Partikel auf die rolle Bürste.

