 


How to move

When moving, please turn off main power switch, then unplug the power plug.

Using caster to move

- Please put the back of the chair to the bottom and then hit the rear wheel, then move.
- Lift up the calves-rest, then recline the chair to approximately 45 degrees to easily move the chair around the house with as slight pull or push.

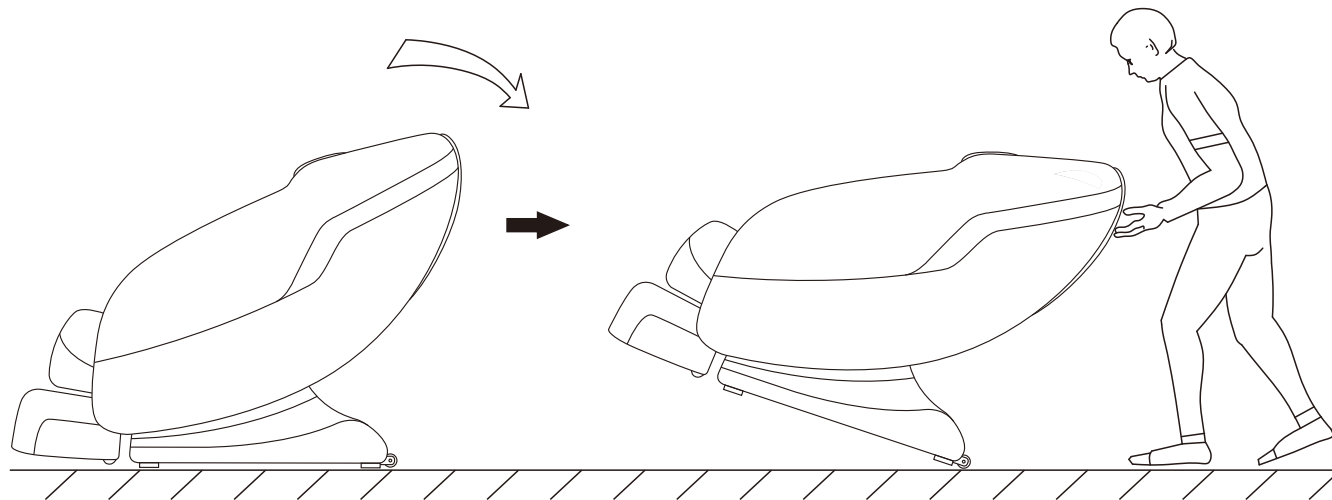

CAUTION

- The chair cannot be moved if the passage is less than 29.528in in width.
 - Contact the dealer in case you cannot move the chair normally.
 - Due to the heavy weight of the chair, make sure that it will not damage your waist or other parts of your body during moving.
 - Controller is connected to the chair, make sure it does not fall during moving.
 - Do not move the chair with person loaded.
 - Please move the chair after unplugging.
- > Otherwise it may cause damages to the power plug, causing fire disaster or electric.

Bluetooth

This massage chair has two Bluetooth speakers built in to play your music via a compatible Bluetooth enabled music device.

1. Press Bluetooth button on the remote control.
2. Using your Bluetooth music player, locate the massage chair name "R8369".
3. Connect and enjoy your music.

 
Place the headrest pad

- Attach the upper backrest pad to backrest with zipper.
- Attach the pillow pad to backrest with velcro.




Remote Controller Connection

- Connect the cable of remote controller with the cable located under chair seat.

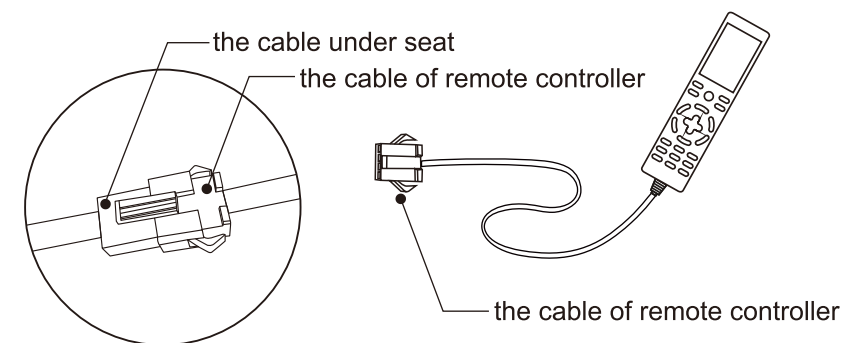

How to switch on the power

 - Plug the power cord into power inlet, turn on the power switch.

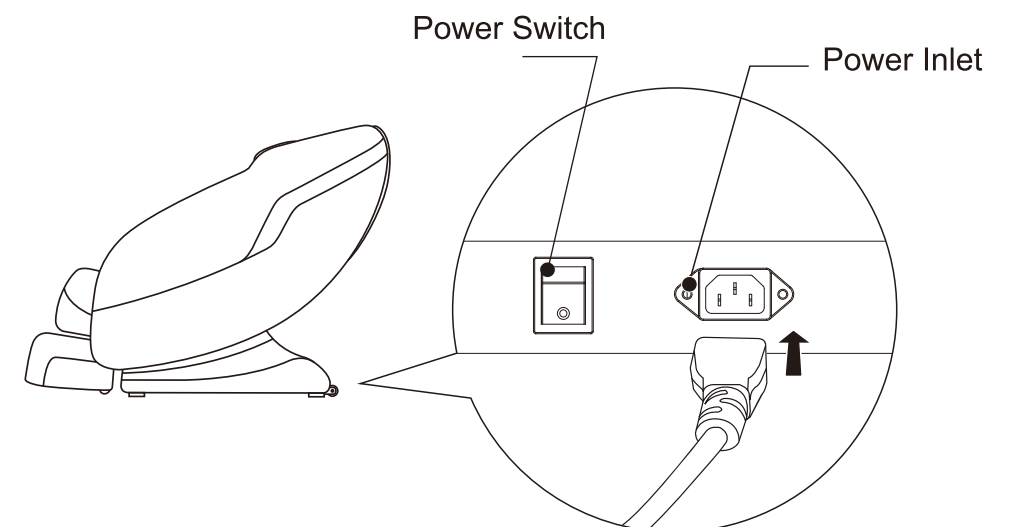

※ If the rollers get stuck, turn off the switch and press the ON/OFF button, the roller will be back to its initial position.

! WARNING

 
 
 
- Do not connect power cord to an external transformer

! CAUTION

- Ensure the main power switch is off before plugging the power socket or controller.
- Please insert power plug and controller plug fully
- Read this manual book carefully before using, set the chair according to the requires, ensure normal operation

Connecting the power

Check the power cord, power plug, socket on the chair, main power switch, controller are not broken for the first time use or use after long time storage. Then plug in power cord.

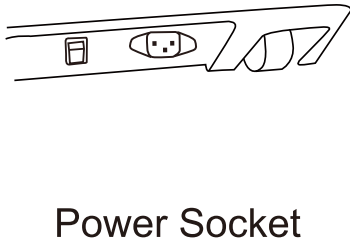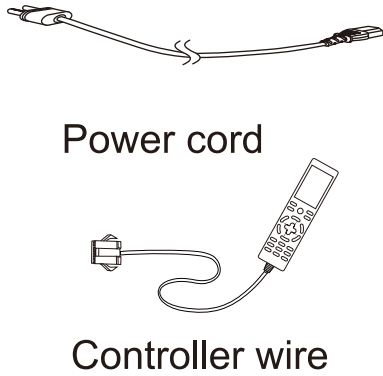
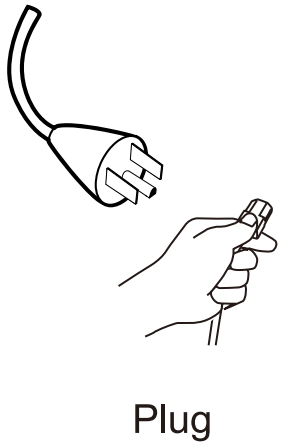


Confirm the fabric

Make sure if the fabric is damaged according to the following procedures before use.

- ① Open zipper and back cushion from one side

  - ② Put your hand between cushion and backrest to see if the fabric is damaged.

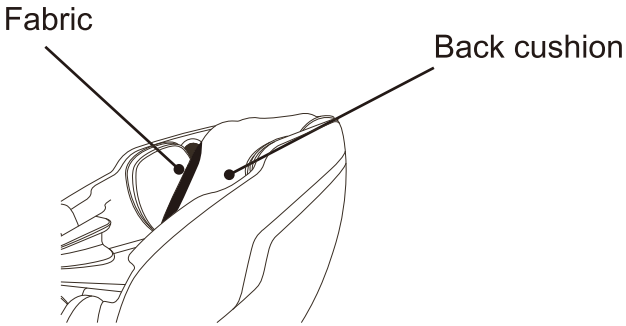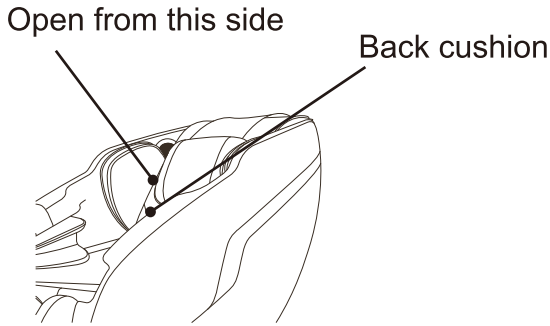

CAUTION

Before using the chair, confirm that whether there is damage in the material of the armchair or of other parts. In case of damage, even the smallest tearing, in the chair, please stop using it immediately, turn off the power switch, unplug the chair, and contact the customer service center. Never use the armchair with dismantled cushion or damaged material, otherwise there will be serious safety hazard.

Adjustment of chair angle



BACK UP

Raise the backrest
Press this button to raise the backrest. Press the button again to confirm the position when the backrest is at the desired angle



BACK DOWN

Decline the backrest
Press this button to decline the backrest. Press the button again to confirm the position when the backrest is at the desired angle.

Attention: When main power switch that is at the back of the chair is on, angle adjusting can still be done even not pressing On/Off button of controller. However angle adjustment is unavailable when in emergency stop condition.

 


WARNING

When adjusting angle, please make sure there is no person (Especially children) or pet around. Besides, there must be at least 19.6in space in the front or at the back of the chair, and there is no other object in the way when rotating.

Start message

1. Connecting the power,turn on main power switch

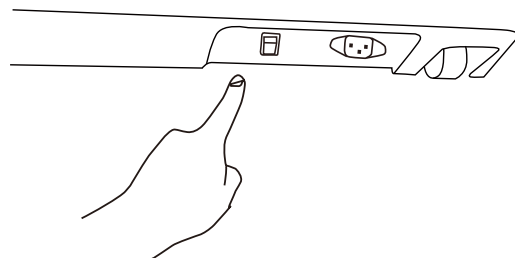

● In the Auto Mode

You may change from one massage program to another at any time without having to wait for it to complete. The twinkled button is the current massage mode

● In the Manual Mode

You may change from one massage program to another at any time without having to wait for it to complete.

After use

Rise the chair up and lower the footrest completely.
Press ON/OFF key to turn off the chair, wait until chair gets back to its initial status.
After airbags deflate completely, rollers get back to its initial position, sole massage stops, heating stops, then step out of the legrest. Do not stand in the legrest. Turn off main power switch, unplug power plug.



After you use the chair, turn off the main power switch, and unplug the power plug from the socket.
→ Otherwise, accident or injuries may be caused by children or pets.
After you use the chair, be sure to raise back completely and lower the footrest completely.
After you use the chair, please clean it and place it in dry places.
When unplugging the power cord, please do not pull it directly; instead, you should unplug it pinching the power plug.
Please be sure to put the power cord away in prevention of tripping over.

Troubleshooting

If there is still a problem after trying the solutions given in this troubleshooting guide, stop using the chair immediately to prevent accident or injury, and unplug the power plug from the wall outlet. Contact the vendor or your nearest service center for assistance.

Problem	Causes and troubleshooting
The massage chair can not operate even though it has been connected to the power supply.	● Check whether the plug is well connected and working well. ● Check whether the main switch on the massage chair is turned to position "I".
During operation, the controller is working, but the chair can not work	● The massage chair could be overheated after prolonged use. It will automatically cool down to resume its normal condition. ● Please turn off the power and allow the chair to cool down for 30 or 50 minutes.
During operation, both the controller and the massage can not work	● If the set-time in the Timer is complete, please press the timer function again to resume operation. ● Switch OFF the power and switch ON again to restart the chair.

Safety check

Regular Maintenance Will Preserve the Life of Your Chair

Have you experienced any of these problems?

- The chair does not start with the Main POWER switch set to ON.
- The power cord has been cracked or scratched.
- The power cord or plug becomes abnormally hot.
- The chair produces a burnt smell, abnormal sound or vibration.
- The auto timer function does not work in some cases.
- Other failures.

If you find anything listed on the left, stop using and unplug the power cord from the outlet to prevent failure or an accident. Be sure to contact the vendor or our service center for maintenance.

To use safely

The chair fabric (roller fabric) is a consumable part, and its service life is 3 years (conditions of use: two 15-minute sessions a day, every day). For safe use, periodic inspection by the vendor is recommended before the end of its service life.
* Durable years vary depending on conditions of use.
* After about five years of use, a professional inspection is recommended even if there are no symptoms or problems. For inspection fees, contact the vendor.

Storage and care

Storage

- After cleaning the dirt and dust, place the chair in a dry place.
- If the chair is left unused for a while, please cover the chair to prevent from dust.
- Pets sometimes chew on power cord, so try to keep the pets away from the chair even when it is stored.

CAUTION Do not install the chair where it can come into contact with direct heat, such as direct sunlight or a radiator.

Care and Maintenance

CAUTION ● When cleaning the chair, be sure to unplug the power plug from the wall outlet first. Do not plug or unplug the power plug with wet hands.

[Caring for the Back Pad and Covers]

Soak a piece of soft cloth in lukewarm water in which a small amount of mild detergent has been added. Then thoroughly wring it out before cleaning off any spots or grime.

CAUTION ● The fabric color can change if the chair is in contact with vinyl covers or wall coverings for a prolonged period of time.

[Caring for Other Plastic Parts]

Soak a piece of soft cloth in lukewarm water in which a small amount of mild detergent has been added, thoroughly wring it out, and clean off any spots or grime. Then wipe with a dry cloth so that no detergent residue remains.

CAUTION ● Do not use alcohol-based or other household cleaning products or abrasives because they can scratch or crack the finish or cause color to fade.

[Caring for the Remote Control]

Wipe dirt off the remote control with a dry cloth.

CAUTION ● Never use a moistened or wet cloth. May result in a mechanical failure.

Product specification

Type	R8369
Power	120V~ 60Hz
Rated power	100W 1.5A
Dimension	Approx 28.94in*54.33in(62.60in)*40.55in(32.28in)(W*L*H) The length and height figures in () represent the dimensions when fully reclined.
Weight	About 123.46lb
Outer material	PU leather
Accessories	Main power cord, Controller, manual book, warranty card, accessories bag for installation

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.